



**SAMMITR**

Date...../...../.....

Version 1.0



**SAMMITR**

Mechanical Installation  
Manual  
for

Ford Ranger


2012






# Installation Manual


For Ford Ranger 2012

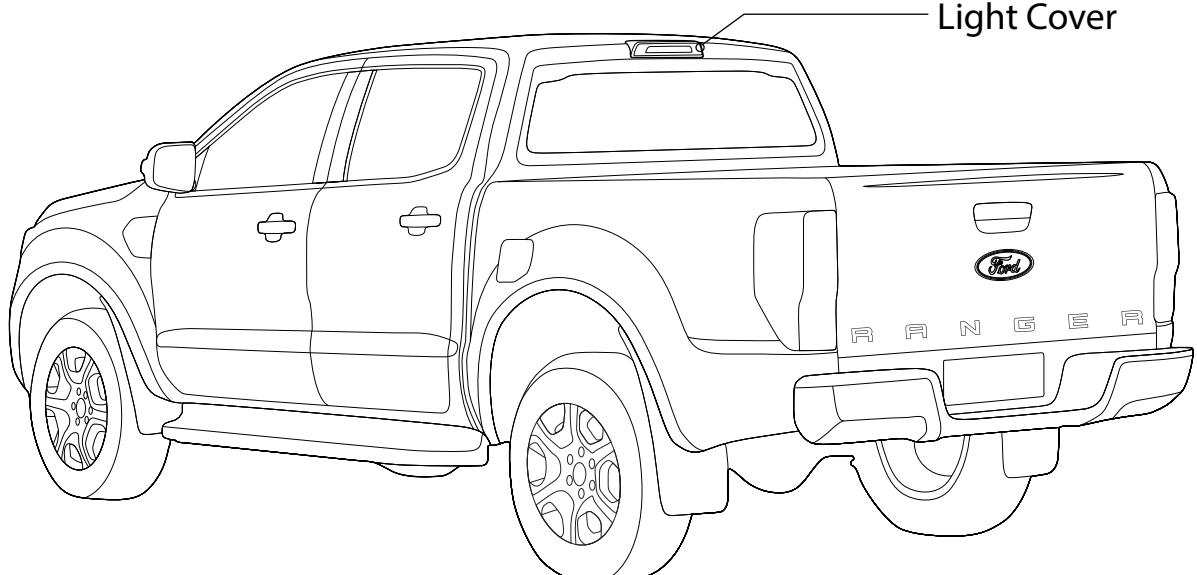


## EQUIPMENT

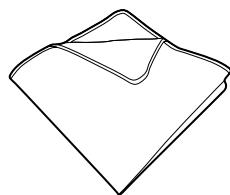

Fabric

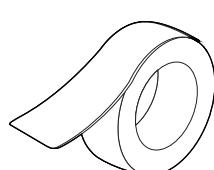


Masking Tape

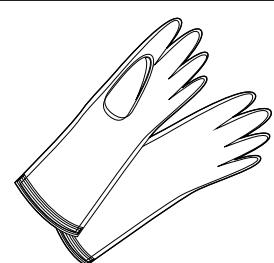


Handcover

## TOOL

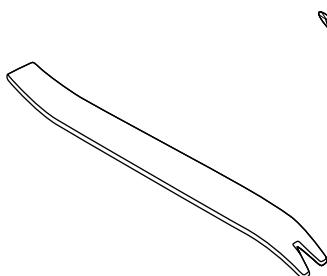


Plastic for Console Car

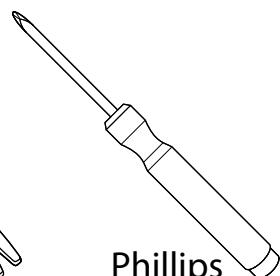


Phillips  
Screwdriver

## LIGHTCOVER

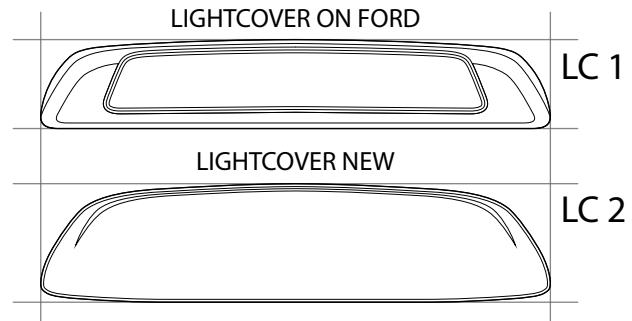





**SAMMITR**

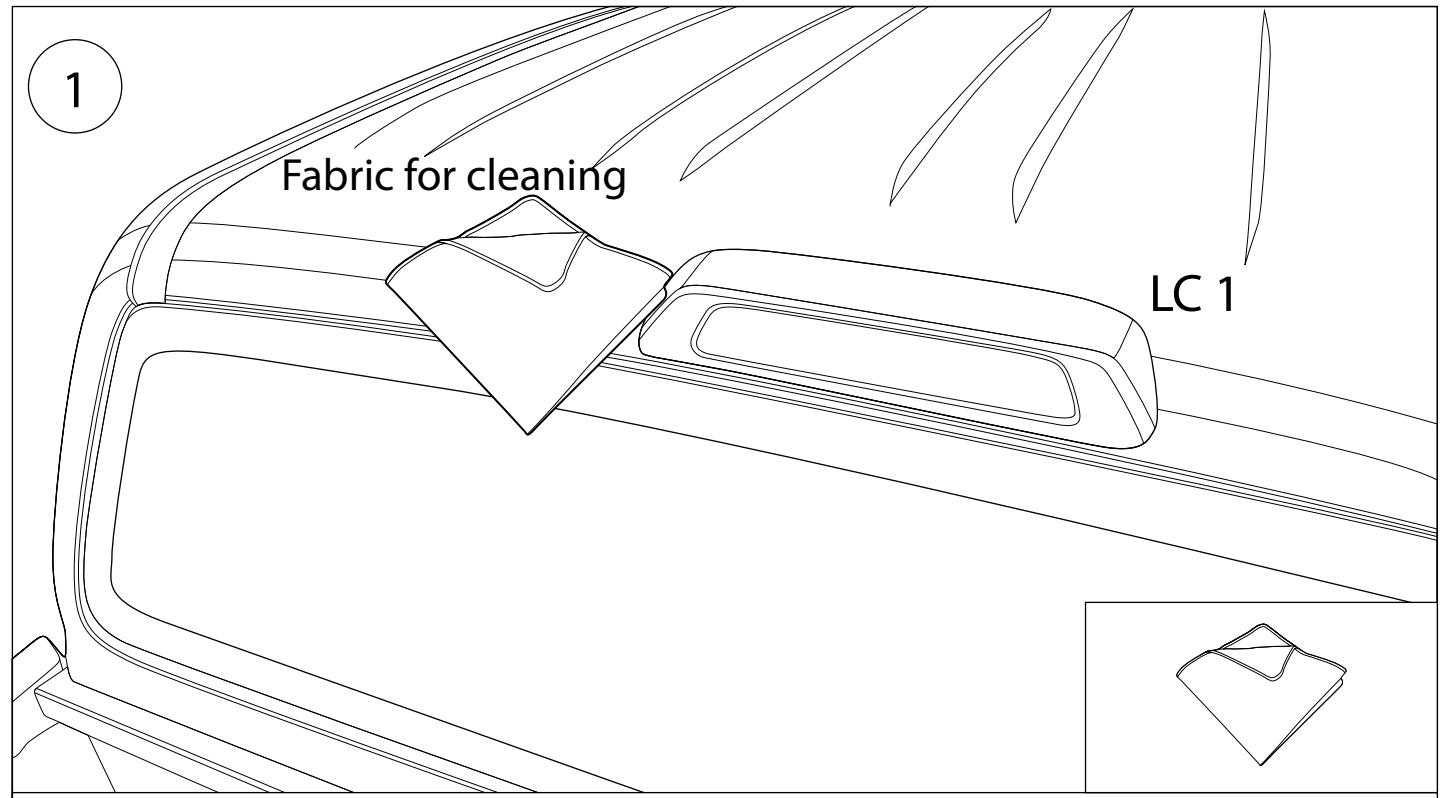


**Cleaning the surface area of light cover on ford.**

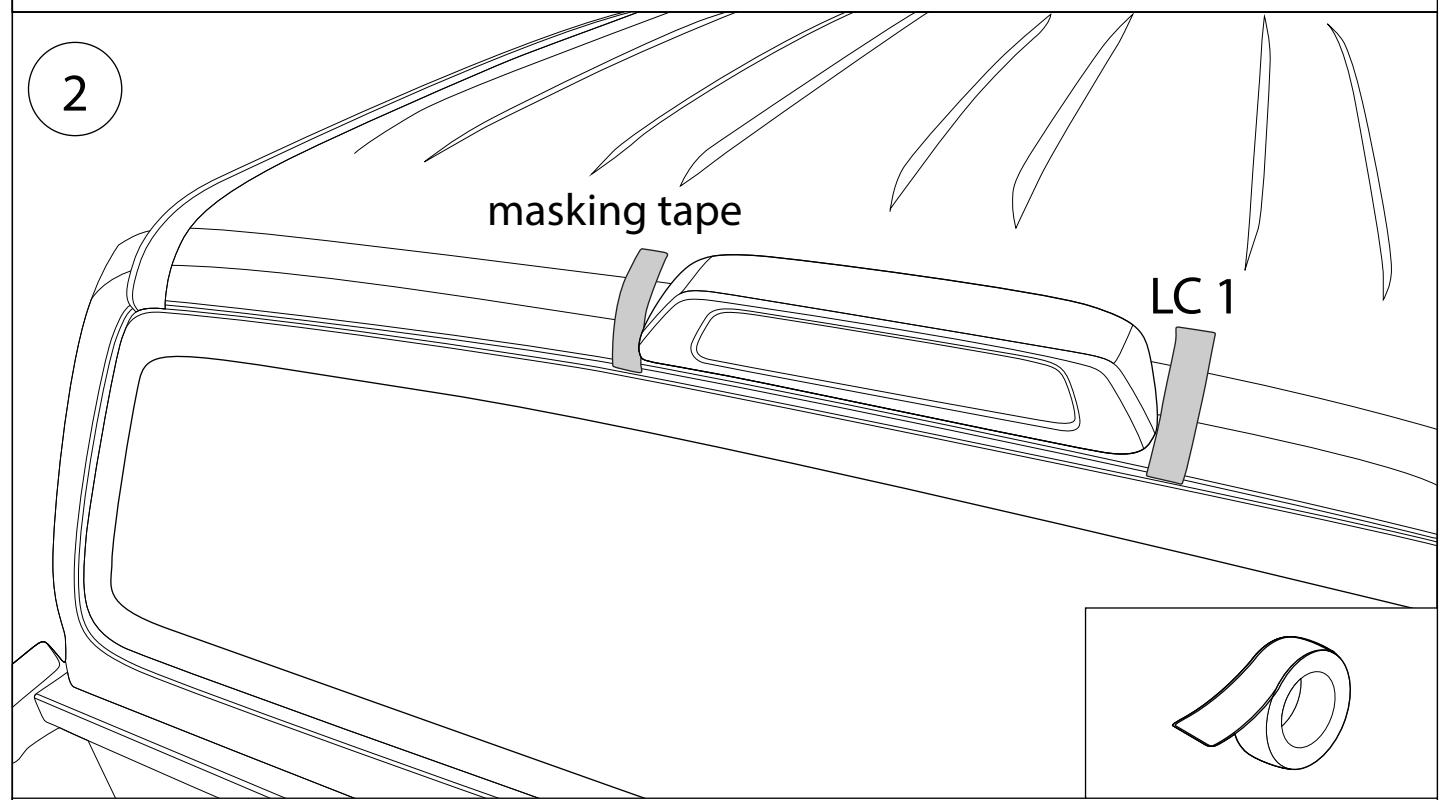


**Stick the masking tape to measure a space of installation for new light cover.**

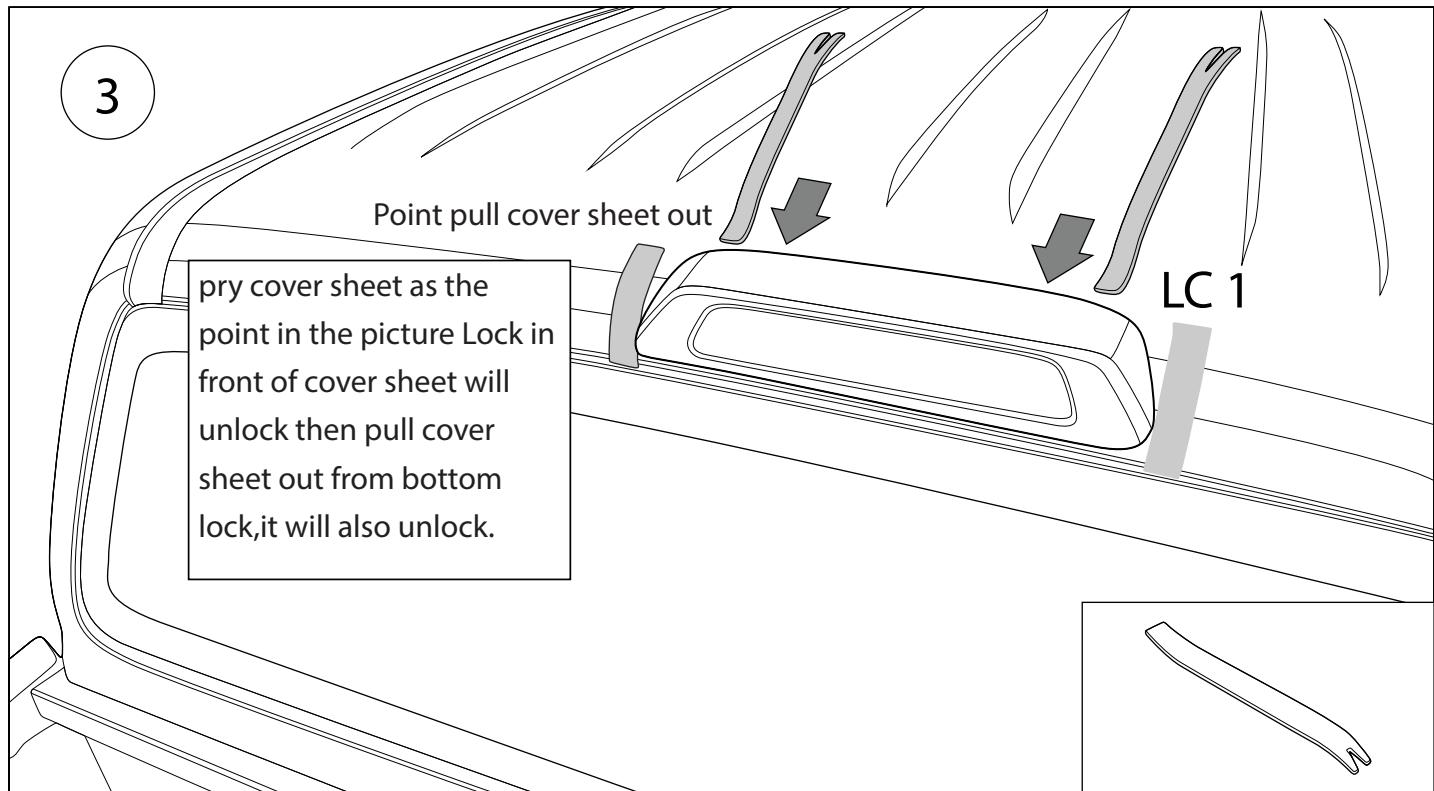

Using a plastic for console car pry a light cover on ford as picture above lock will unlock.

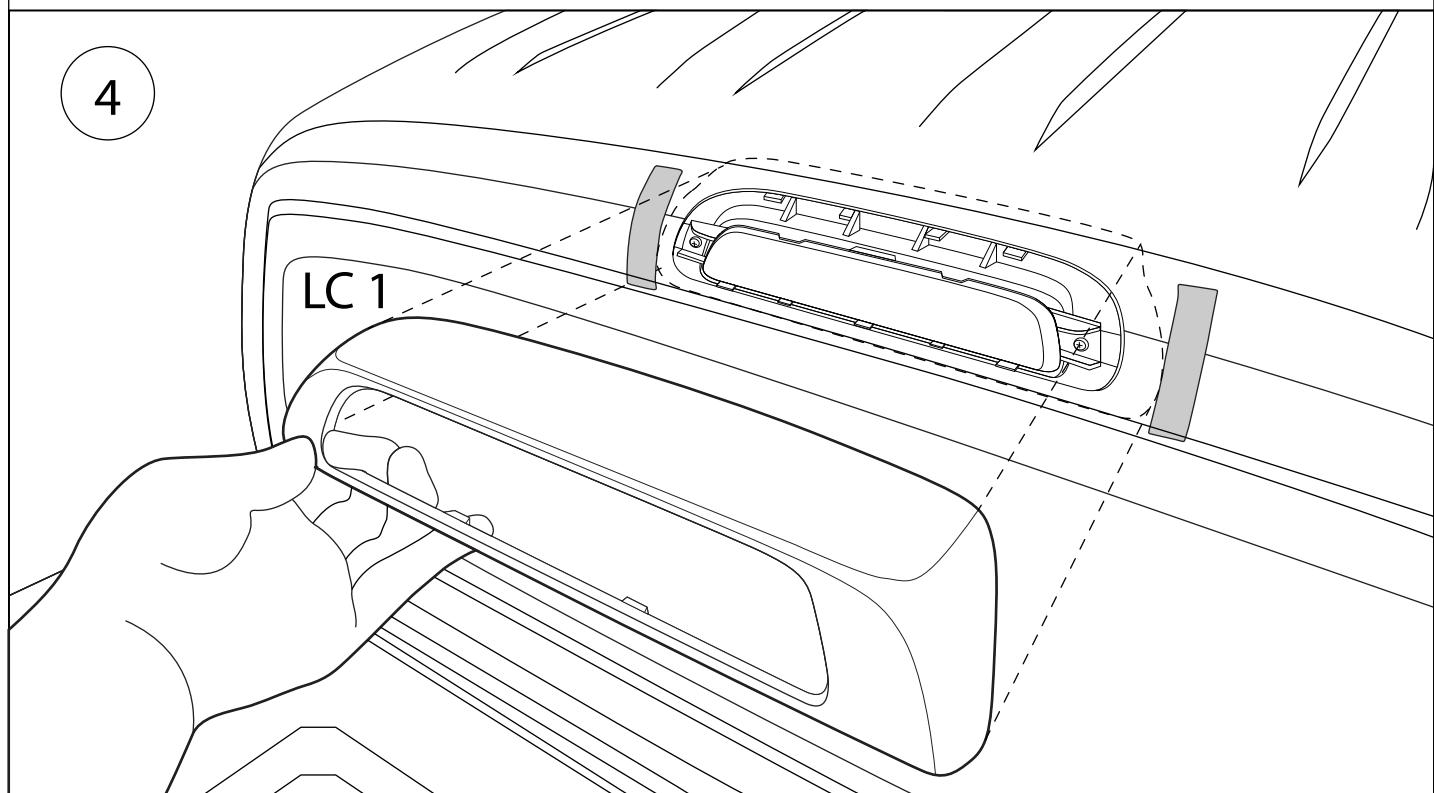


Pull a cover sheet out.

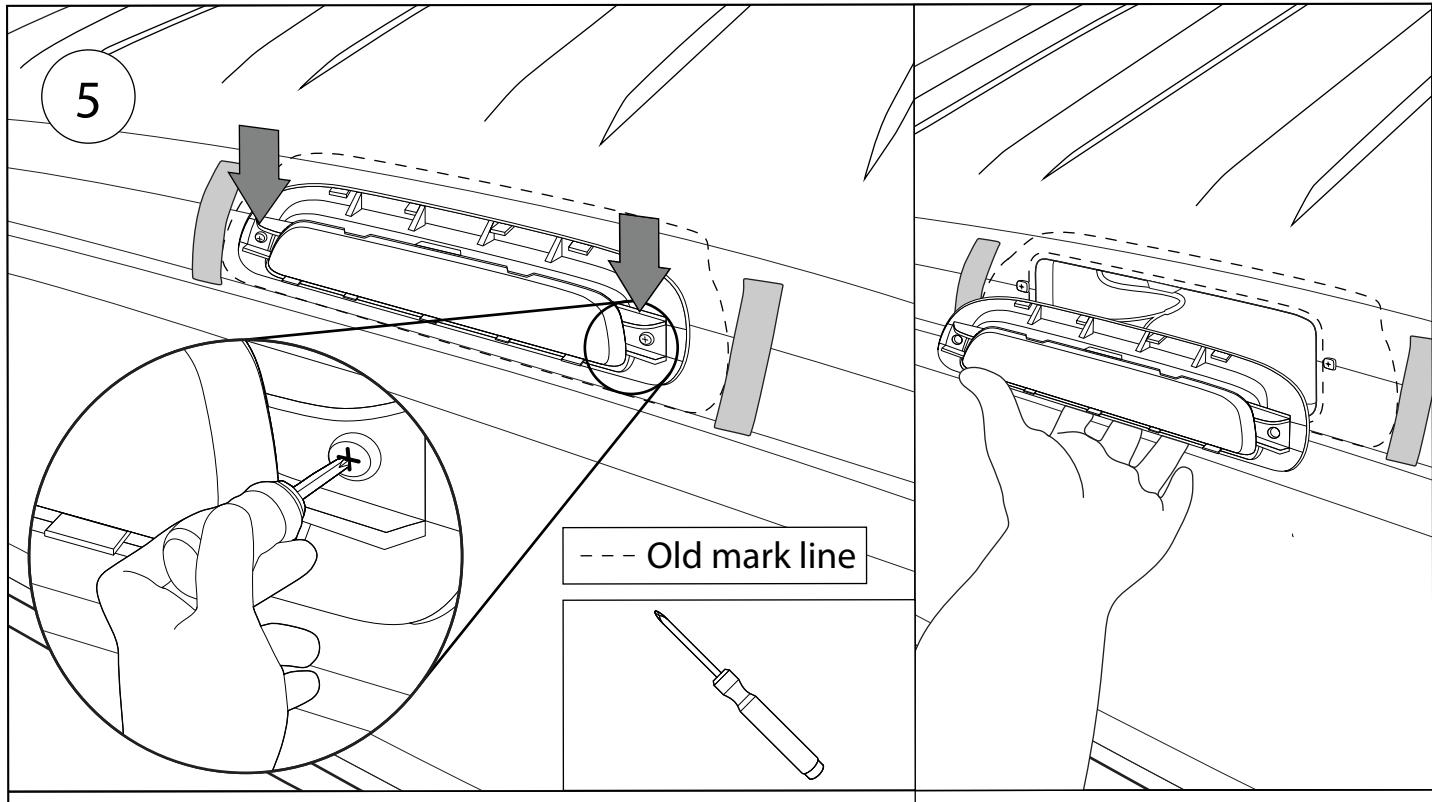



Use philips type screwdriver turn nut out on bolt position as in the picture.

Pull the electric cover panel out.

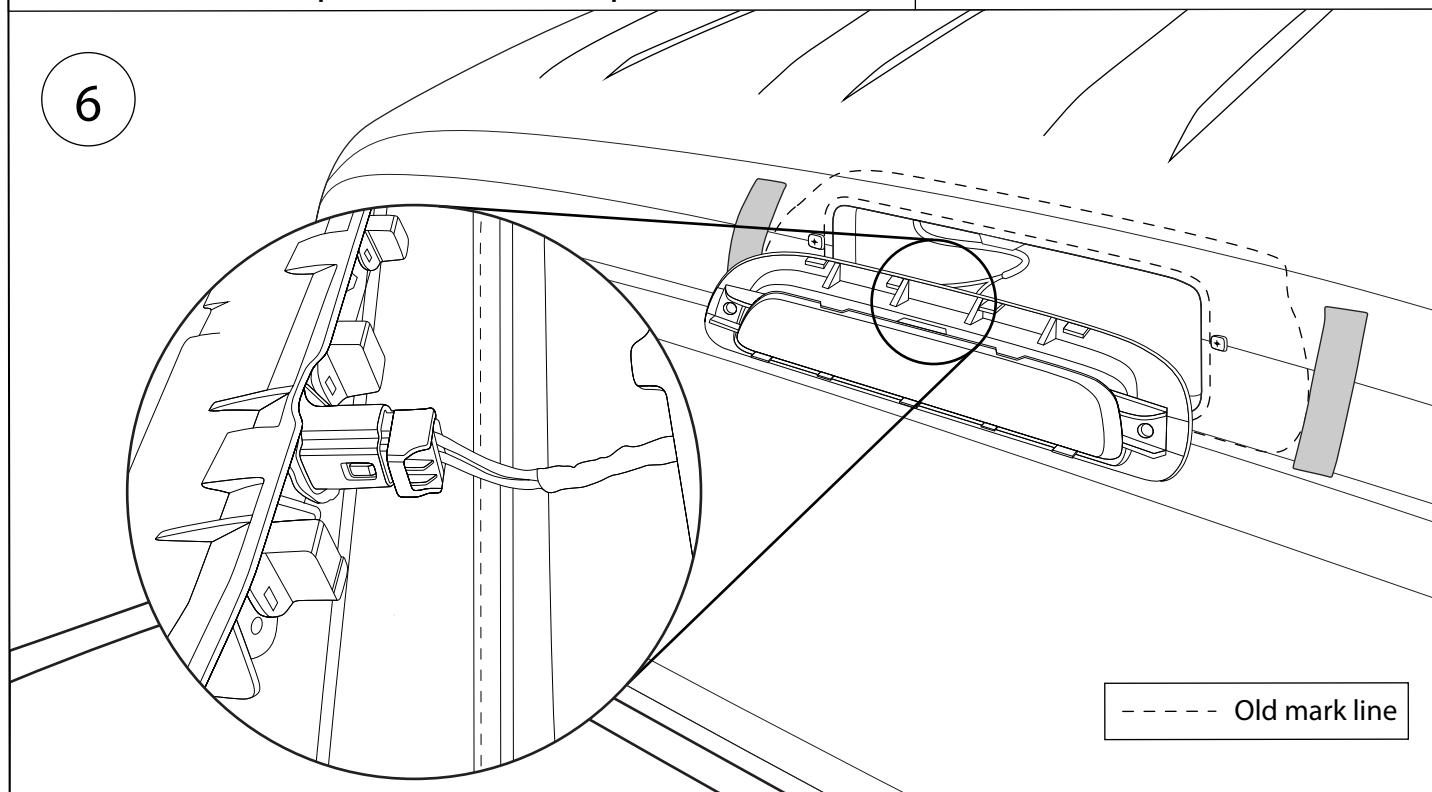


In the picture showing that pull the electric panel out,wiring of vehicle as still connecting.

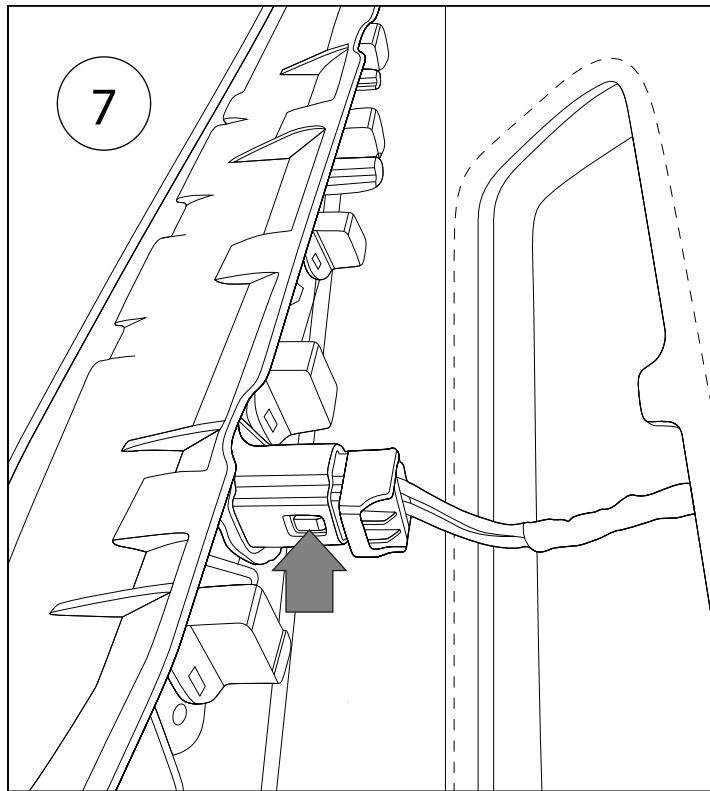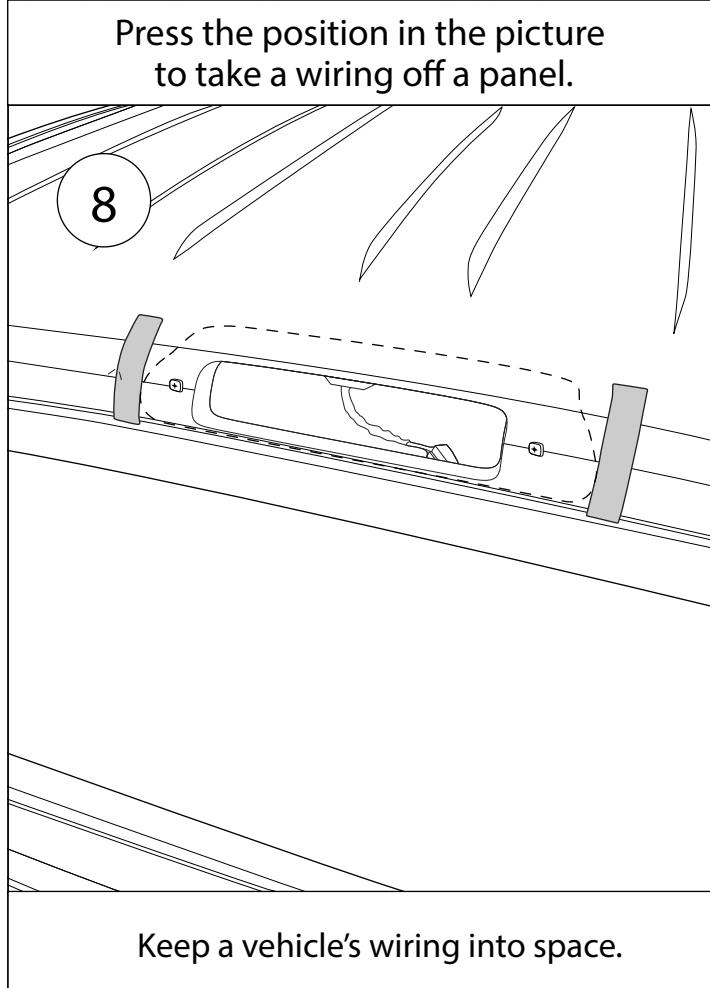

	<p>Press the position in the picture to take a wiring off a panel.</p> <p>Pull a wiring out from electric cover panel.</p>
	<p>Keep a vehicle's wiring into space.</p> <p>Take a new light cover sheet to peel tape off on both side, 10 cm.per side.</p>




9

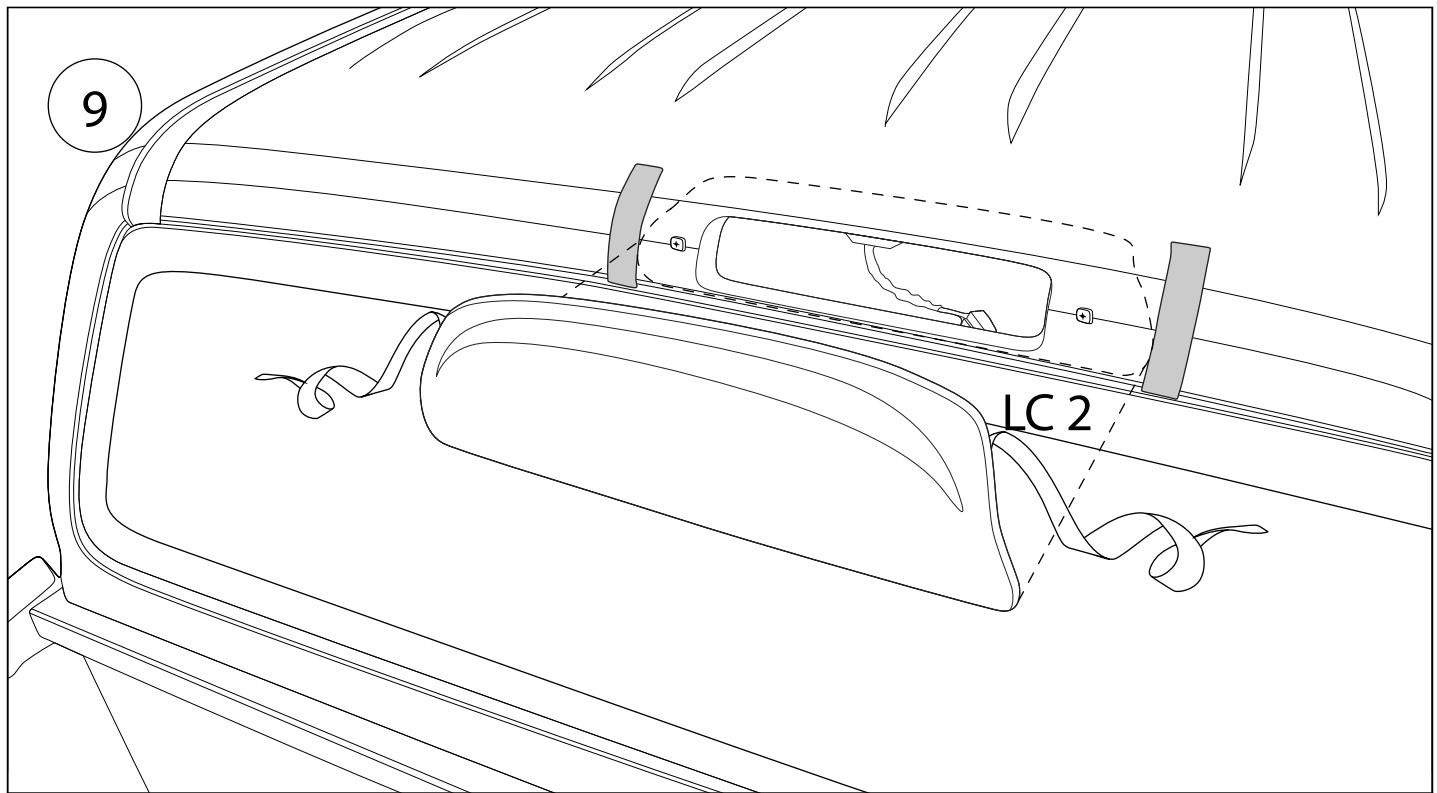

Then put a new light cover sheet over to measure a space compare to old mask line by using outer edge of light cover sheet must be in range between masking tape.

10

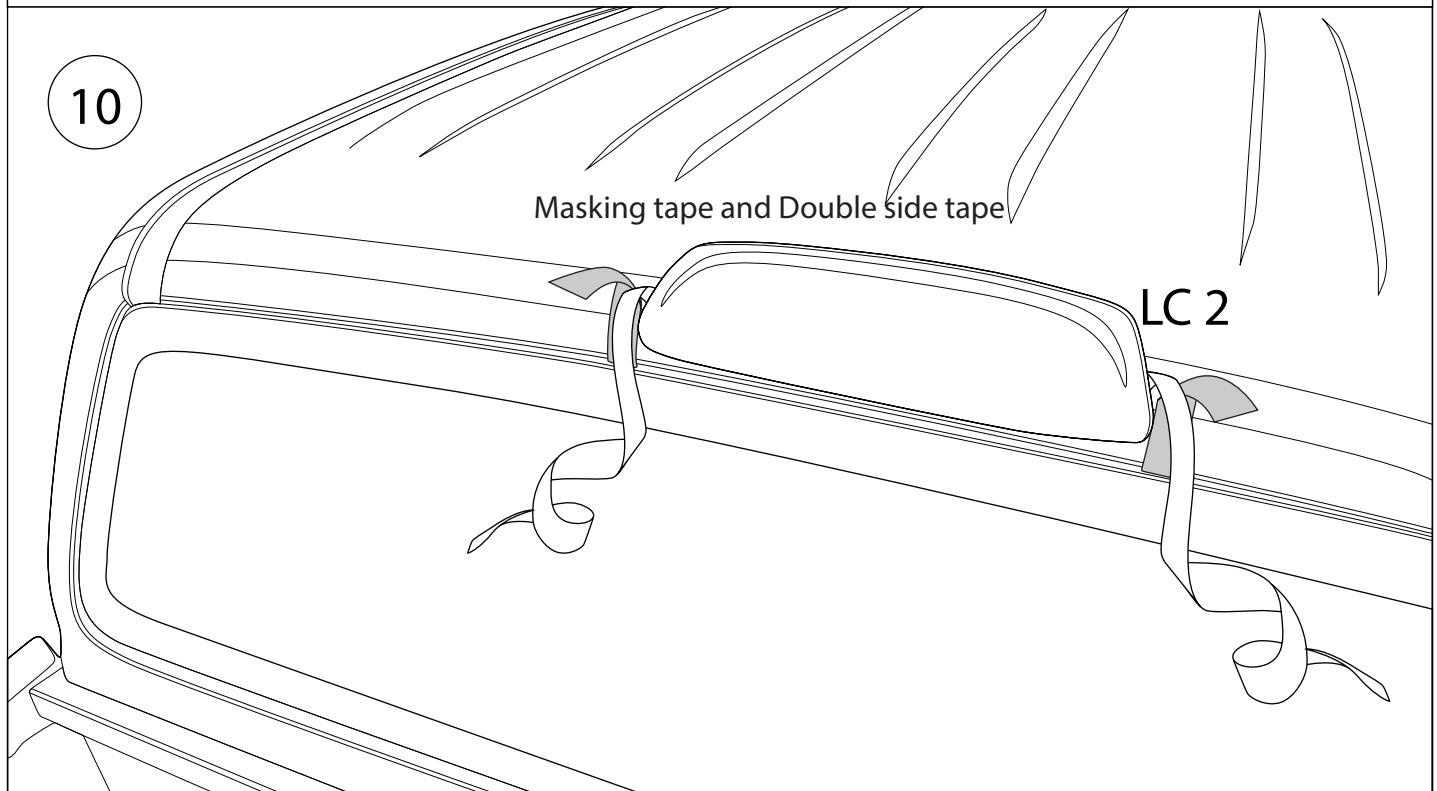


When got a space then peel all double sided tape off and peel masking tape out.




## Installation Manual


### For Ford Ranger 2012

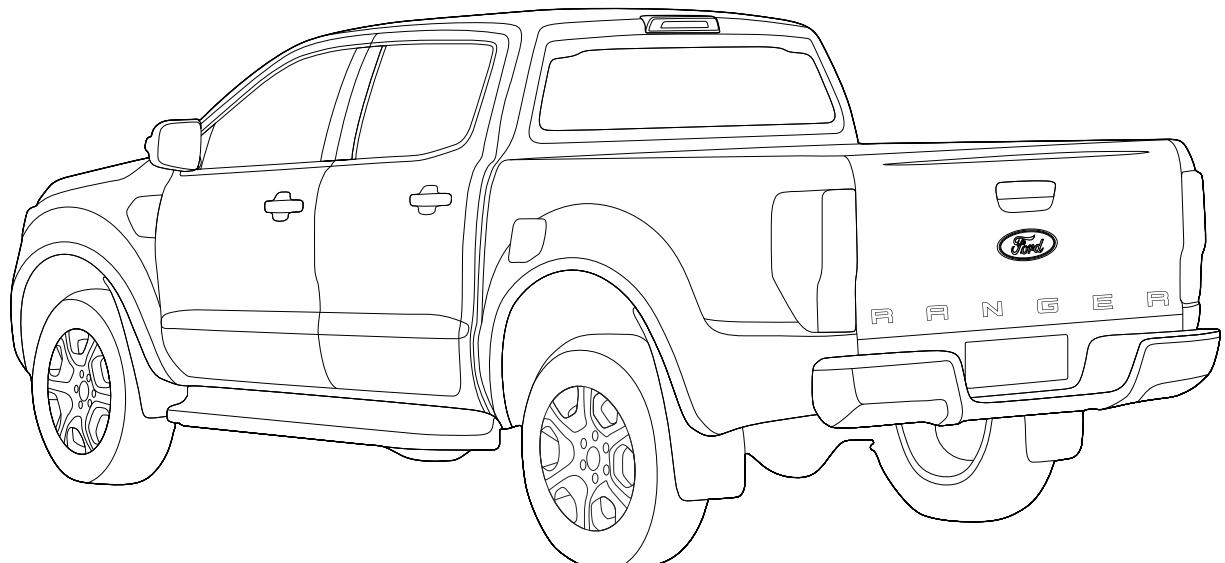

#### EQUIPMENT

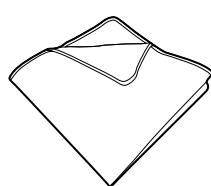

Fabric

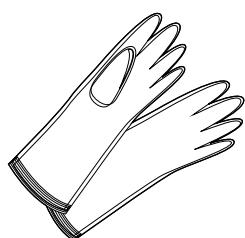

Handcover


#### TOOL




No.10 Use for Bolt M6



Ruler

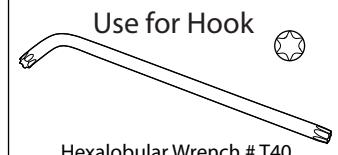


Use for Hook  
Hexalobular Wrench # T40

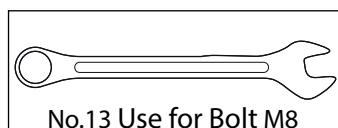

No.13 Use for Bolt M8

#### SUPPORT ROOF SET

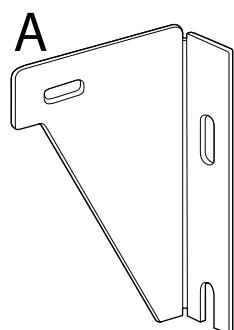

#### Bolt / Washer List




Bolt M8  
C : 4 pieces



Spring Washer  
D : 4 pieces



Washer  
E : 4 pieces

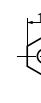

Bolt M6  
F : 2 pieces








Spring Washer  
G : 2 pieces



Washer  
H : 2 pieces

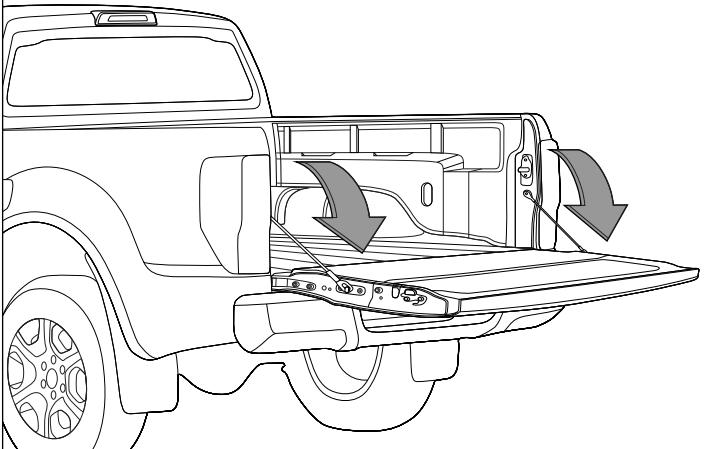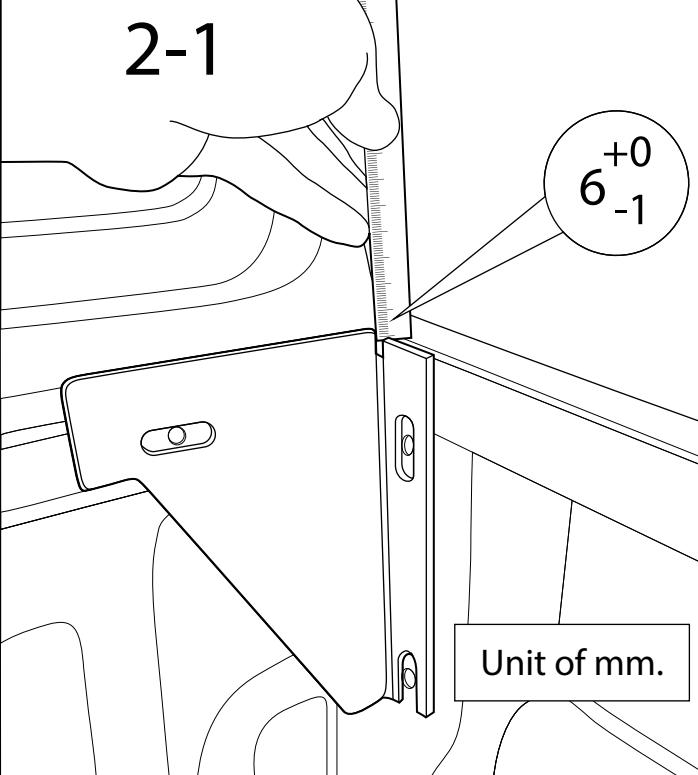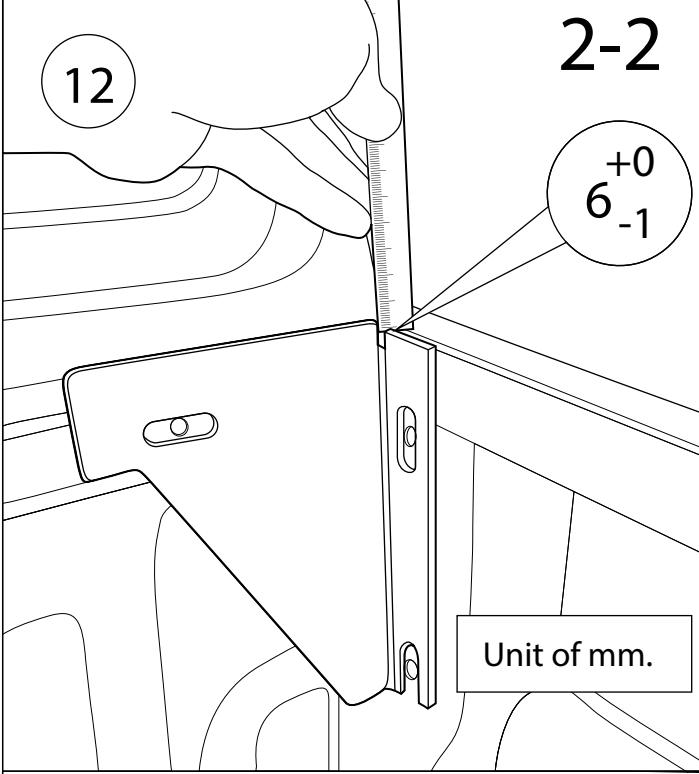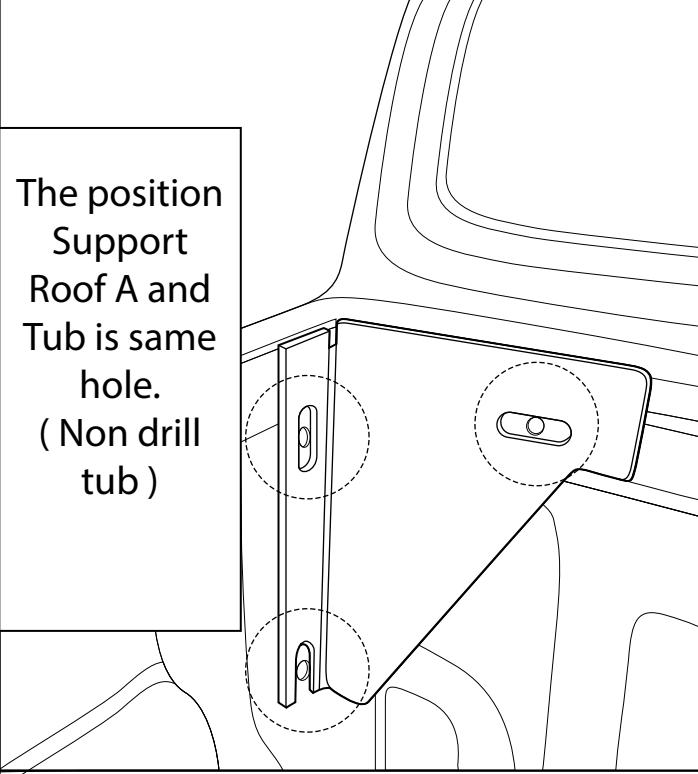


<p>11</p> 	<p>2-1</p>  <p><math>6^{+0}_{-1}</math></p> <p>Unit of mm.</p>
<p>Open Tailgate.</p>	<p>Check the Support Roof A must be 6 higher than edge of the tub. ( RH )</p>
<p>12</p>  <p><math>6^{+0}_{-1}</math></p> <p>Unit of mm.</p>	<p>2-2</p>  <p>The position Support Roof A and Tub is same hole. ( Non drill tub )</p>
<p>Check the Support Roof A must be 6 higher than edge of the tub. ( LH )</p>	<p>The Support Roof A installation must be reference in the hole position of the tub.</p>

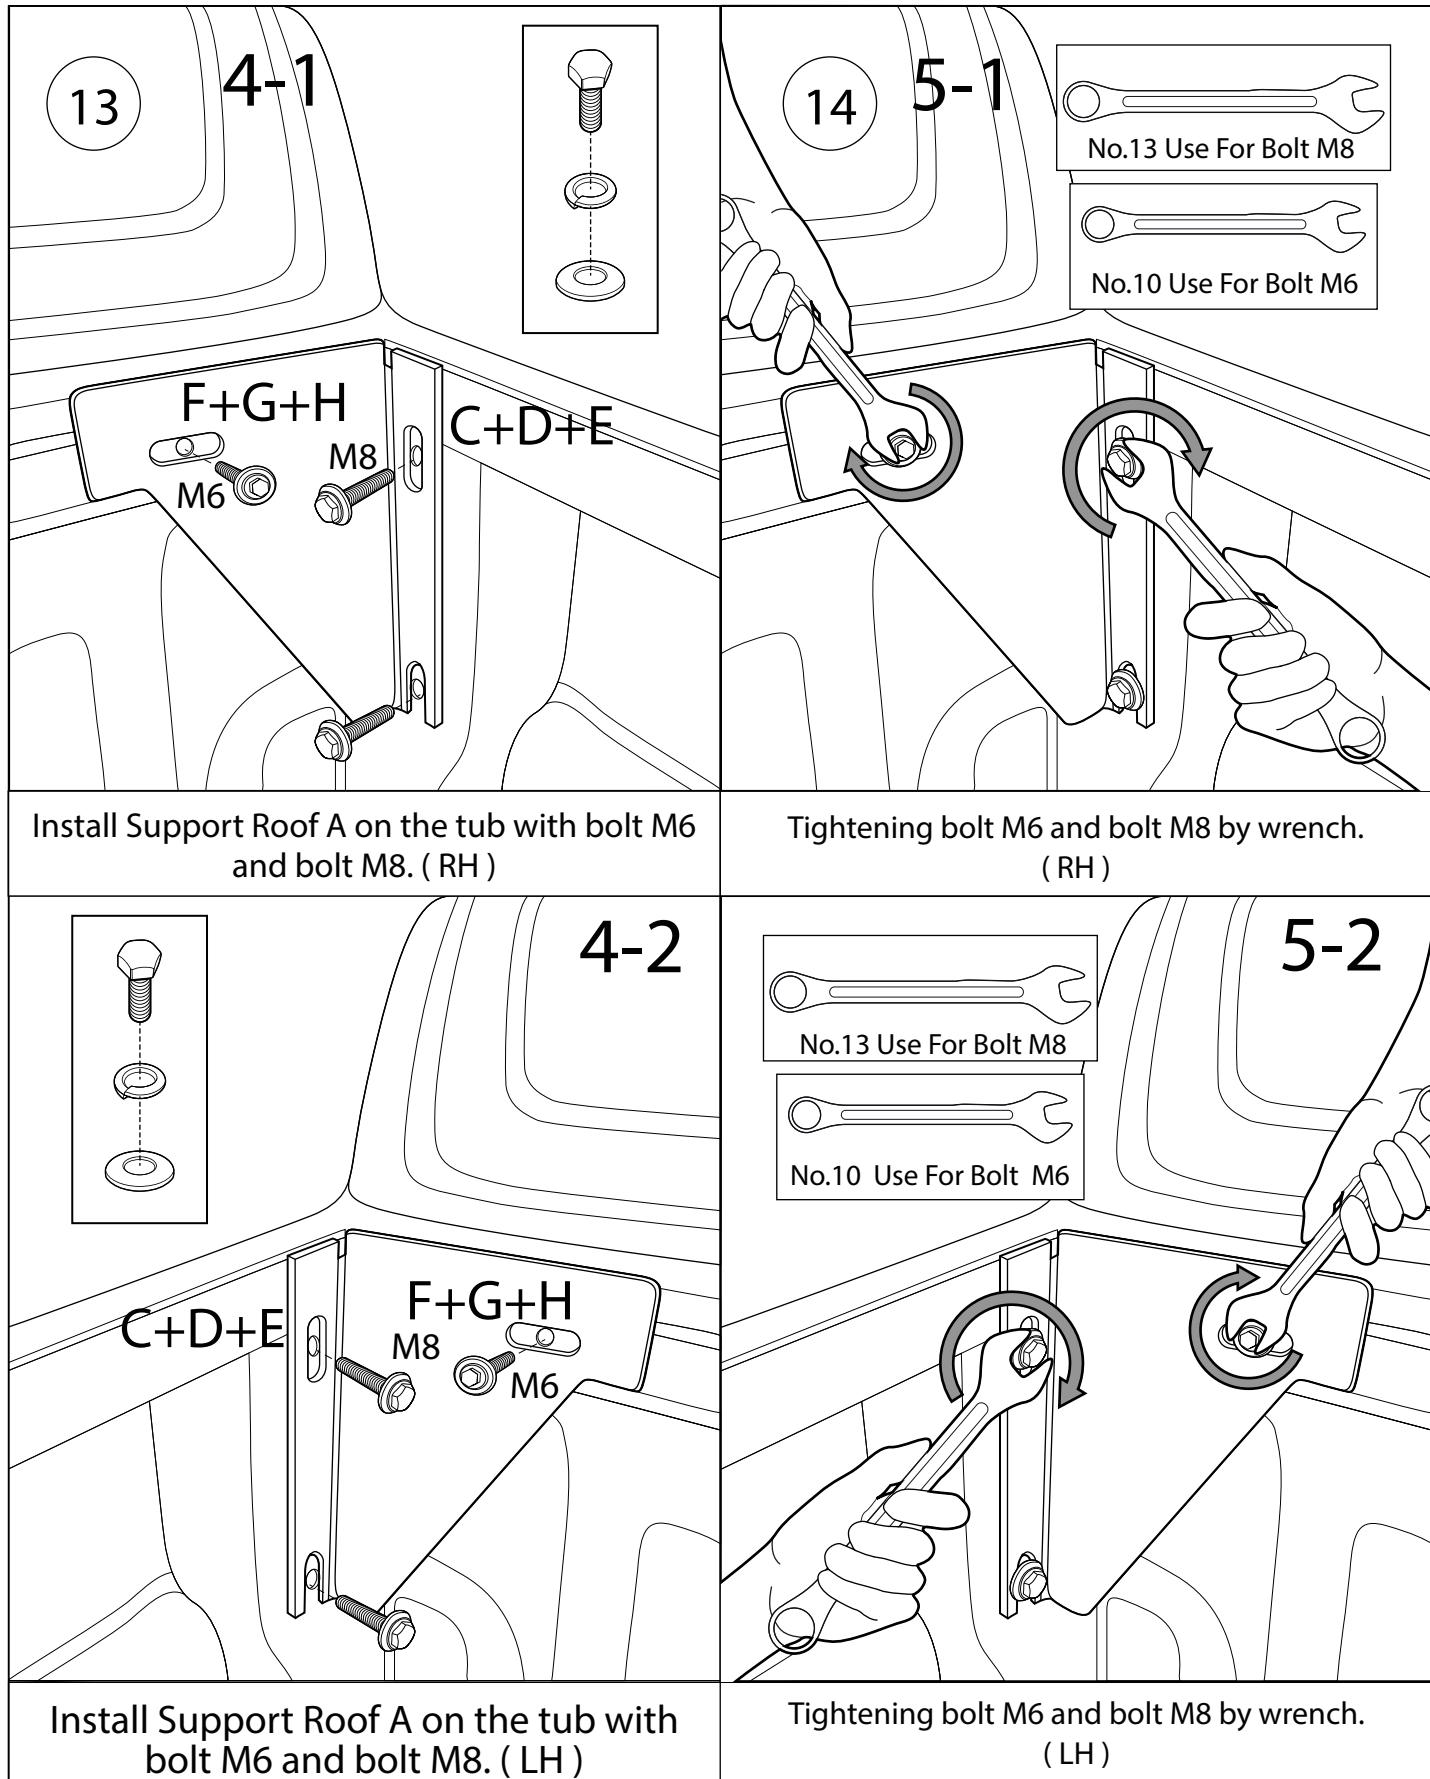



**SAMMITR**

15

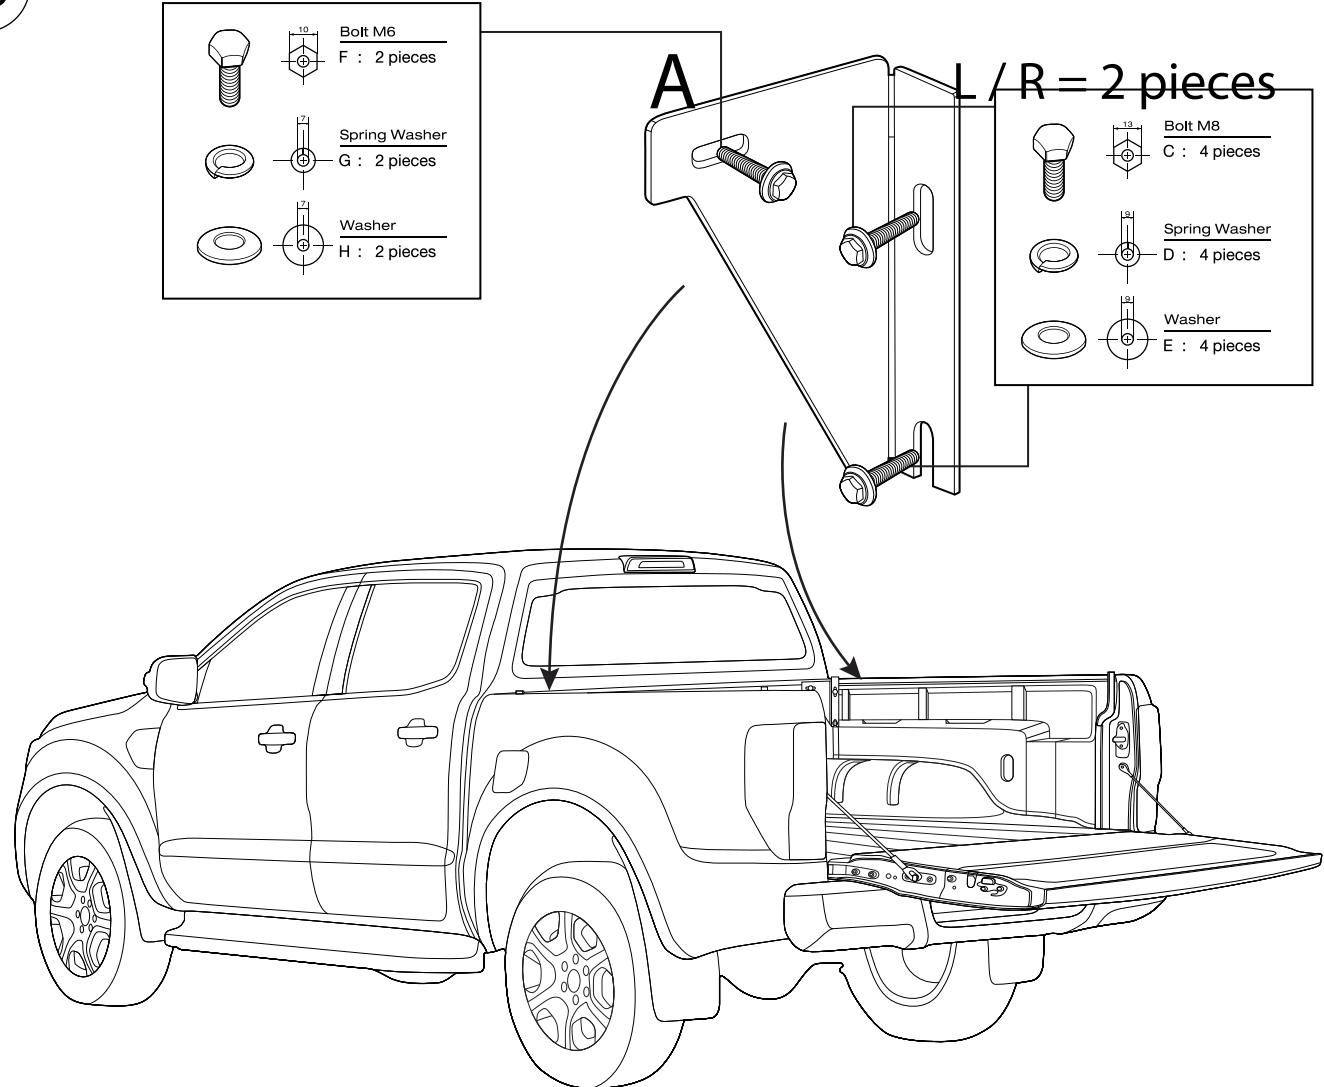







The installation locations for BRKT SUPPORT ROOF FR RH/LH and  
BRKT SUPPORT ROOF FR RH/LH on the tub.



# Installation Manual



## For Ford Ranger 2012

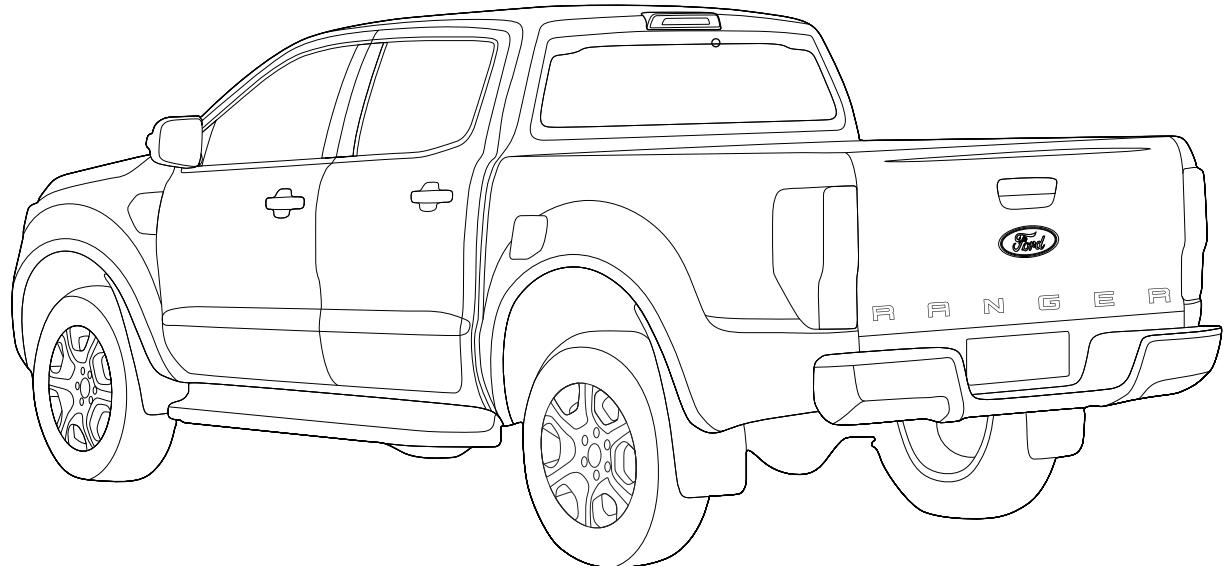

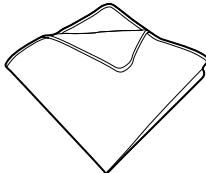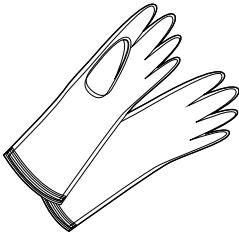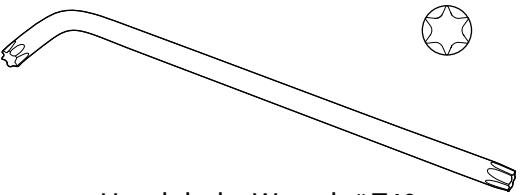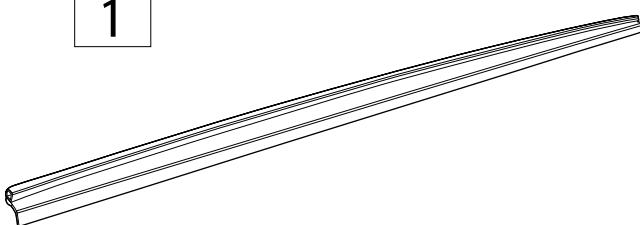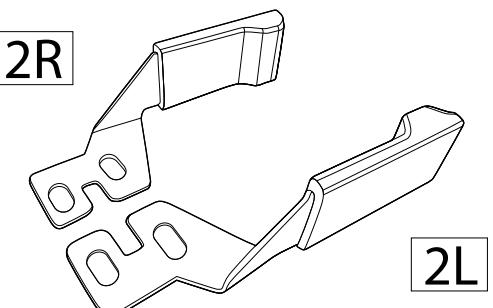EQUIPMENT	TOOL
 Fabric	 Handcover
	 Hexalobular Wrench # T40
FRAME WEATHER STRIP	TAILGATE LOCK
 1	 2R 2L




16

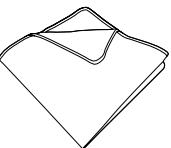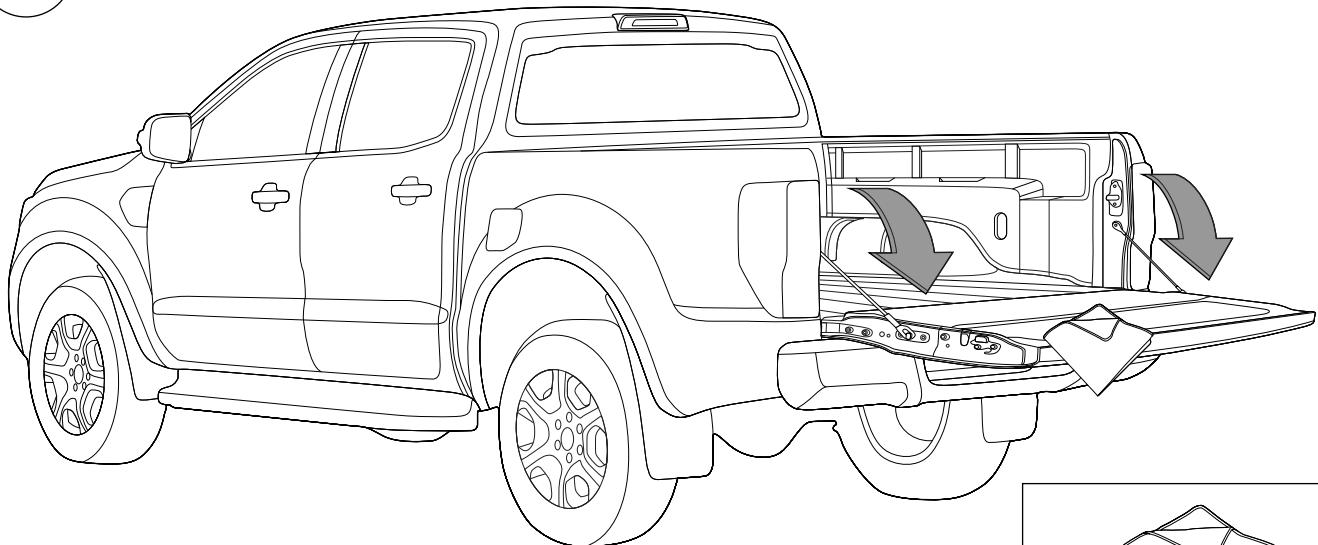


Clean the edge of tailgate.


17

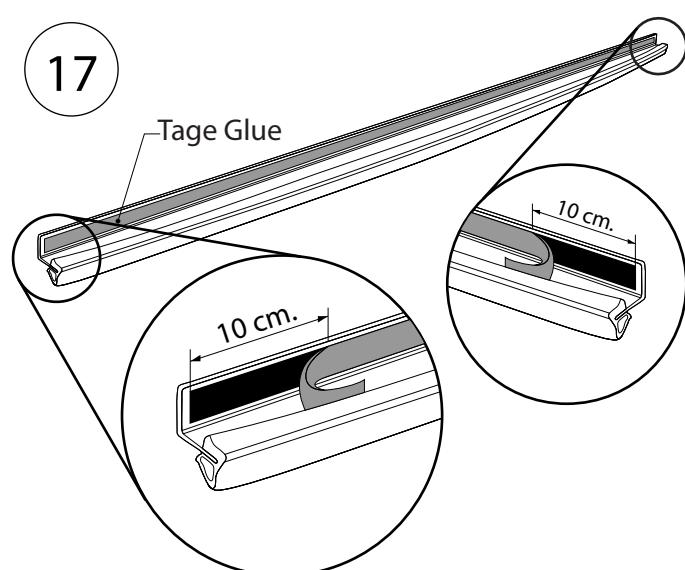

2

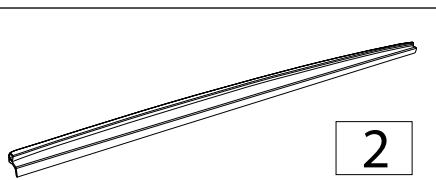


2.1

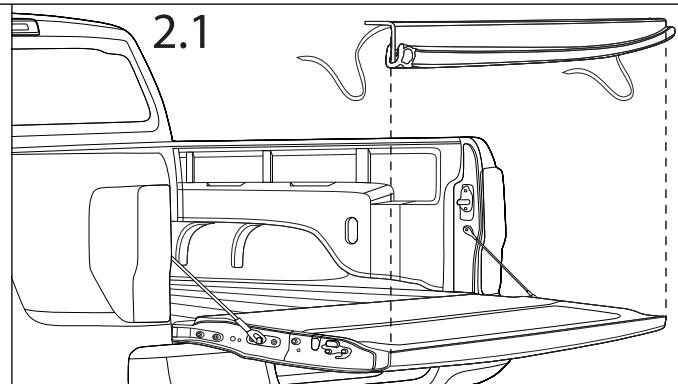

Alignment the position between the edge of tailgate and Frame Weather Strip

2.2

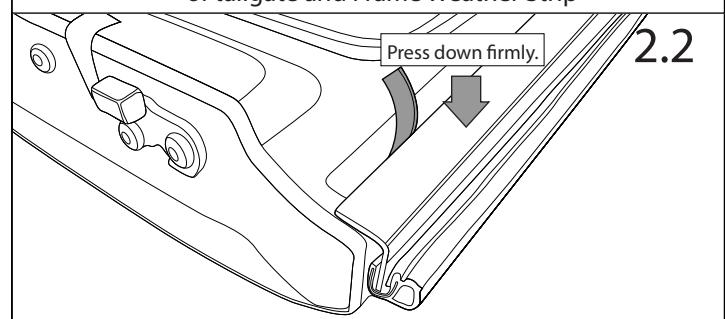


Pull tape glue out 10 cm. on eachside

Pull the tape glue.



18

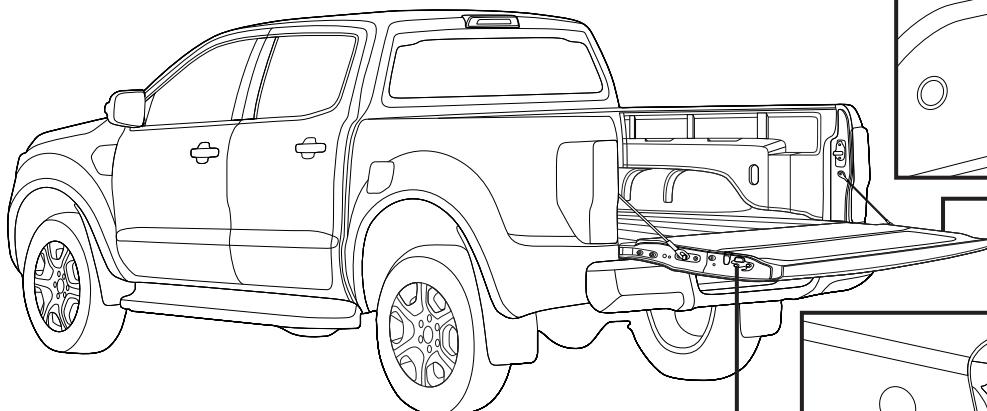


Right Side

Left Side

The position install of lock side.

19

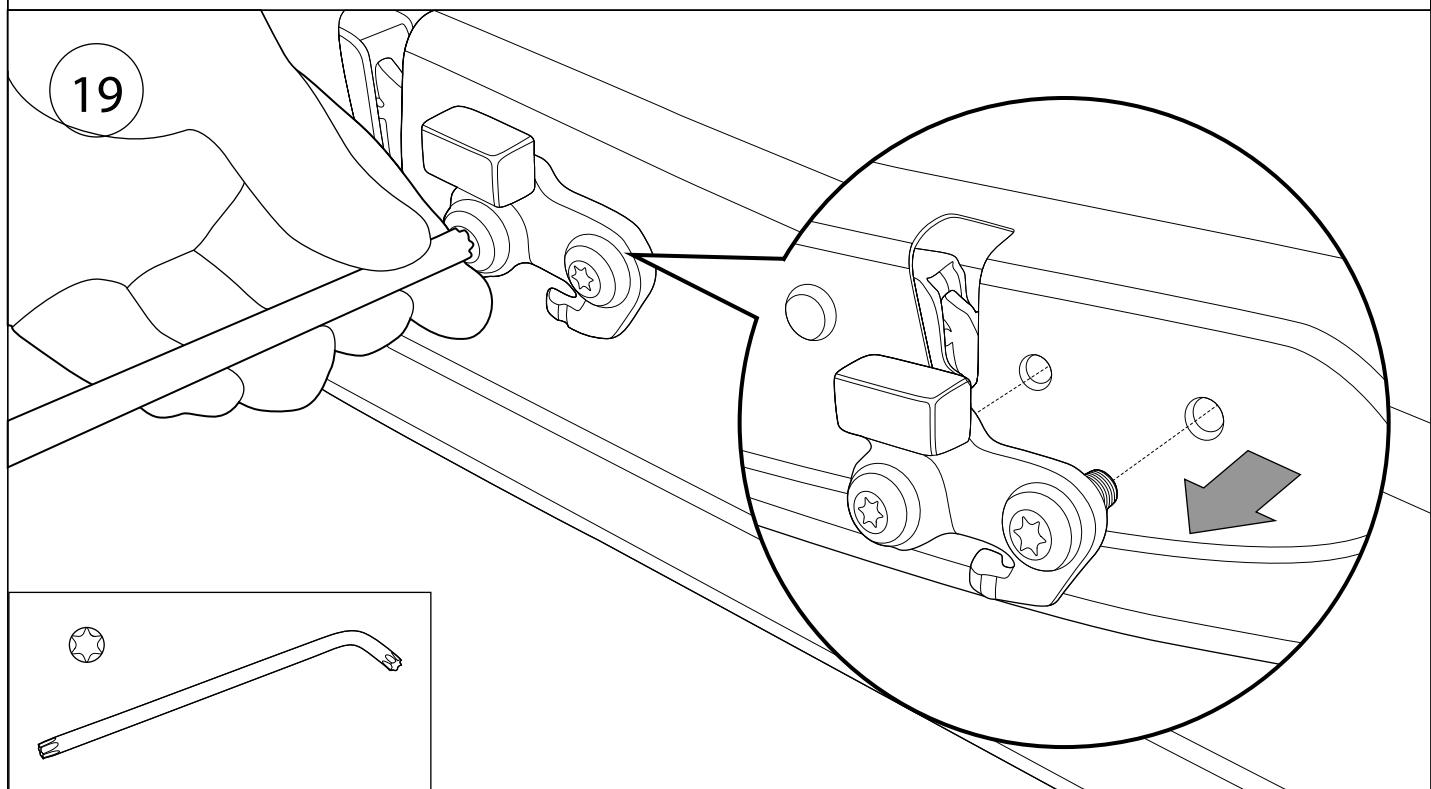

Remove The Lock Side of tailgate. ( Left Side )




**SAMMITR**

20

Press The Tailgate Lock attach to tailgate of the tab.

2L

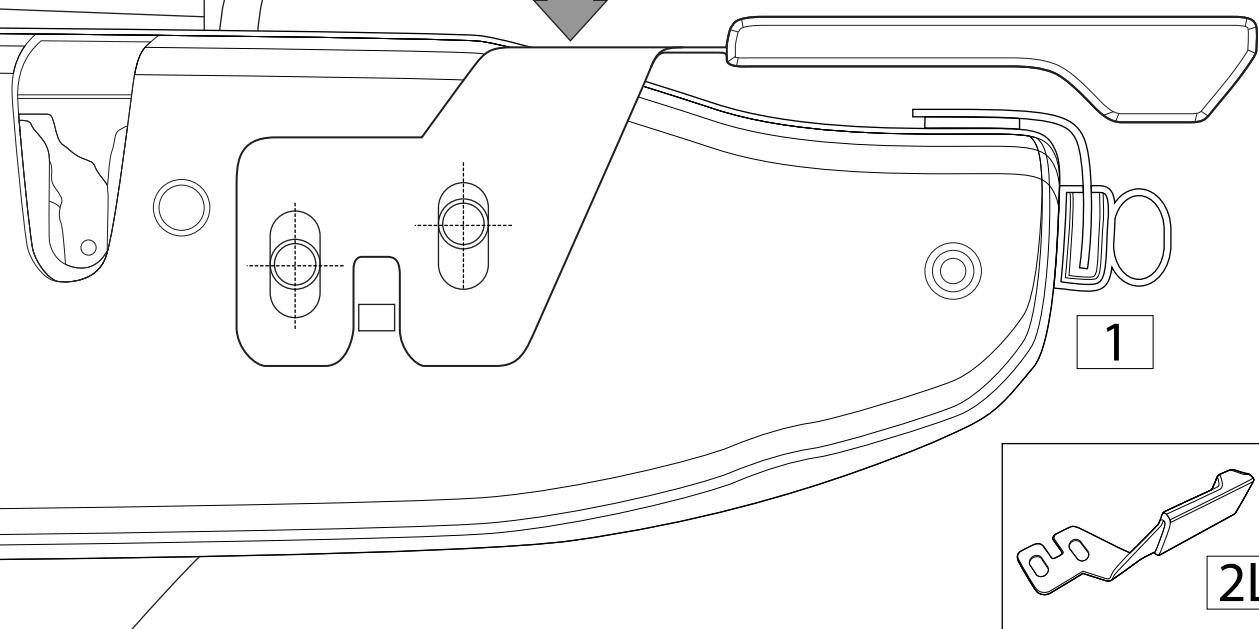


Alignment The Tailgate Lock.( Left Side )

21

2L


1

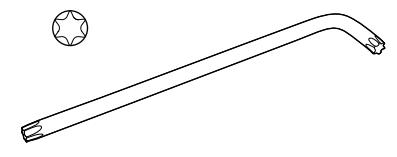

Install The Lock Side and Tailgate Lock together.



22

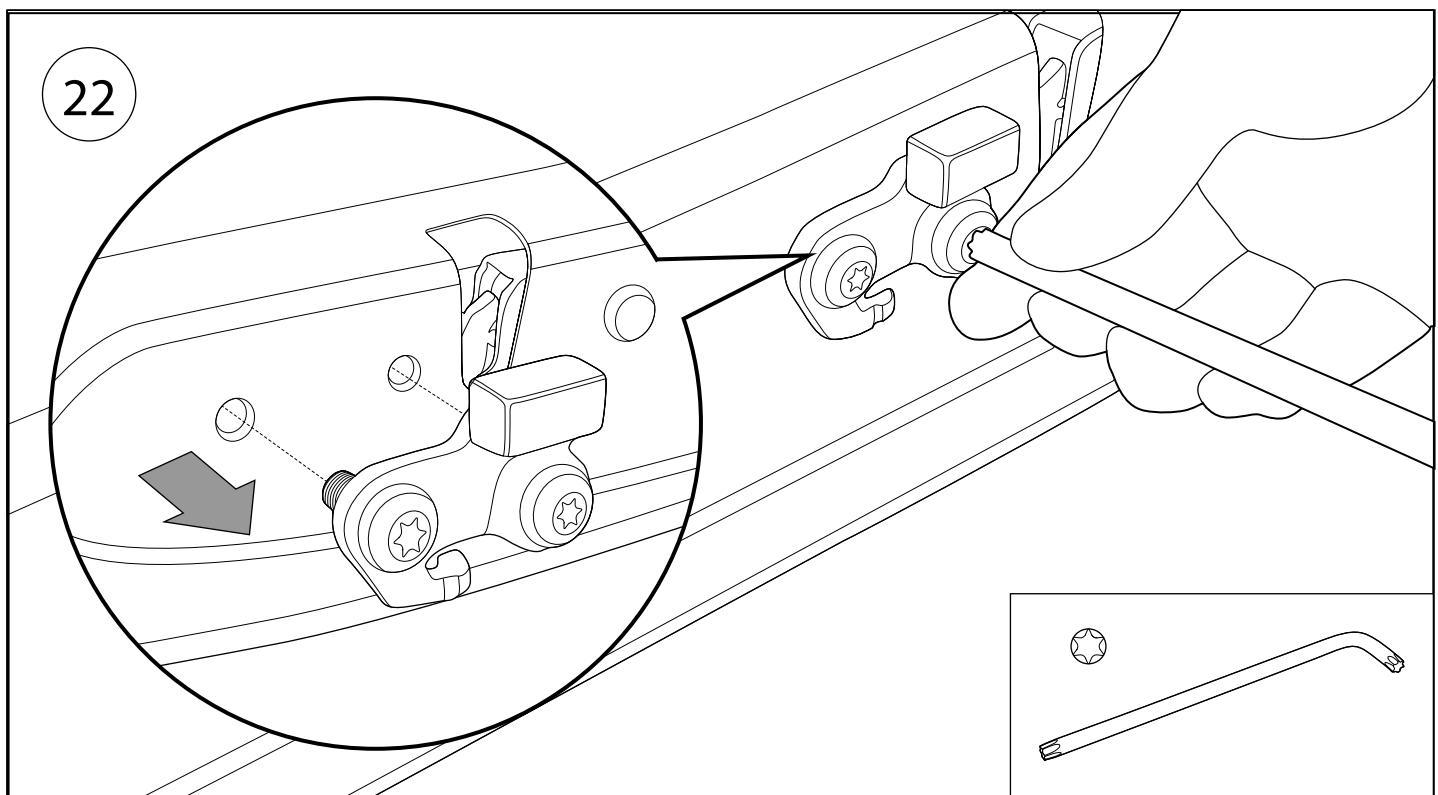


Remove The Lock Side of tailgate. ( Right Side )


23

2R


Press The Tailgate Lock attach to tailgate of the tab.

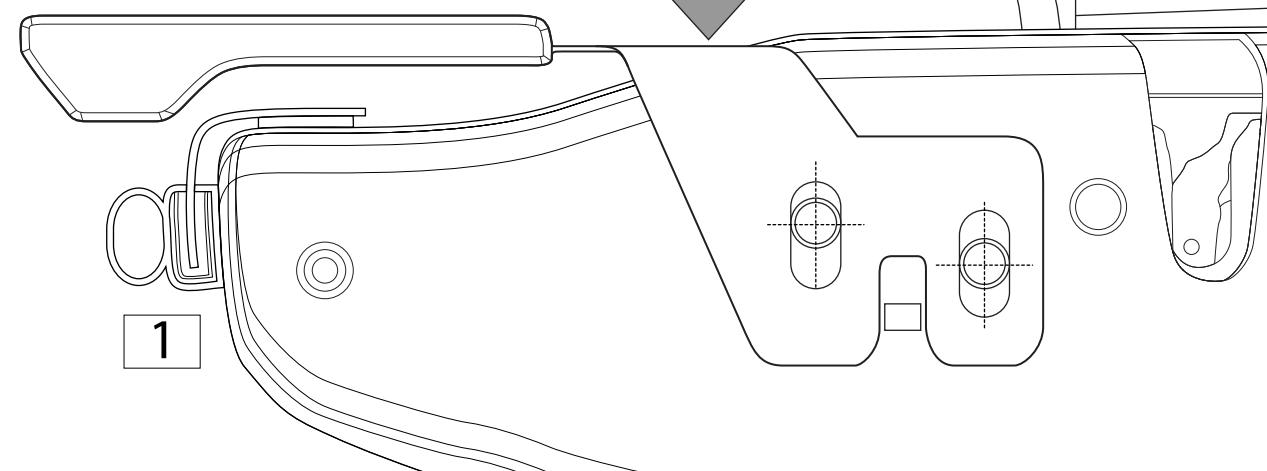

Alignment The Tailgate Lock. ( Right Side )

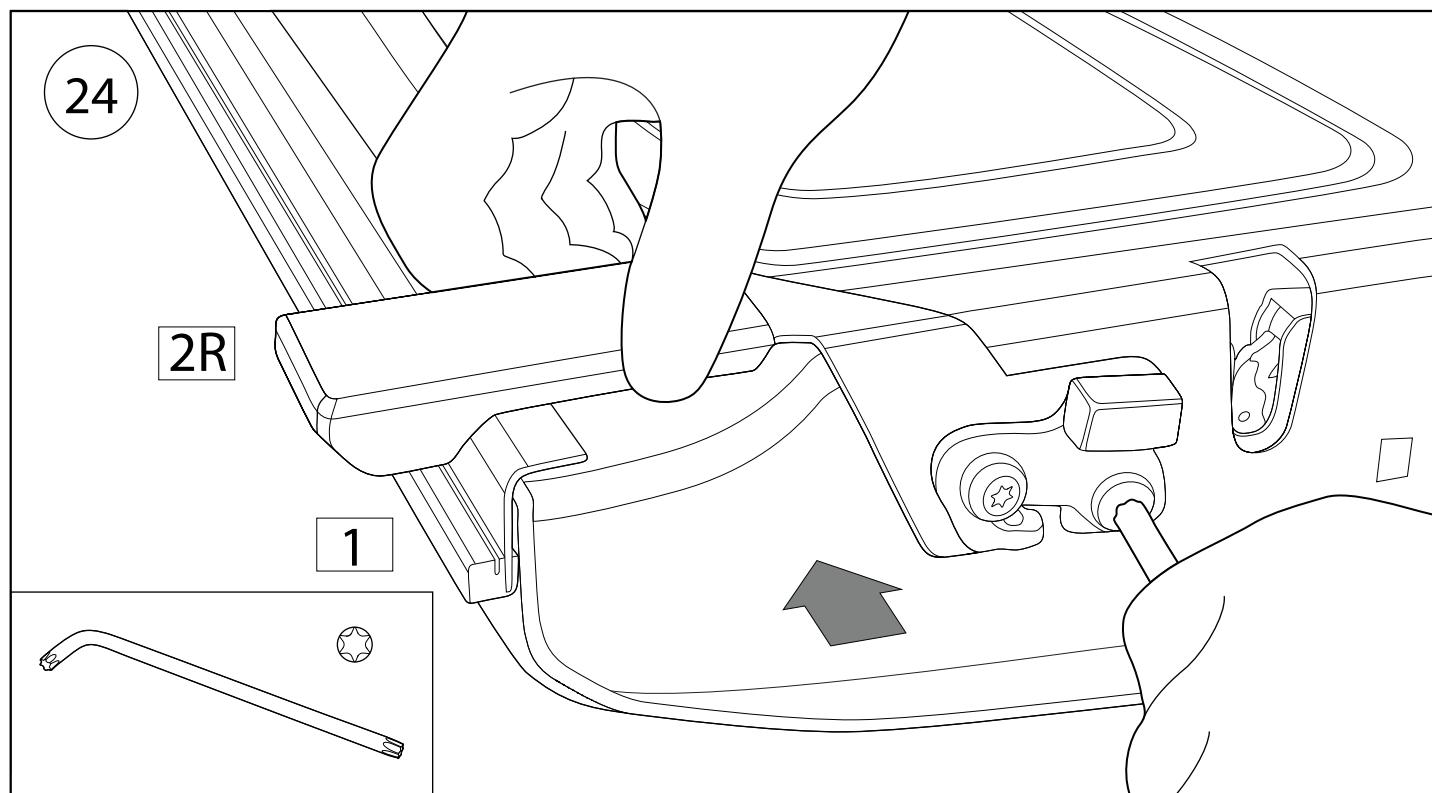

Install The Lock Side and Tailgate Lock together.

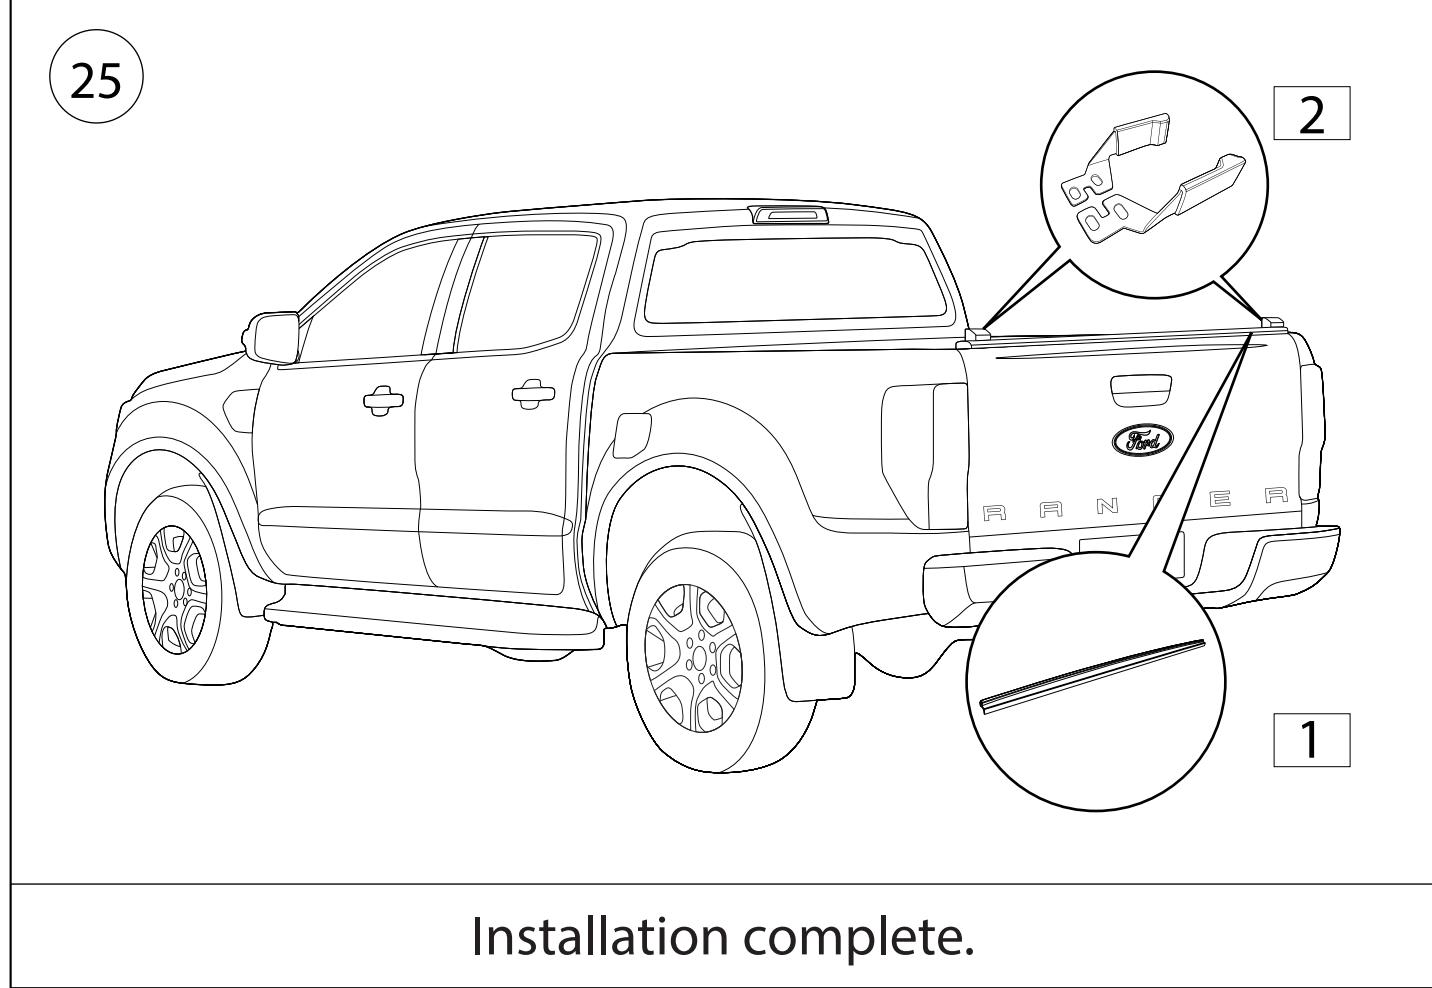

Installation complete.




## Mechanical Installation Manual All Models

Steel Canopy : TL-1  
Version 1.0


### Part In Main Carton

P1: Steel Canopy TL-1

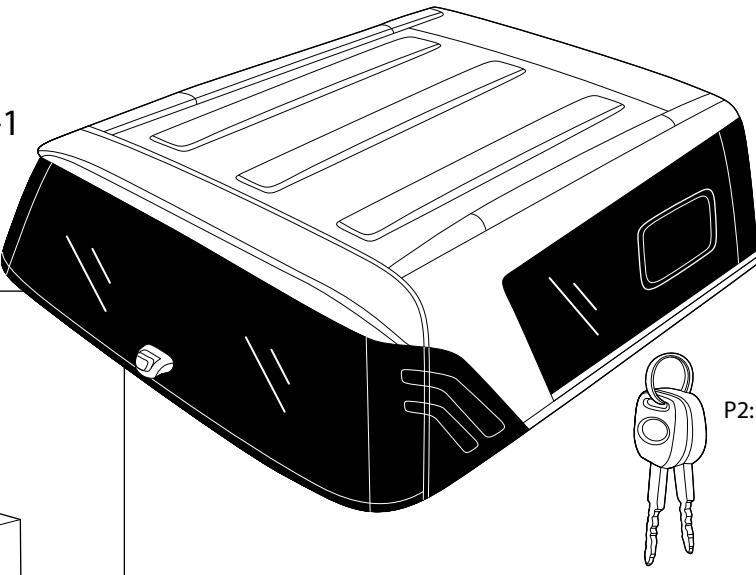

Kit Box

Part List Paper

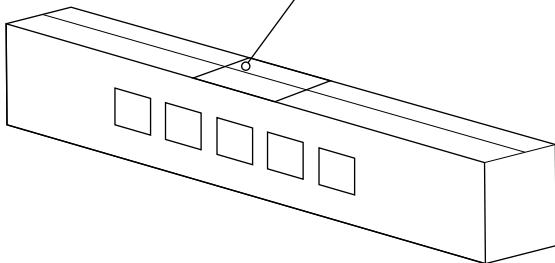


x4 (D-Cab)  
x6 (C-Cab)

K1 : C-Clamp




K2 : Switch Case

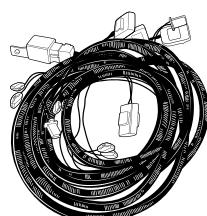

K3 : Wiring No.38




K8 : T Paint

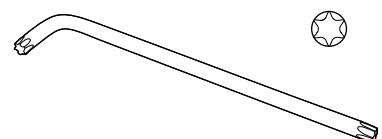

T6 : Hexalobular Wrench # T40


### Require Tools

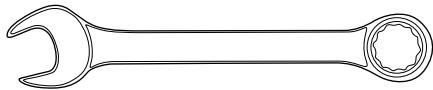


T1 : 13 mm. Wrench



T2 : 10 mm. Wrench

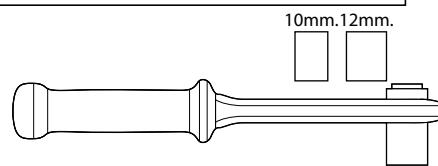

T3 : 10,12mm. Torque Wrench

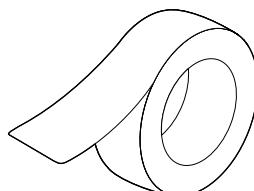


T4 : Tape



T5 : Electric Tape



T7 : Measuring Tape/Ruler


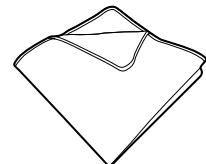


T8 : Fabric





26

## The Procedure of checking the Sammitr canopy box before installation.

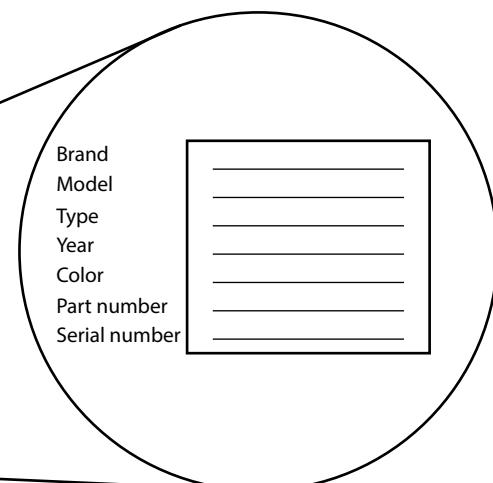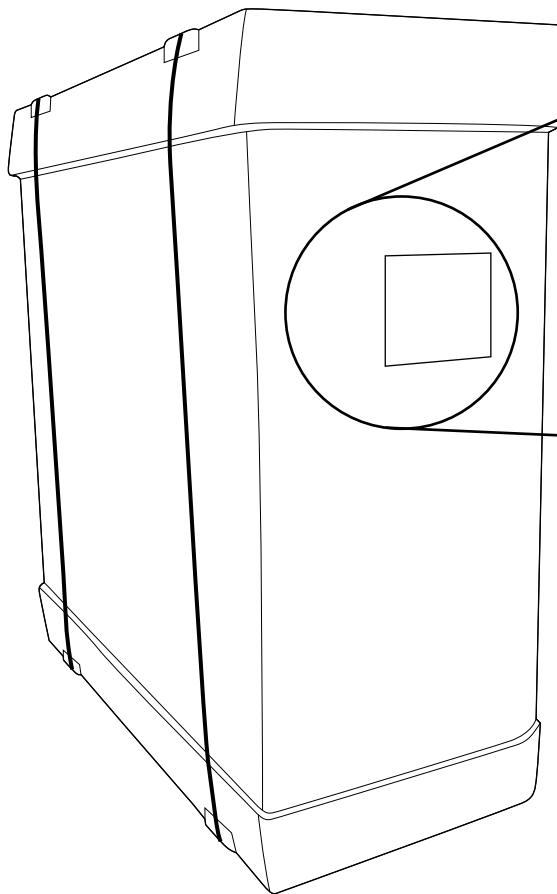

1. Make sure that Sammitr canopy box is in good condition, No marks, distorts or any damages.
2. Check Model / Year of the canopy and Model / Year of the vehicle which have to be matching.
3. Check canopy serial number / model code and vehicle serial number / model code which have to be matching by looking at the rear canopy handle.

4. Check all the accessories received inside the box with the Packing List.

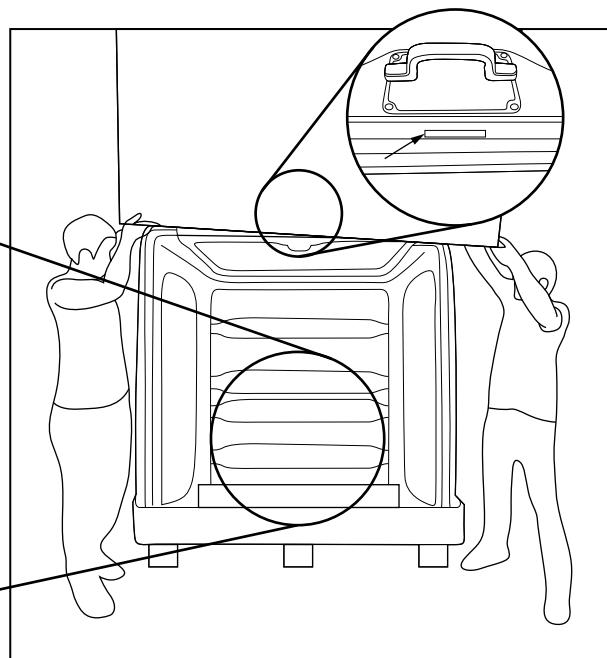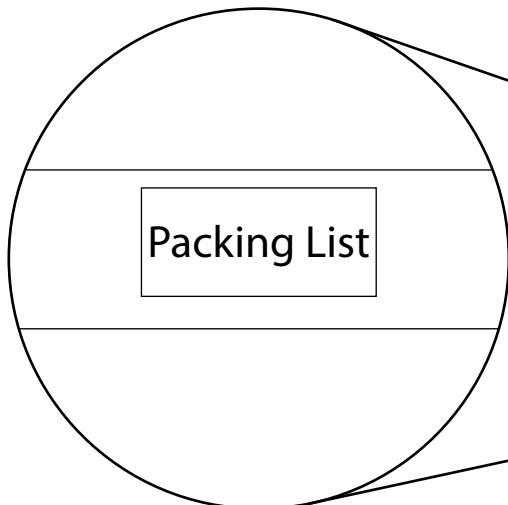




27


## The preparation process of Sammitr Canopy TL-1 model before installation with the vehicle.

1

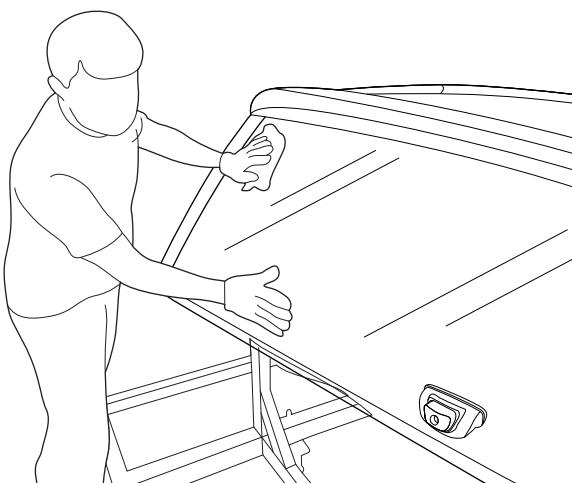


1. Canopy have to be in good condition, no damage, dent, cracks, smooth surface including no window damages or cracks.
2. Locking system is working for both keys.
3. Canopy sides are not damage, dent or cracks.
4. Canopy front window panel is working (open/close), no cracks or damages occurrences.
5. Check the Rear Door by open and close.


2

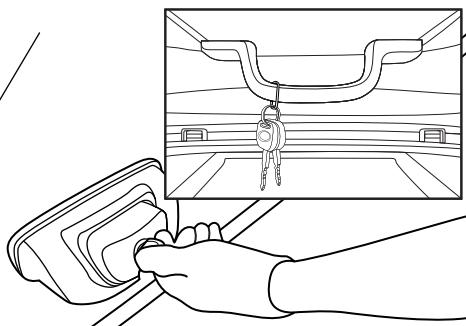


4

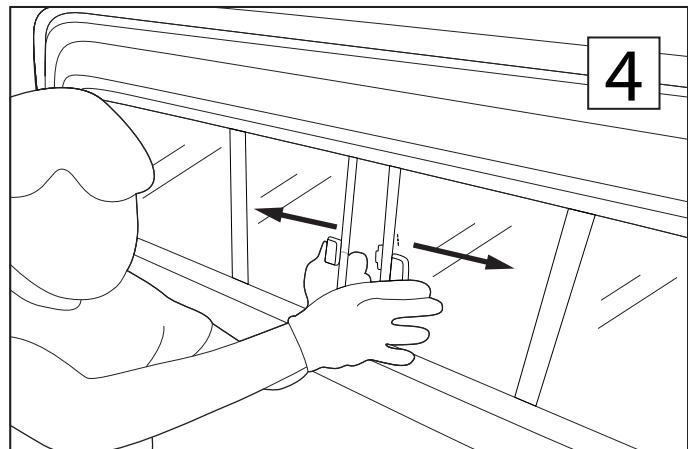

3

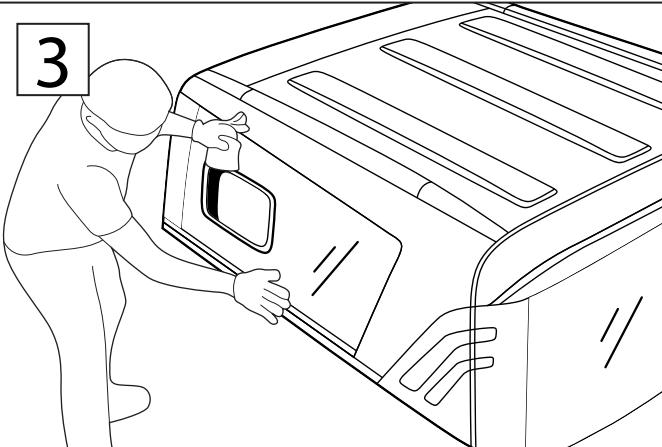

5

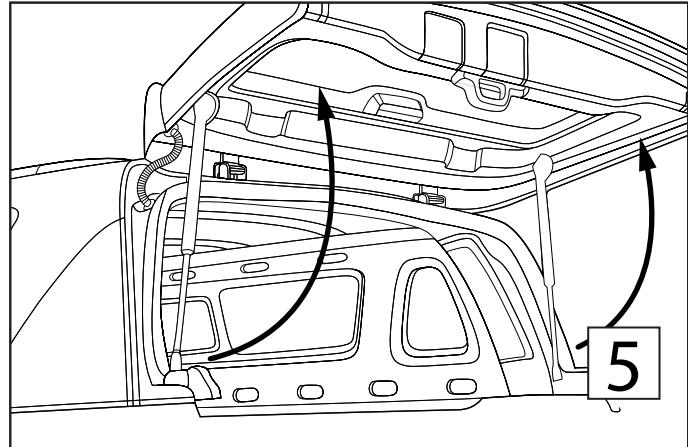




28

The process of checking and preparing Ford Ranger vehicle before install the canopy.


1. Clean up the vehicle body including the top, all sides and Rear tub.
2. Cover the fabric to protect the scratches resistant.

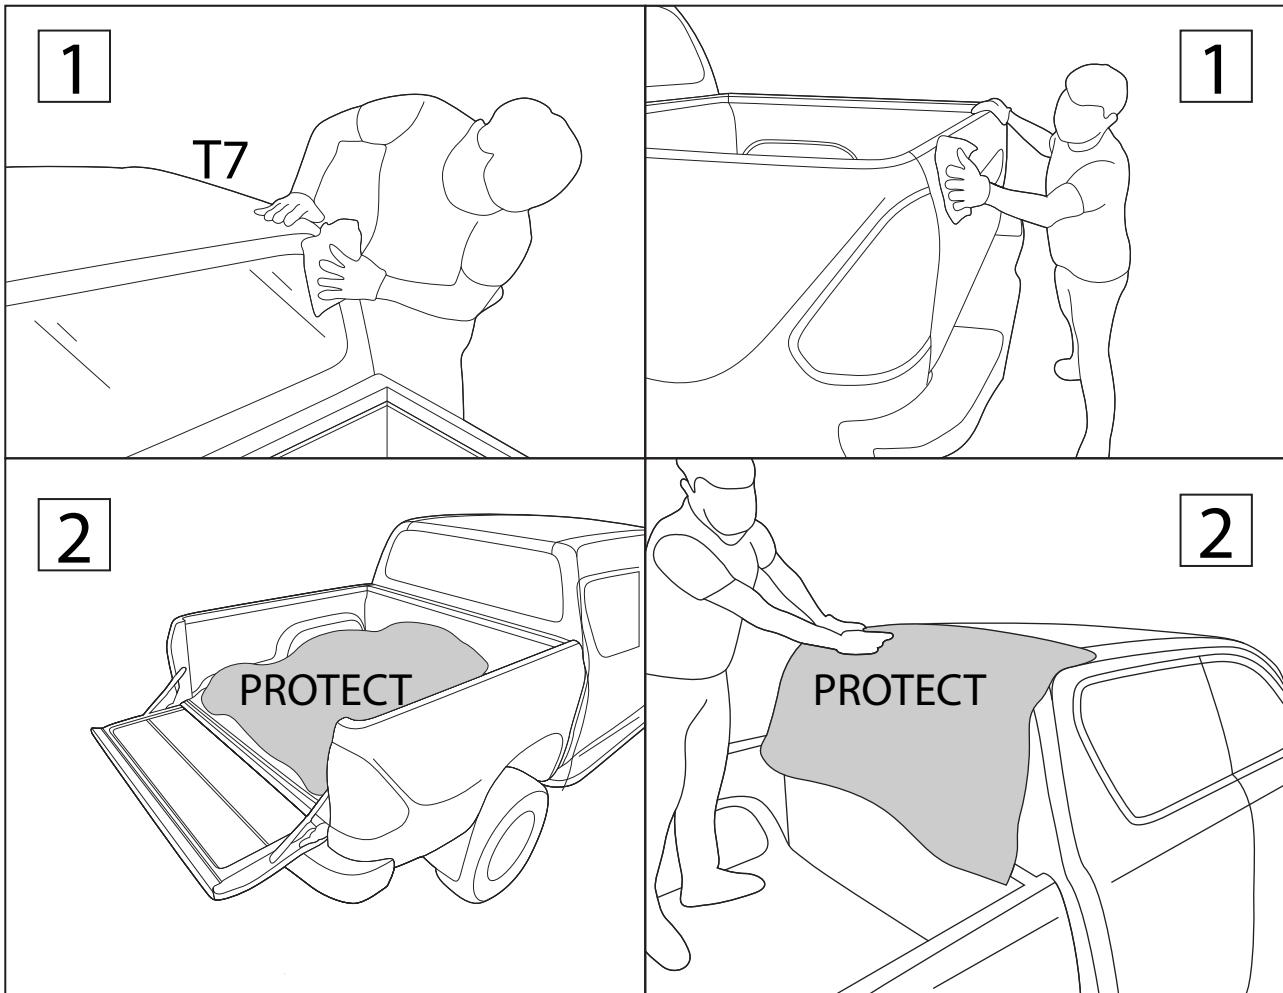




29

The process of preparing Sammitr Canopy TL-1 model before install on the vehicle.

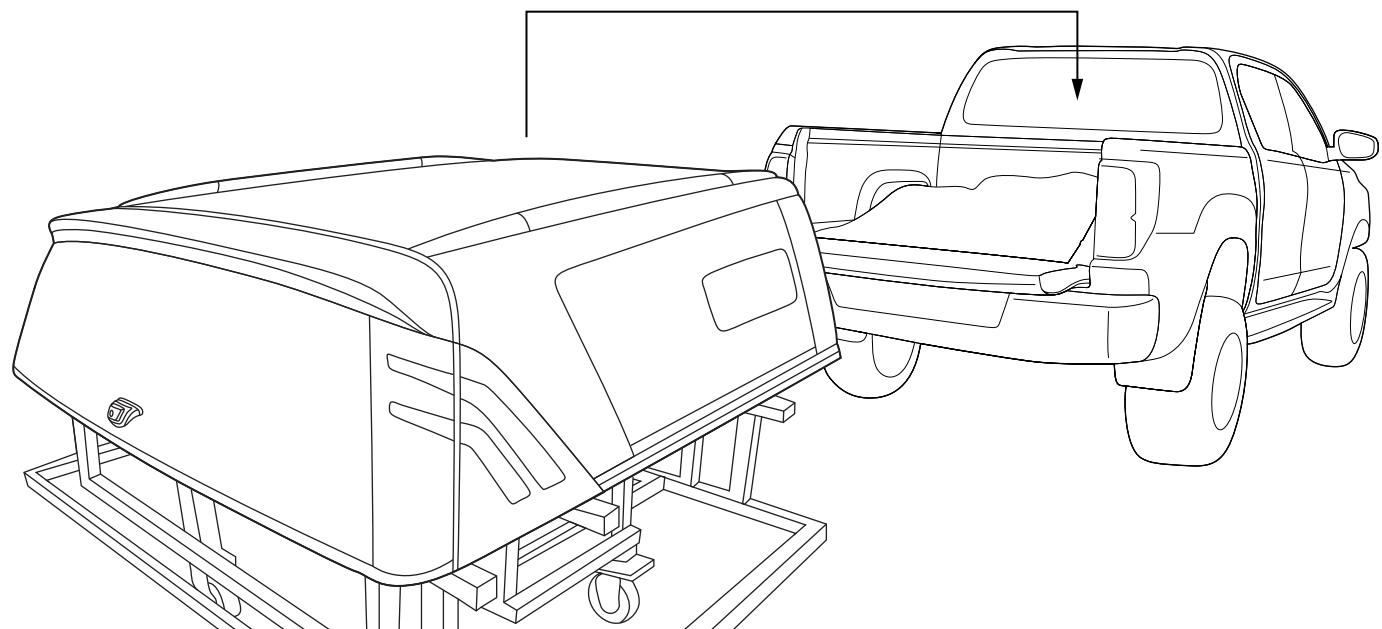


30

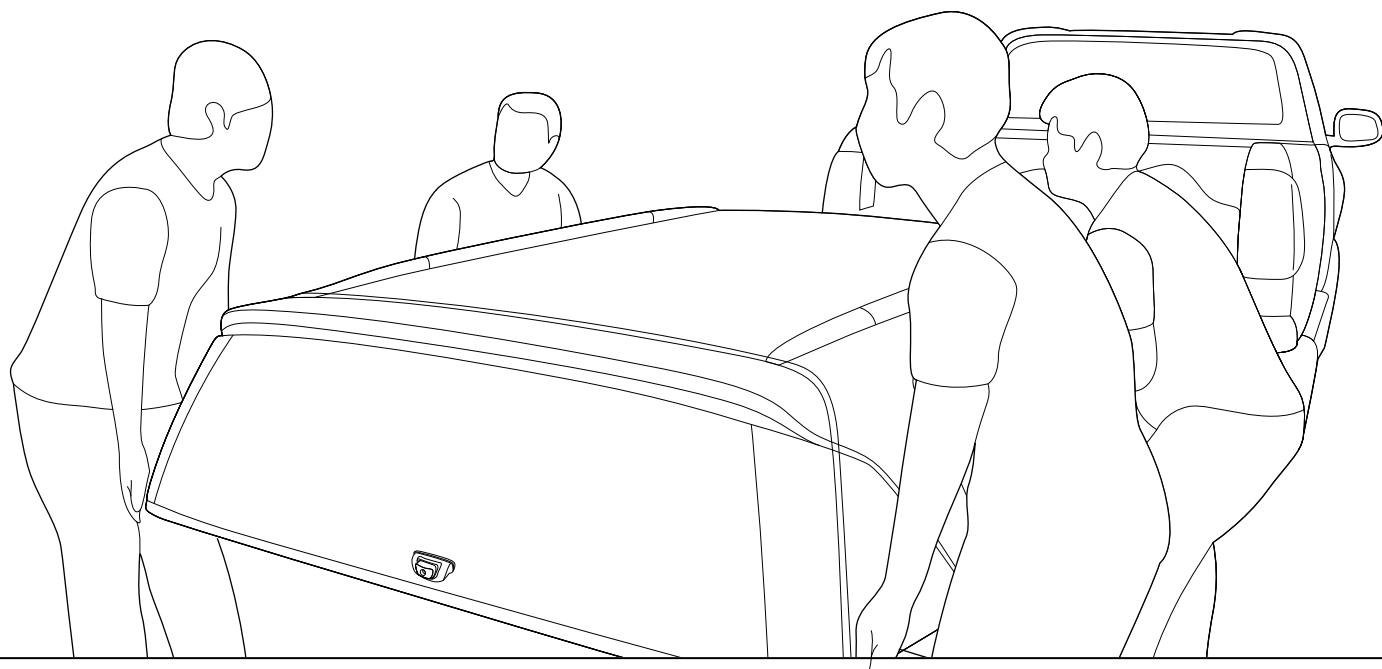

The process of lifting the canopy onto the vehicle tub by using 4 people for lifting.




31

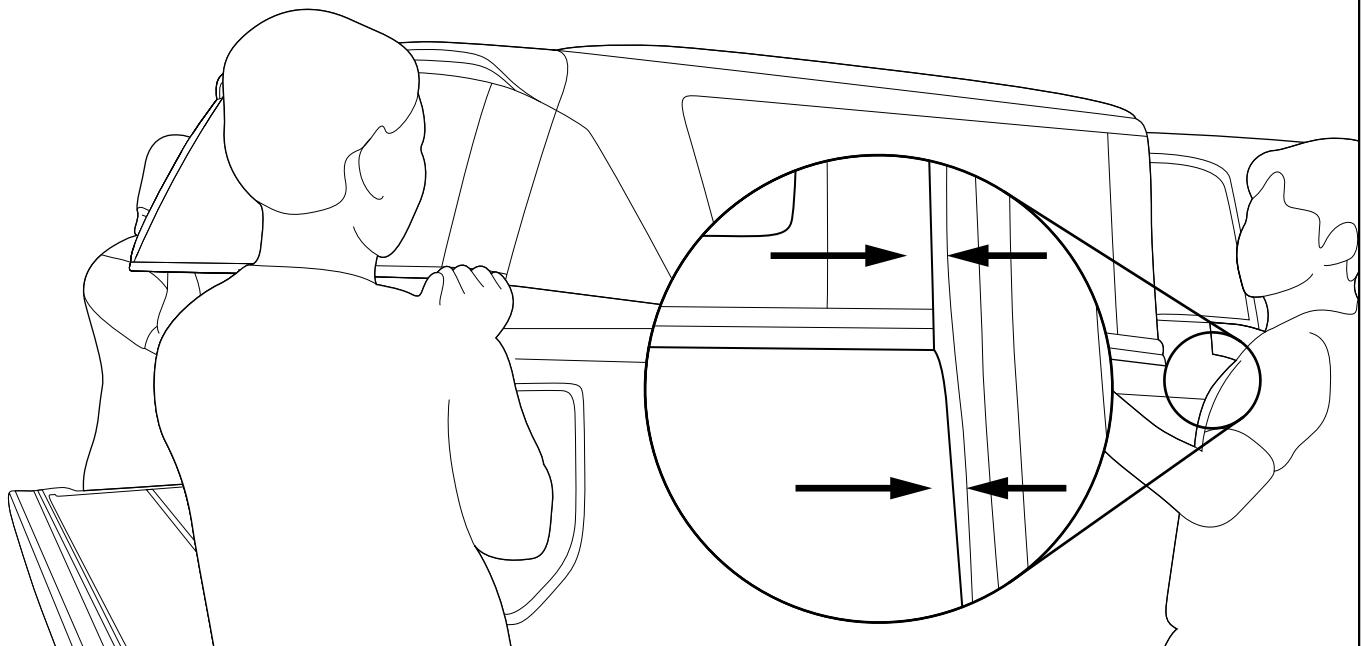


Lift canopy over the pick up truck by rising the rear part higher and the front part to be in the parallel with the edge of the vehicle tub.

32

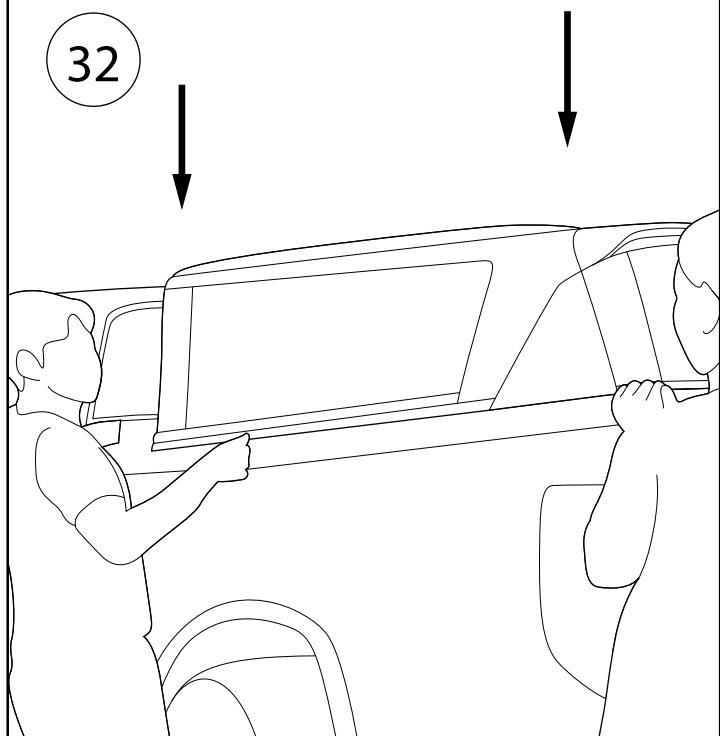

33

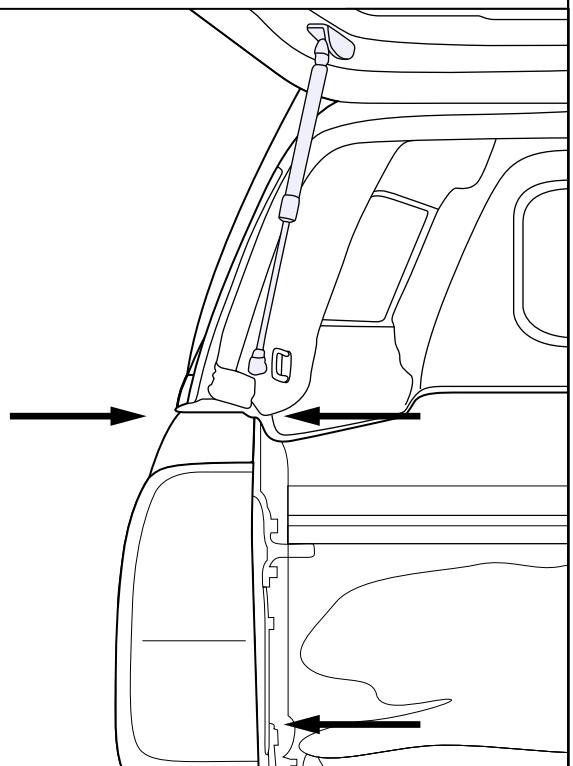


After get the distance in front part and then put the rear part to cover the vehicle tub



Make sure the distance between canopy edge and vehicle rear tub are equivalent both left and right sides.



34

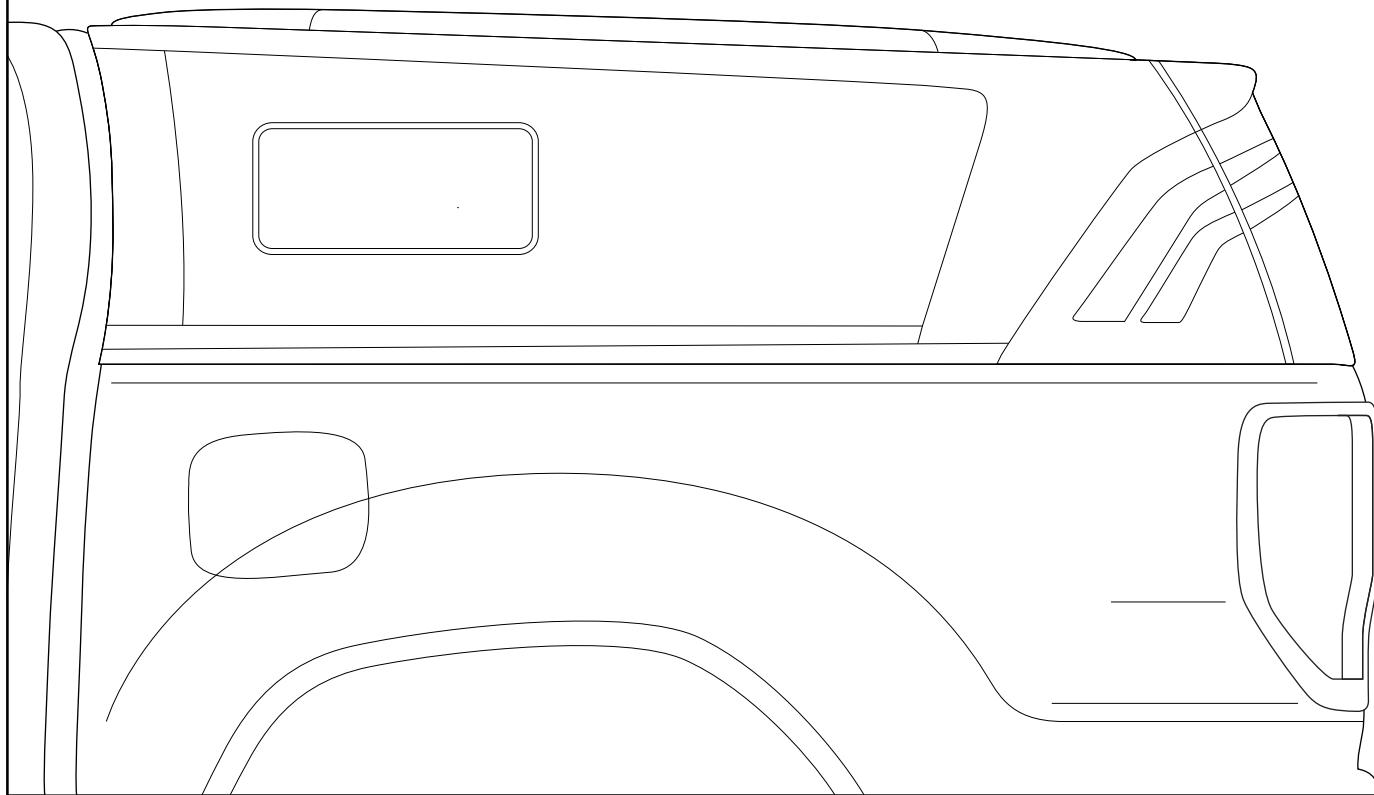

Side edge of canopy to be in the parallel with the Side edge of the vehicle tub.

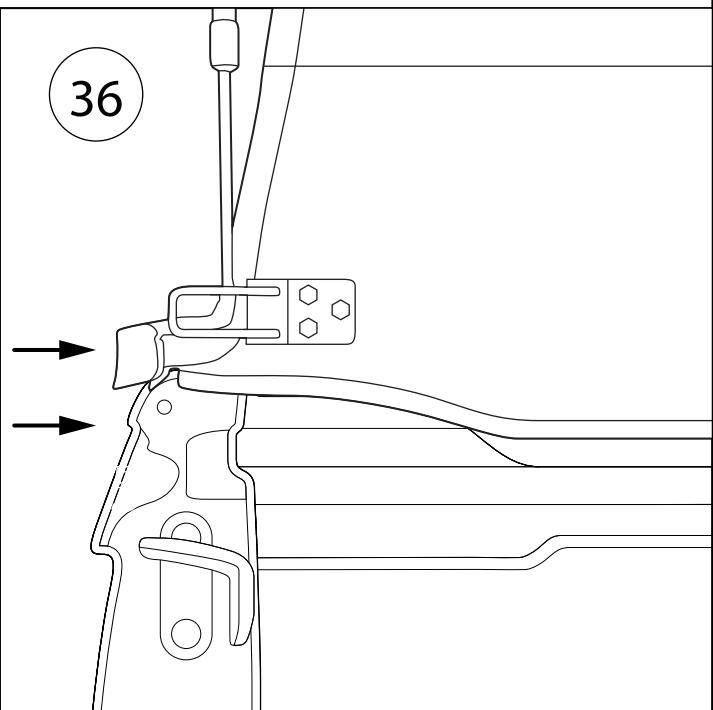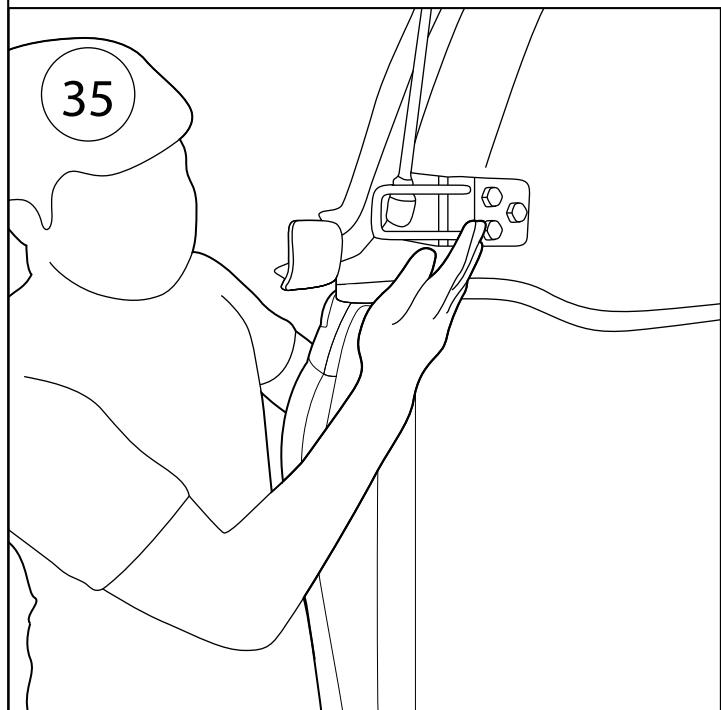


After finished measure the side part, check the distance at rear part of canopy which must have to be in the parallel with the Rear edge of the vehicle tub.





37

The process of C-Clamp installation  
S-Plus V2 canopy model with the vehicle

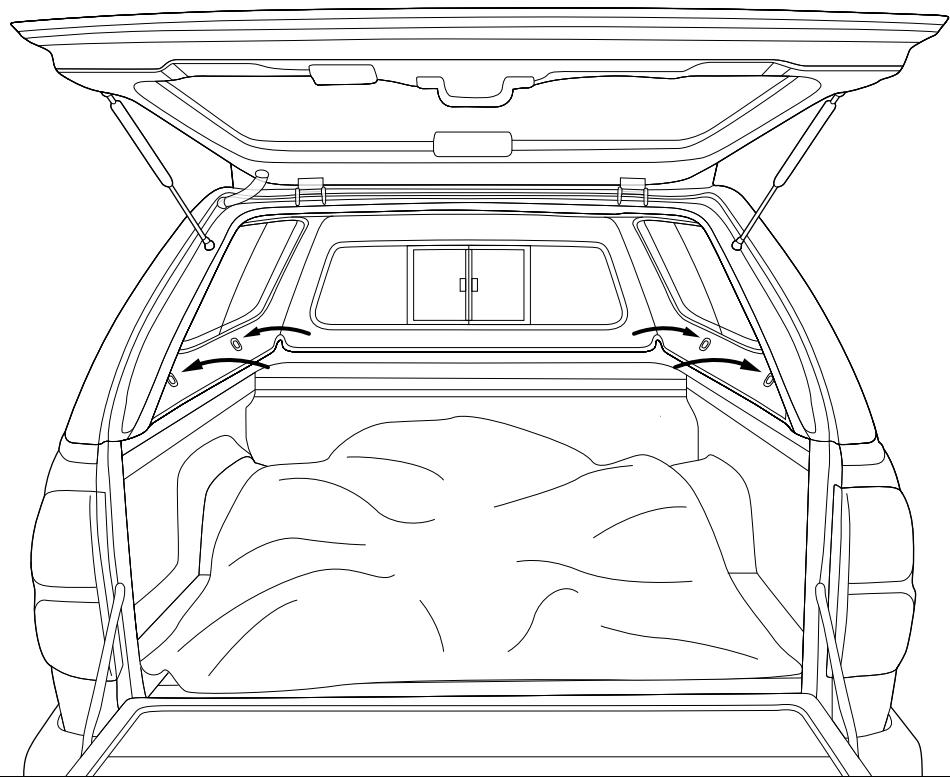


38

Open / take off the rubber plug

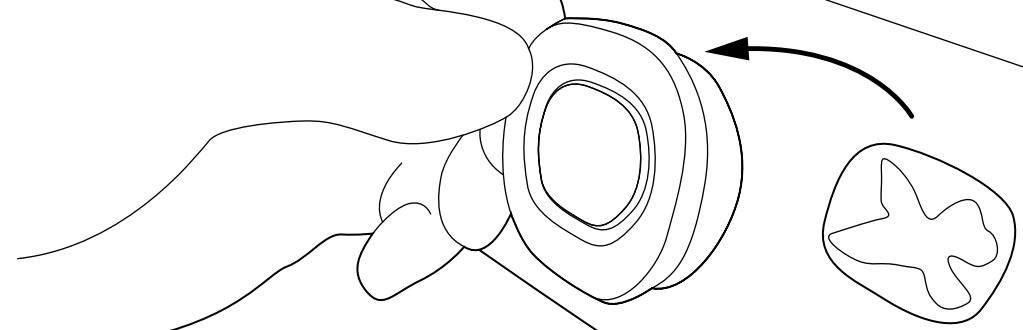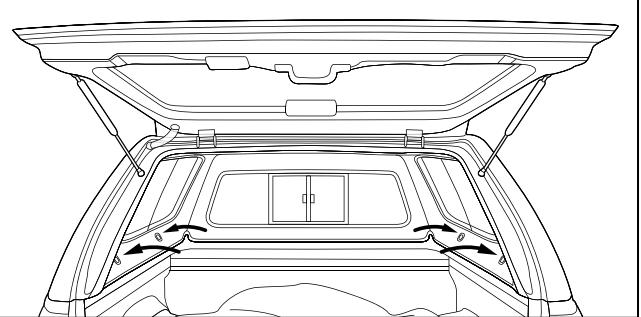




39

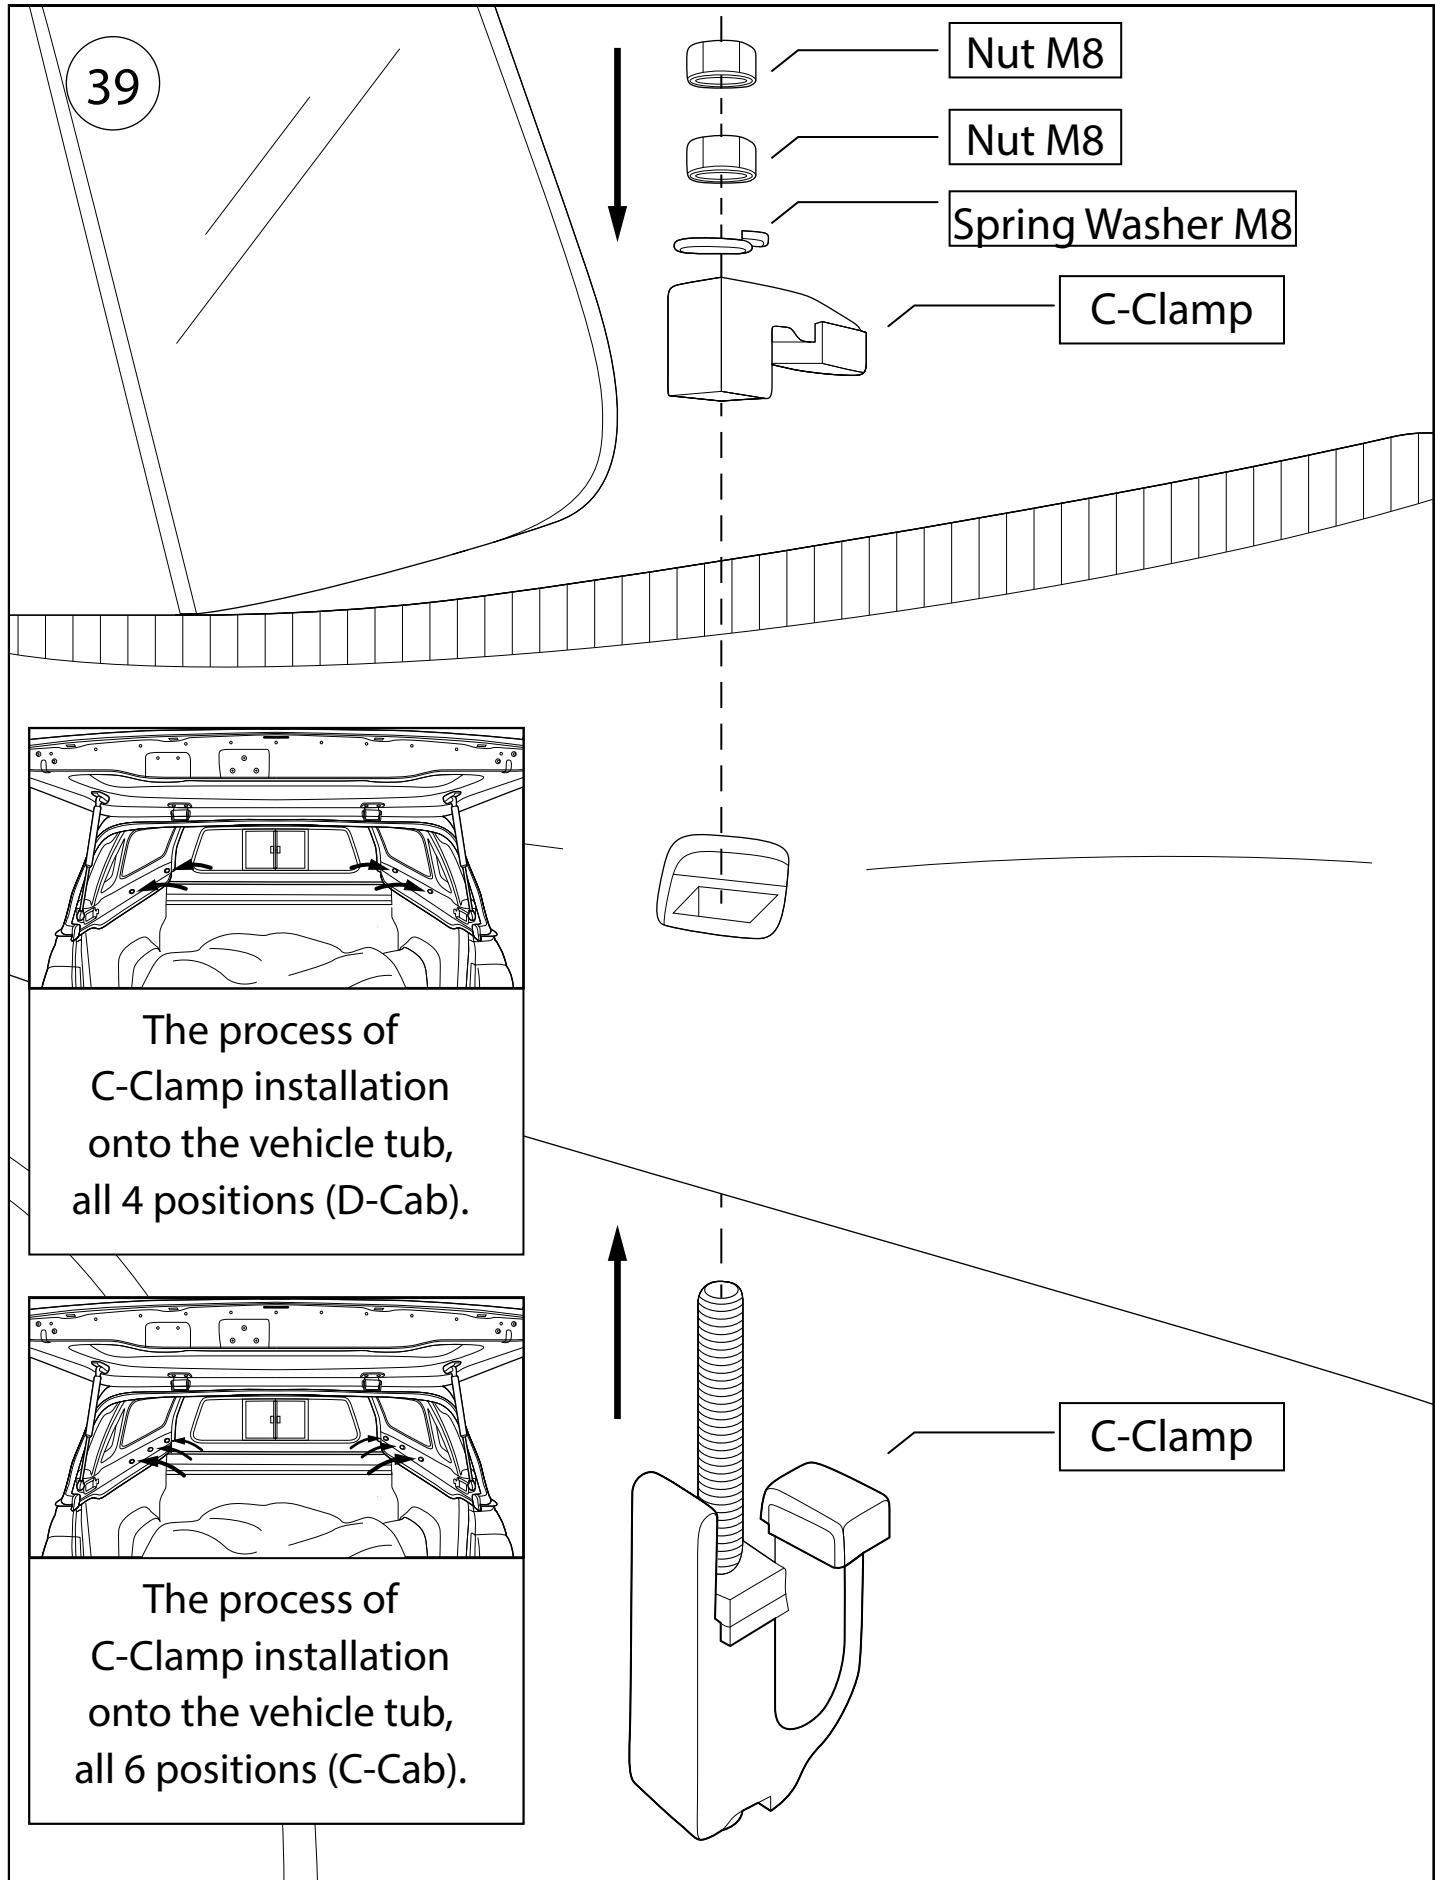



40

Tighten bolts of c-clamp by using pound wrench, with the pressure of 16 Nm.

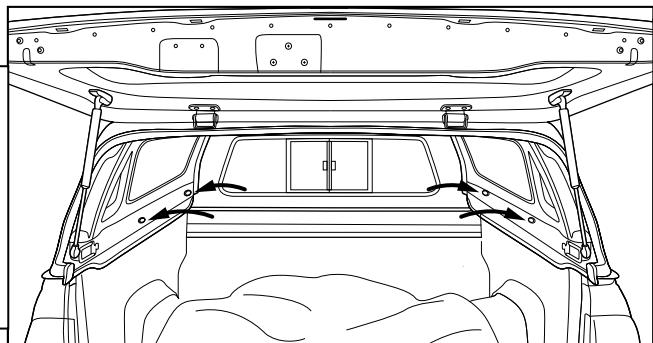

T3

D-Cab

Tighten canopy C-Clamp bolts with vehicle all 4 positons.

40.1

Caution : Before tighten bolts position 3 and 4 please make sure that the distance between the rear left and right pole of the canopy is equal.


D-Cab

Steps of canopy C-Clamp bolts tightening onto vehicle.



41

Tighten bolts of c-clamp by using pound wrench, with the pressure of 16 Nm.

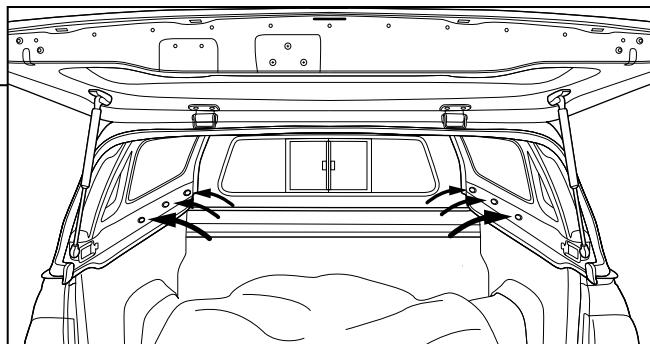

T3

C-Cab


Tighten canopy C-Clamp bolts with vehicle all 6 positons.


41.1

Caution : Before tighten bolts position 5 and 6 please make sure that the distance between the rear left and right pole of the canopy is equal.

C-Cab



Steps of canopy C-Clamp bolts tightening onto vehicle.

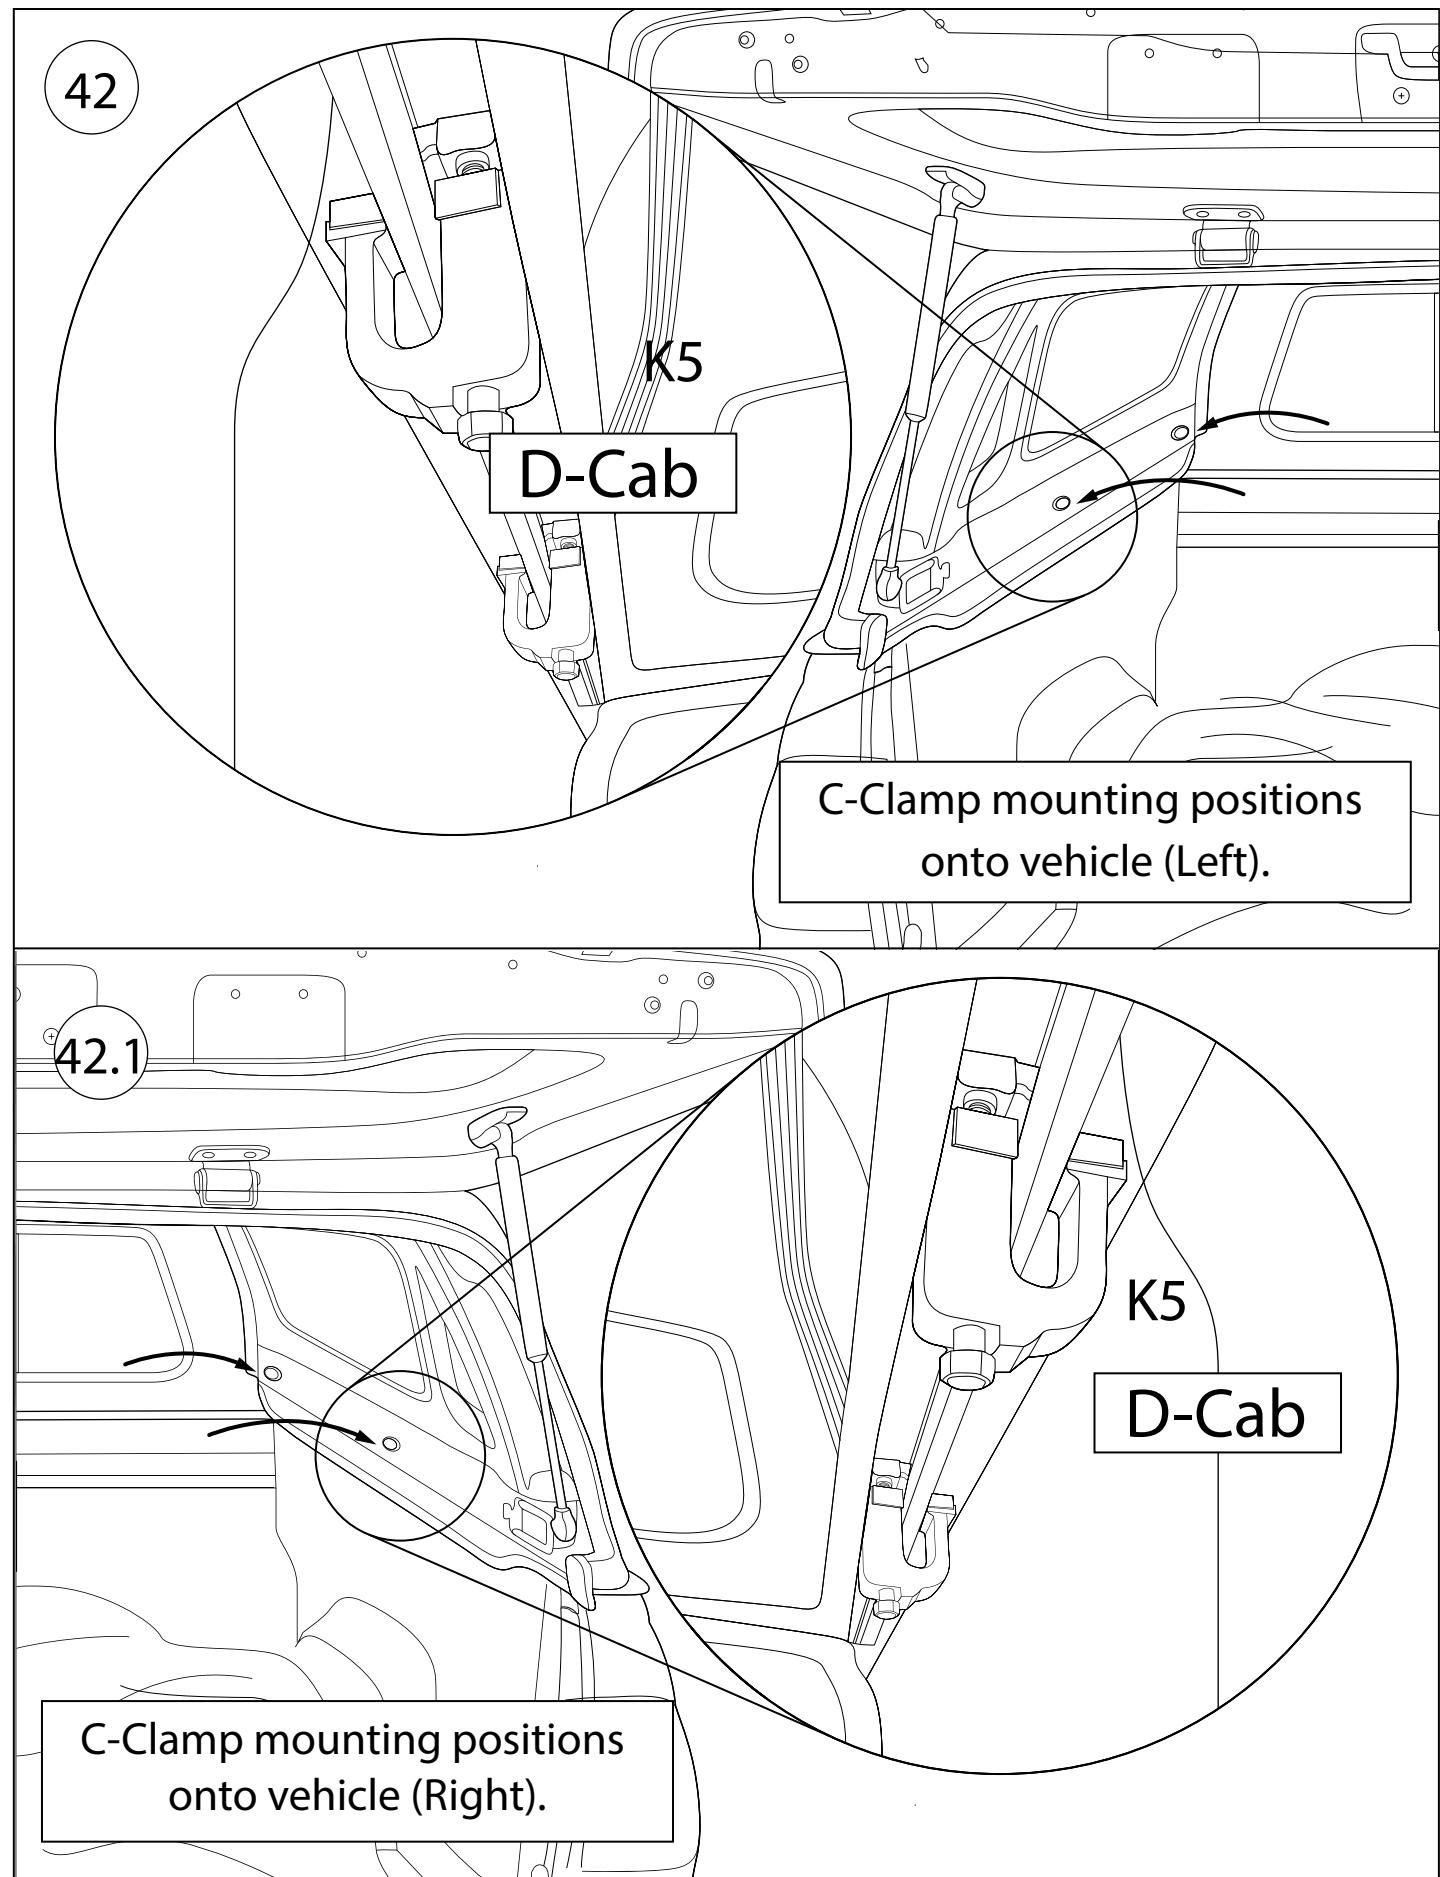

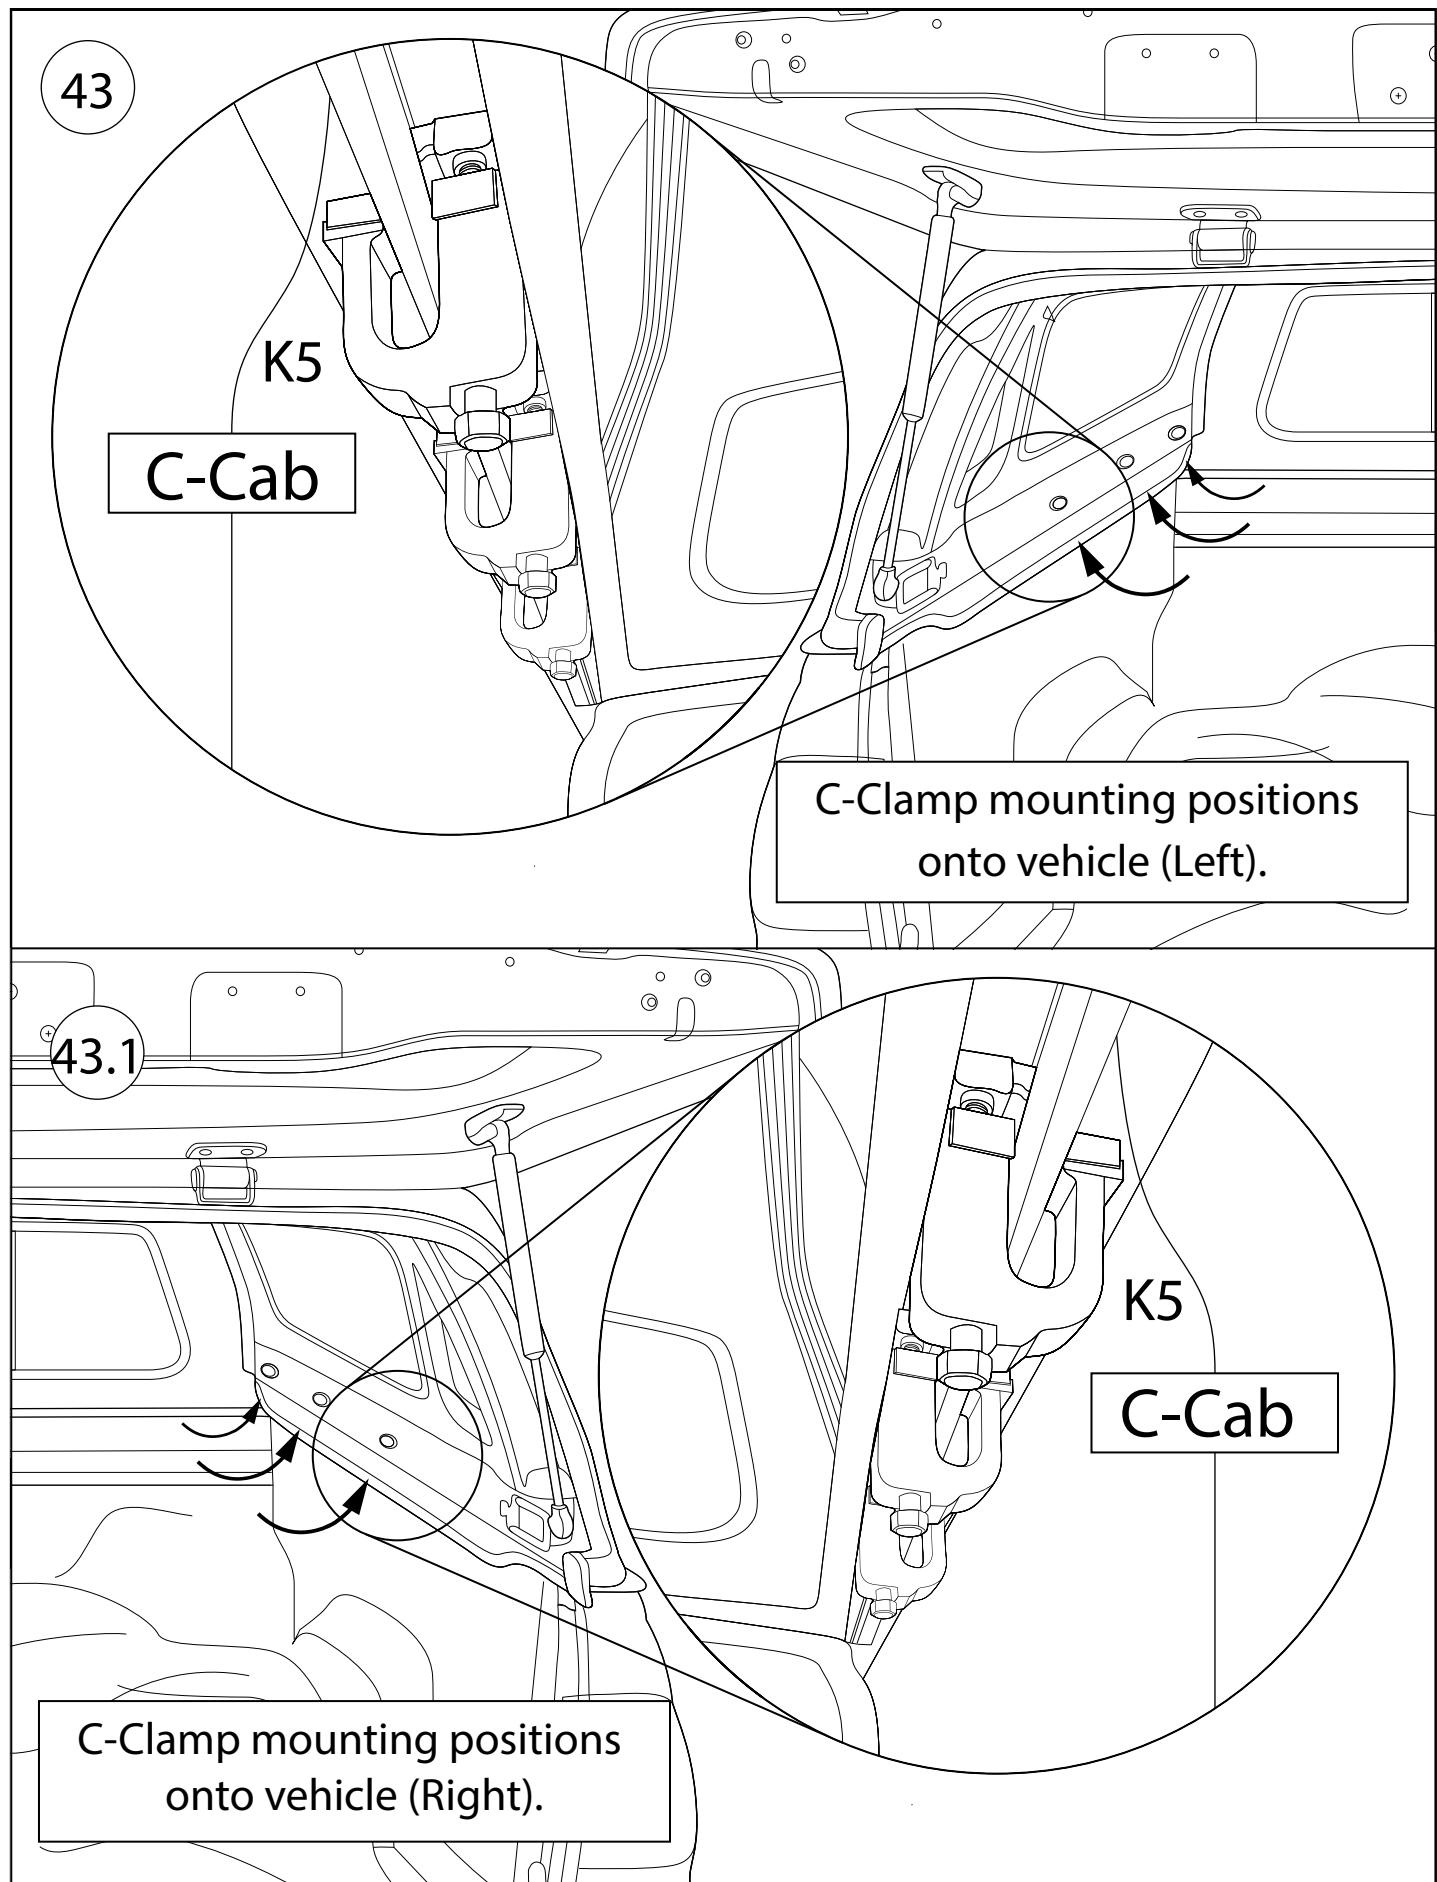




44

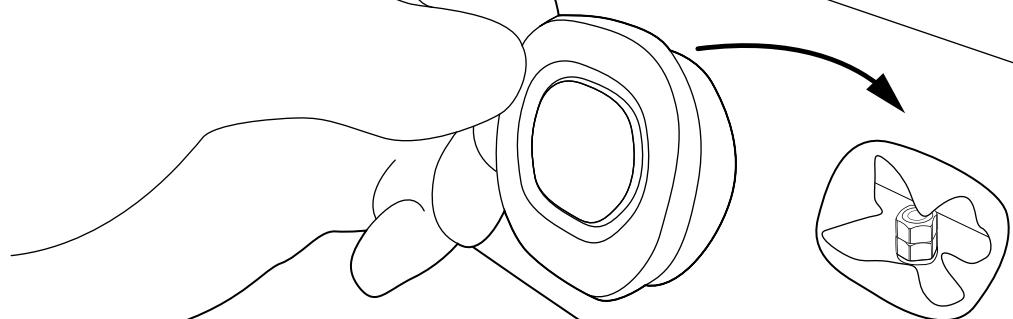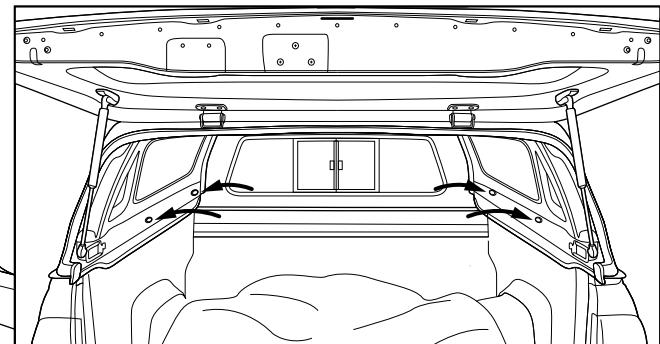

Close the rubber plug.

45

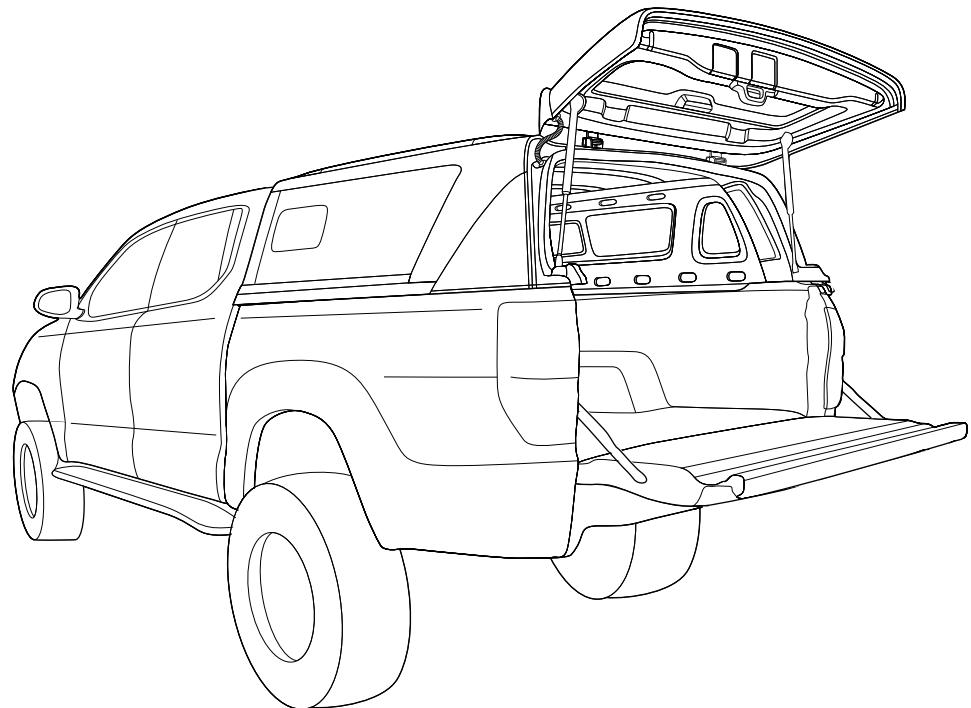


The process of canopy installation is completed.





**SAMMITR**


# Electric Lock Installation

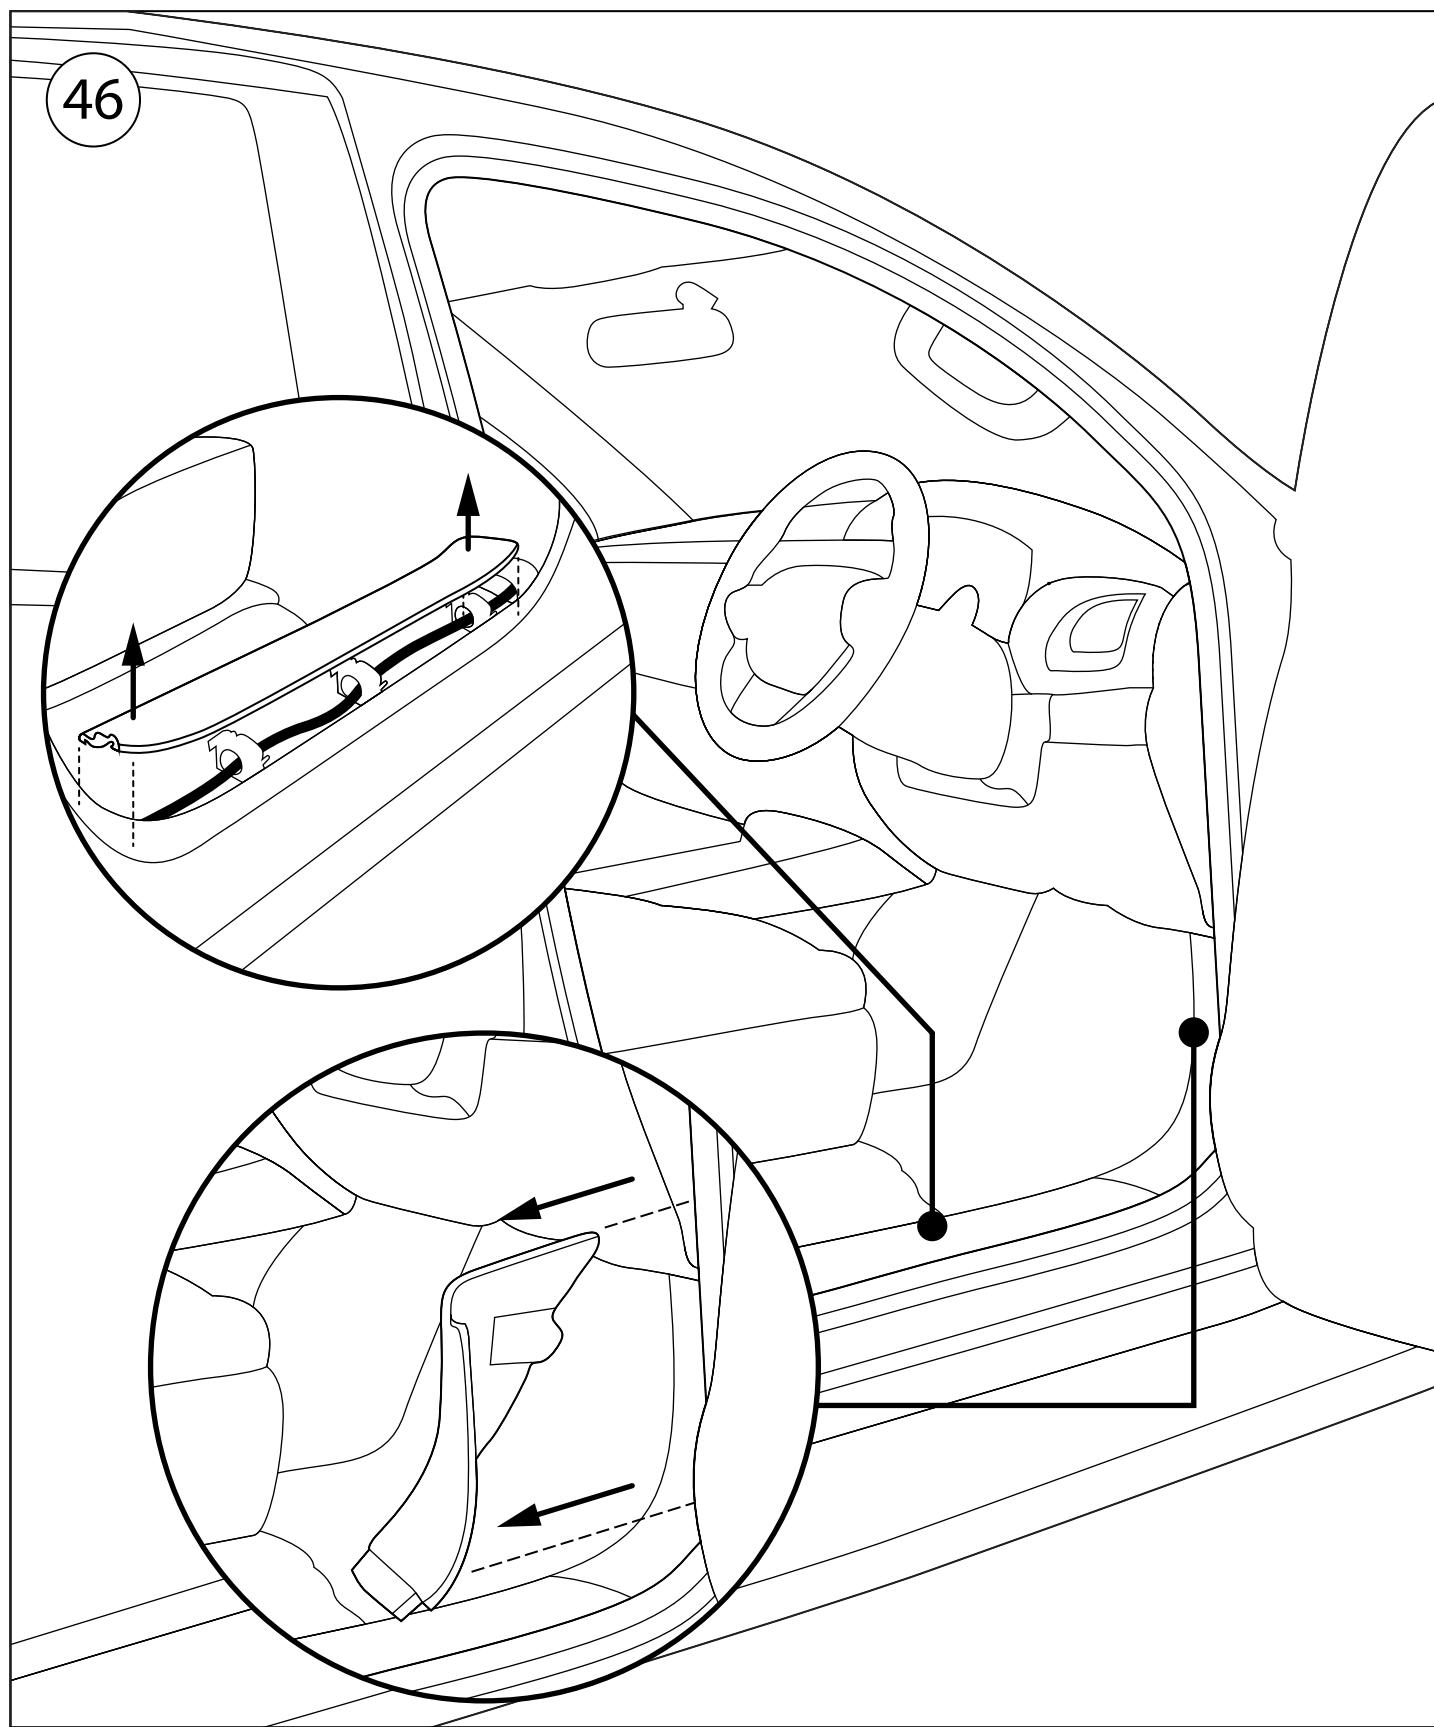


Take off the Wiring Cover at the driver side in order to check the wiring position.

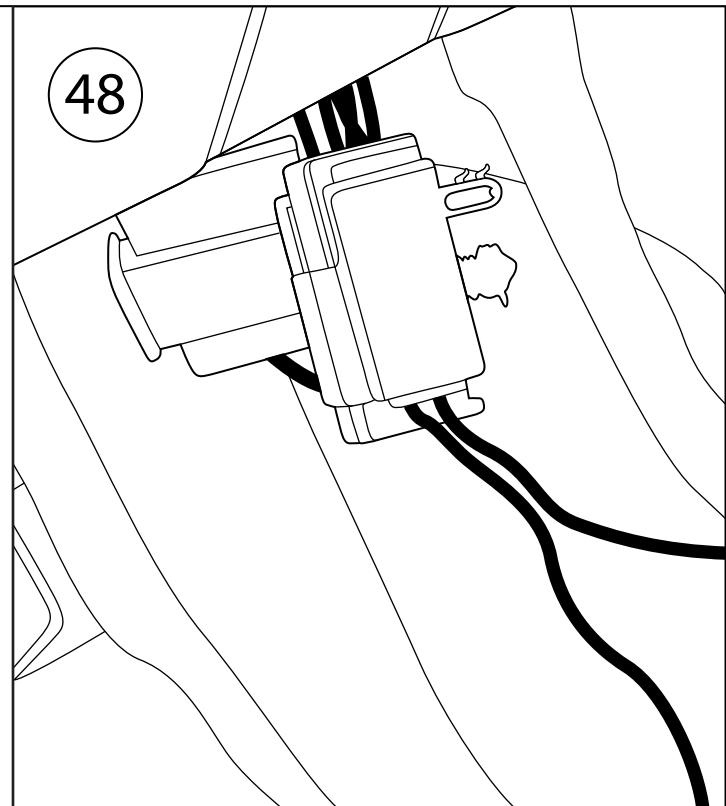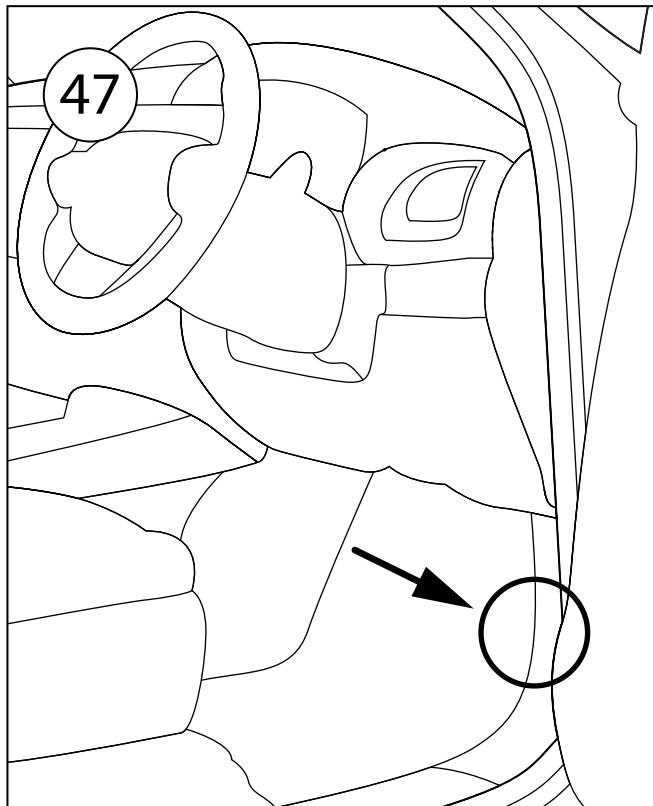


Control Box position that will connect with Harness Central Lock No.38

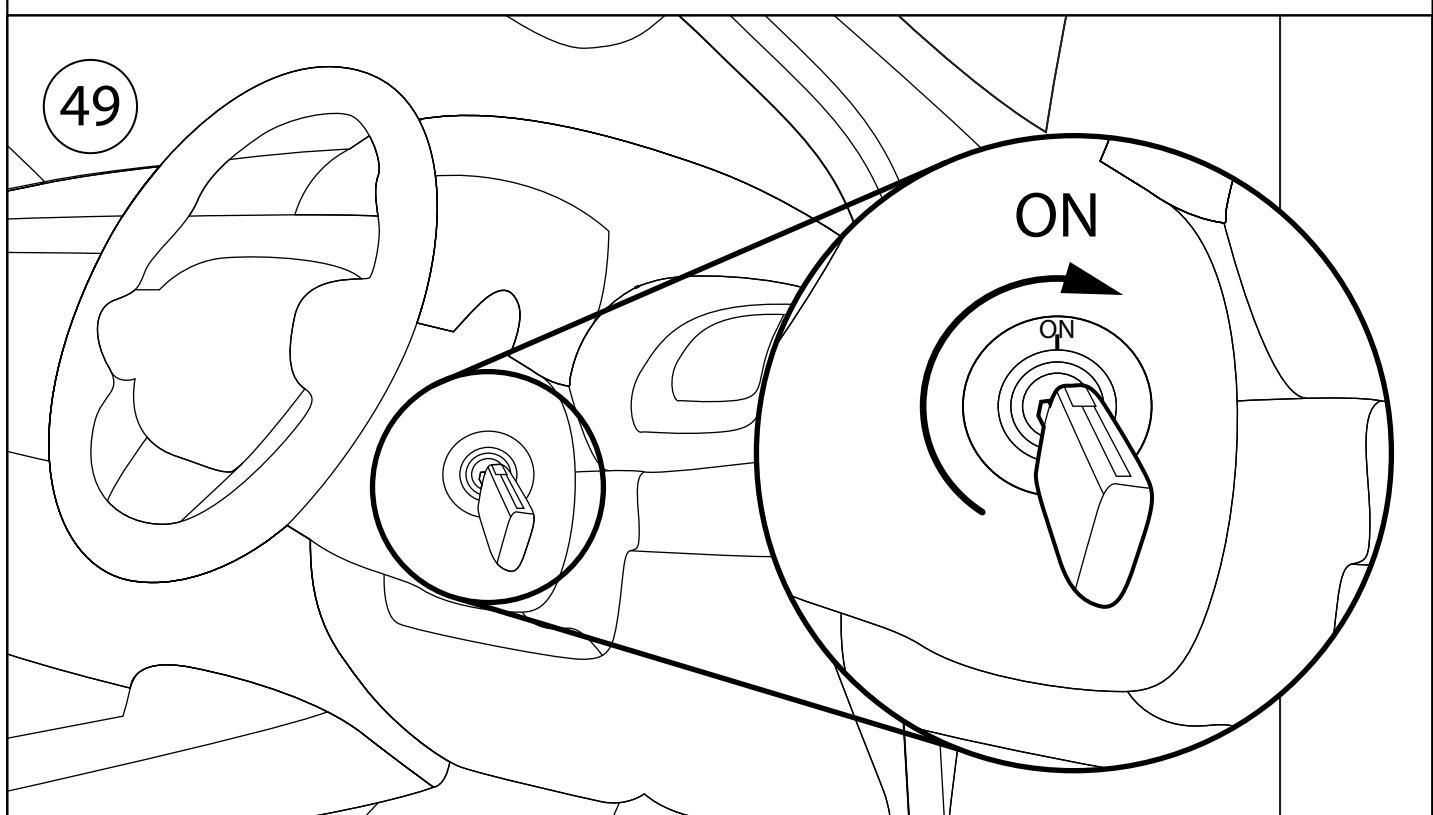

Step of checking Switch on position, begin with turning the key to ON position.

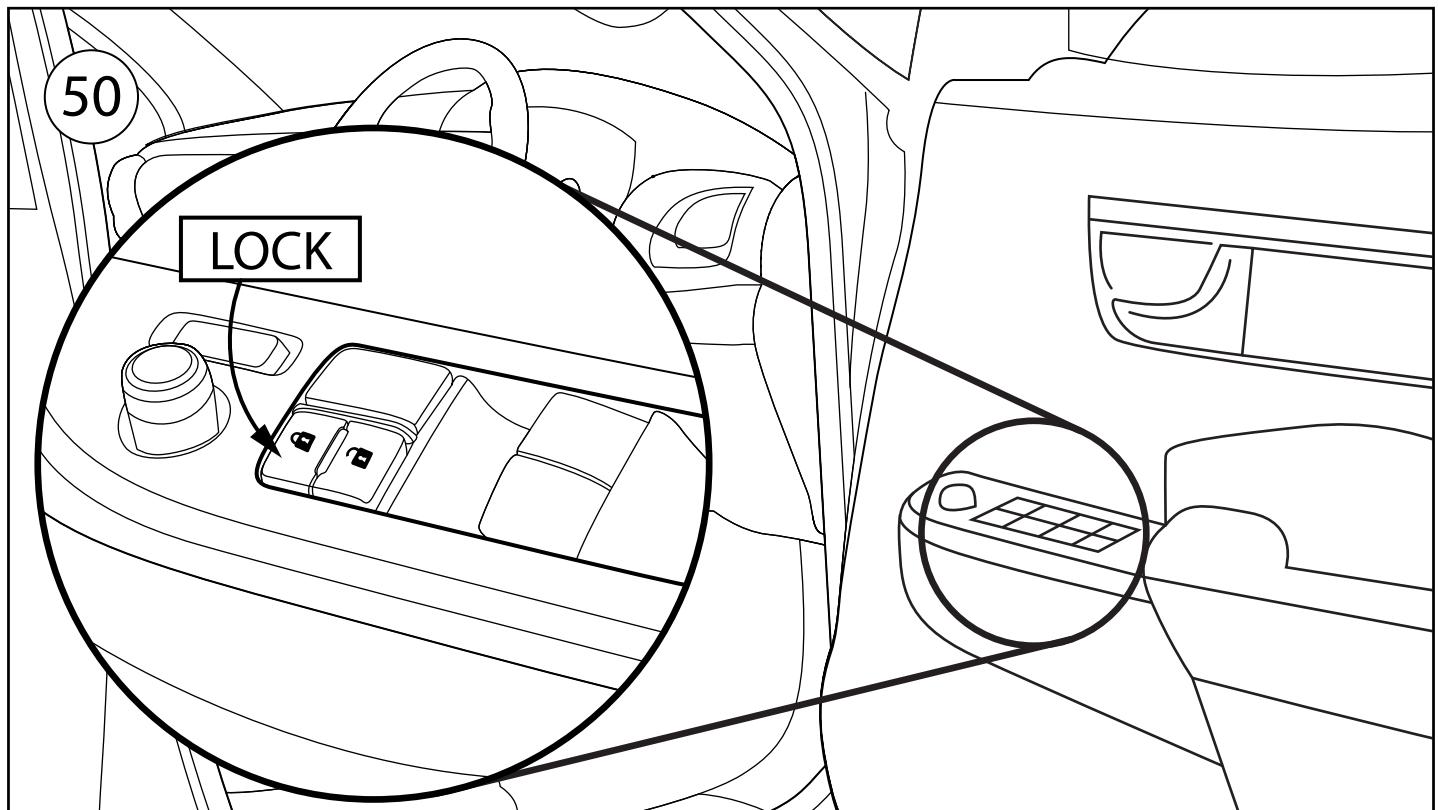



Step of Checking the light of the Central Lock (Lock), begin with push the Lock button at the door panel.

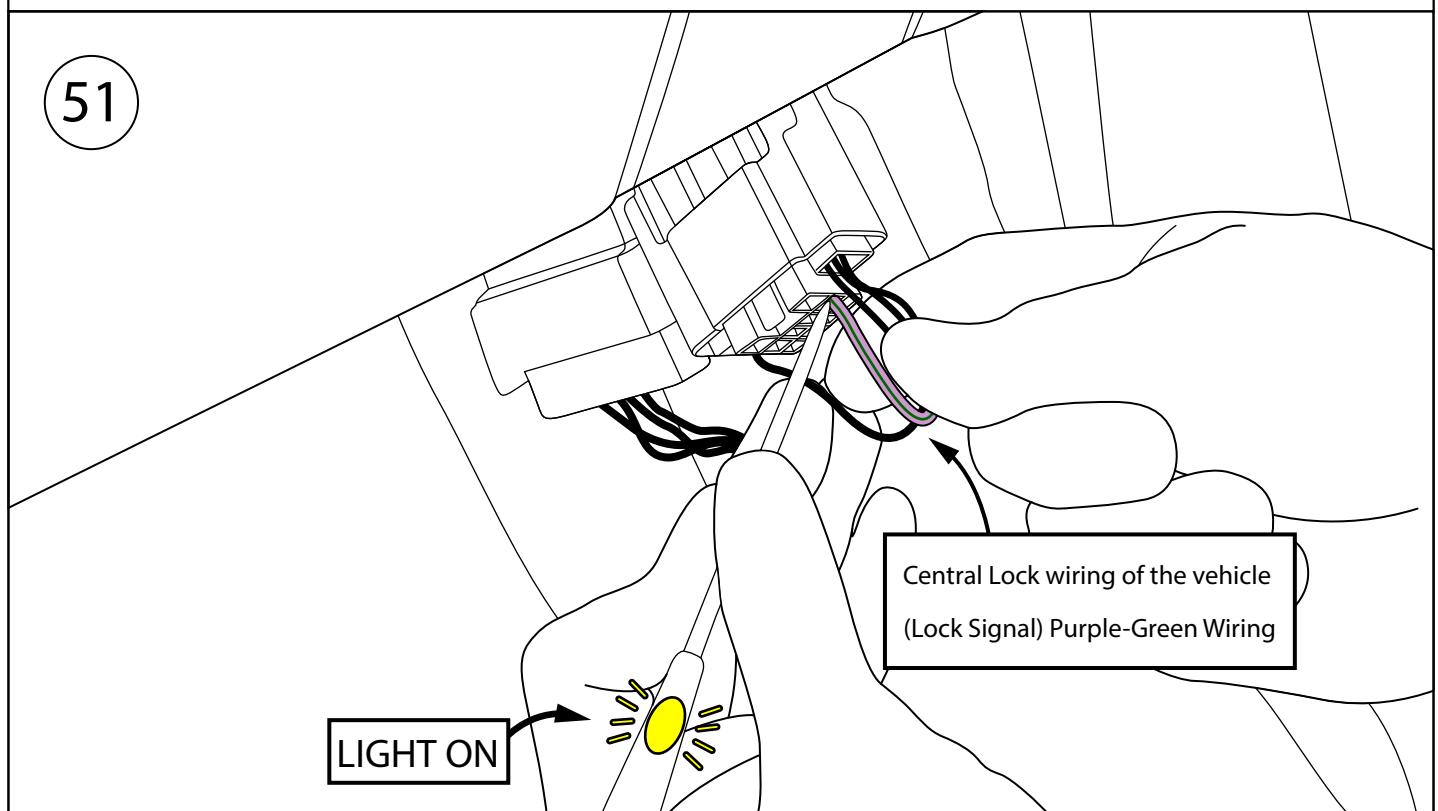

Checking the light of the Central Lock (Lock) of vehicle position by using the Test Lamp kit.




52

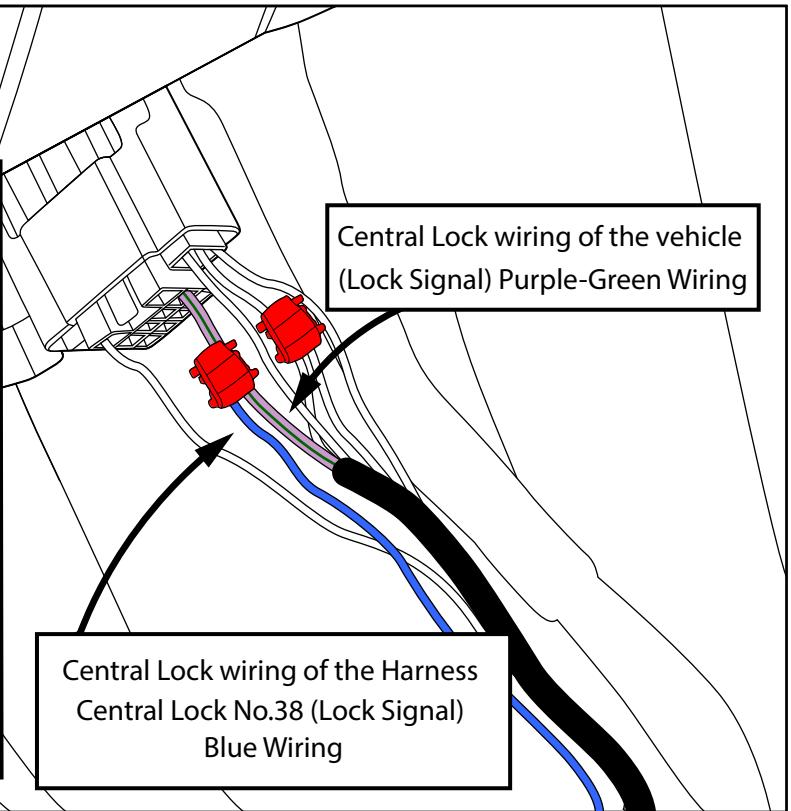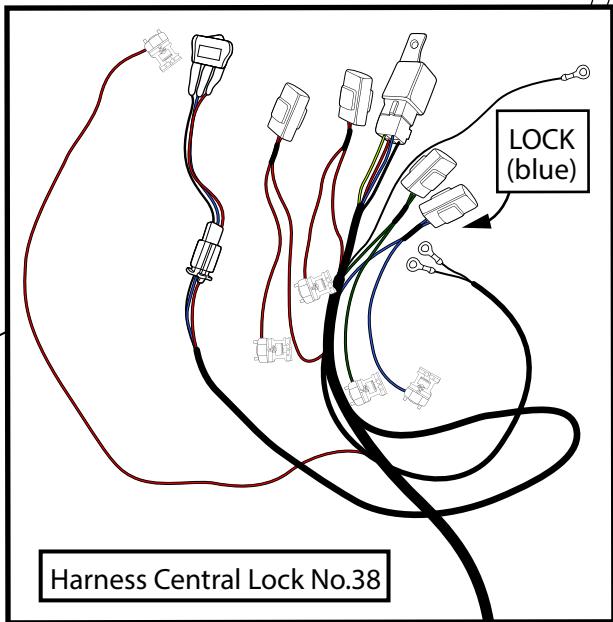

Connects the Blue Wiring (Central Lock/Lock Switch) of the Harness Central Lock No.38 with the Purple-Green wiring (PU/LG) of the vehicle (Lock Signal).


53

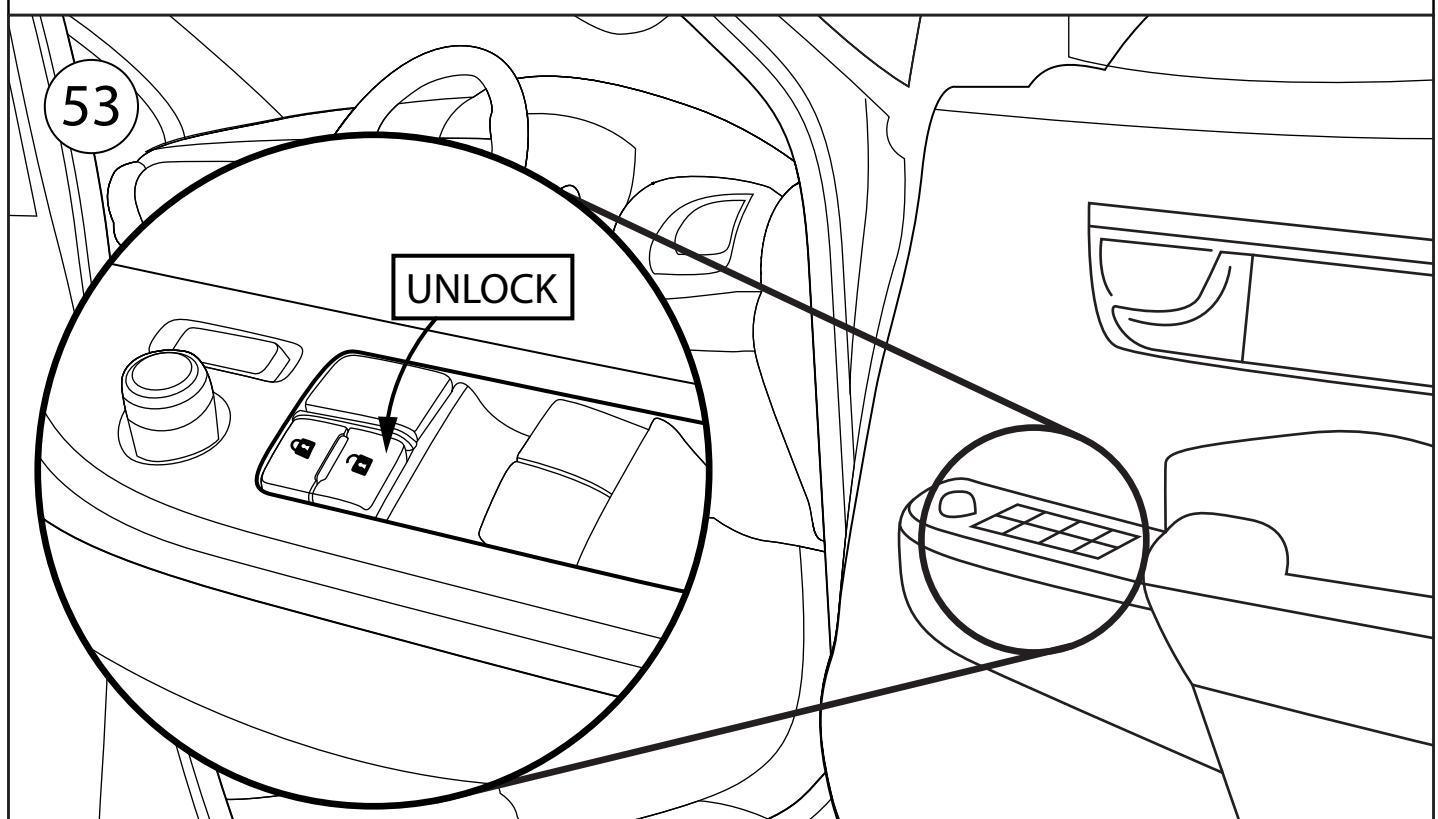

Step of Checking the light of the Central Lock (UnLock), begin with push the UnLock button at the door panel.




54

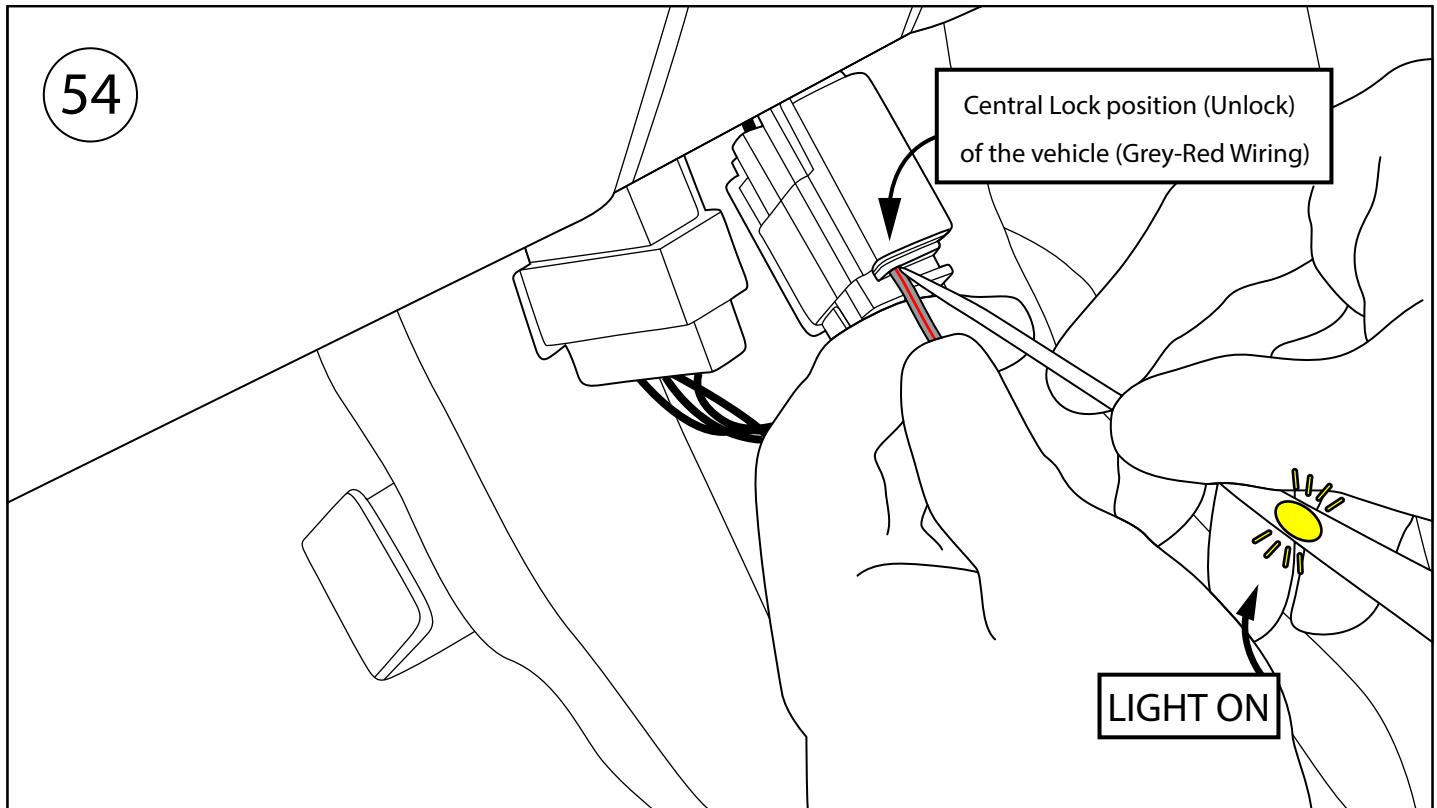


Checking the light of the Central Lock (Unlock) of vehicle position by using the Test Lamp kit.


55

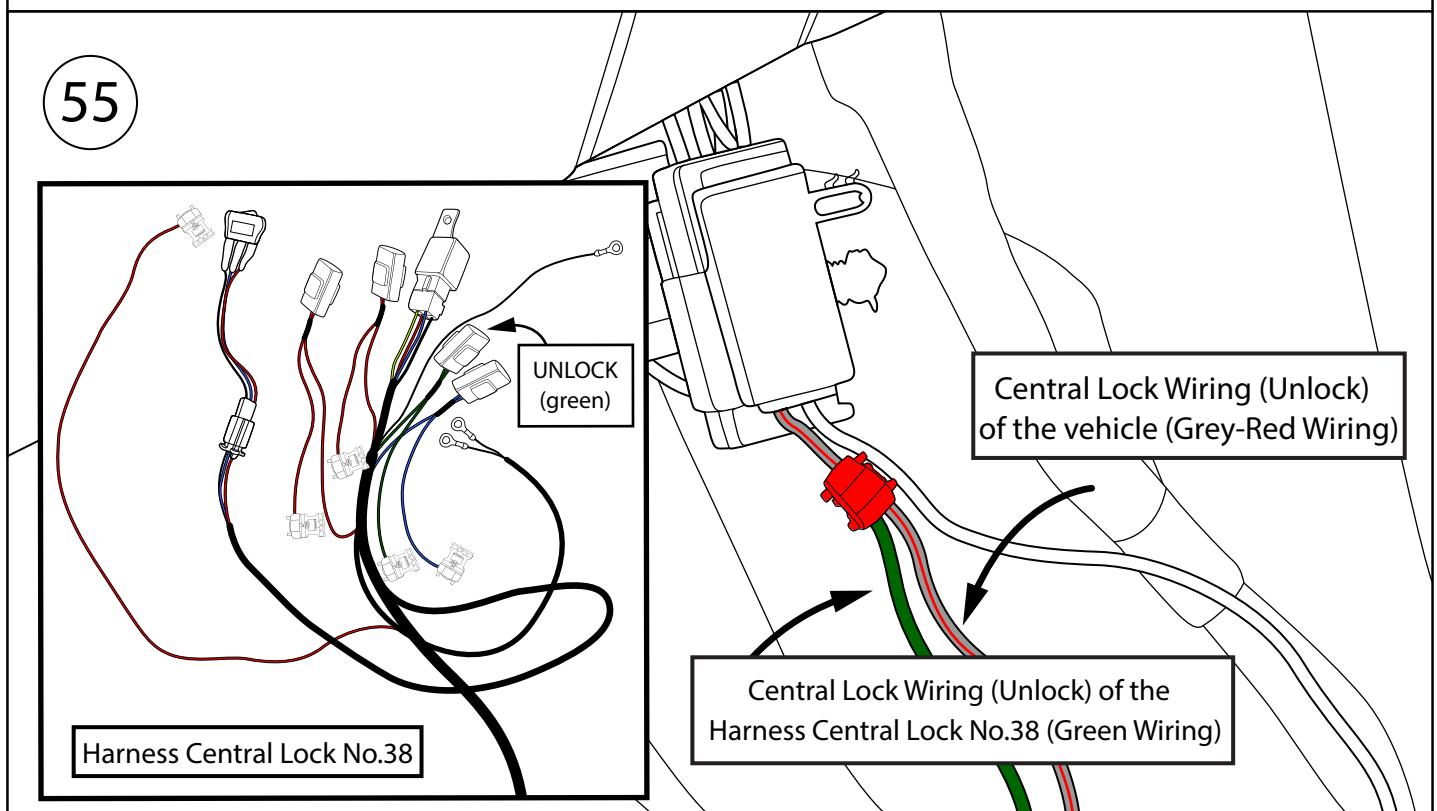

Connects the Green Wiring (Central Lock/Unlock Switch) of the Harness Central Lock No.38 with the Grey-Red Wiring (GR-RD) of the vehicle (Unlock Signal).

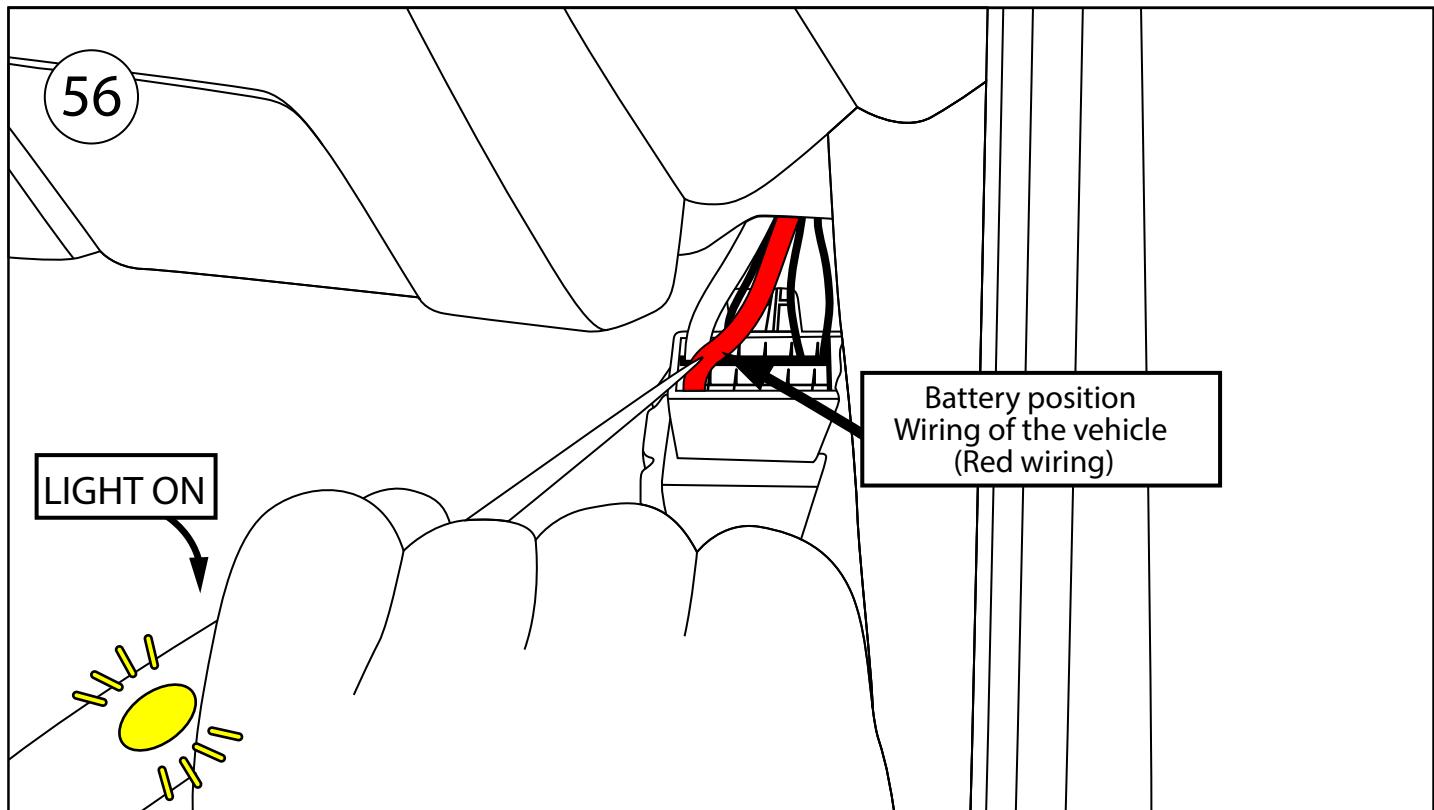

Checking the Battery (12V) light of the vehicle position by using the Test Lamp kit.

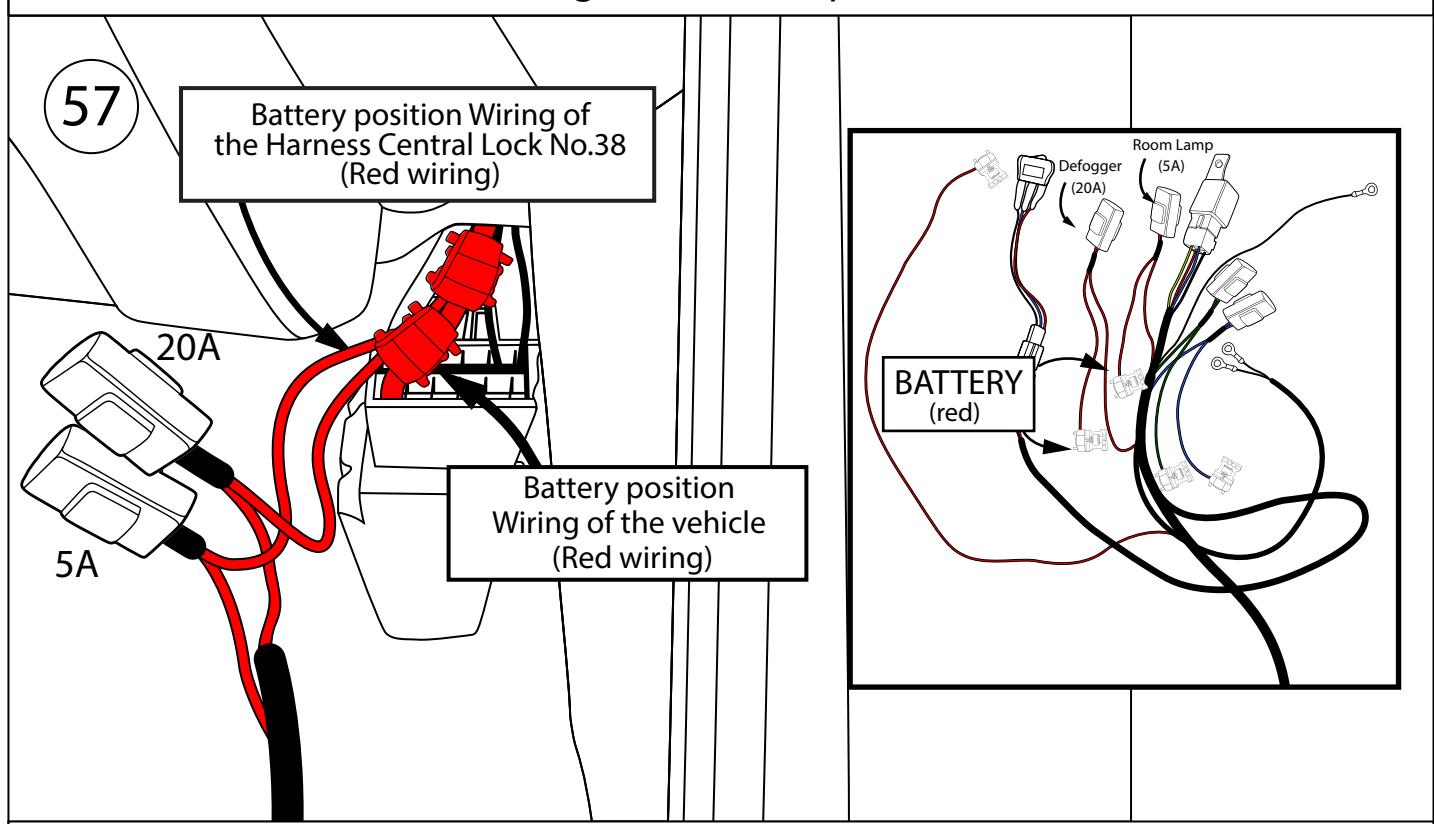


Connects the Red Wiring Defogger (20A) and Red Wiring Room Lamp (5A) of the Harness Central Lock No.38 with the Red Wiring Battery (12V) of the vehicle as shown in picture.



58

Ground Wiring connect position  
(black)

Ground Wiring connect position  
(black)

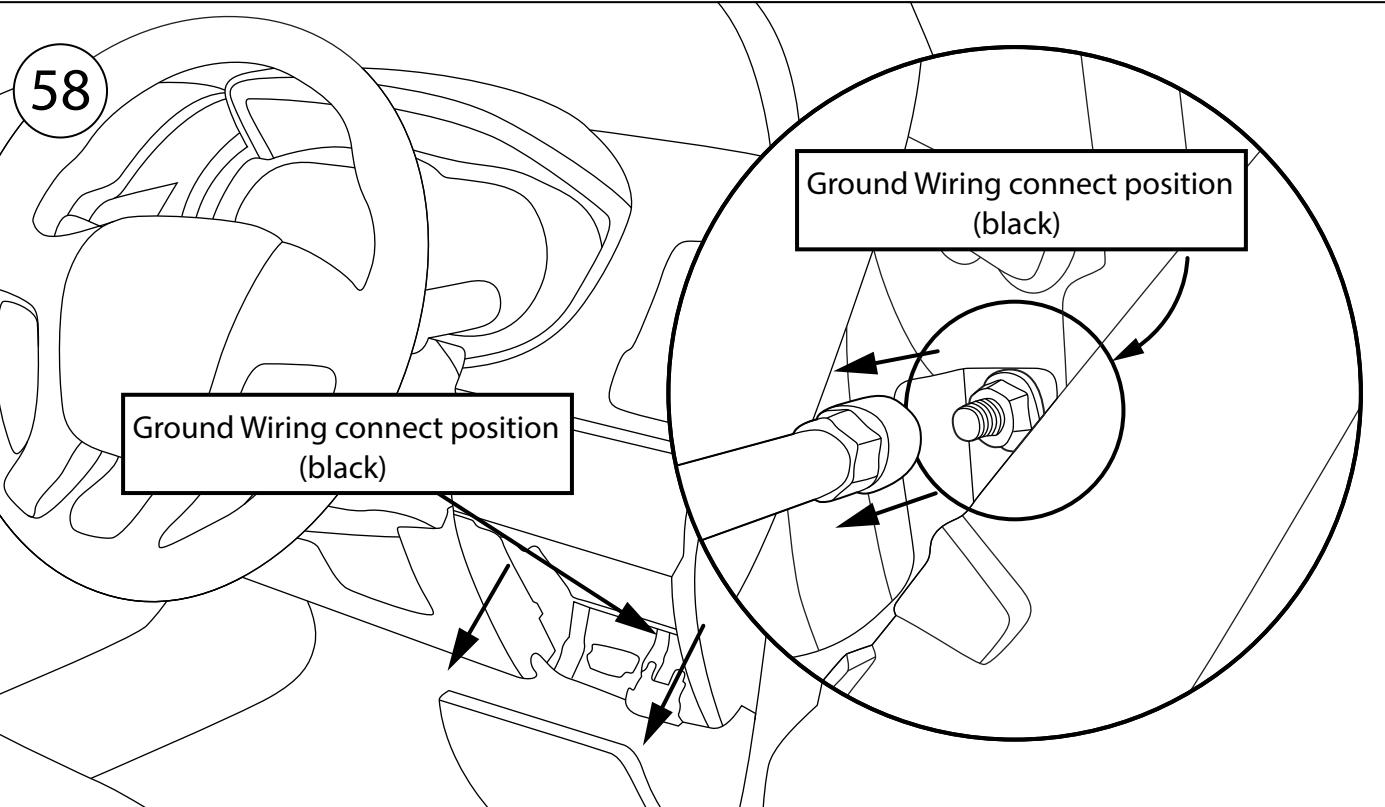



Take off the Cover at the Driver side in order to connect the Black Wiring of the Harness Central Lock No.38 with the Vehicle Structure. Take off the Bolt by using wrench No.10

59

Ground Wiring connect position  
(black)

GROUND  
(black)

Harness Central Lock No.38

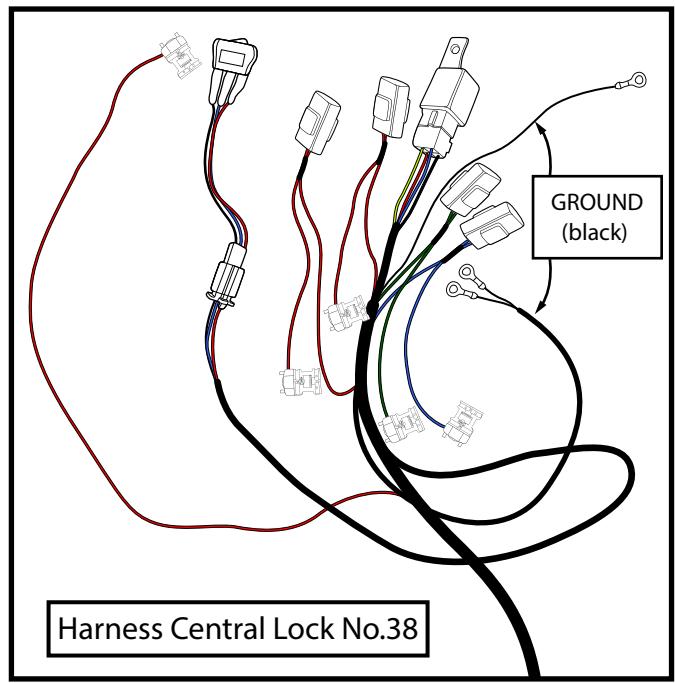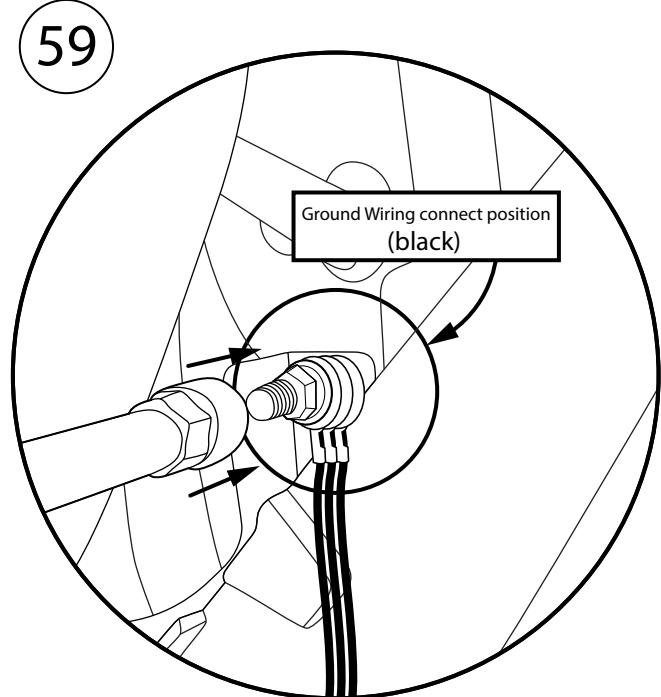


Connect the Black Wiring (Ground) of the Harness Central Lock No.38 with the Vehicle Structure and using wrench tighten.



60


Defogger circuit switch installation in case not using defogger switch of the Harness Central Lock No.38.

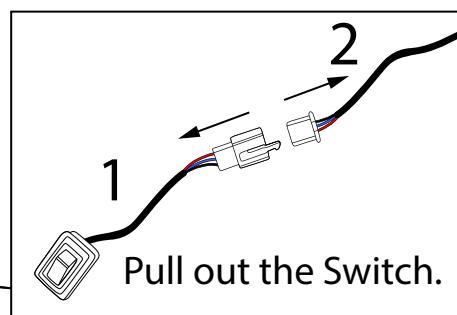

2

1


Pull out the Switch.

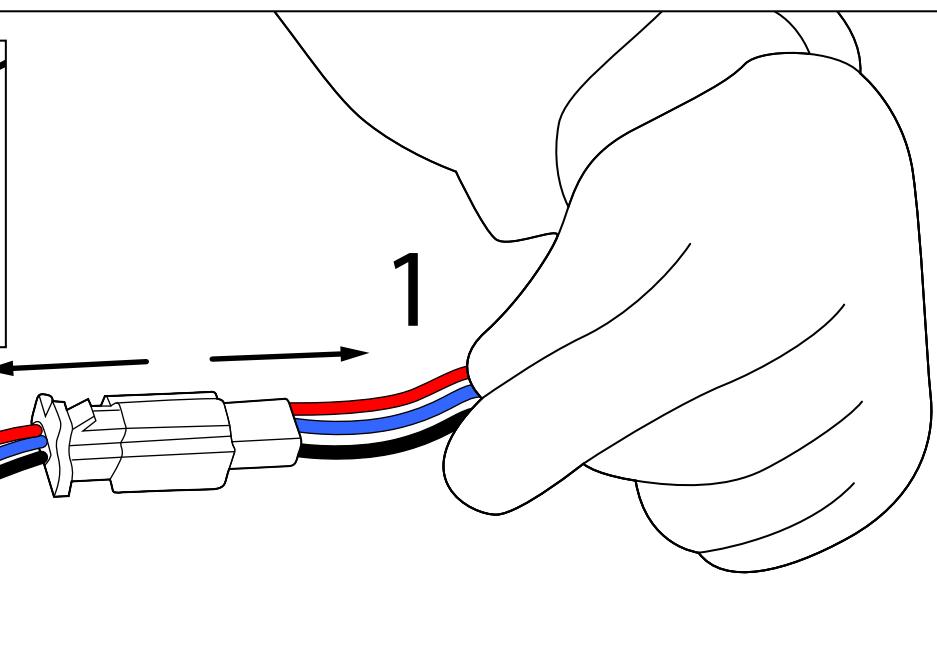

Defogger circuit switch installation of the Harness Central Lock No.38 of the Ford Ranger vehicle.


61

2

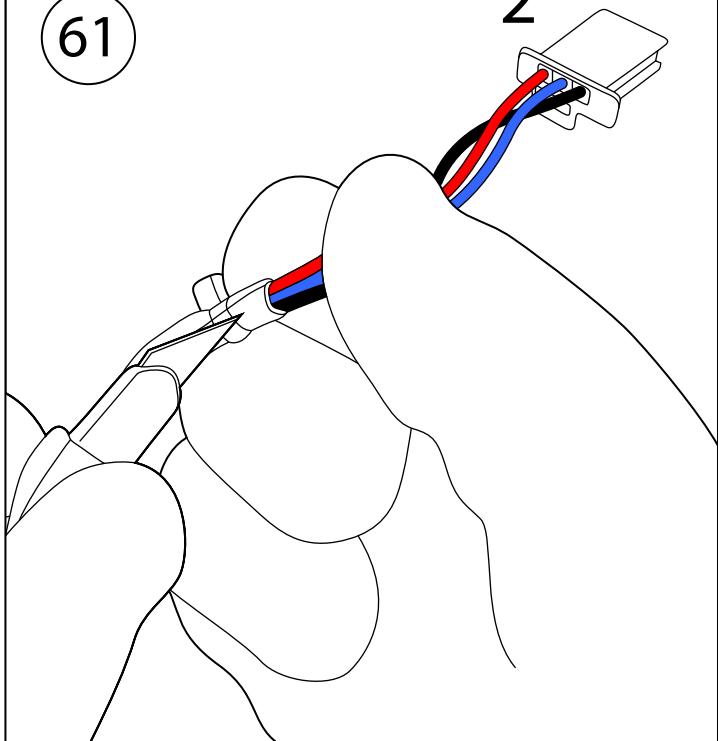

62

Relay

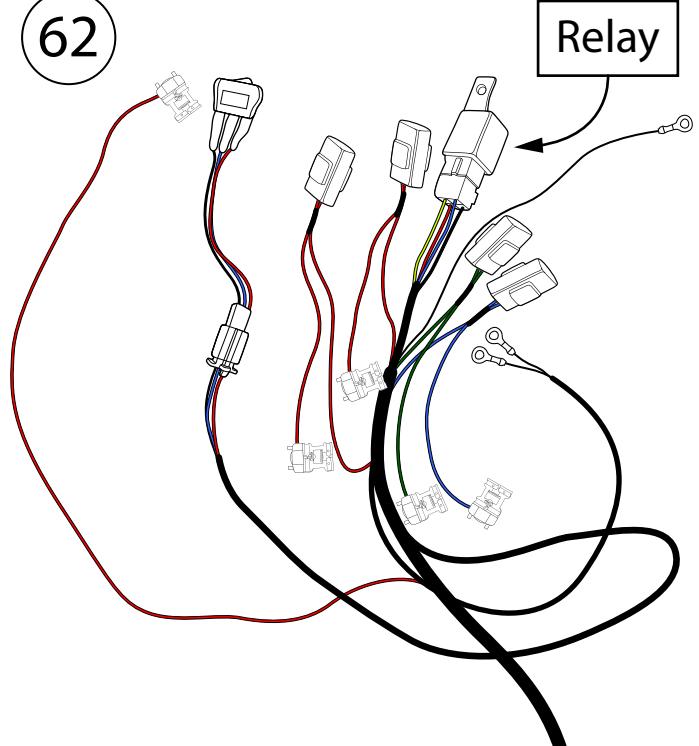


Cut-off the cable

Relay Set of the Harness Central Lock No.38




63

Beware!  
Wiring damage.

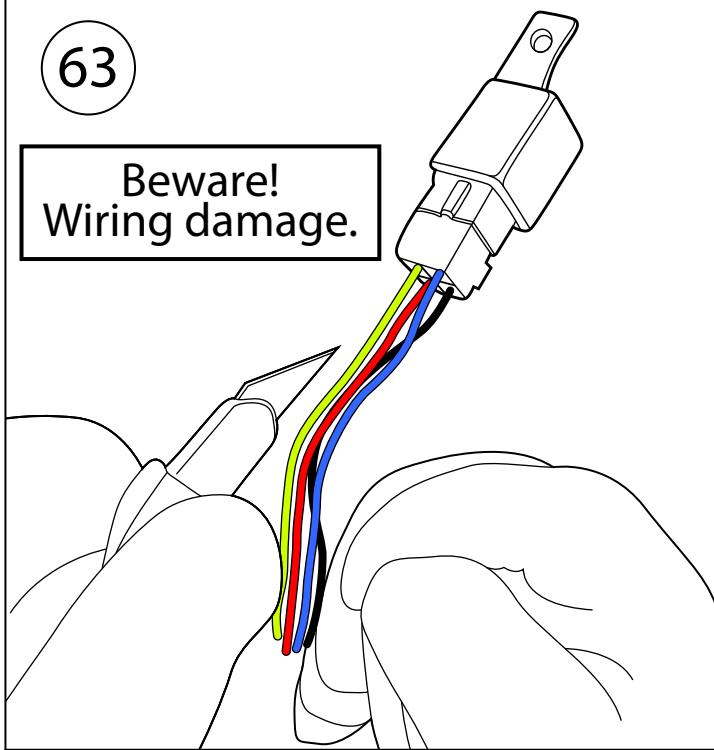

64

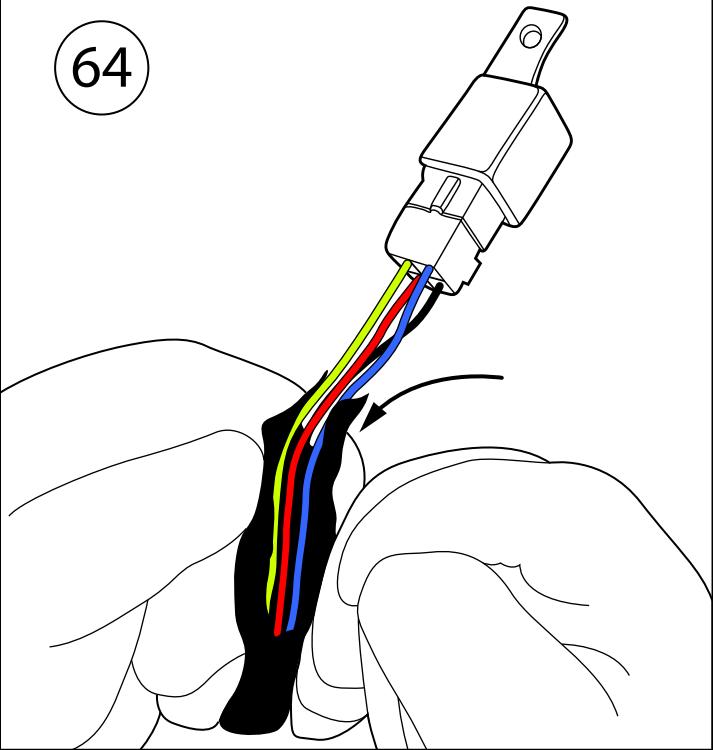


Cut-Off the tape of the Relay.


Pull out the tape

65

Beware!  
Wiring damage.

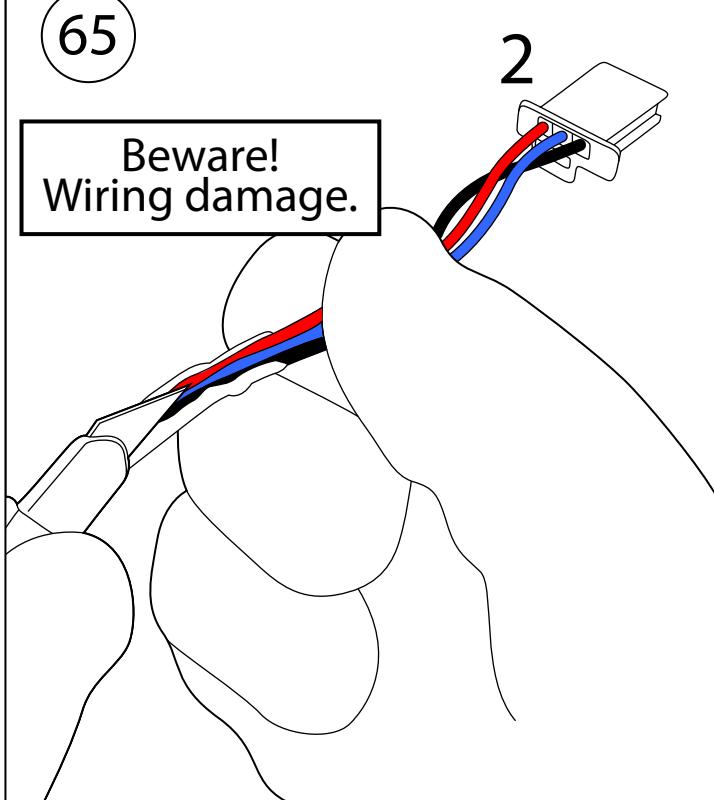

66

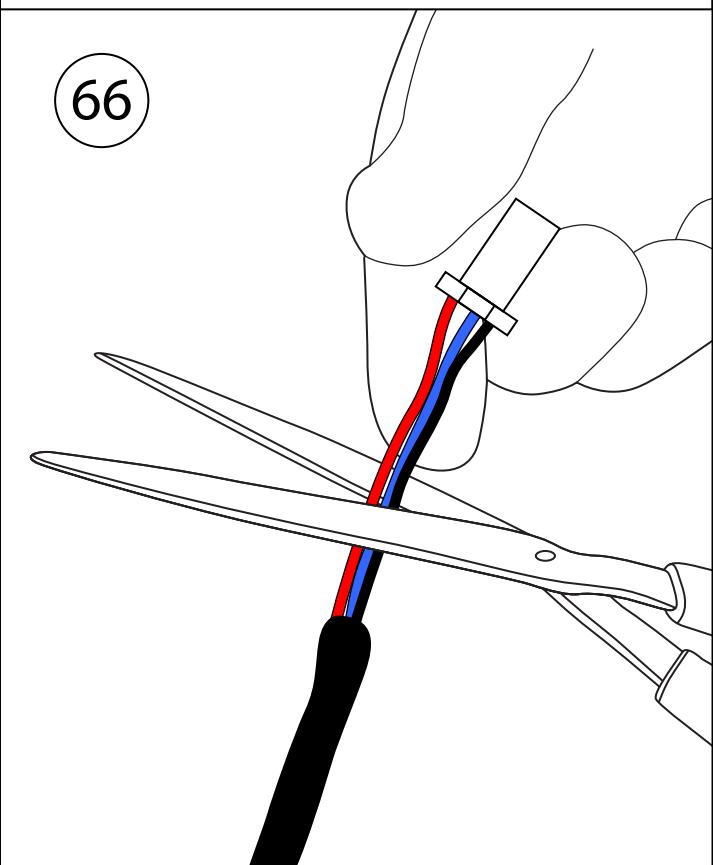


Cut the switch cable insulation pipe.


Cut the end of the defogger switch cable.



67

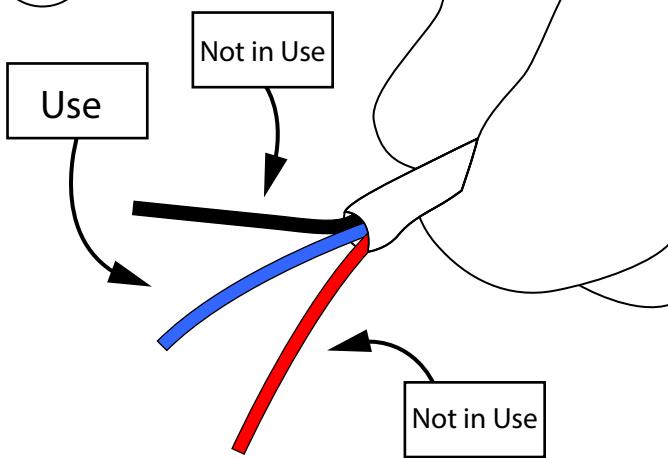


68

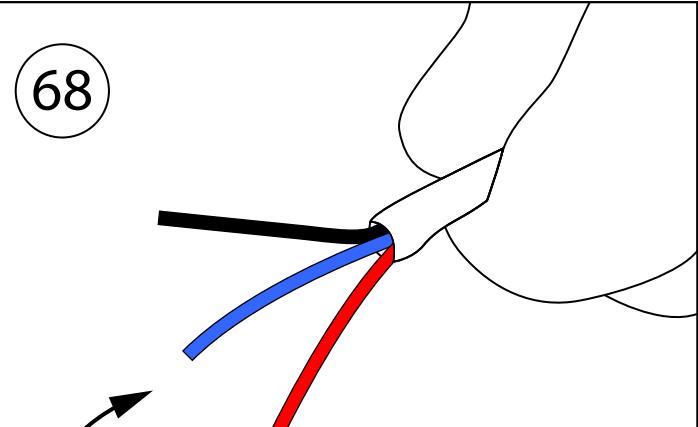

After Cut the end of the defogger switch cable, the wiring that will be using for connecting is the Blue colour.


Take the Electro-tap from the Switch On of the Harness Central Lock No.38 connecting with the defogger wiring.

69

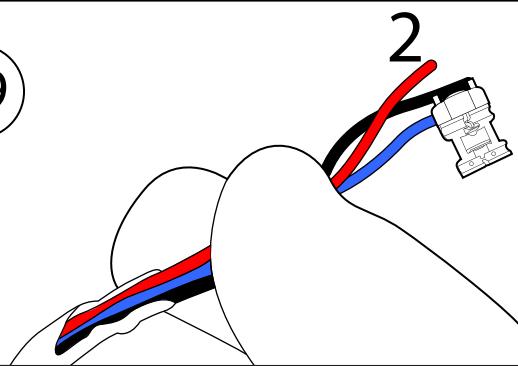

From item 24 : Electro-tap that connect with the blue wiring.

70

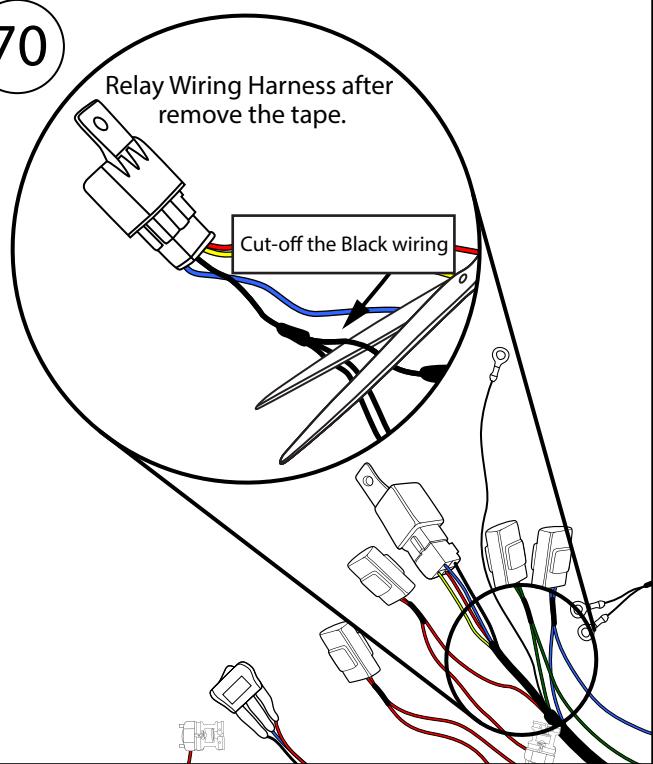


Take off the Red and Black wiring out of the defogger switch set, only leave the blue wiring in.

Cut the black wiring of the defogger wiring harness in order to remove the black wiring from the Relay wiring harness.



71

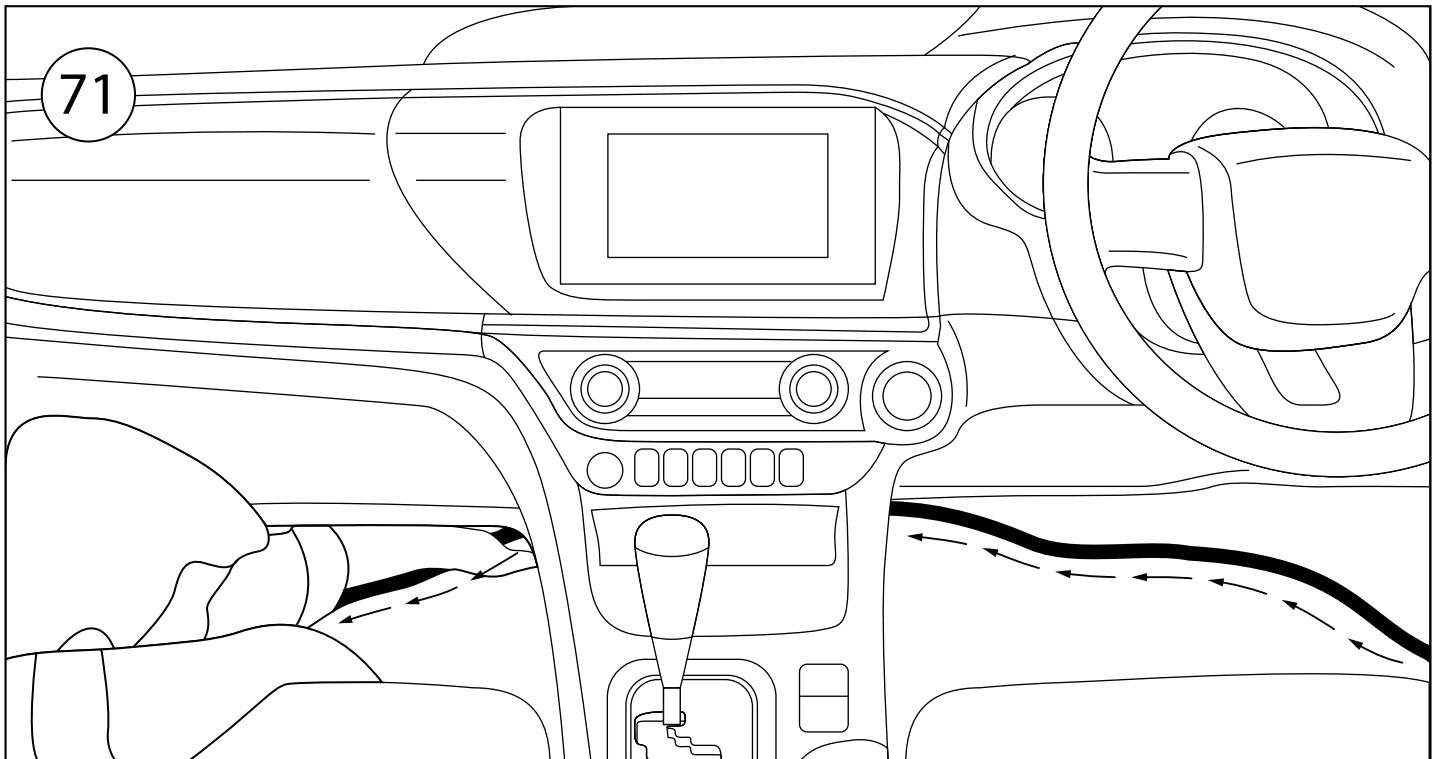

Running the wiring from the driver side through the passenger side as shown in picture.


72

72.1



Take off the vehicle rubber pad in order to keep/hide the wiring.


72.2

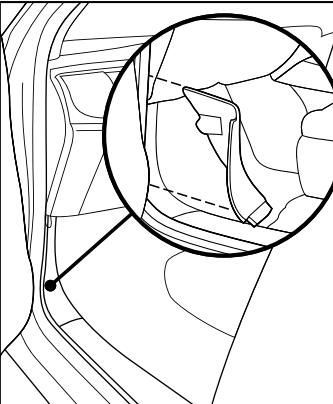


Take off the cover at the passenger position side in order to check the Defogger wiring of the vehicle.

73

73.2

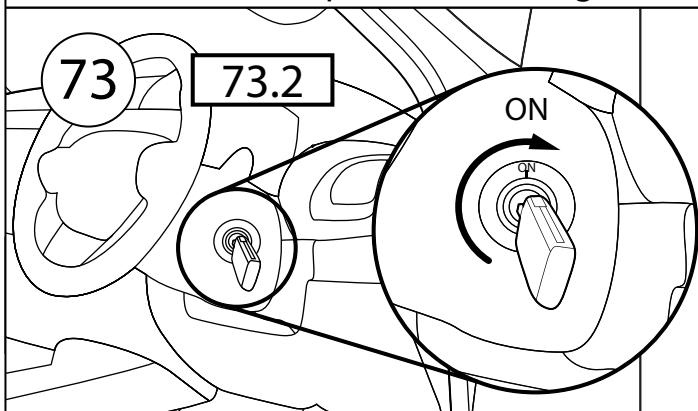

73.2

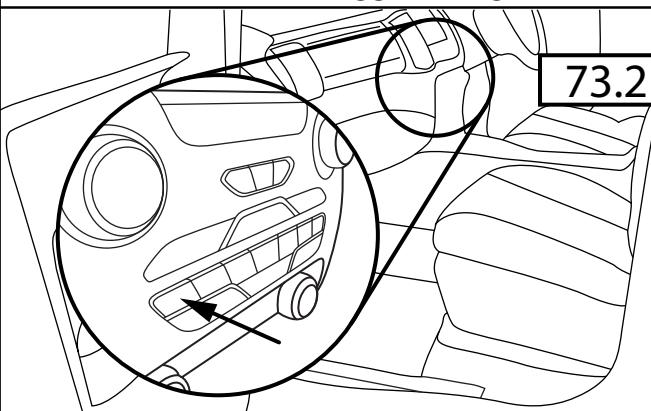

Checking the defogger system by turn ON and push the defogger button at the console pad.



<p>From item 29 : Turn ON and push the defogger button at the console pad, After that check the defogger wiring at passenger position by using the Test Lamp kit, Light On means working.</p>	
	<p>Running the Harness Central Lock No.38 wiring along with the vehicle wiring by using the Cable Tie for tightening, then running the wiring into the vehicle structure hole.</p>
<p>Connects the Blue Wiring (Defogger) of the Harness for Installation No.38 with the Black Wiring (Defogger) of the vehicle by using the Electro-tap.</p>	

## 76

### The Step of wiring running diagram


Point 1 Wiring running from driver side through passenger side.

Point 2 Running canopy wiring via vehicle wiring hole/pipe along under the chassis.


Point 3 Wiring that run under vehicle along the chassis.

Point 4 Wiring that run via chassis at the fender area.


Point 5 Wiring that running up the rear light in order to connect with the other wiring set.

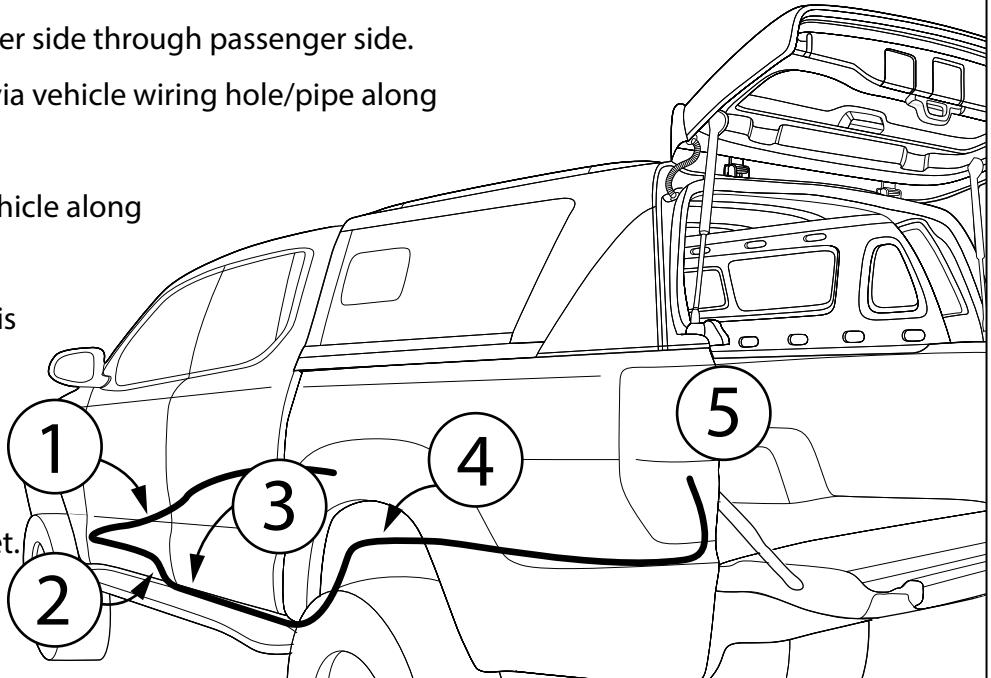


The Step of wiring running diagram for the Harness Central Lock No.38

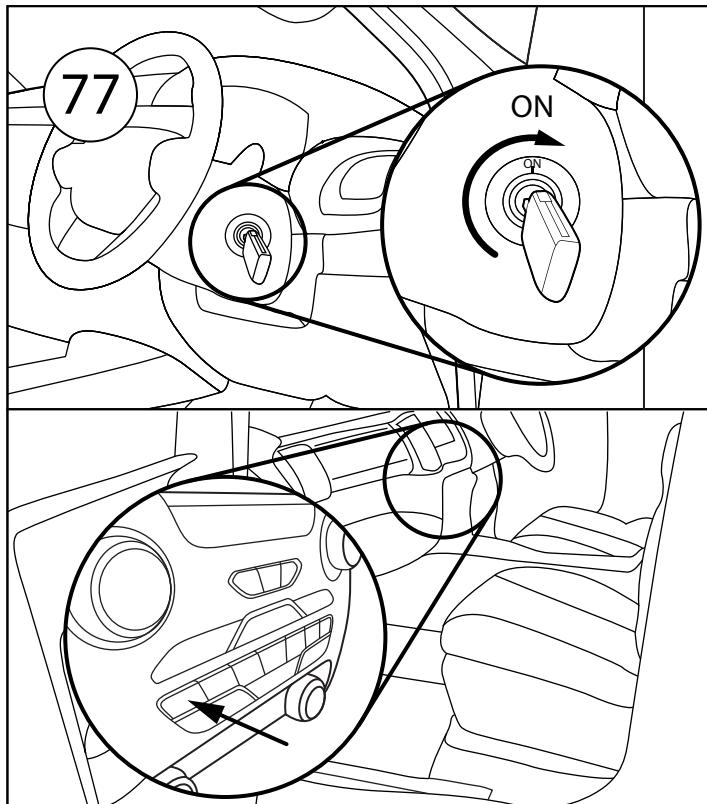


Checking the defogger system by turn ON and push the defogger button at the console pad.

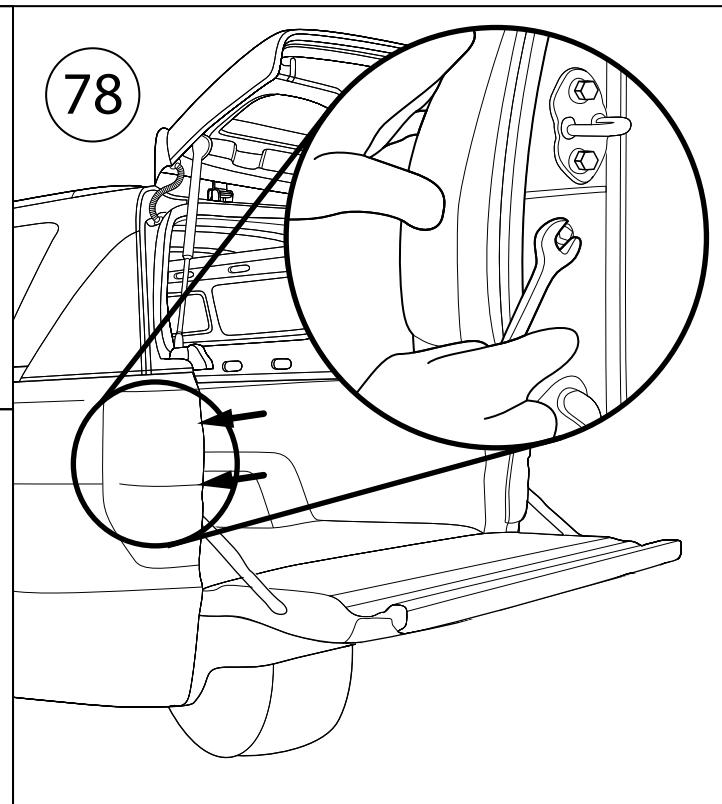

Take off the Rear Light by using wrench No.10

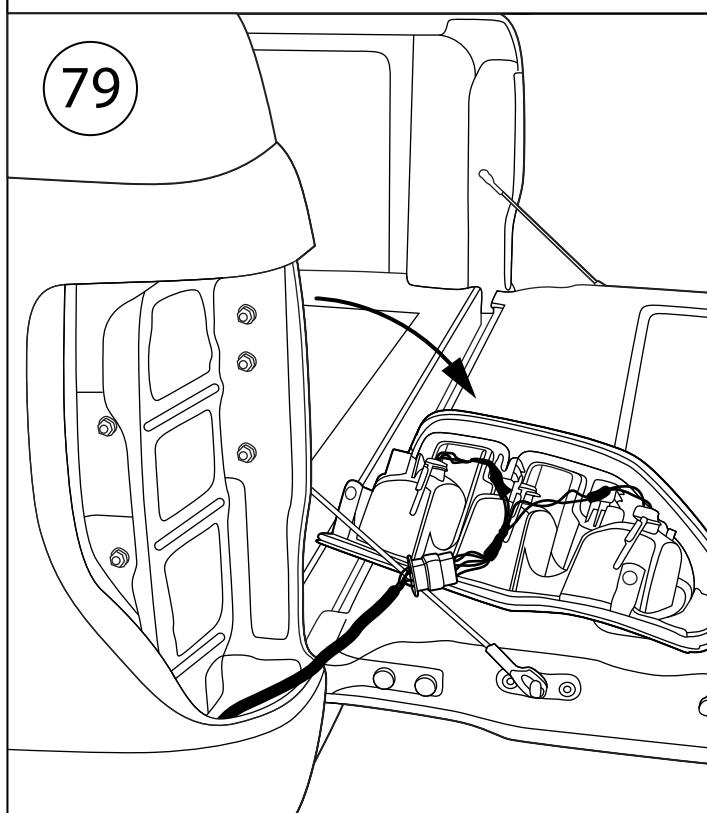

Take off the Rear Light vehicle.

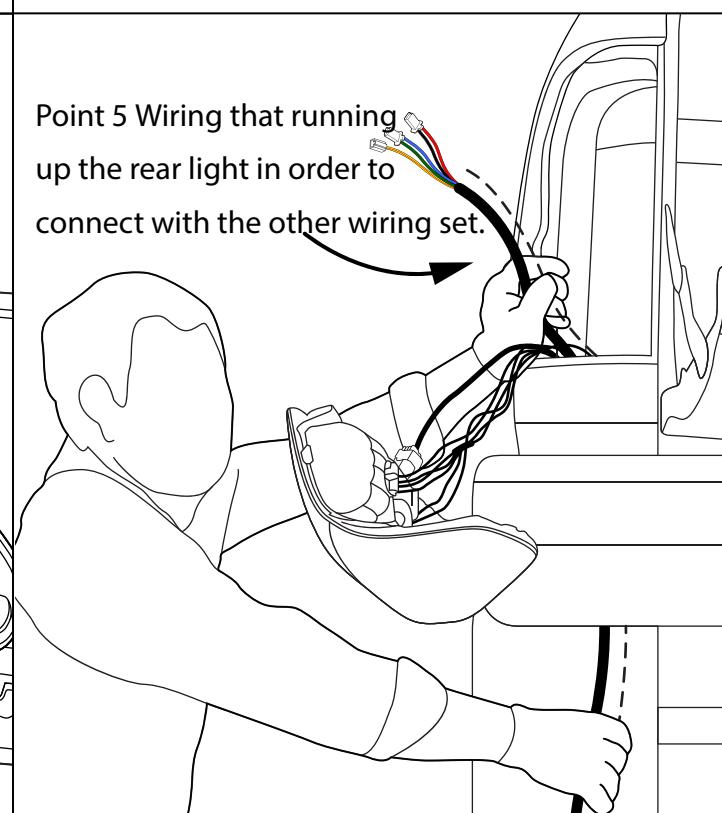

Running the Harness Central Lock No.38 up to the vehicle rear light in order to connects with the Harness Central Lock No.40.



80



Tub with Liner

Left Side

81

Tub without Liner

Left Side

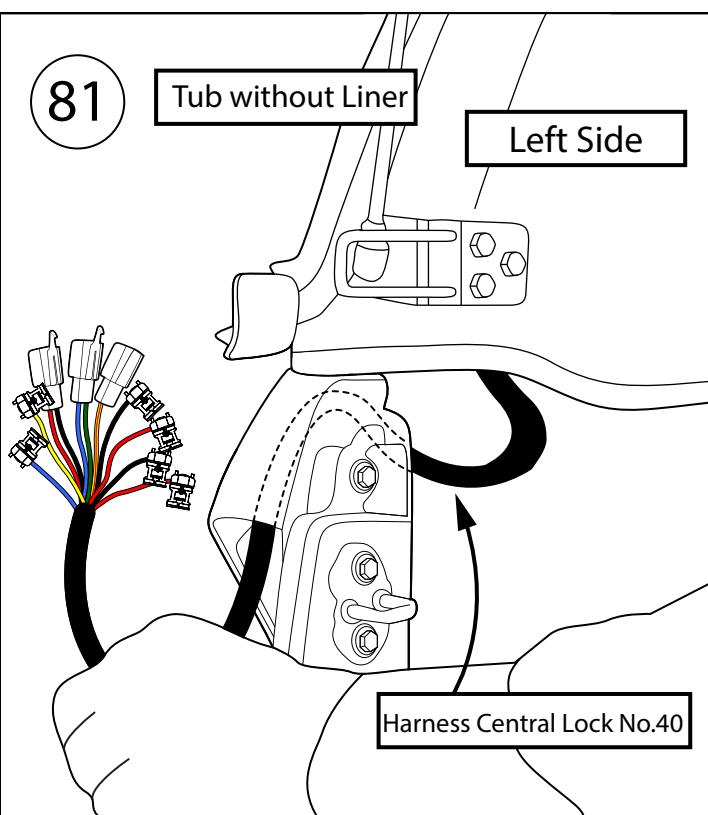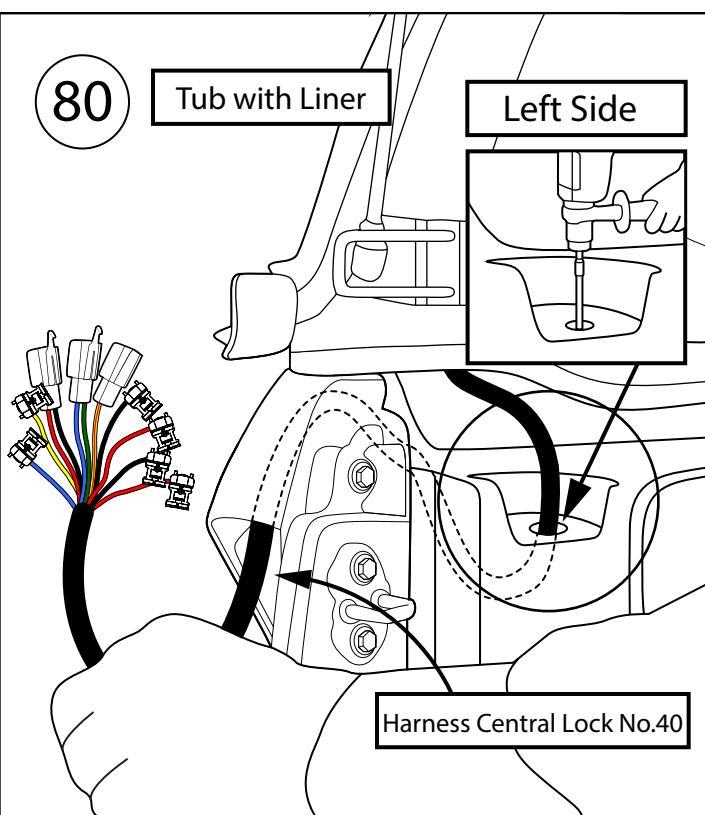

Punch the hole at the liner around 16mm. in order to run the Harness Central Lock No.40 through the vehicle tub channel out of the Rear Light socket.

Run the Harness Central Lock No.40 along the vehicle tub channel out of the Rear Light Socket.

82

Left Side

Harness Central Lock No.40

Harness Central Lock No.38

83

Central Lock  
Wire Connect

Left Side

Harness Central  
Lock No.40

Harness Central  
Lock No.38

The Harness Central Lock No.40 wiring vehicle position and the Harness Central Lock No.38 wiring set.


The process of connecting the Central Lock (BL,DG) wiring of the Harness Central Lock No.40 with the Central Lock (BL,DG) wiring of the Harness Central Lock No.38.



84

Room Lamp  
Wire Connect


Left Side

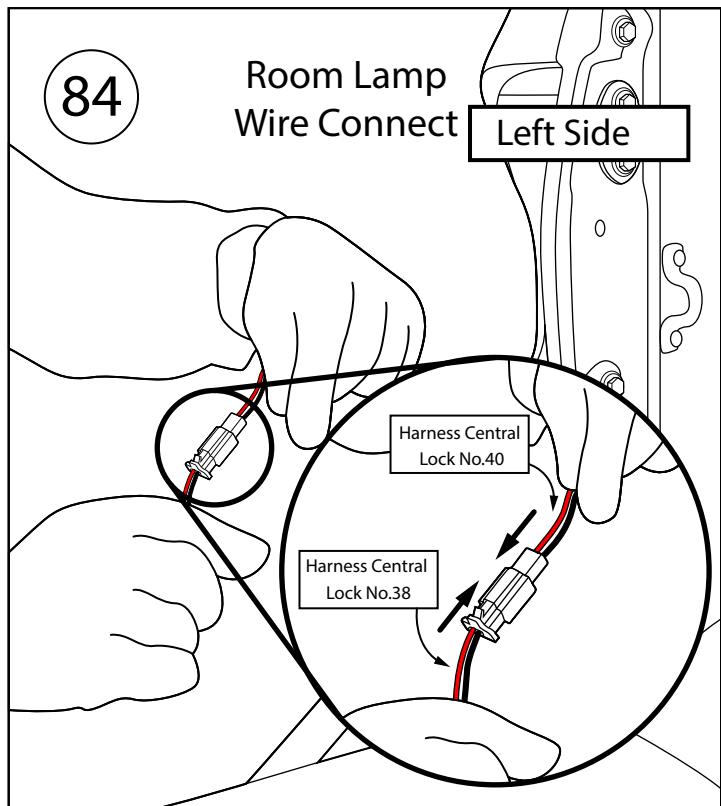

85

Defogger  
Wire Connect

Left Side

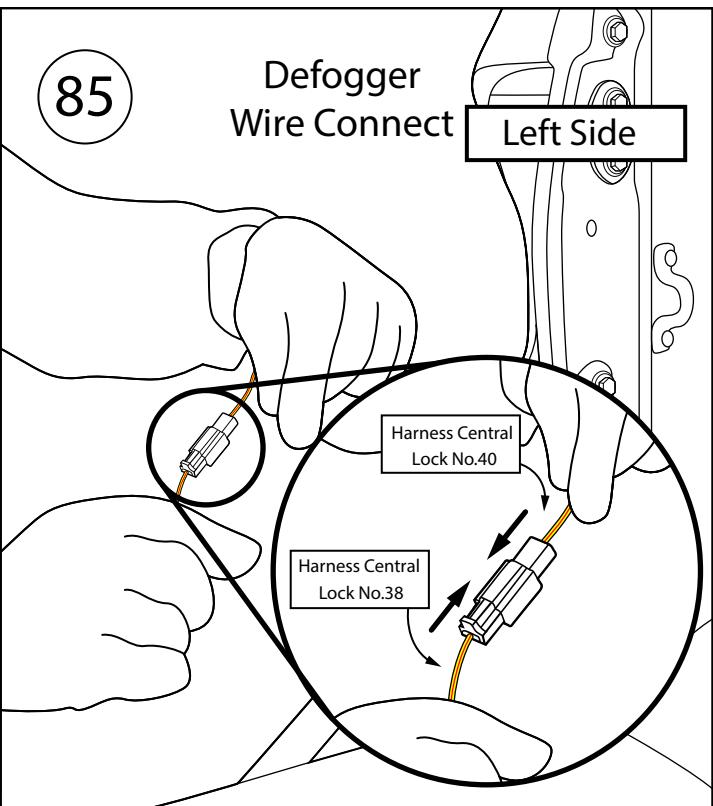

The process of connecting the Room Lamp (RD,BK) wiring of the Harness Central Lock No.40 with the Room Lamp (RD,BK) wiring of the Harness Central Lock No.38.

The step of connecting the Defogger (YL/RD) wiring of the Harness Central Lock No.40 with the Defogger (YL/RD) wiring of the Harness Central Lock No.38.

86


Third Brake Light Wire Connect

Connect Position

Harness Central Lock No.40

Third Brake Light (Green) (Car)


Left Side

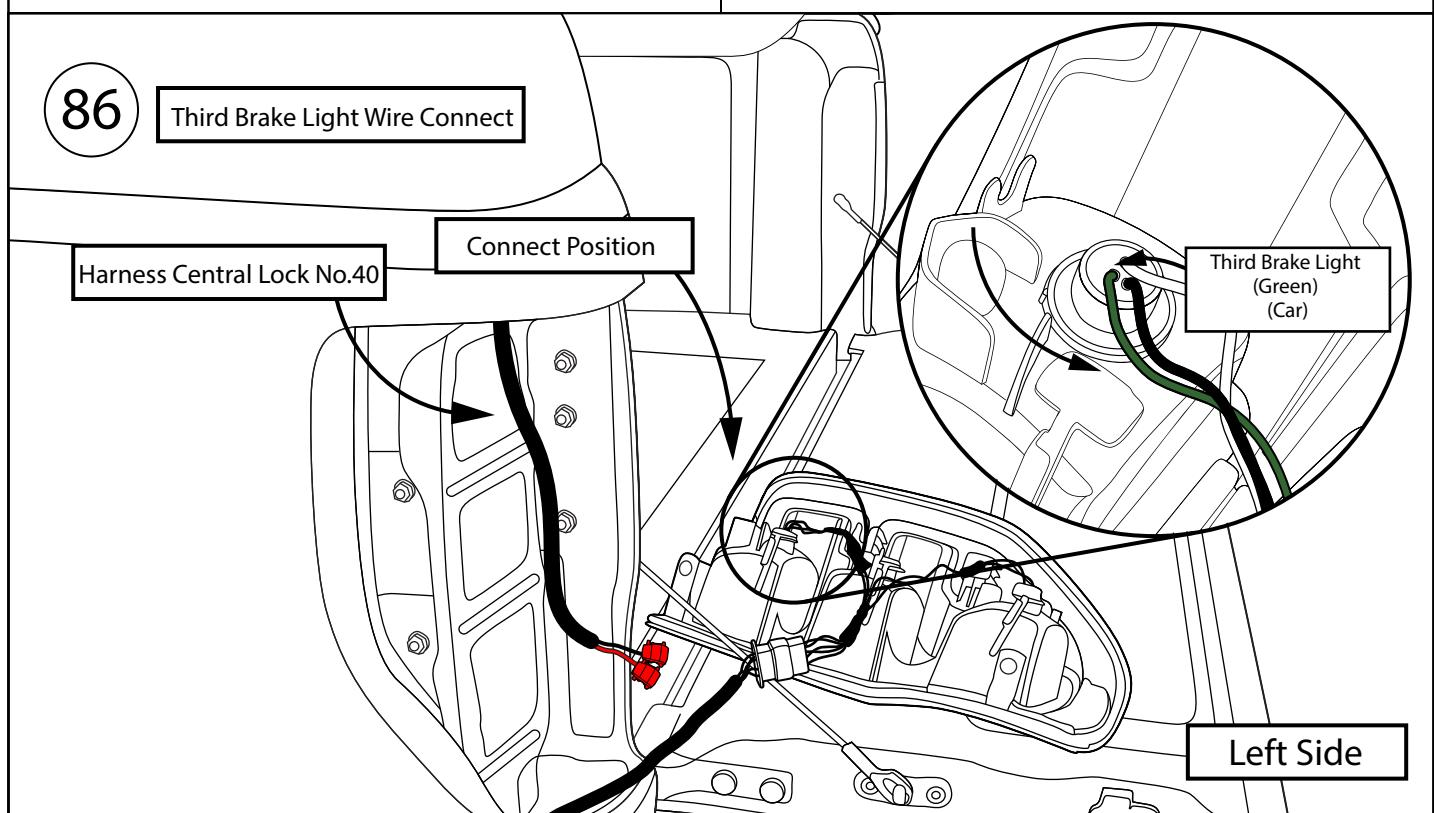

Brake Light (Light Green) of the vehicle rear light connect position.




87

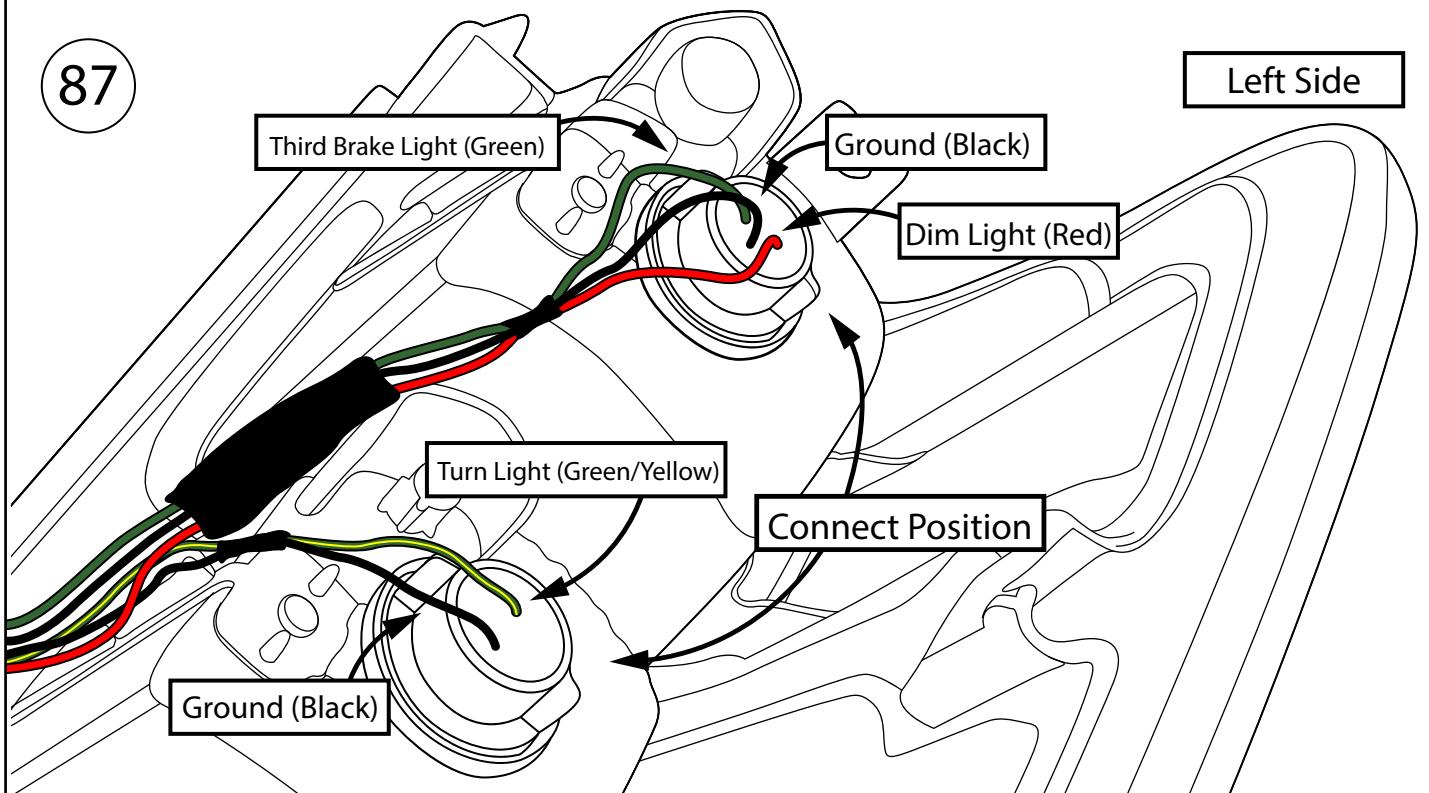


Third Brake Light , Brake Light , Dim Light , Turn Light and Ground of the vehicle wire connect position.

88

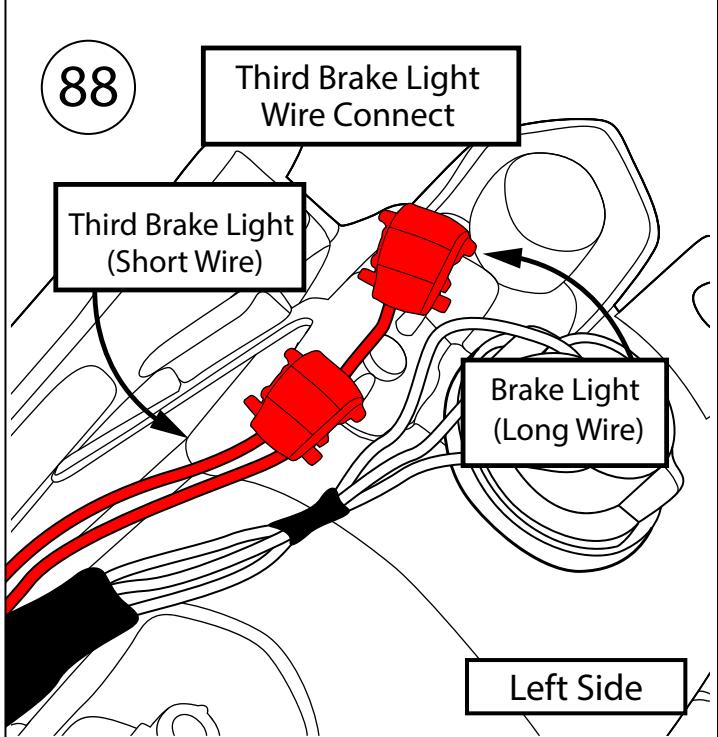



Bring the red wiring, Third Brake Light (Short wire) of the Harness Central Lock No.40 connecting with Brake Light (Long wire) of the Harness Central Lock No.40.

89

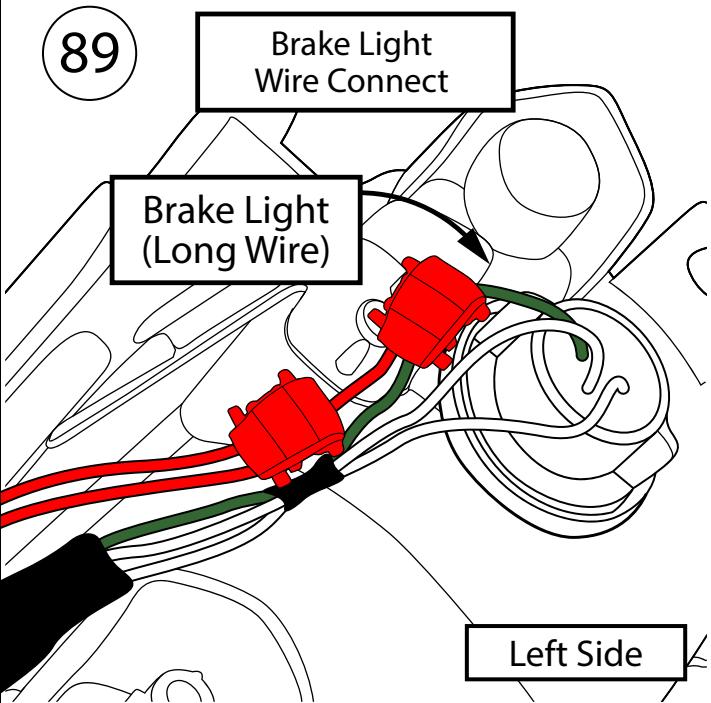


After finish the installation step no.43 Bring the Red Wiring, Brake wiring (Long wire) of the Harness Central Lock No.40 connecting with the wiring (Green wire) of the vehicle.

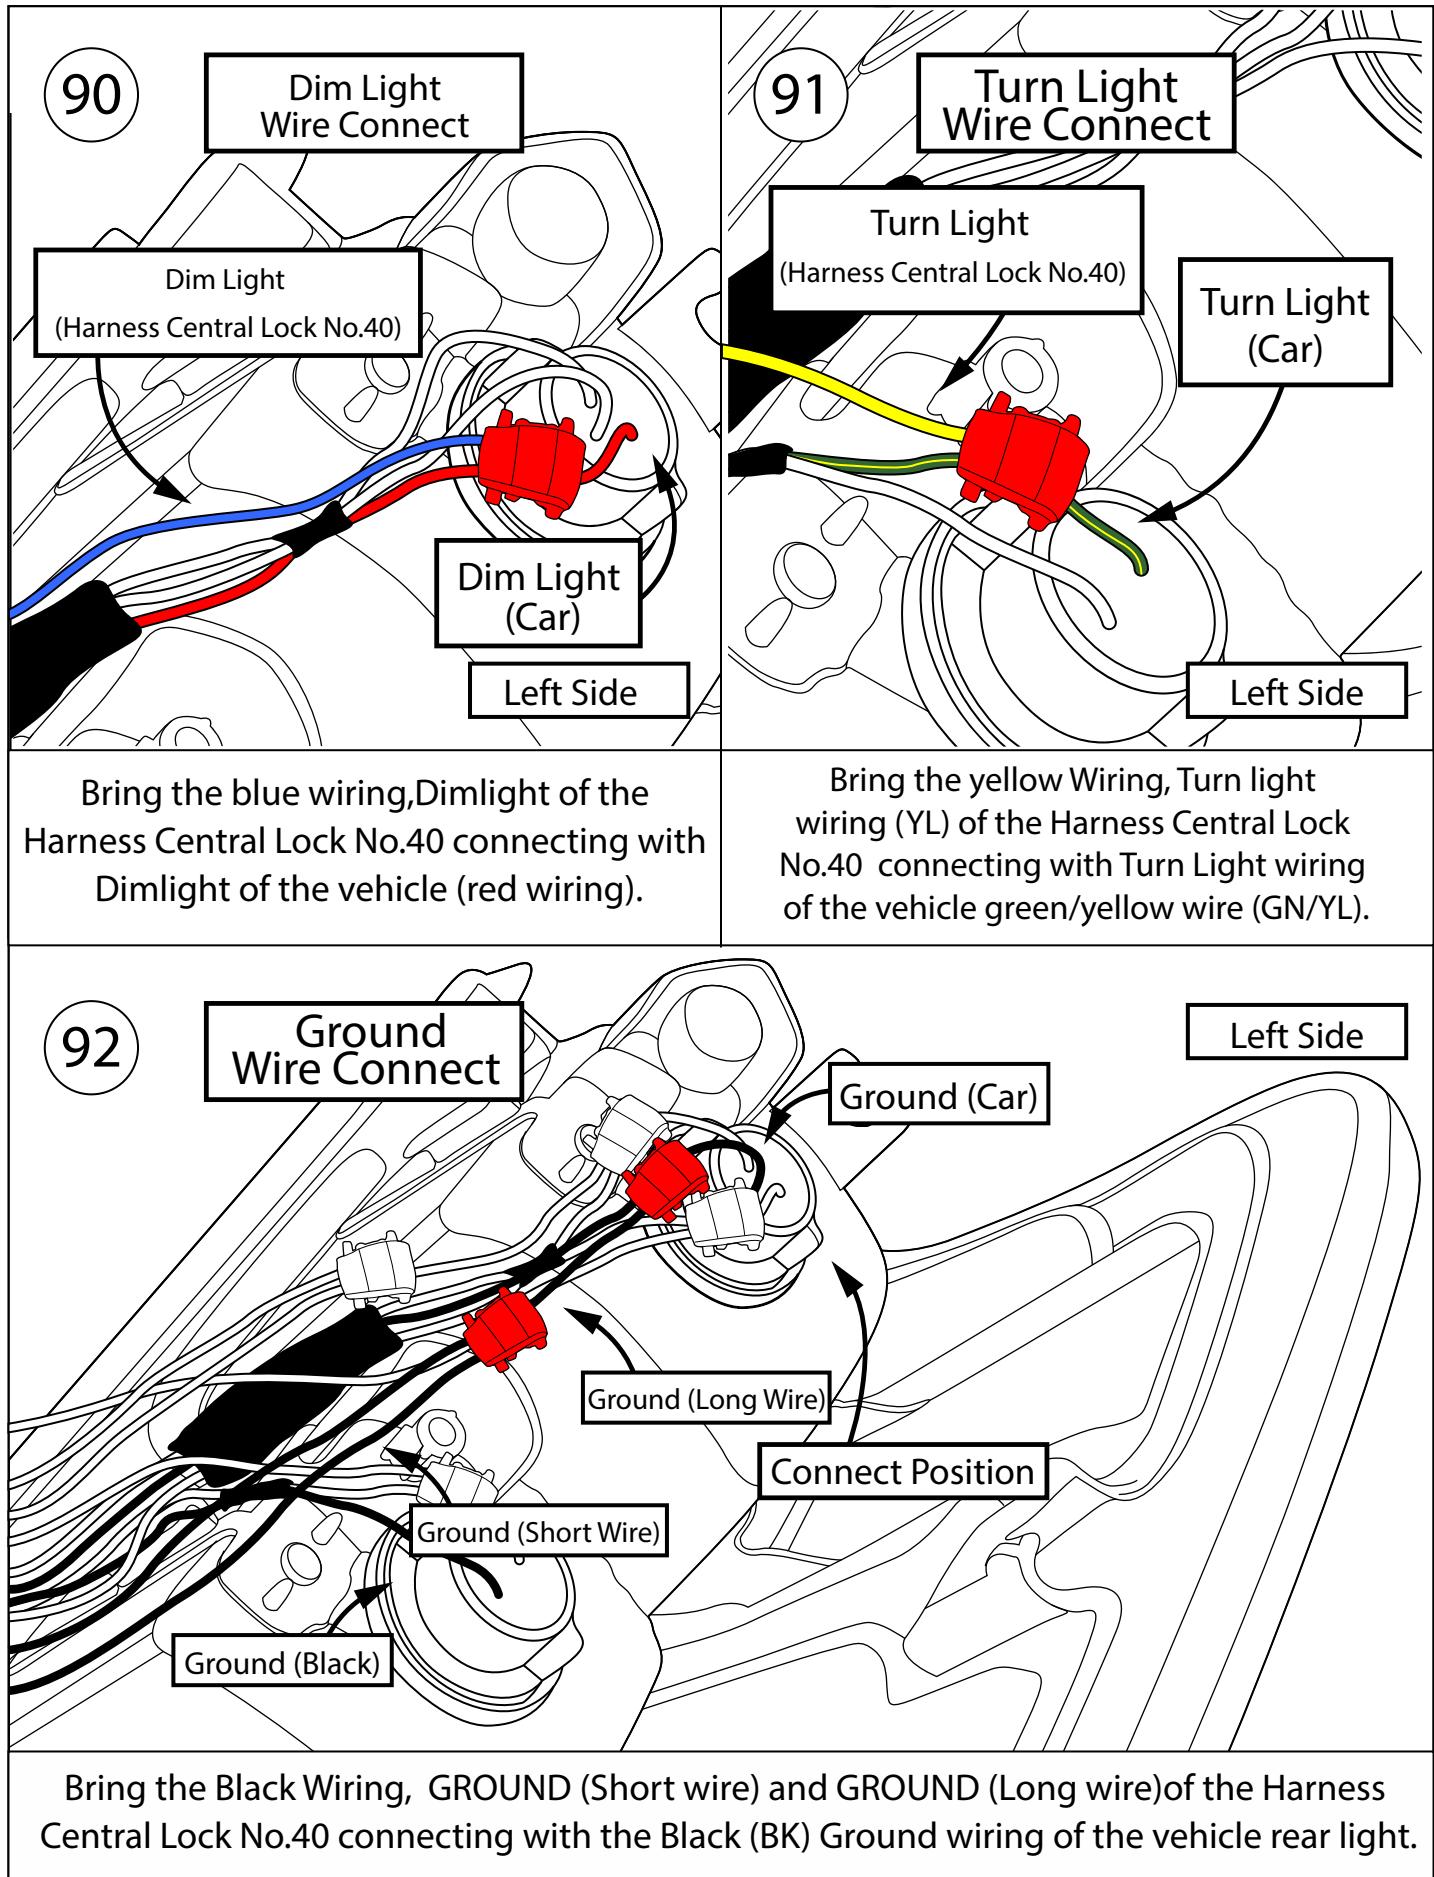


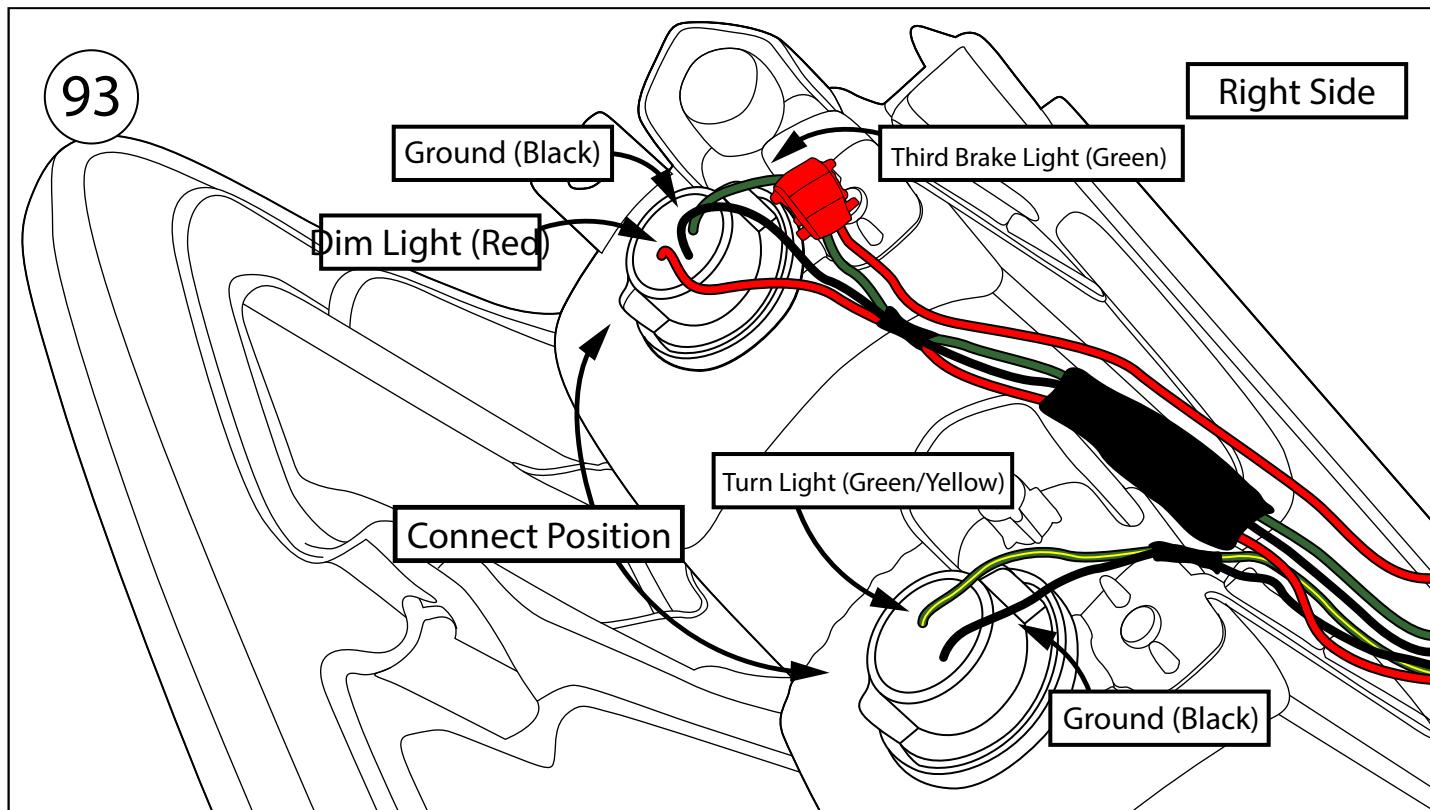


Third Brake Light , Brake Light , Dim Light , Turn Light and Ground of the vehicle wire connect position.

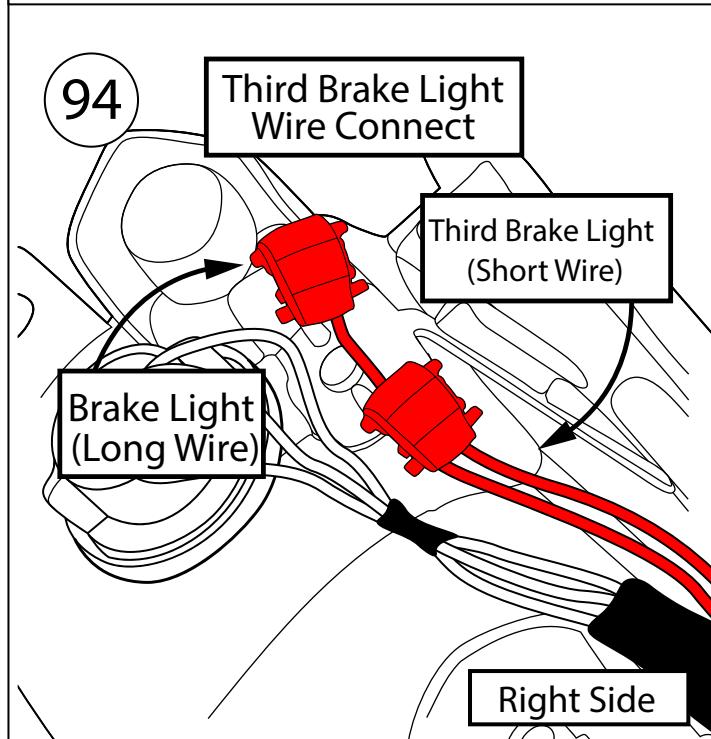

Bring the red wiring, Third Brake Light (Short wire) of the Harness Central Lock No.40 connecting with Brake Light (Long wire) of the Harness Central Lock No.40.

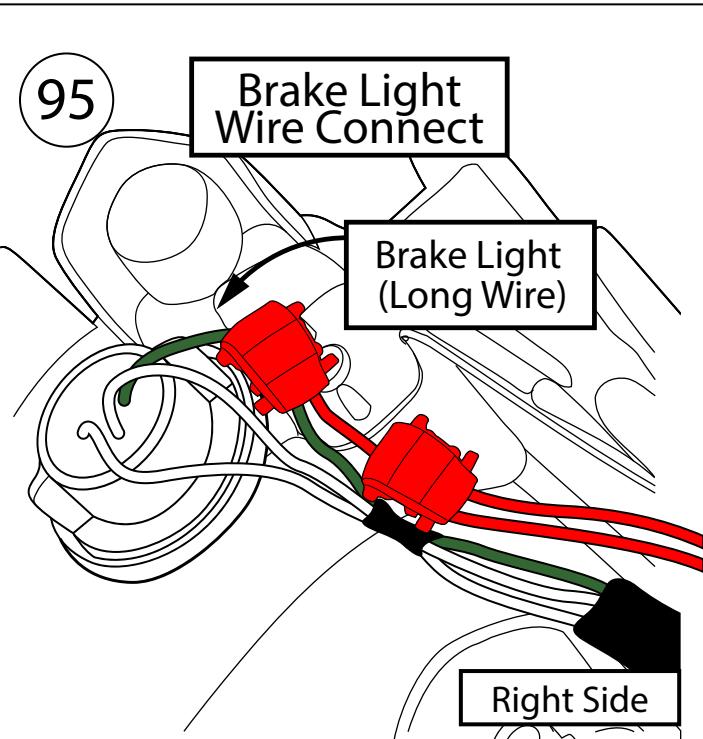


After finish the installation step no.49 Bring the Red Wiring, Brake wiring (Long wire) of the Harness Central Lock No.40 connecting with the wiring (Green wire) of the vehicle.

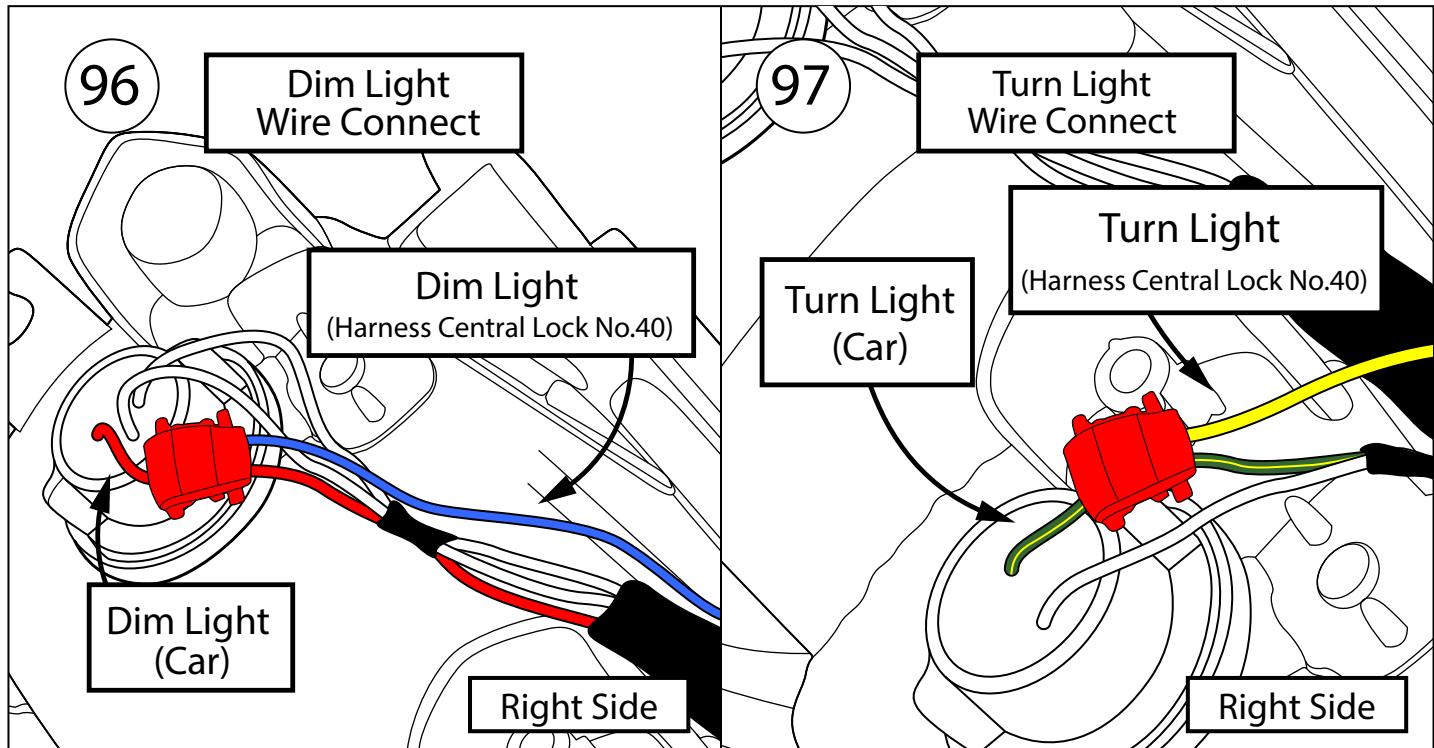

Bring the blue wiring, Dimlight of the Harness Central Lock No.40 connecting with Dimlight of the vehicle (red wiring).


Bring the yellow Wiring, Turn light wiring (YL) of the Harness Central Lock No.40 connecting with Turn Light wiring of the vehicle green/yellow wire (GN/YL).

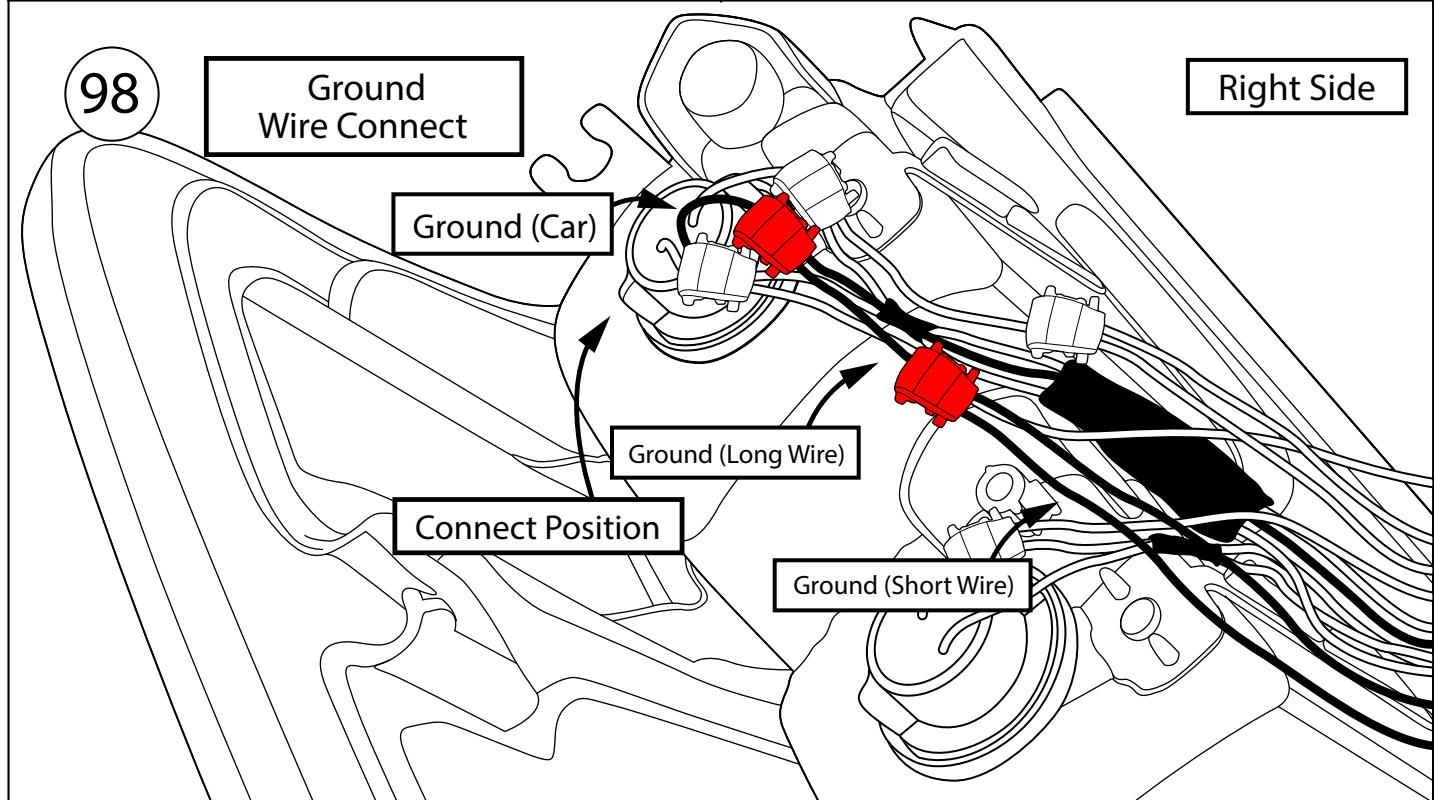

Bring the Black Wiring, GROUND (Short wire) and GROUND (Long wire) of the Harness Central Lock No.40 connecting with the Black (BK) Ground wiring of the vehicle rear light.




99

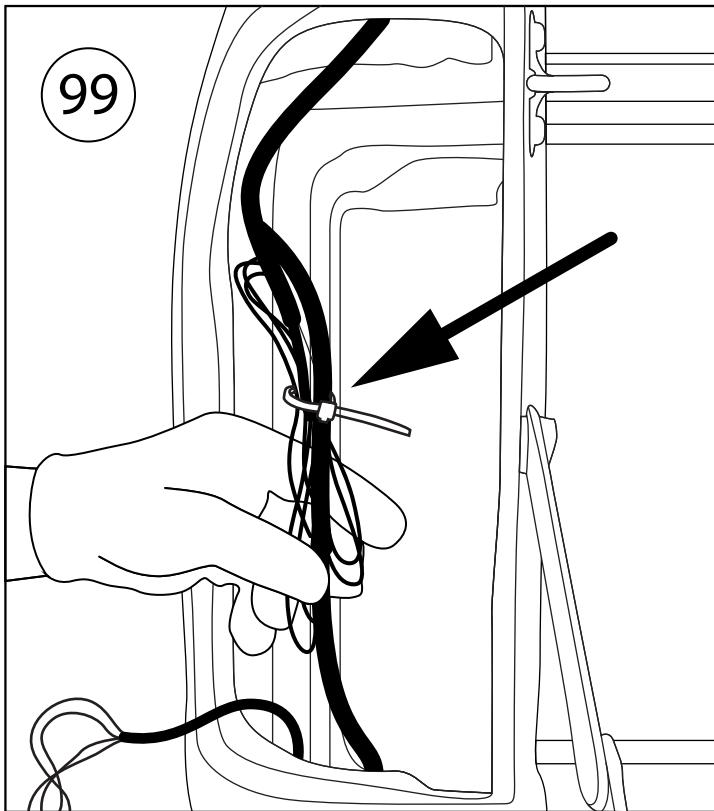


Tight up all the wiring by using  
the Cable Tie

100

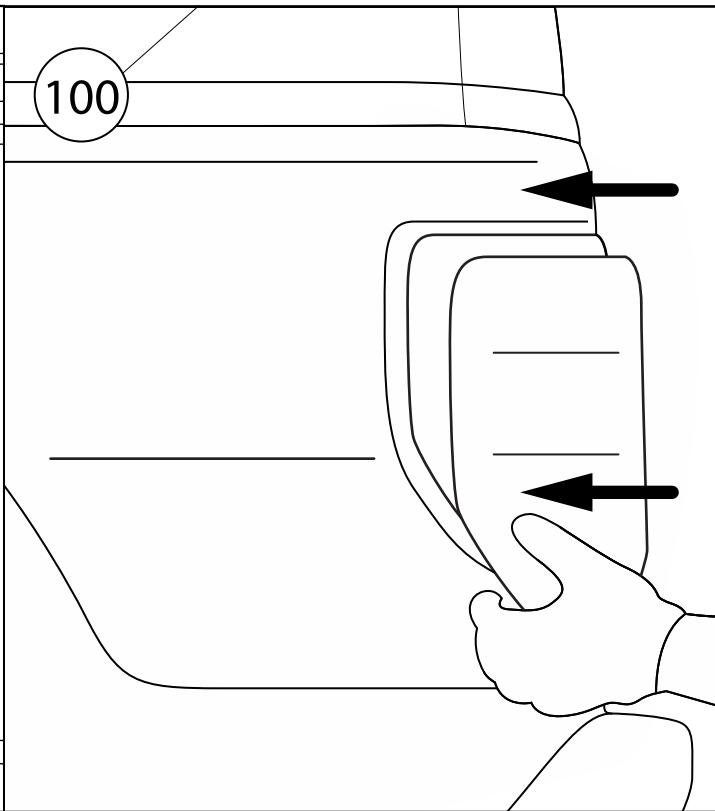


Reassemble the vehicle rear light.

101

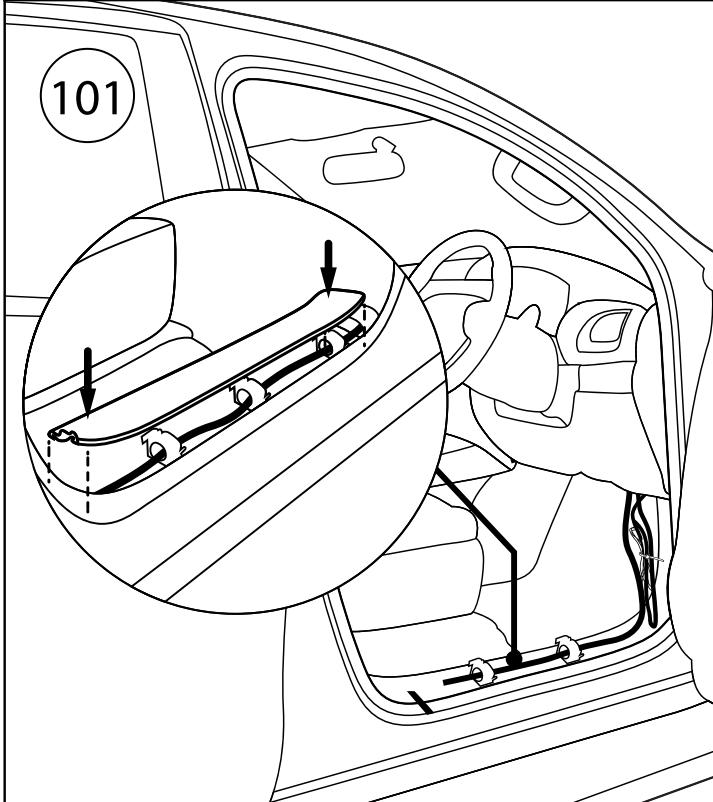

102

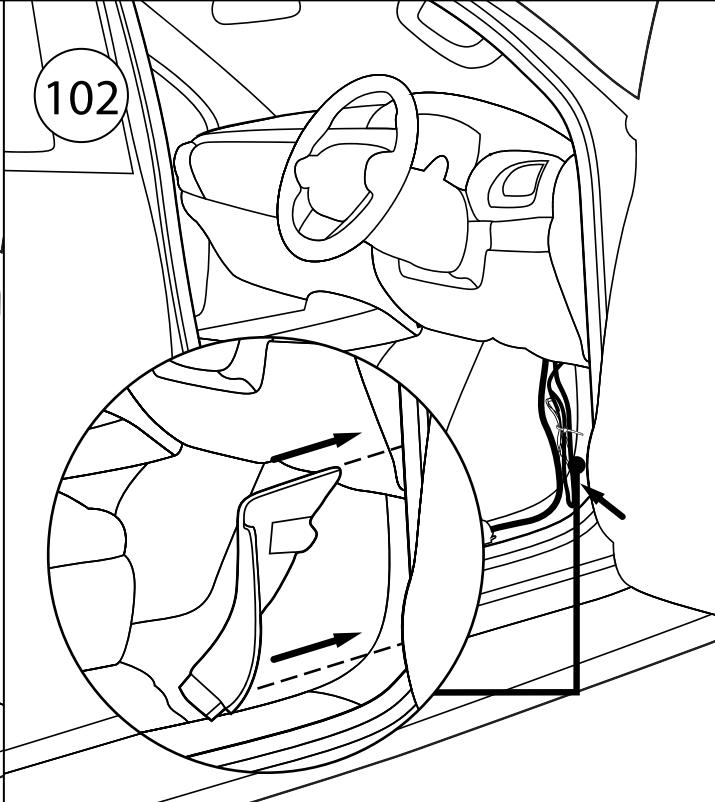

Tight up the wiring at the driver side by using the Cable Tie,  
then close the vehicle cover.




103

Check the Central Lock / Room Lamp working.




Central Lock checking by pressing the vehicle remote key at the Lock position, Canopy will be lock and cannot open.

104

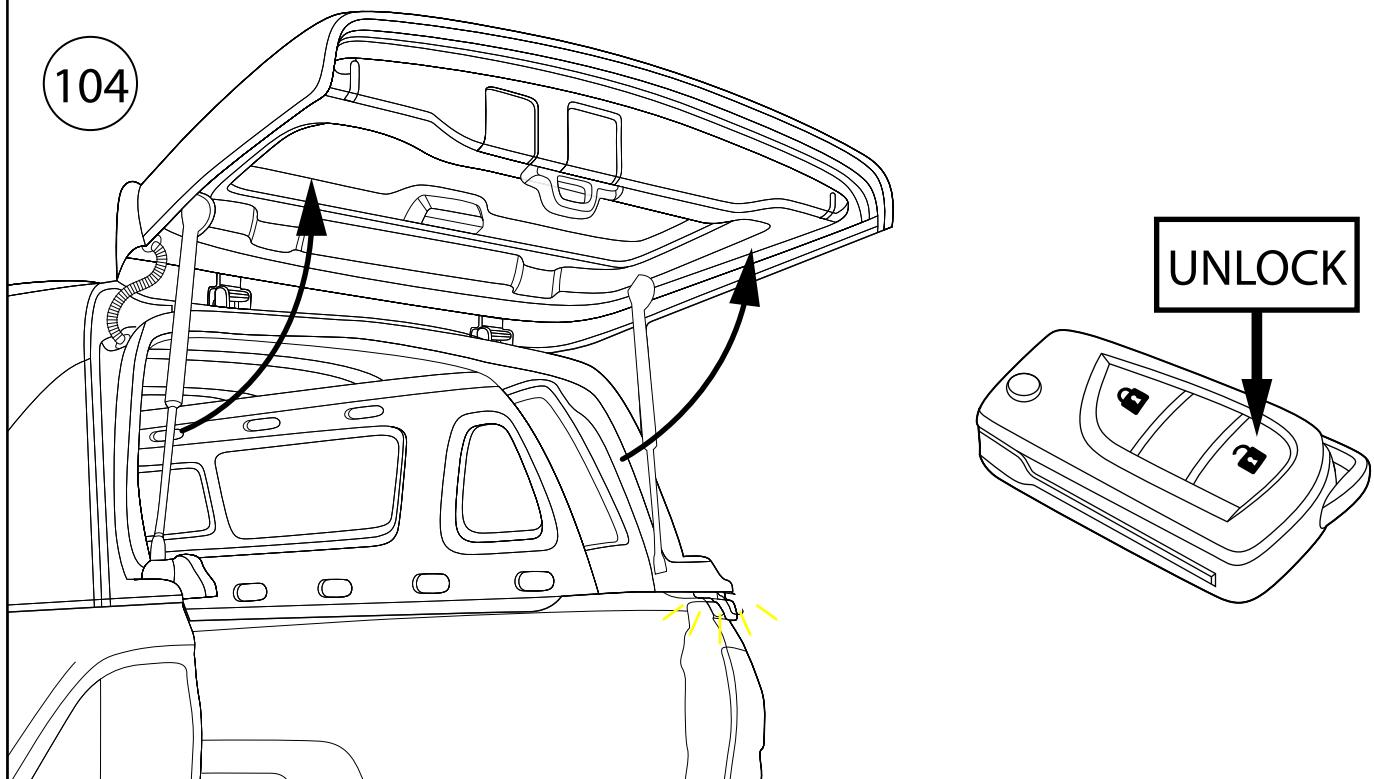

Central Lock checking by pressing the vehicle remote key at the Unlock position, Canopy will be open.

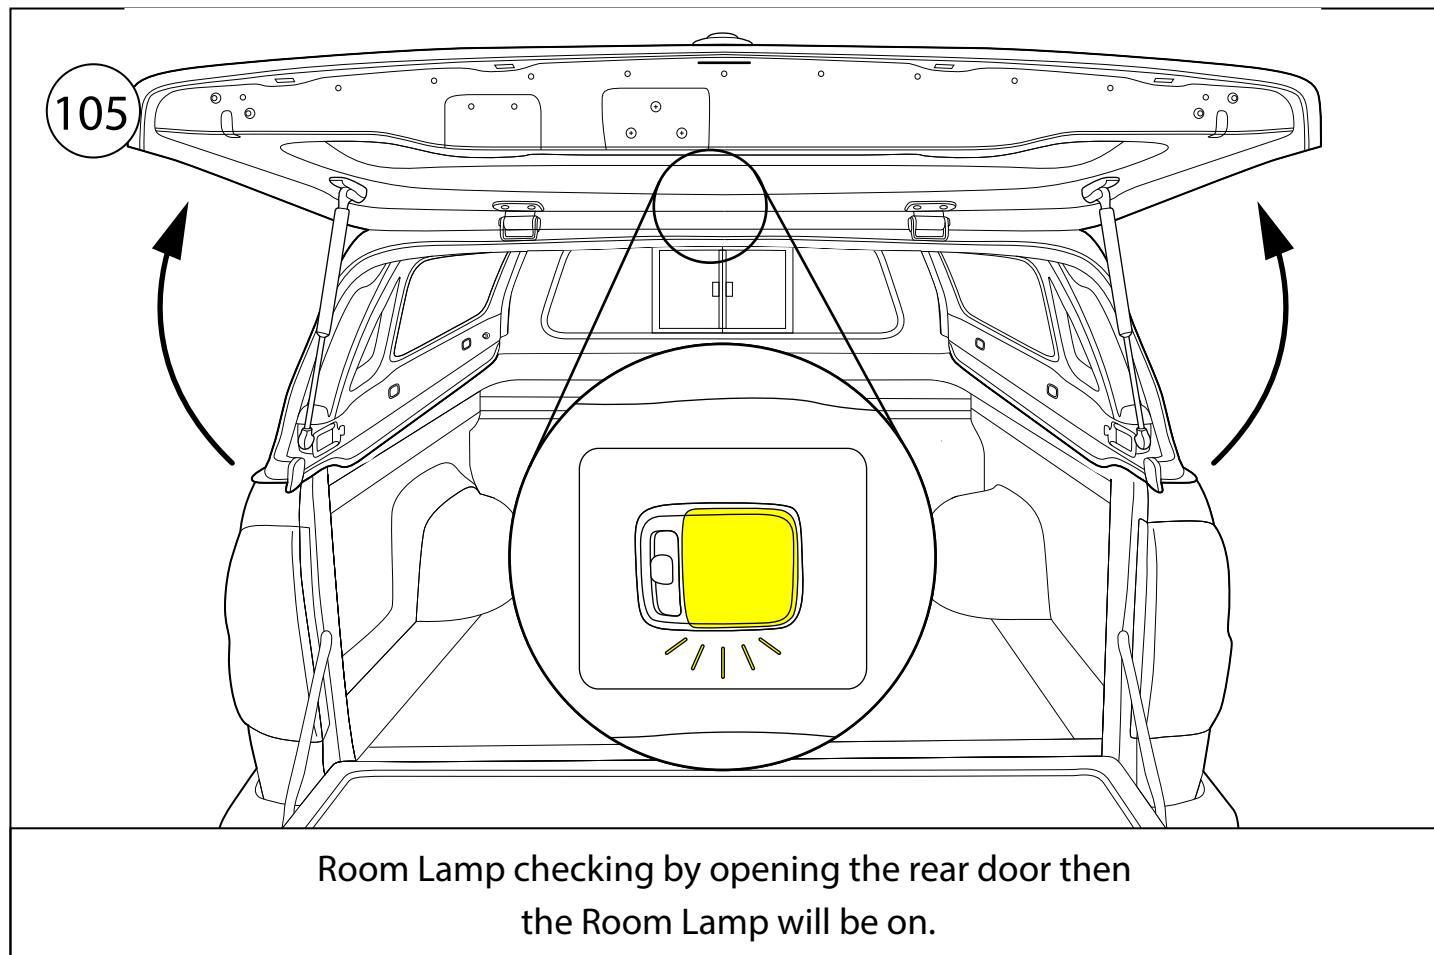

Room Lamp checking by opening the rear door then  
the Room Lamp will be on.



**SAMMITR**


# Electric lock Installation Manual EBW




## Electric Lock Installation Manual

EBW

TL-1

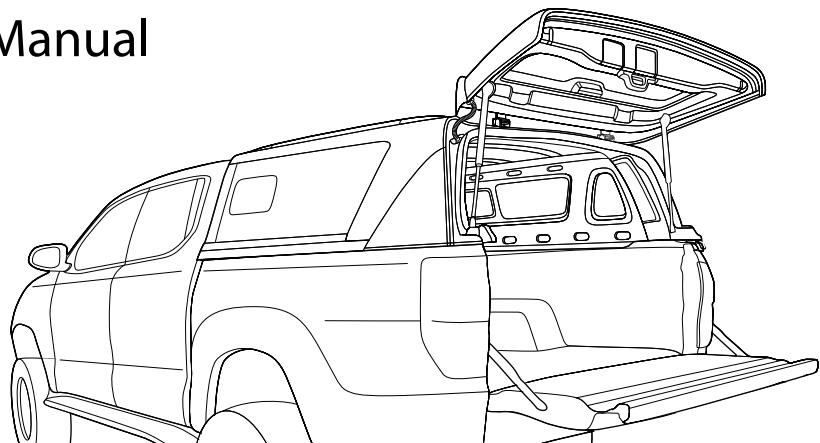


Canopy Wire set

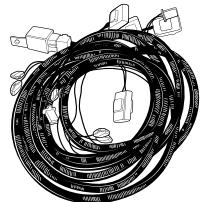

C1: Harness Central  
Lock No.38

Require Tool

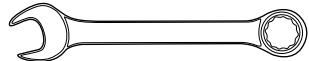


T1 : 10 mm. Wrench



T2 : 19 mm. Wrench


106

Install Canopy On Tub

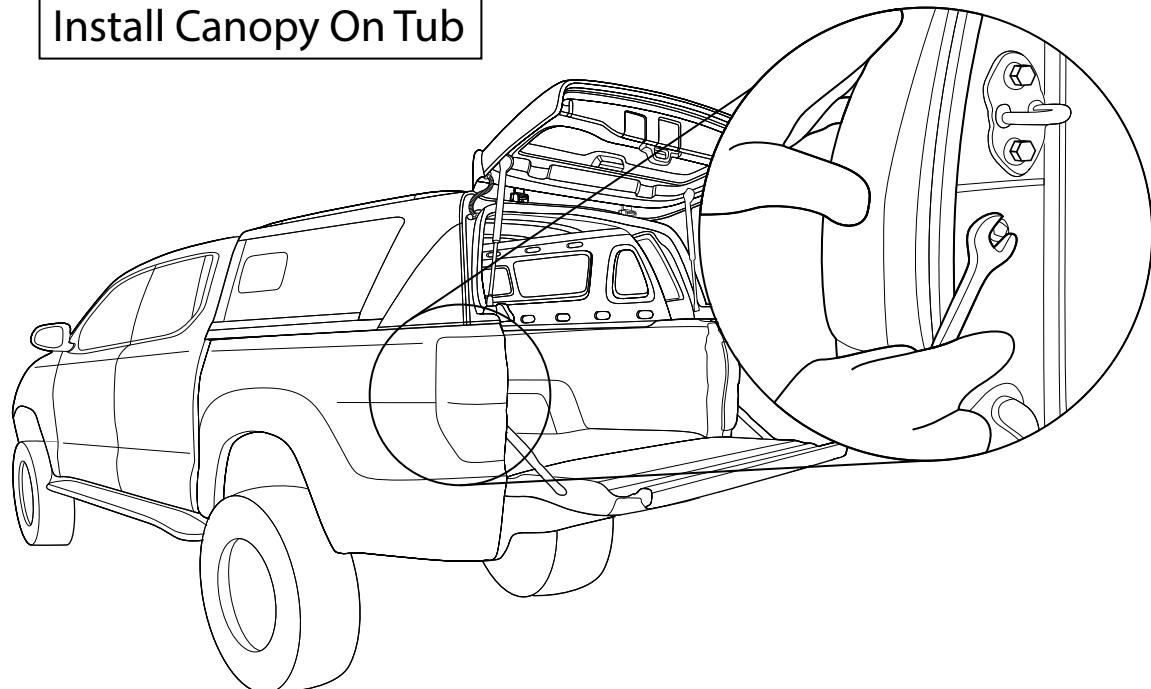

After connects all the Electric lock wiring, then take off the rear light cover by using wrench no.10 loosen the nuts.


107

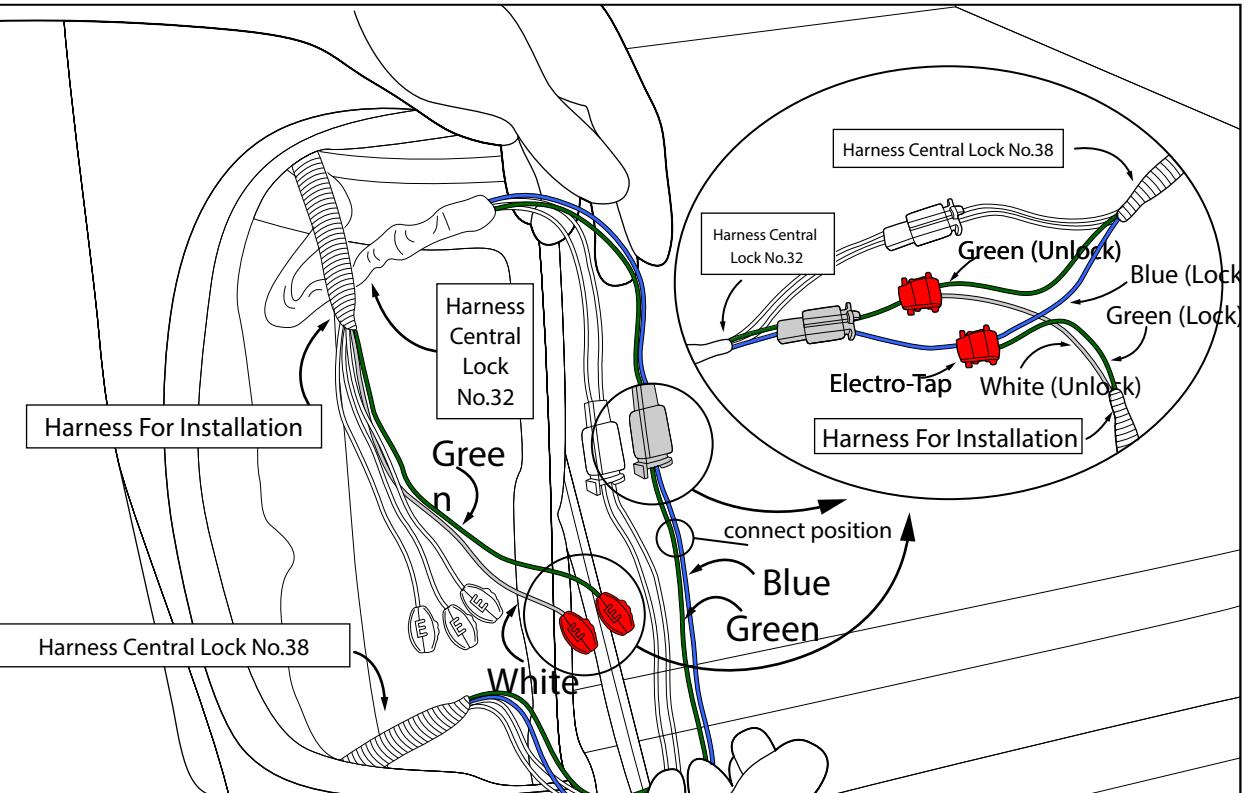

Bring White Wiring (Unlock) of the Harness for installation wiring set connects with the Green Wiring (Unlock) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).

Bring Green Wiring (Lock) of the Harness for Installation wiring set connects with the Blue Wiring (Lock) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).

108

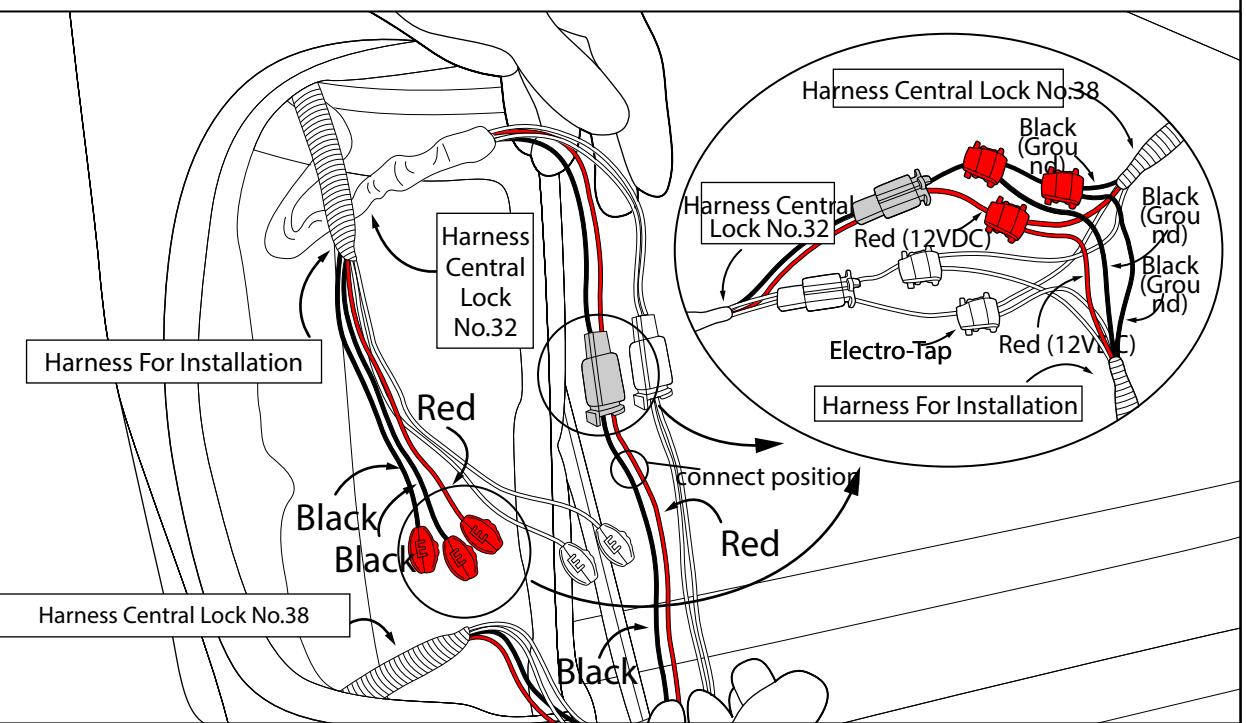


Bring the Red Wiring (12VDC) of the Harness for Installation wiring set connects with the Red Wiring (12VDC) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).

Bring the two Black (Ground) wiring of the Harness for installation set to connect with the Black (Ground) wiring of the Harness Central Lock No.38 set by using the ELECTRO-TAP (Red Colour).




## User Manual TL-1

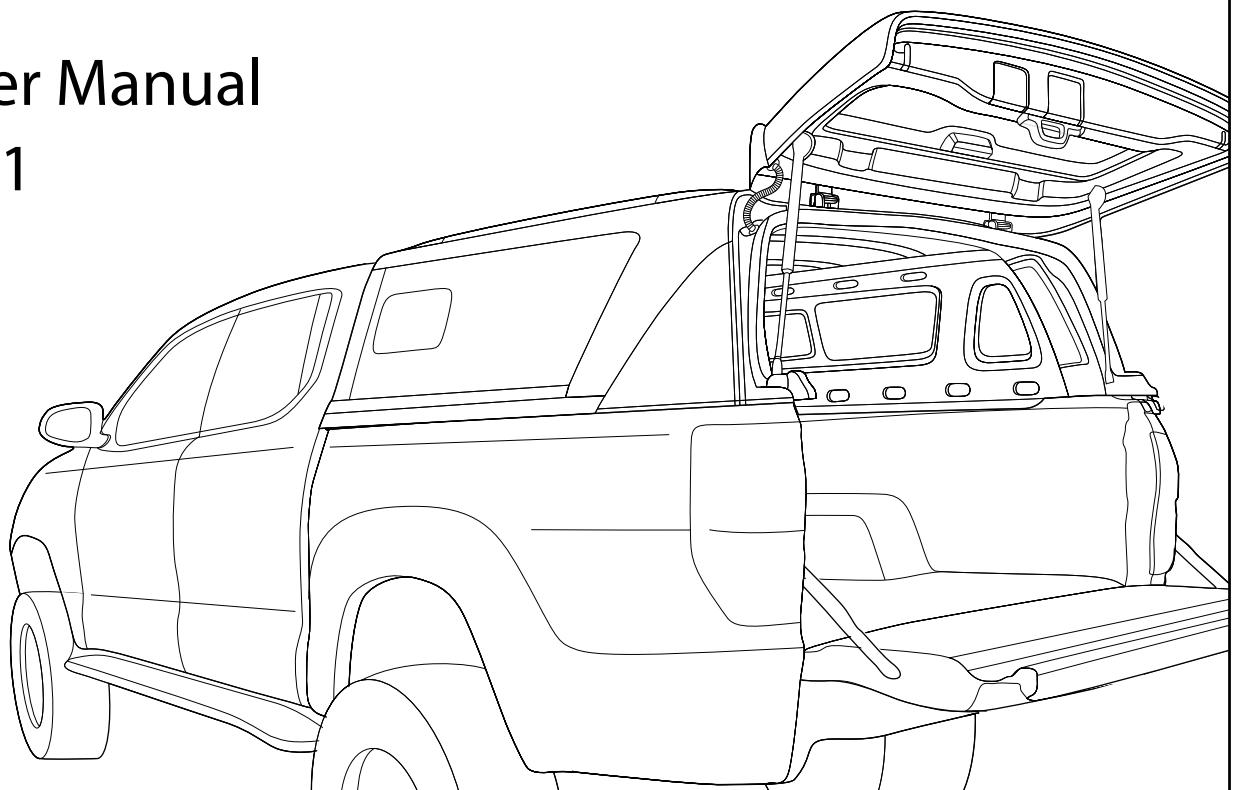

### Instructions for using the Electric Lock.


109

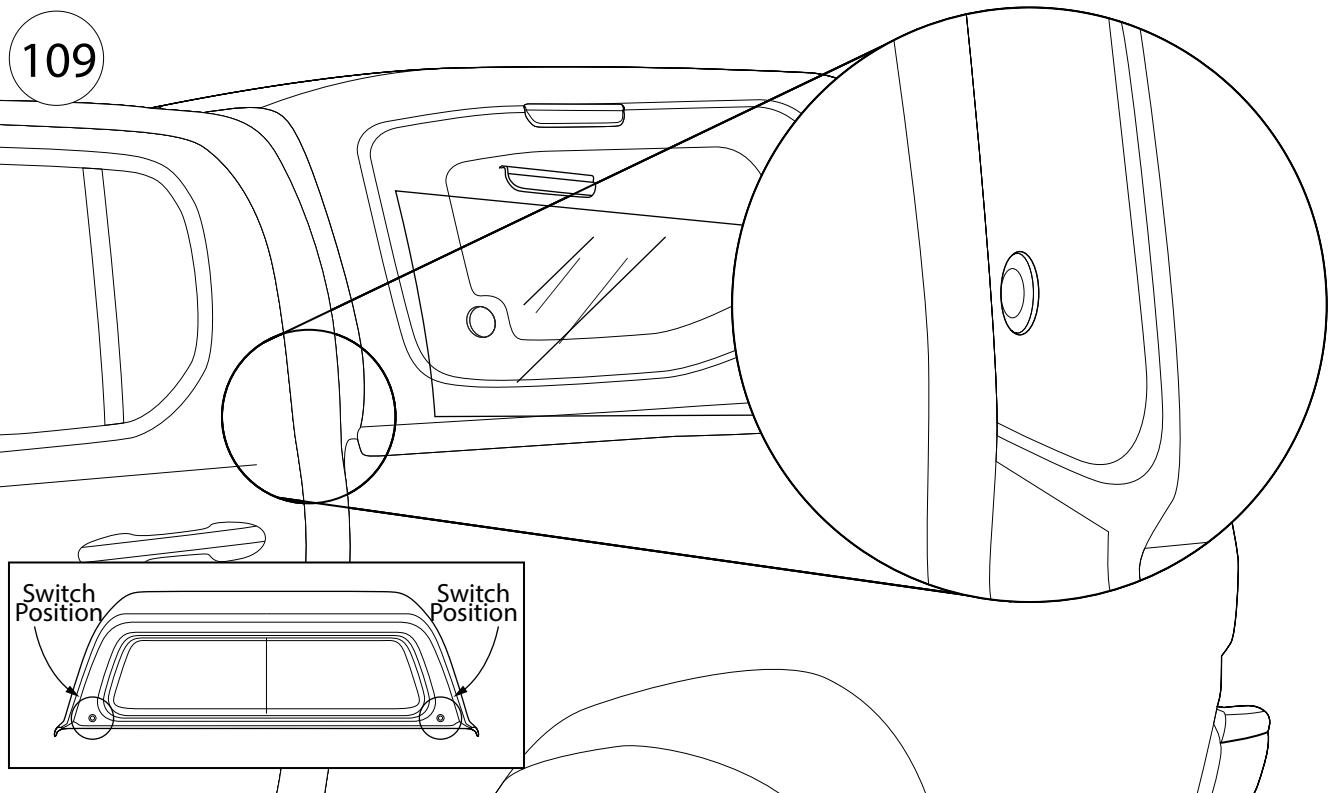

The picture shows Electric Lock switch button positions.




110

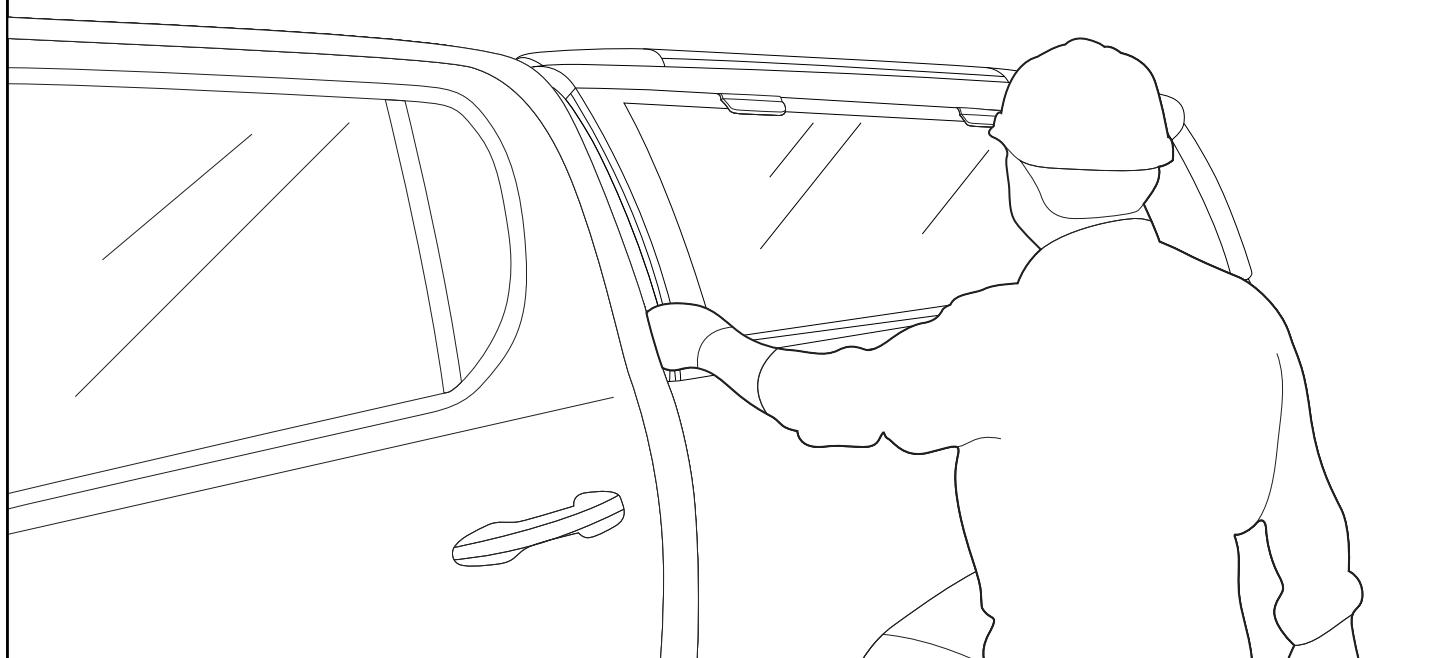

The picture shows the usage of Electric Lock button.


111

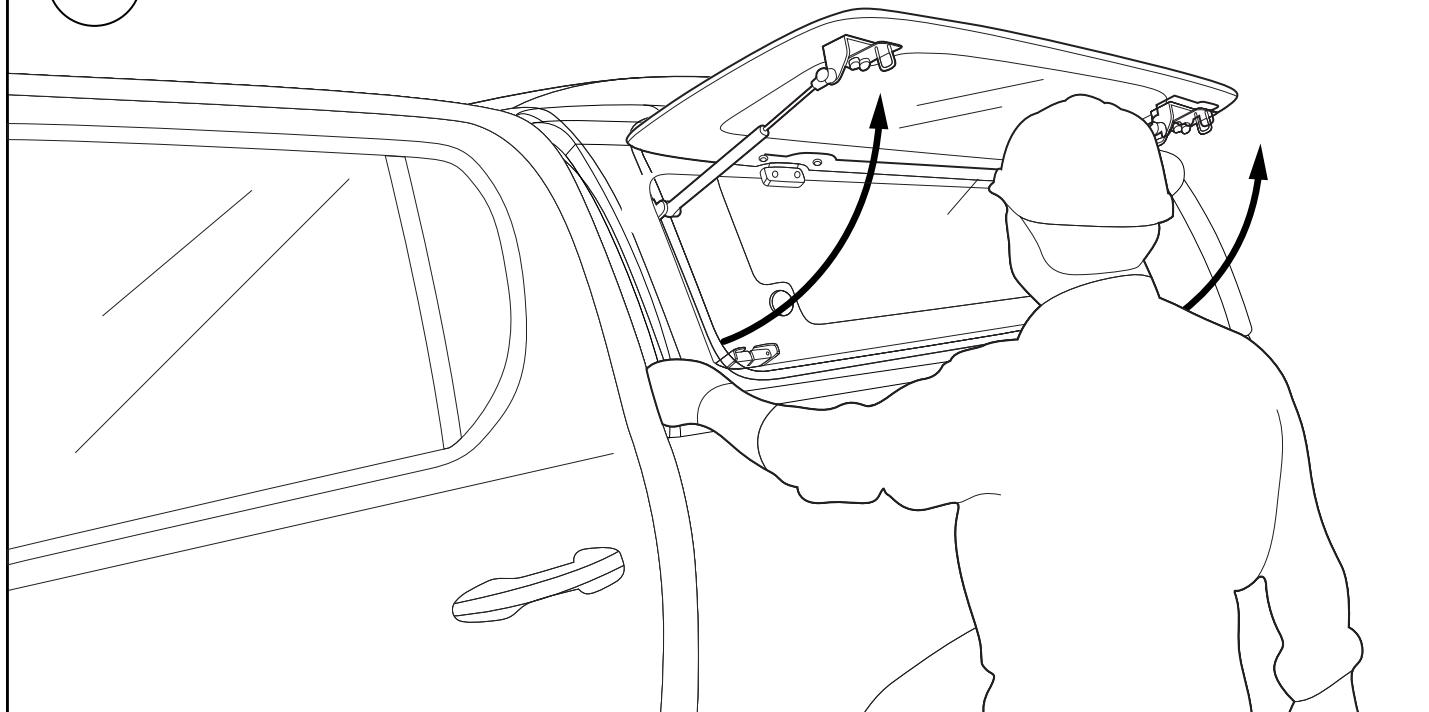

When push the Electric Lock button, the window will open as shown in picture.




112

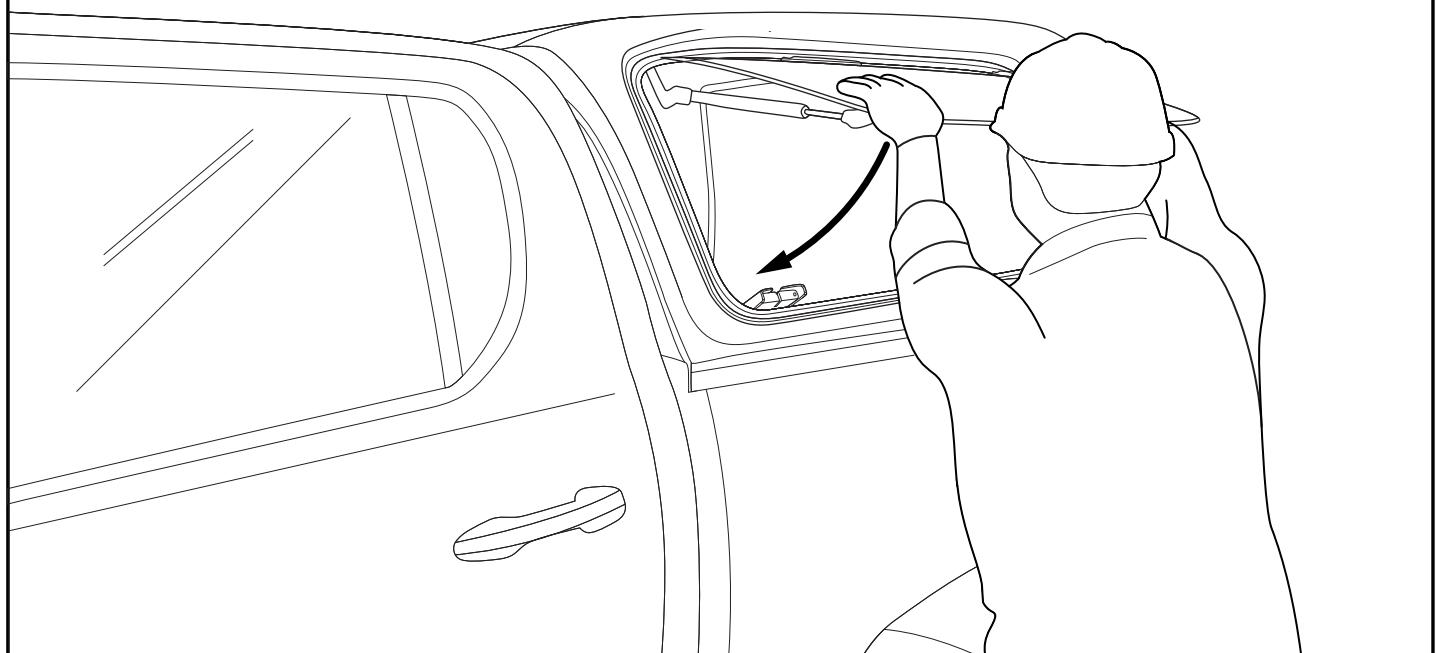

The picture shows the Electric Lock, window will be close.


113

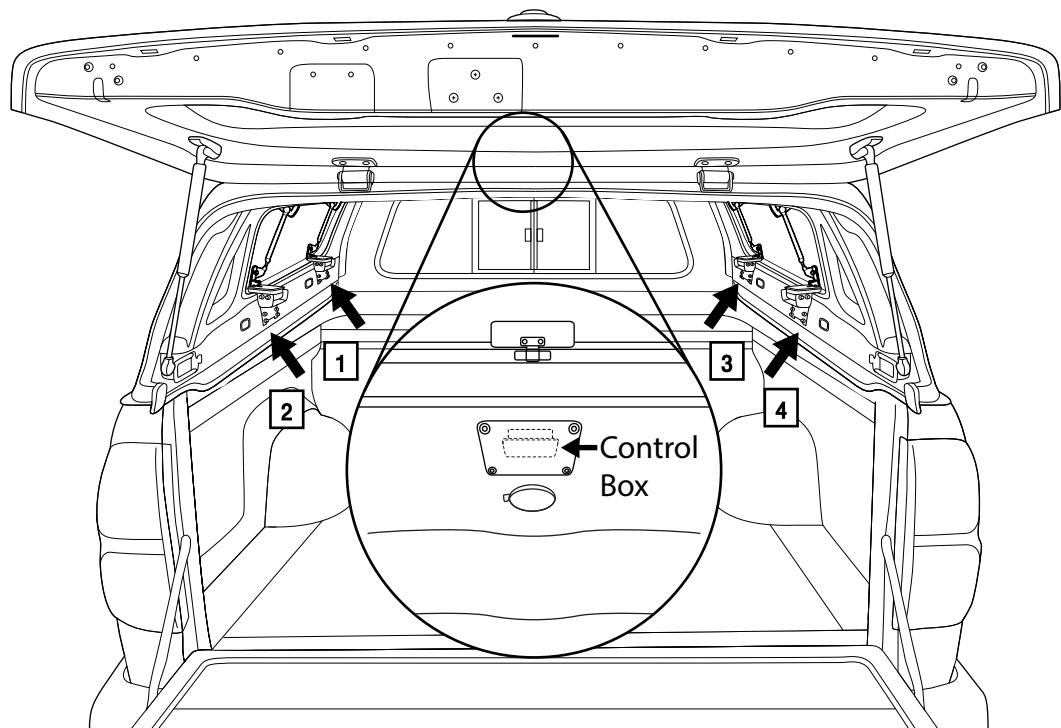

The picture shows the Electric Lock and Control Box position.



114

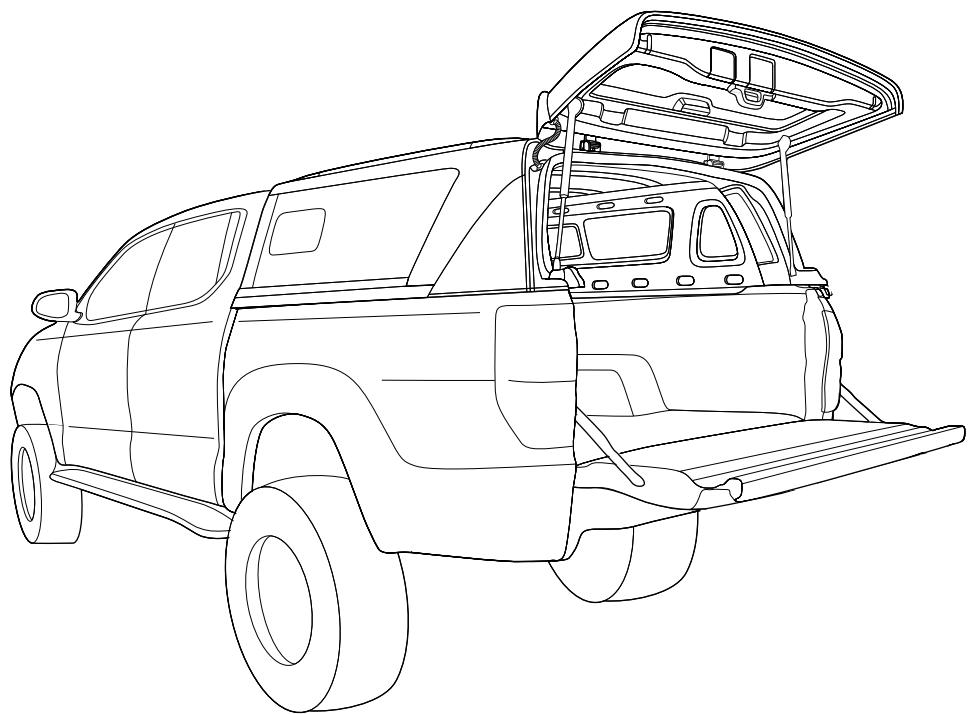

Complete the Electric Lock system.




**SAMMITR**

**Opening Function of all  
canopy model**





# SAMMITR

Front Window function usages will be the same for all model, V2, V4 and TL1.

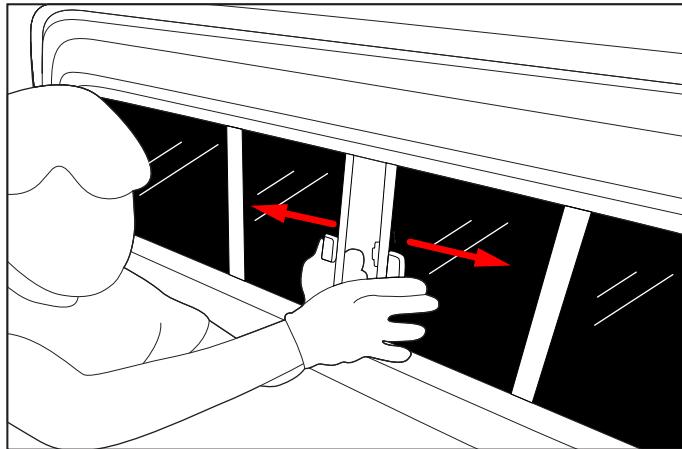


Use the key is unlock function will be the same for all model, V2, V4 and TL1.


Open the backdoor function are different.

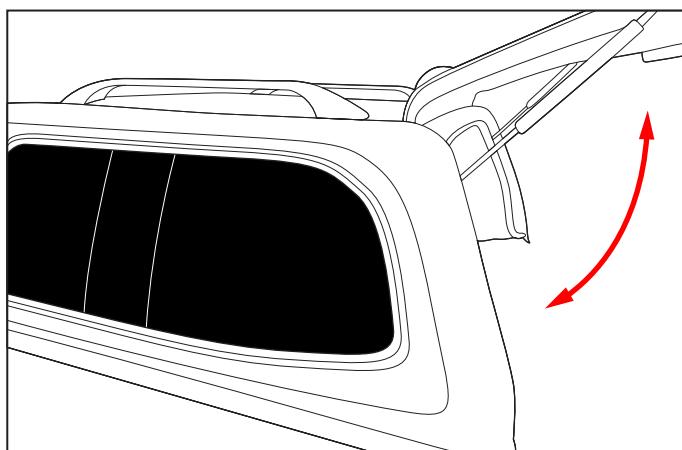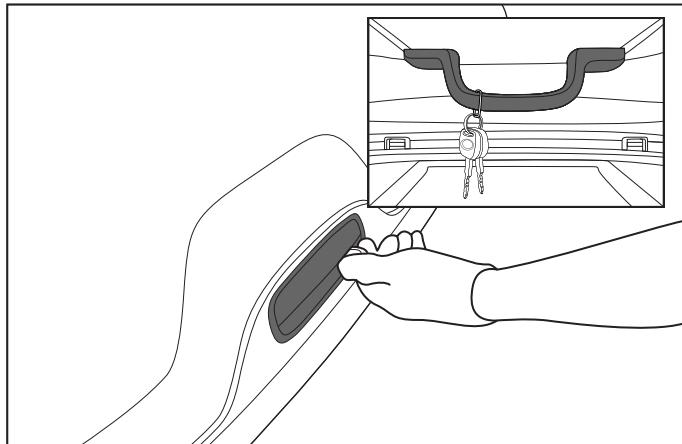


User manual

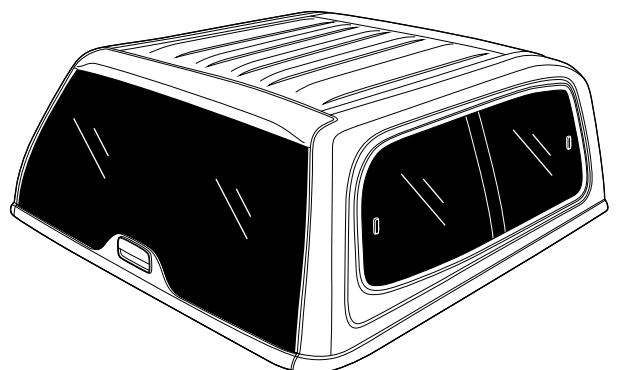

Slide Window (Left-Right)

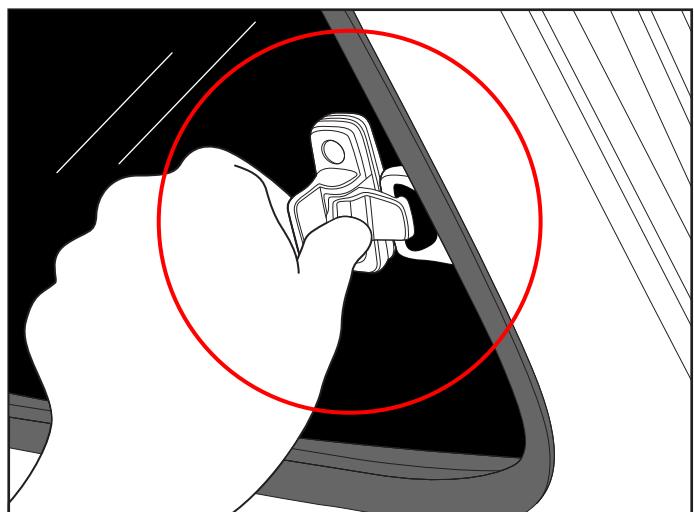


Squeeze the lock side to open.

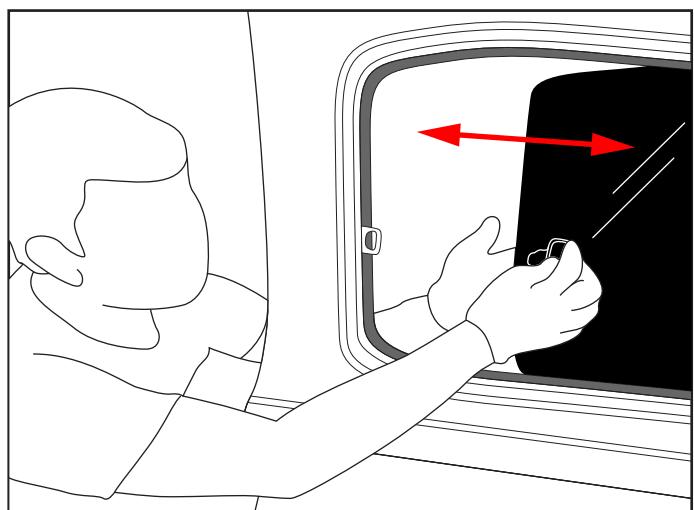



The Picture shows how to open the side window.




## User manual

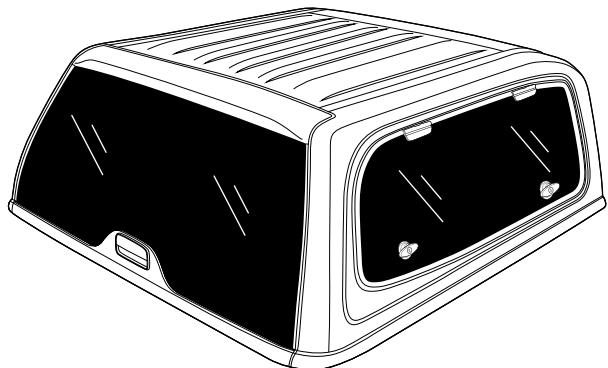

Glass Birdwing Window Left-Right  
(Handle Lock)

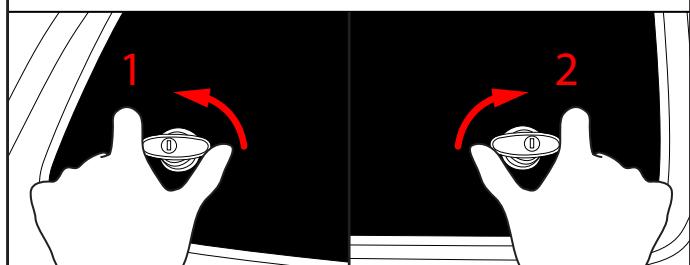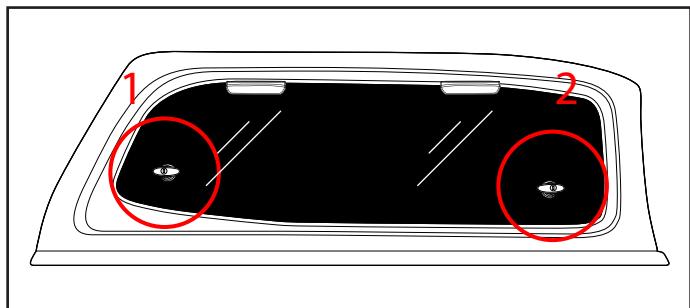


Turn around the canopy lock as shown in picture to open the side window.


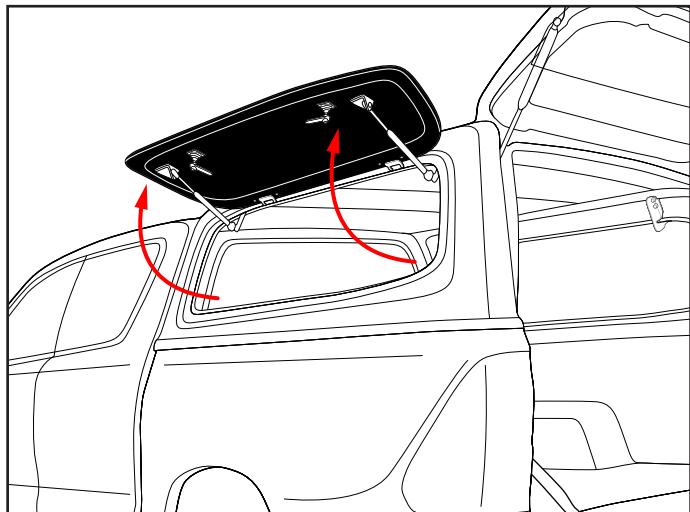


Picture shows how to open the side window.


## User manual

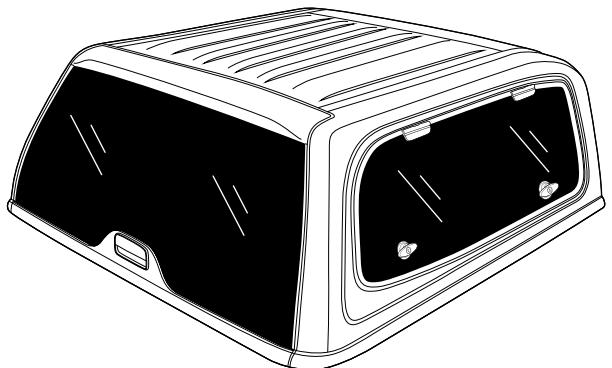

Glass Birdwing Window Left-Right  
(Handle Lock)

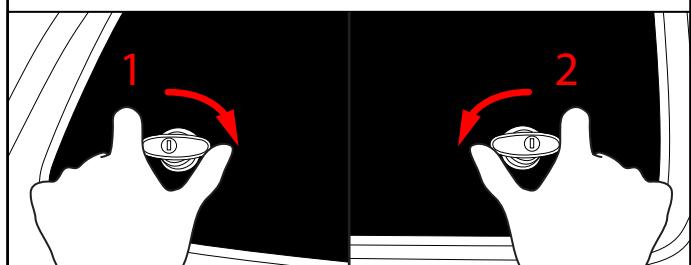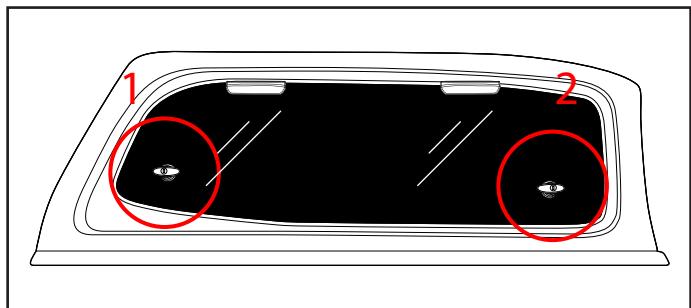


Turn around the canopy lock as shown in picture to close the side window.

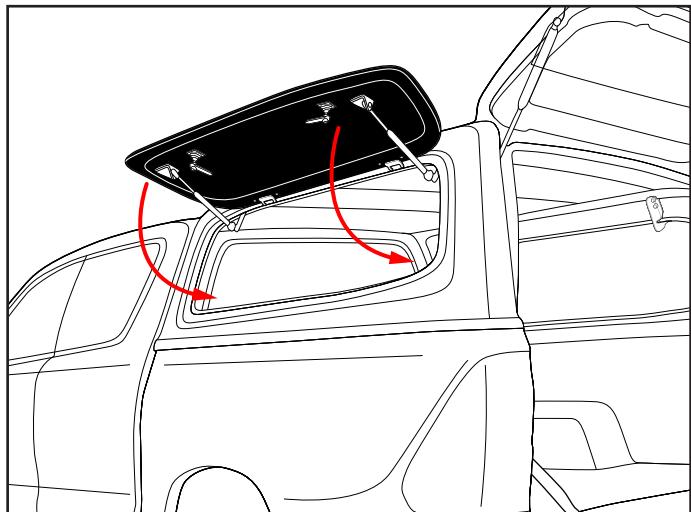


Picture shows how to close the side window.




## User manual

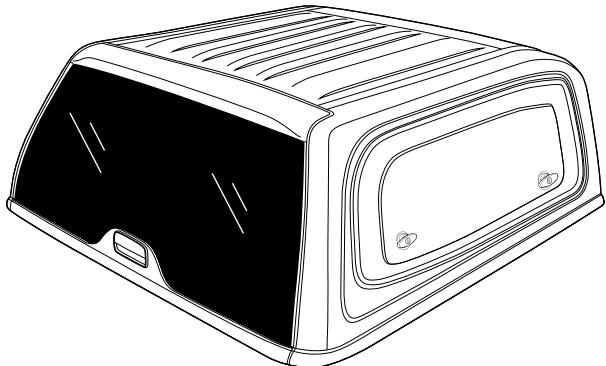

Solid Birdwing Window Left-Right  
(Handle Lock)

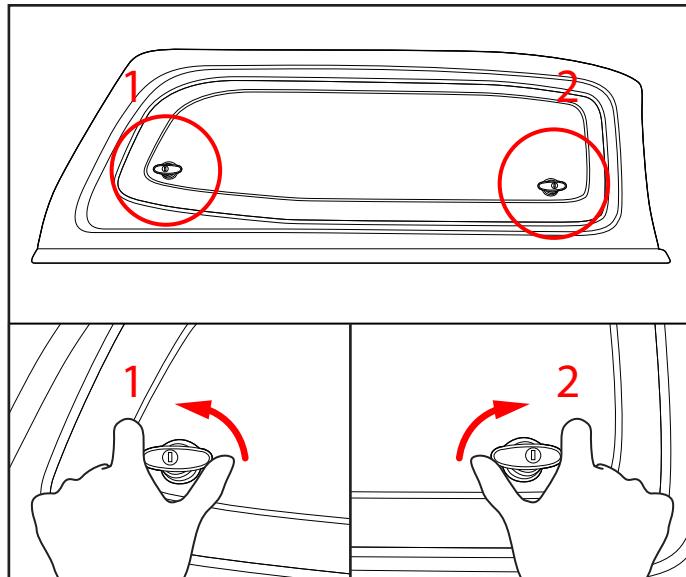


Turn around the canopy lock as shown in picture to open the side window.

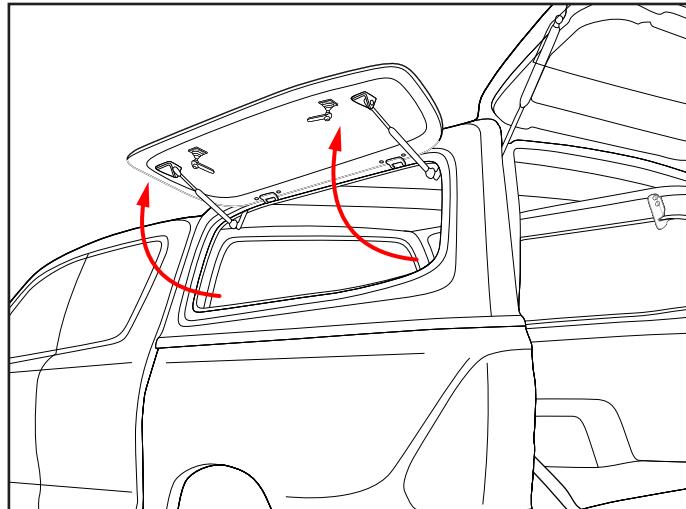


Picture shows how to open the side window.


## User manual

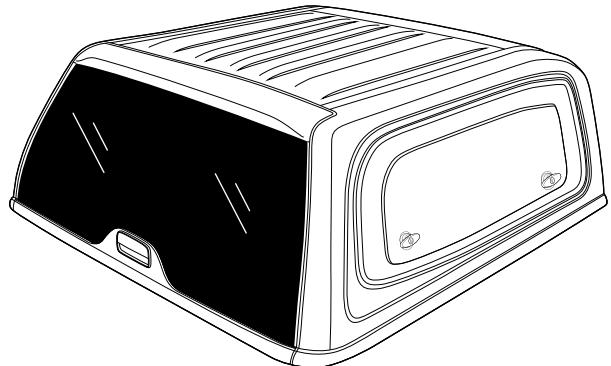

Solid Birdwing Window Left-Right  
(Handle Lock)

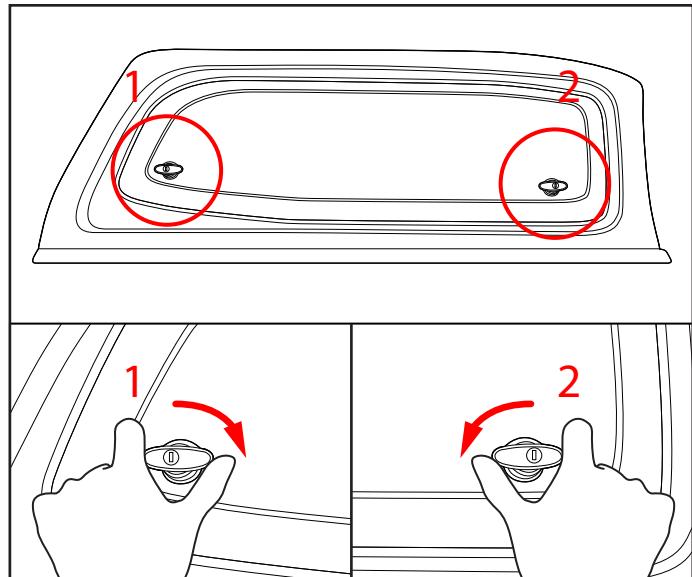

Turn around the canopy lock as shown in picture to close the side window.

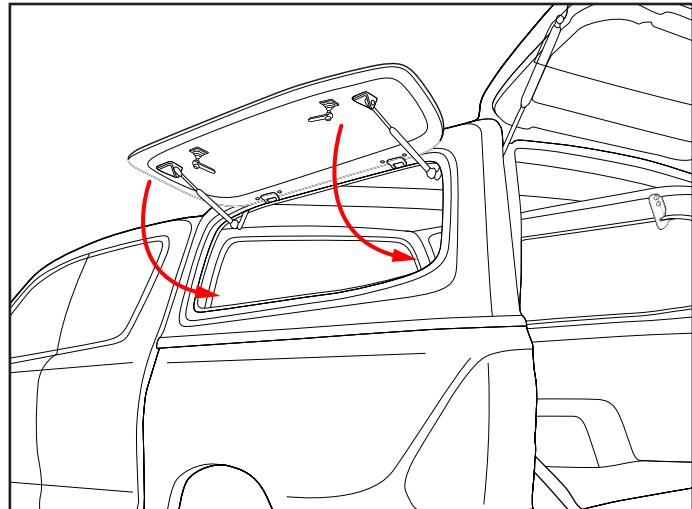


Picture shows how to close the side window.




# SAMMITR

User manual

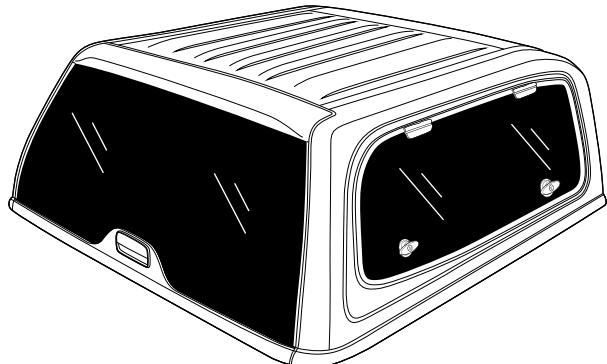

Backdoor


User manual

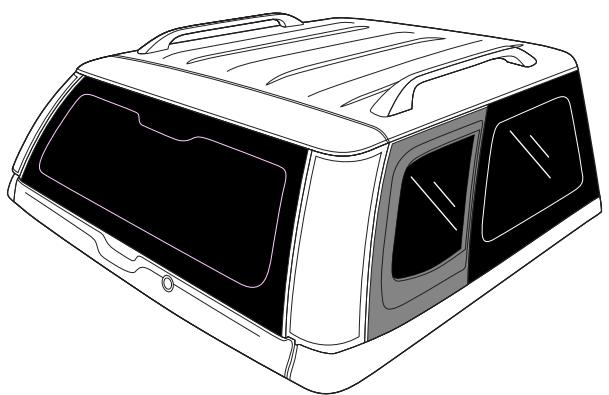


Slide Window (Left-Right)




Use the handle as shown in picture to open the backdoor.

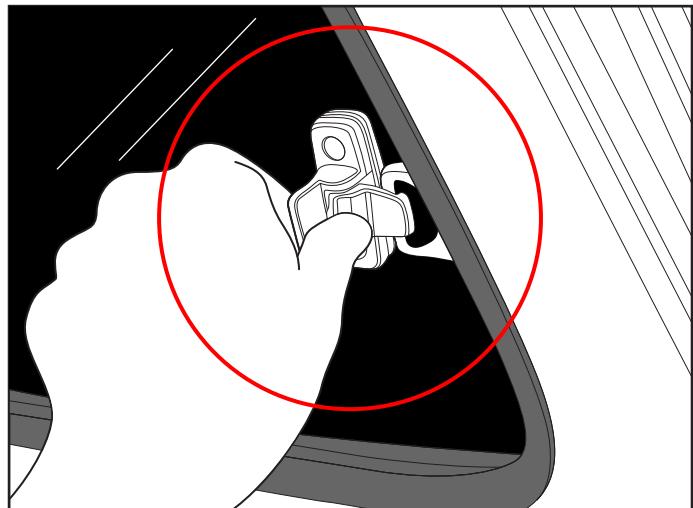

Squeeze the lock side to open.

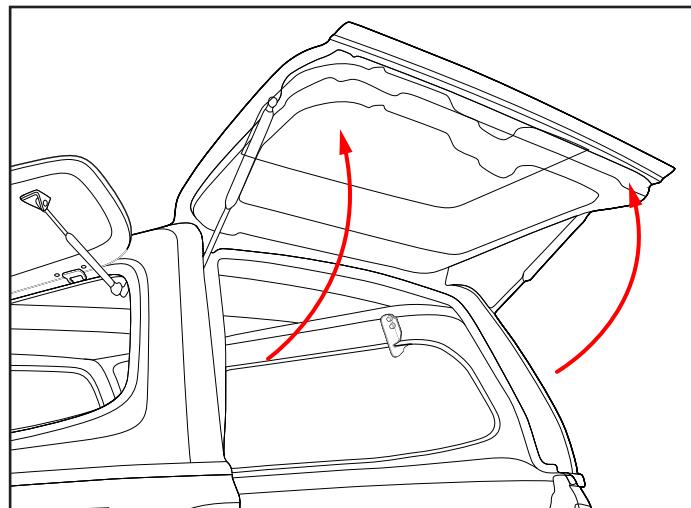


The Picture shows how to open the backdoor.

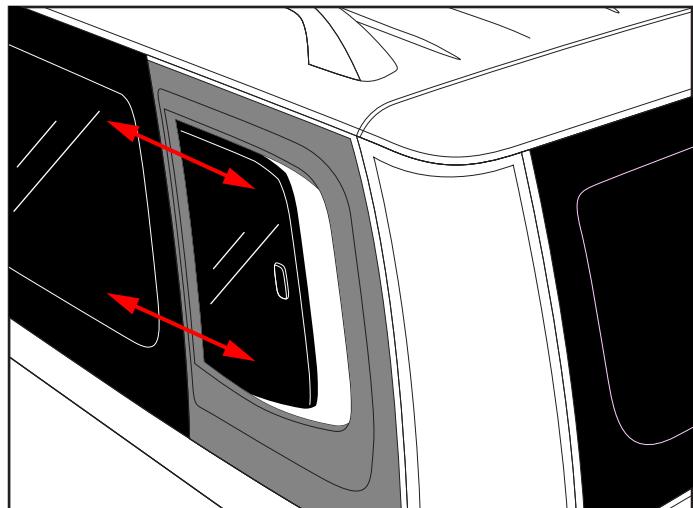


The Picture shows how to open the side




## User manual

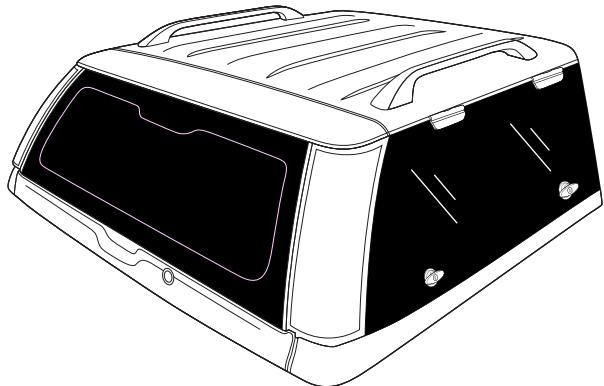

Glass Birdwing Window Left-Right  
(Handle Lock)

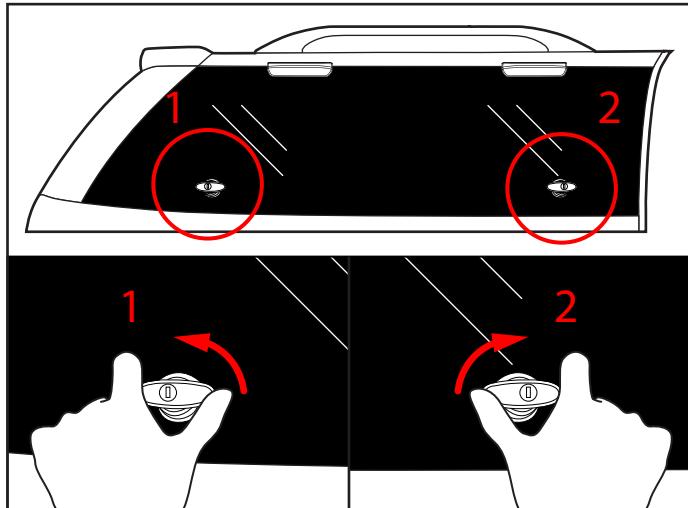


Turn around the canopy lock as shown in picture to open the side window.

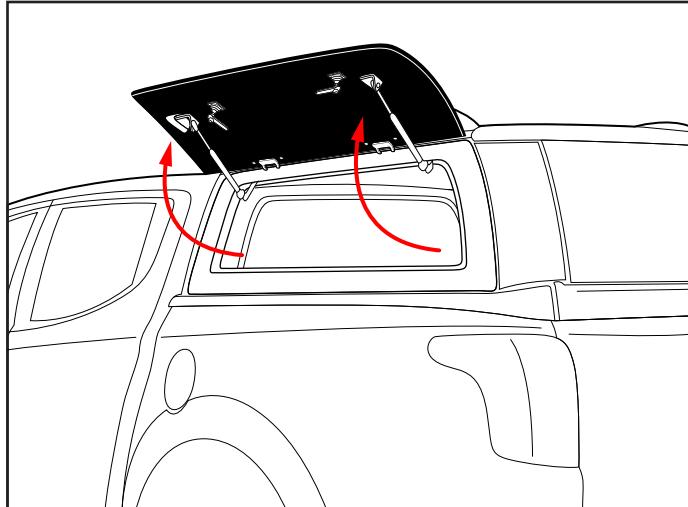


Picture shows how to open the side window.


## User manual

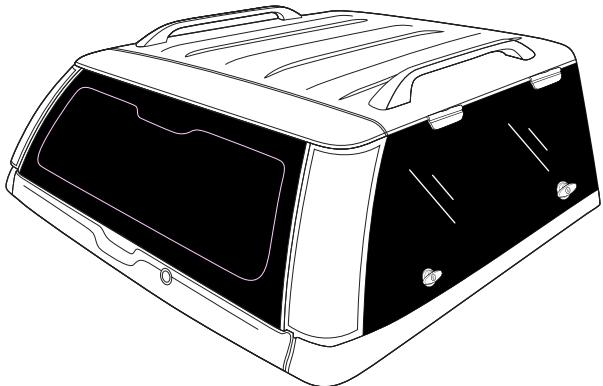

Glass Birdwing Window Left-Right  
(Handle Lock)

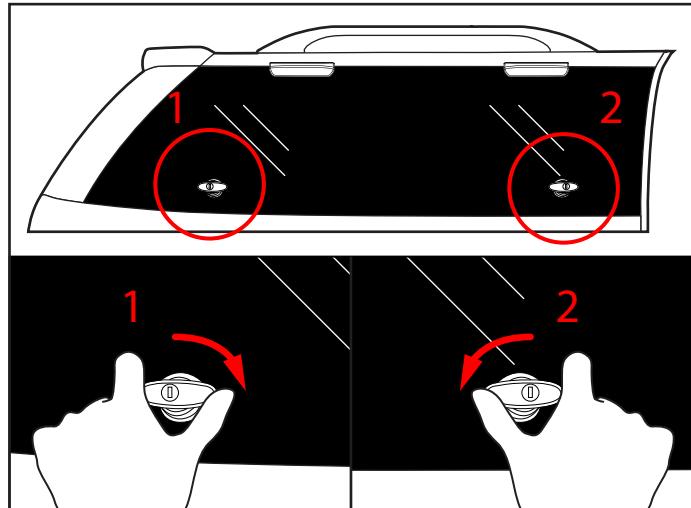

Turn around the canopy lock as shown in picture to close the side window.

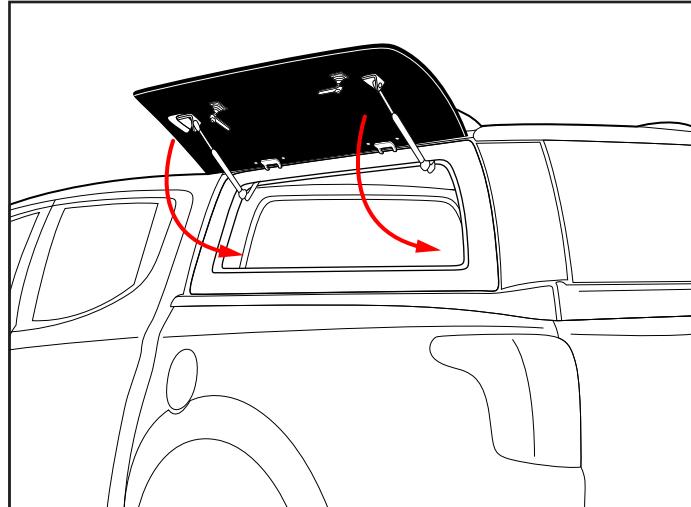


Picture shows how to close the side window.




# SAMMITR

User manual

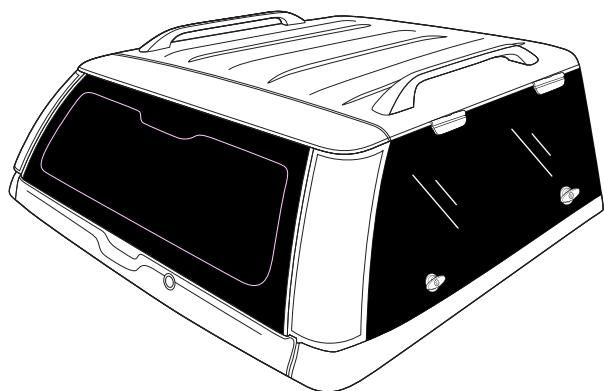


Backdoor


User manual

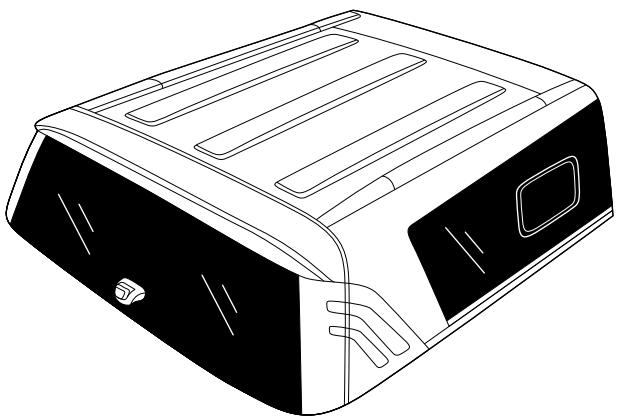


Slide Window (Left-Right)

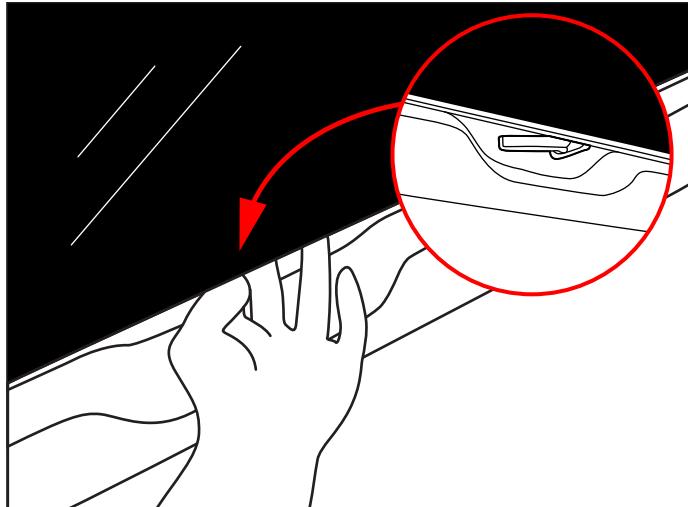


Pull the stick of handle to open the back door.

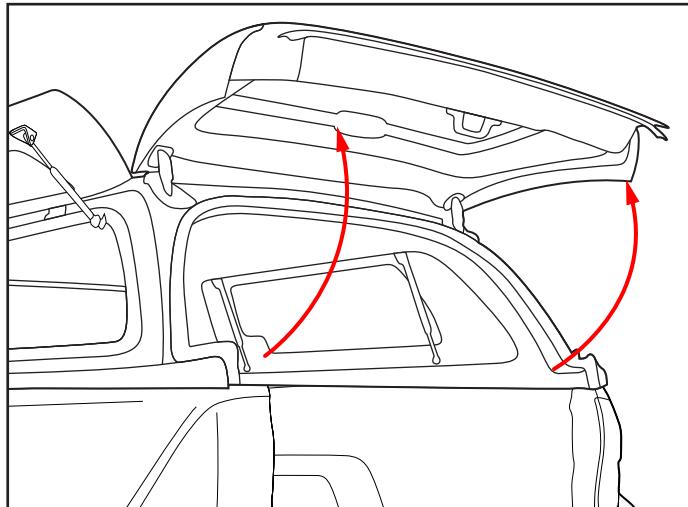

The Picture shows how to open the backdoor.

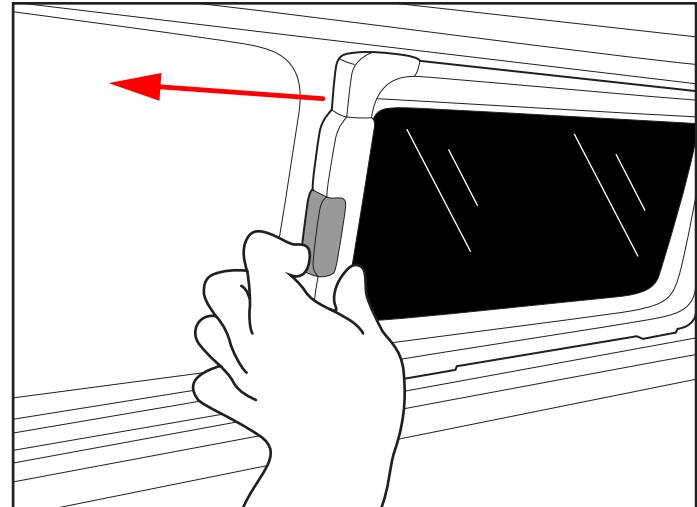


Push the button in side canopy and slide back to open.

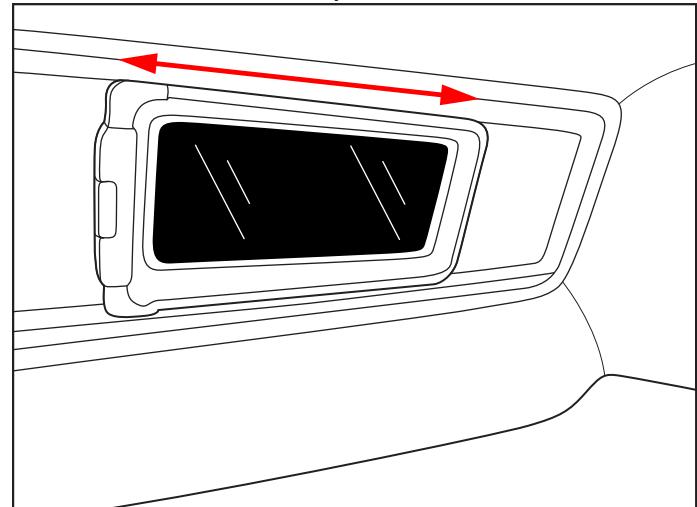


Picture shows how to open the side window from inside.




**SAMMITR**

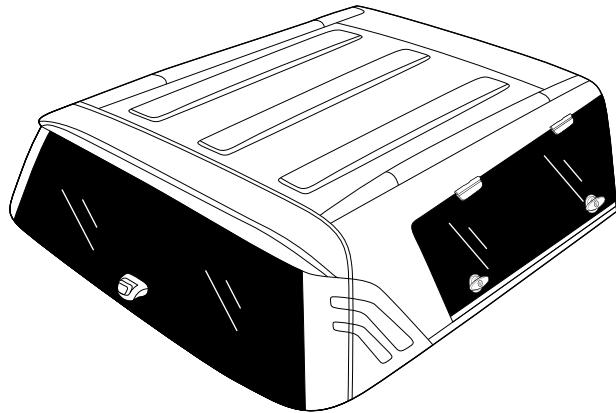


Glass Birdwing Window Left-Right  
(Handle Lock)

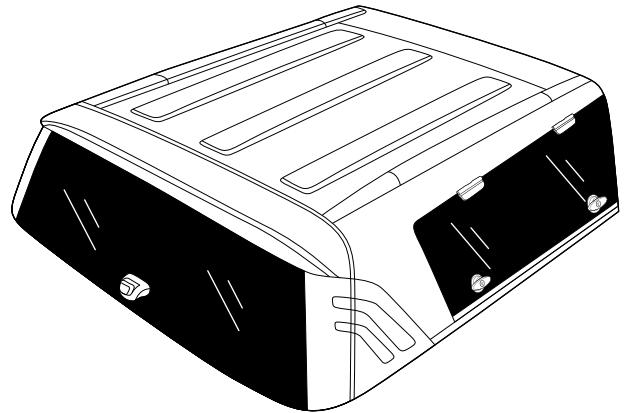


Glass Birdwing Window Left-Right  
(Handle Lock)

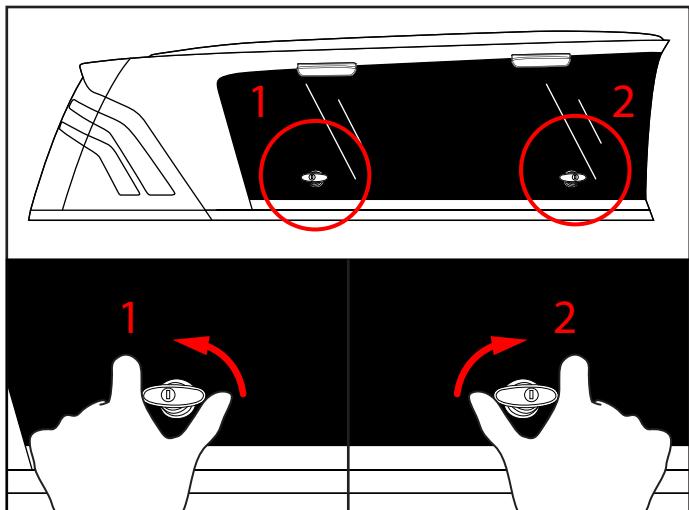


Turn around the canopy lock as shown in picture to open the side window.

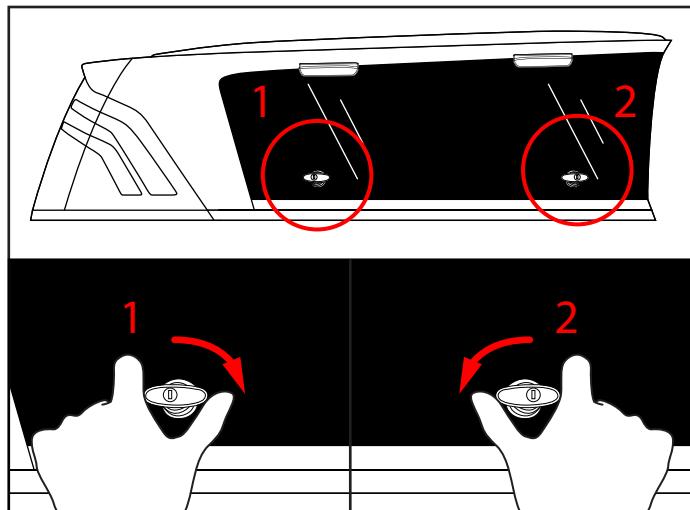

Turn around the canopy lock as shown in picture to close the side window.

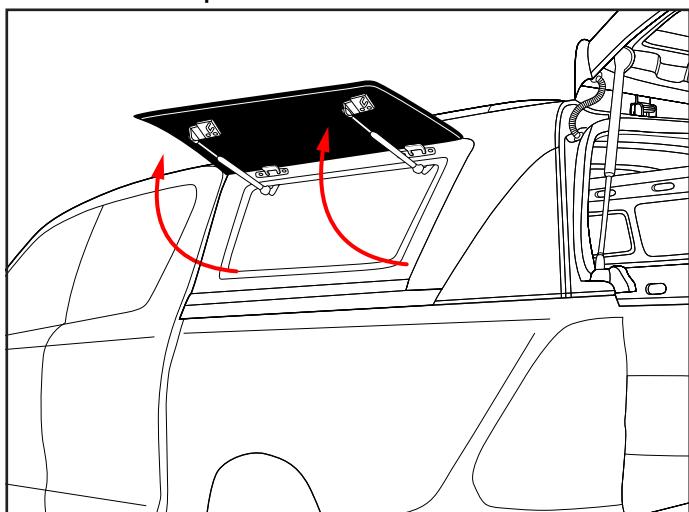


Picture shows how to open the side window.

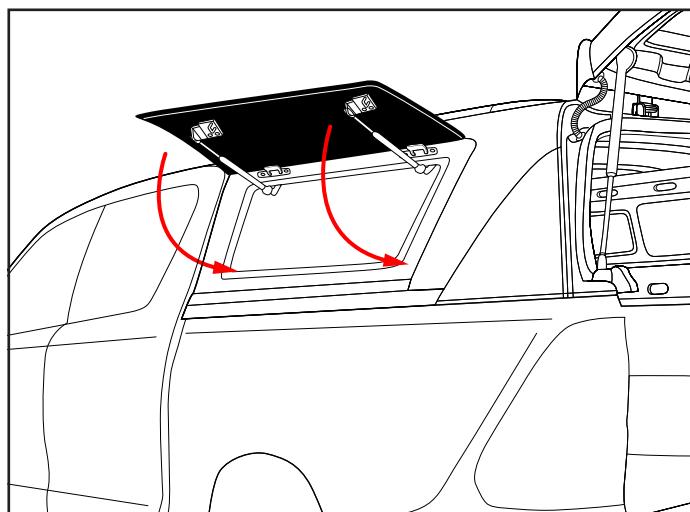


Picture shows how to close the side window.




# SAMMITR

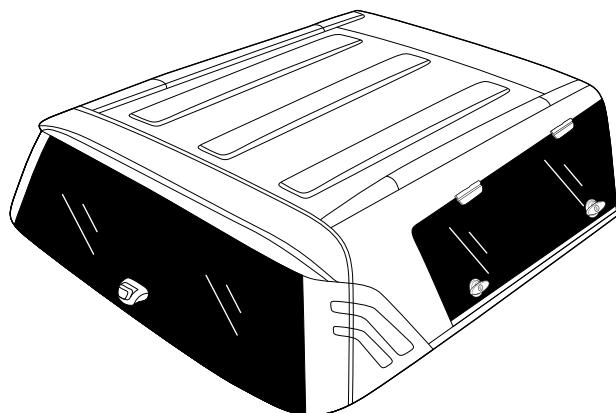

Backdoor

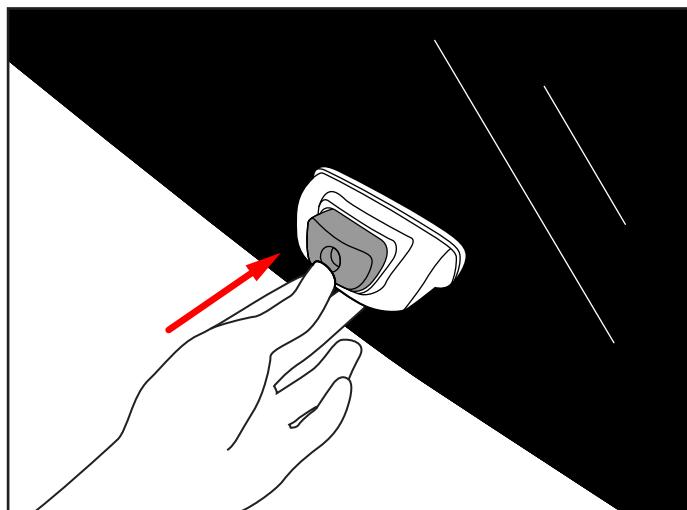

Push the button to open the back door.

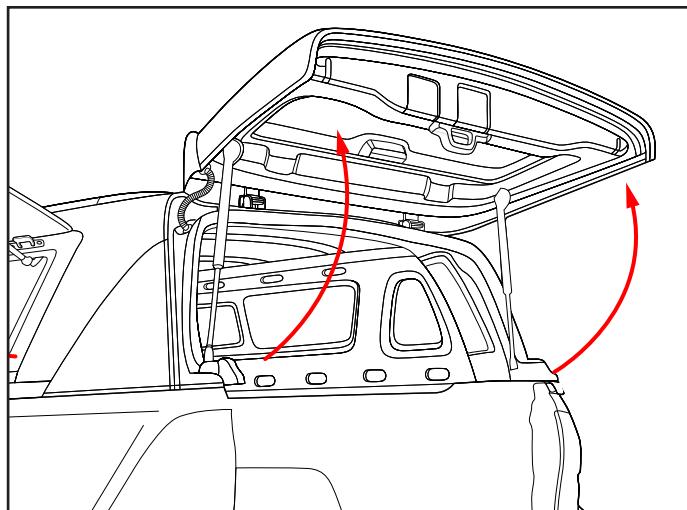

The Picture shows how to open the backdoor.