

Date...../...../.....

Version 1.0



**SAMMITR**

# **Installation Manual**

**for**

**VW Amarok**

*S-plus* **V2**

The top of the page features a decorative header with a complex, low-poly geometric pattern in various shades of orange and brown. This pattern extends across the entire width of the page.

# **Mechanical Installation**





## Mechanical Installation Manual


All Models

Steel Canopy : S-Plus V2

Version 1.0

### Part In Main Carton


 
P1: Steel Canopy S-Plus V2

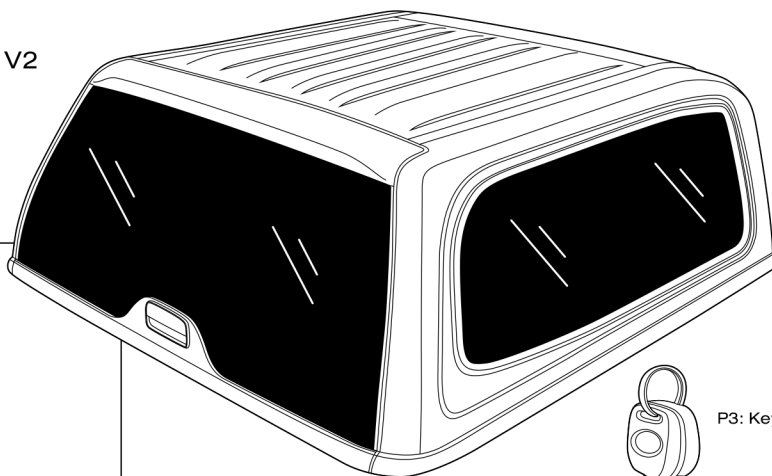


P3: Key

### Kit Box

  
Part List Paper

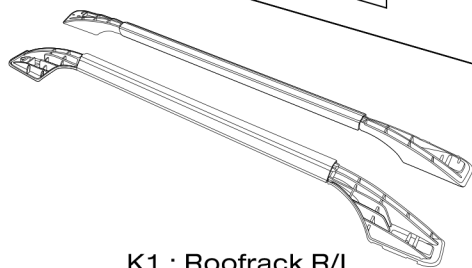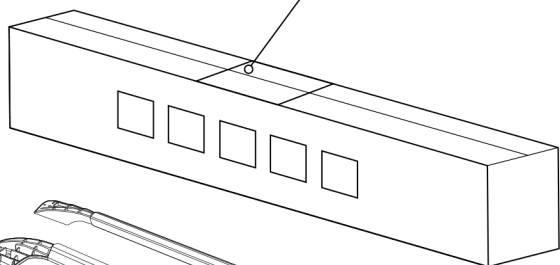


K1 : Roofrack R/L

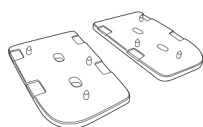 


x2  
K2 : Rubber R/L

 

K3 : Switch Case

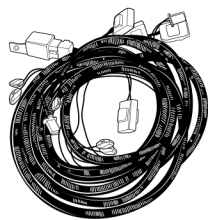 


K4 : Wiring No.38

 


x4 (D-Cab)  
x6 (C-Cab)

 K5 : C-Clamp

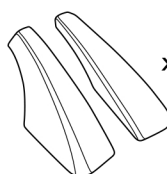

x2  
K6 : Roofrack Cover

 

x8  
K7 : Bolt M6



K8 : T Paint



x8  
K9 : Washer M6



x8  
K10 : Washer M8




x8  
K11 : Spring  
Washer M6


### Require Tools



 T1 : 13 mm. Wrench

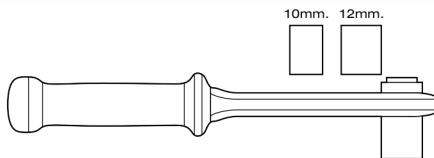

 
10mm. 12mm.  
T3 : 10,12mm. Torque Wrench

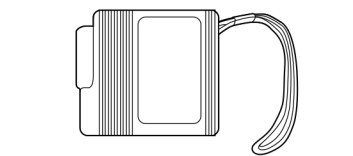

T4 : Measuring Tape/Ruler



 
T2 : 10 mm. Wrench

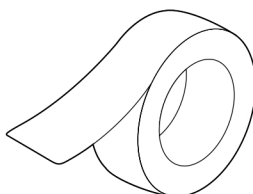

T5 : Tape



 T6 : Electric Tape

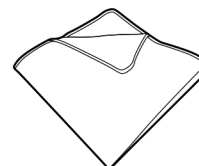


T7 : Fabric




1

## The Procedure of checking the Sammitr canopy box before installation.

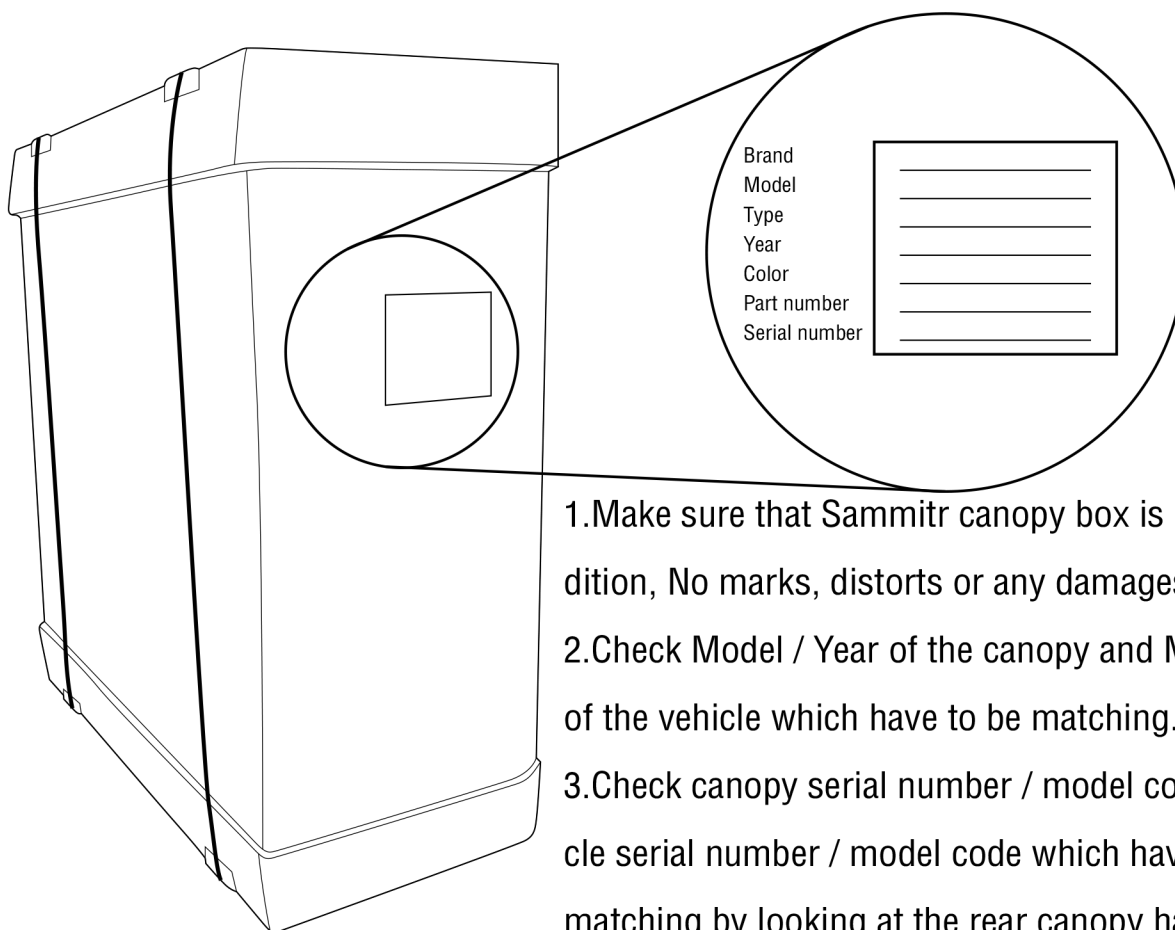 

 4. Check all the accessories received inside the box with the Packing List.

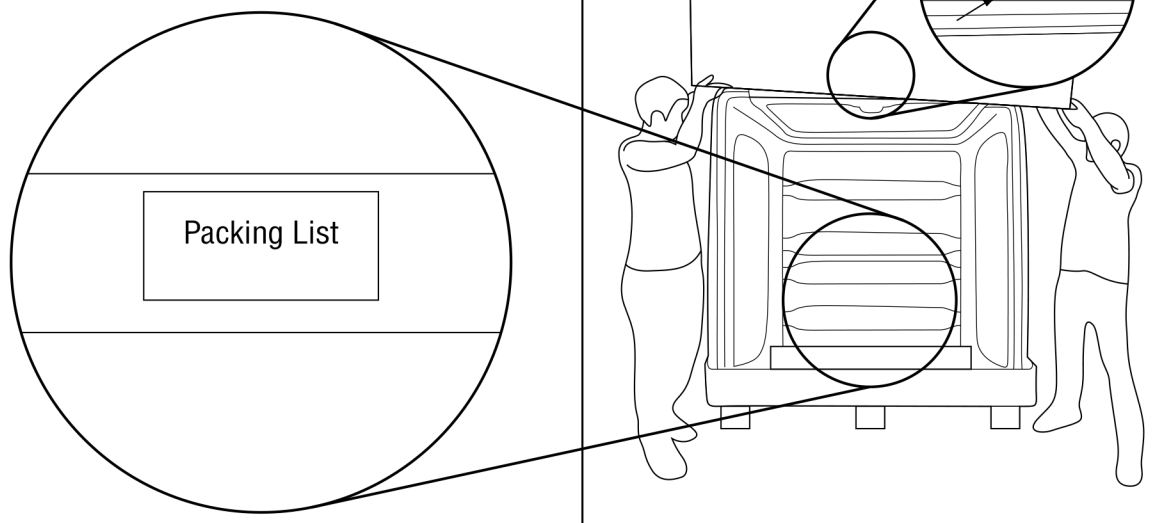




2


## The preparation process of Sammitr Canopy S-Plus V2 model before installation with the vehicle.

 1

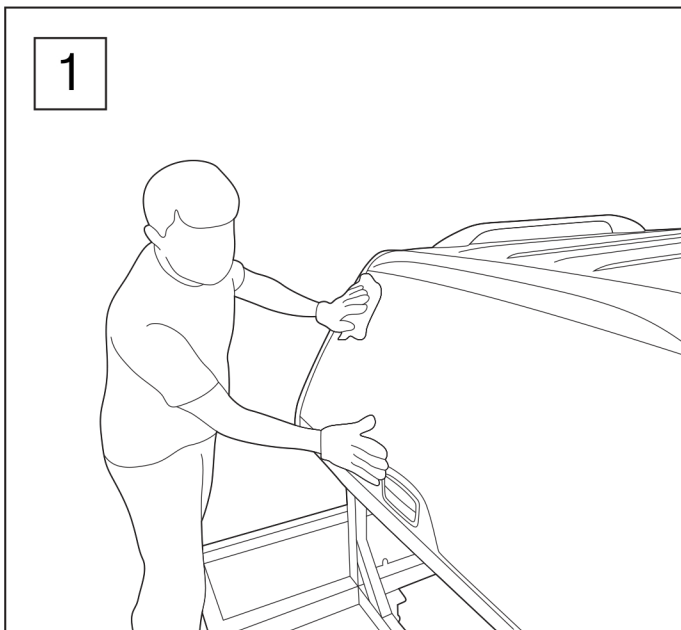


1. Canopy have to be in good condition, no damage, dent, cracks, smooth surface including no window damages or cracks.
2. Locking system is working for both keys.
3. Canopy sides are not damage, dent or cracks.
4. Canopy front window panel is working (open/close), no cracks or damages occurrences.
5. Check the Rear Door by open and close.

 
2

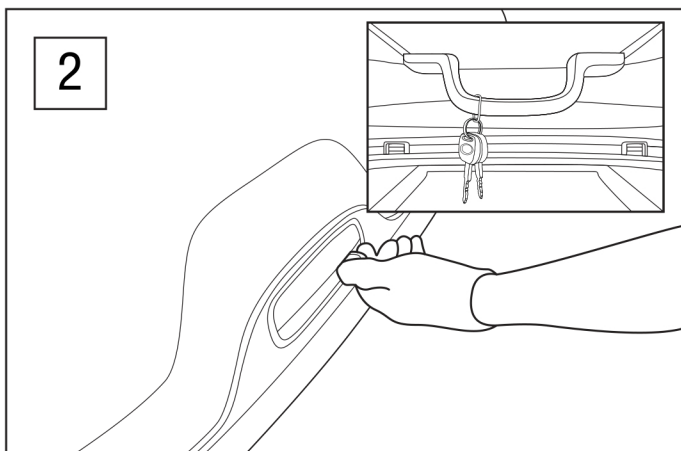


4

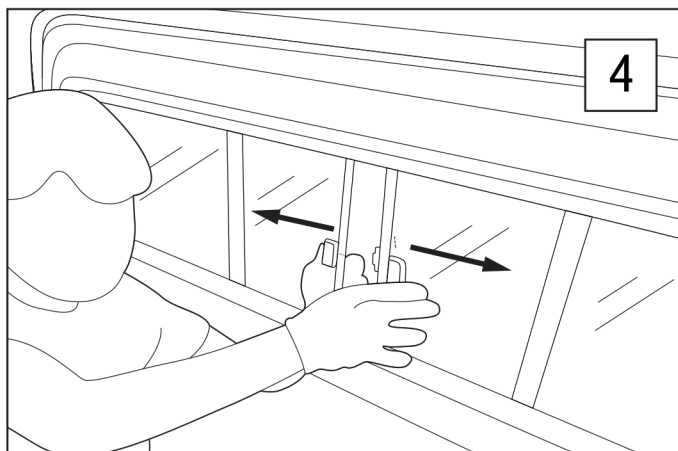 

3

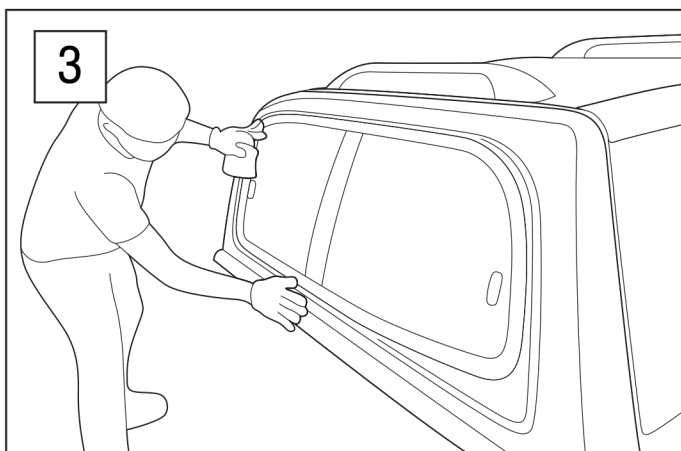 



5

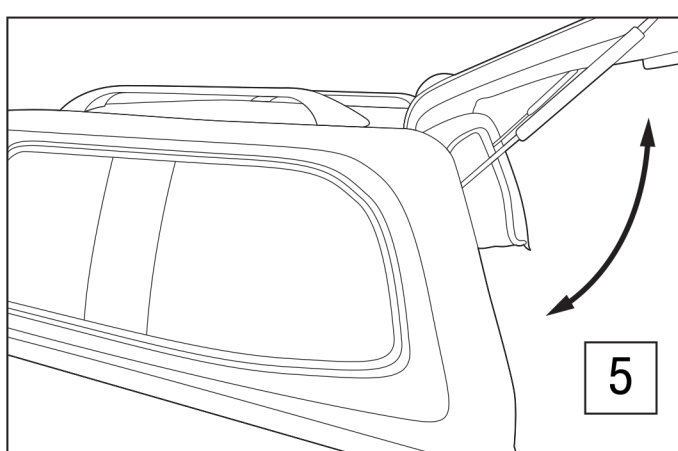 




3

  The process of Roof rack installation manual of the S-Plus V2 canopy before installs on the vehicle.

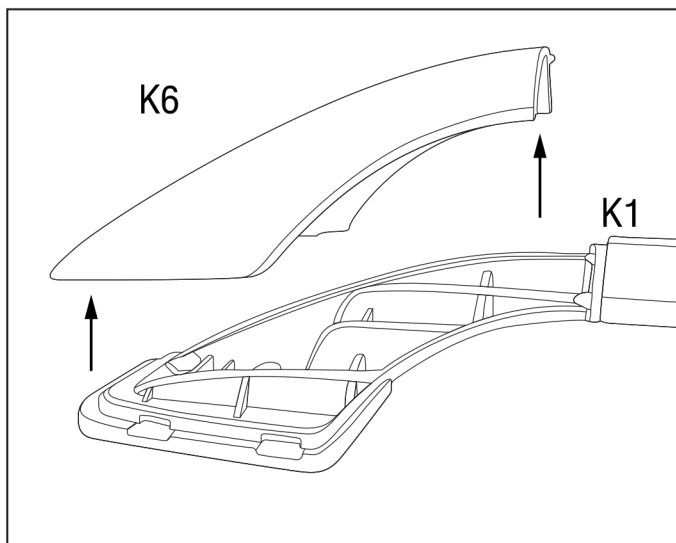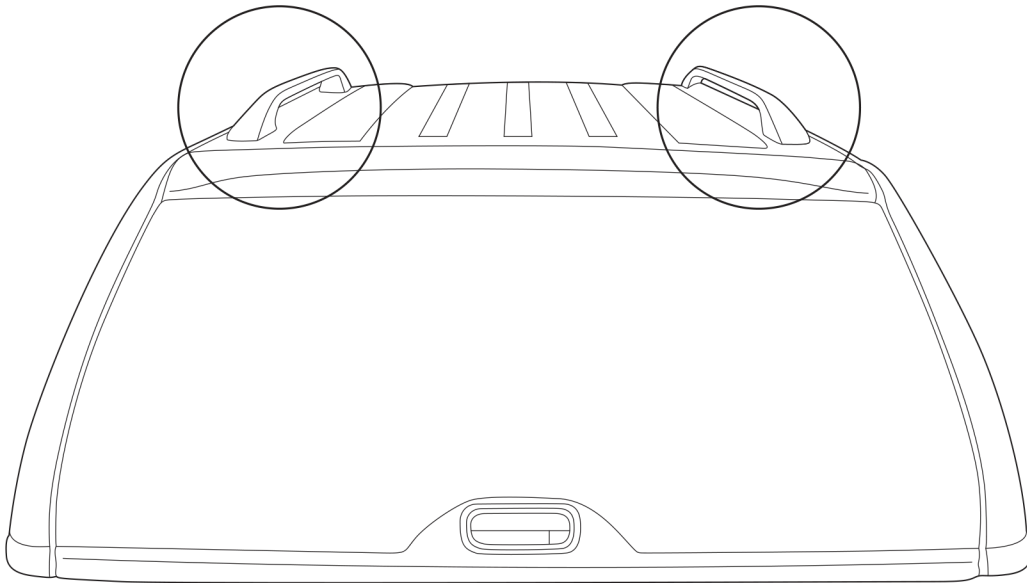

Roof rack Front Part – Rear Left

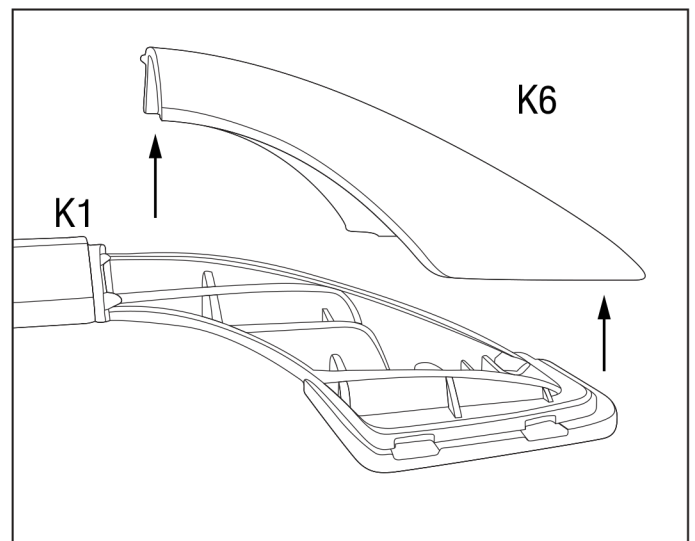 


The process of remove the roof rack cover on the S-Plus V2 canopy in order to install nuts.




4

 Roof rack Front part – Rear Right.

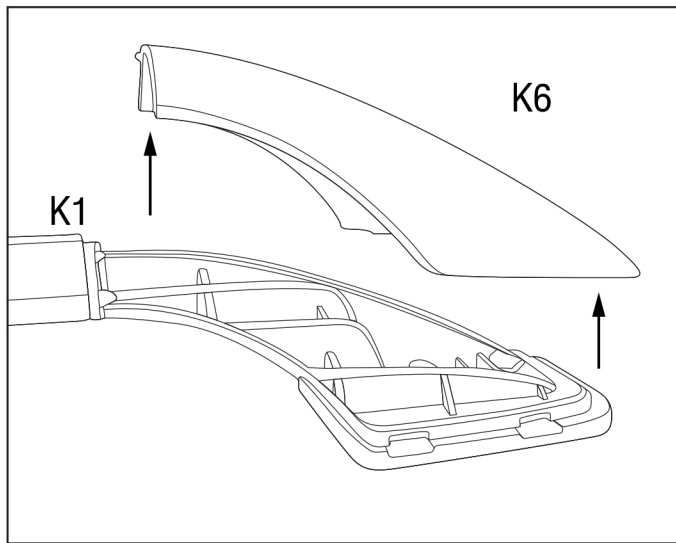

 
The process of remove the roof rack cover on the S-Plus V2 canopy in order to install nuts.

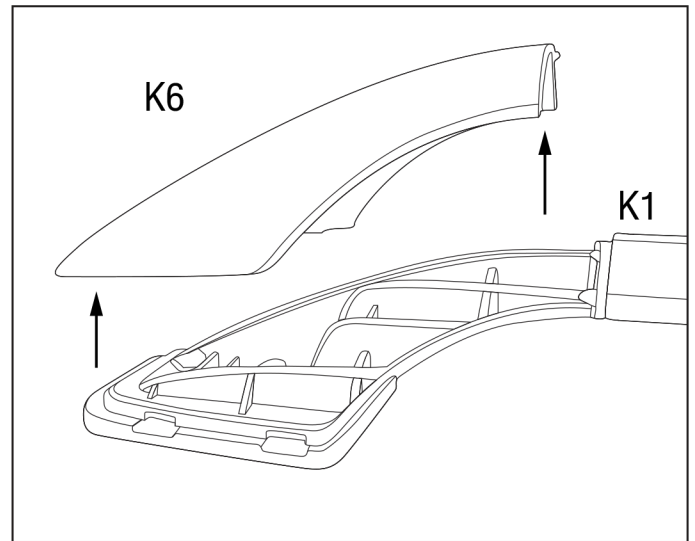

5


K1


 
K2


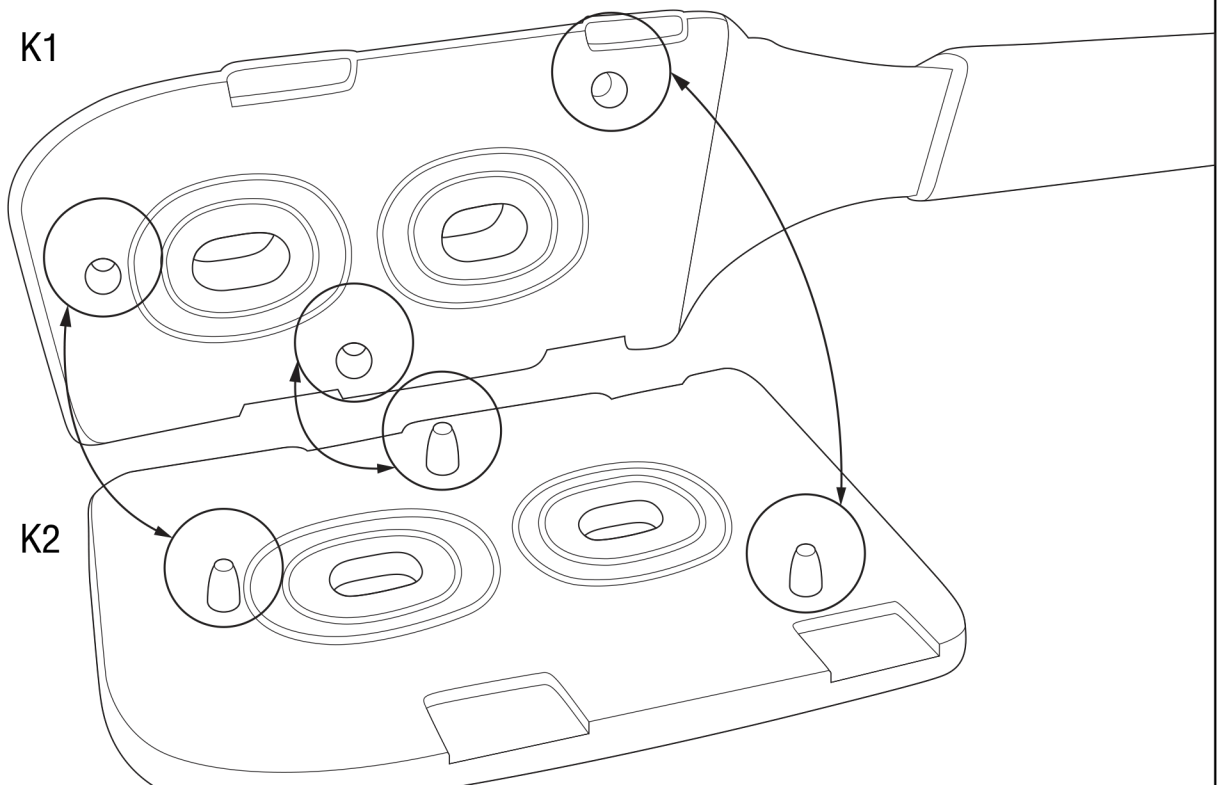


     Rubber Pad dispatch position of the Roof rack legs when install on the canopy.



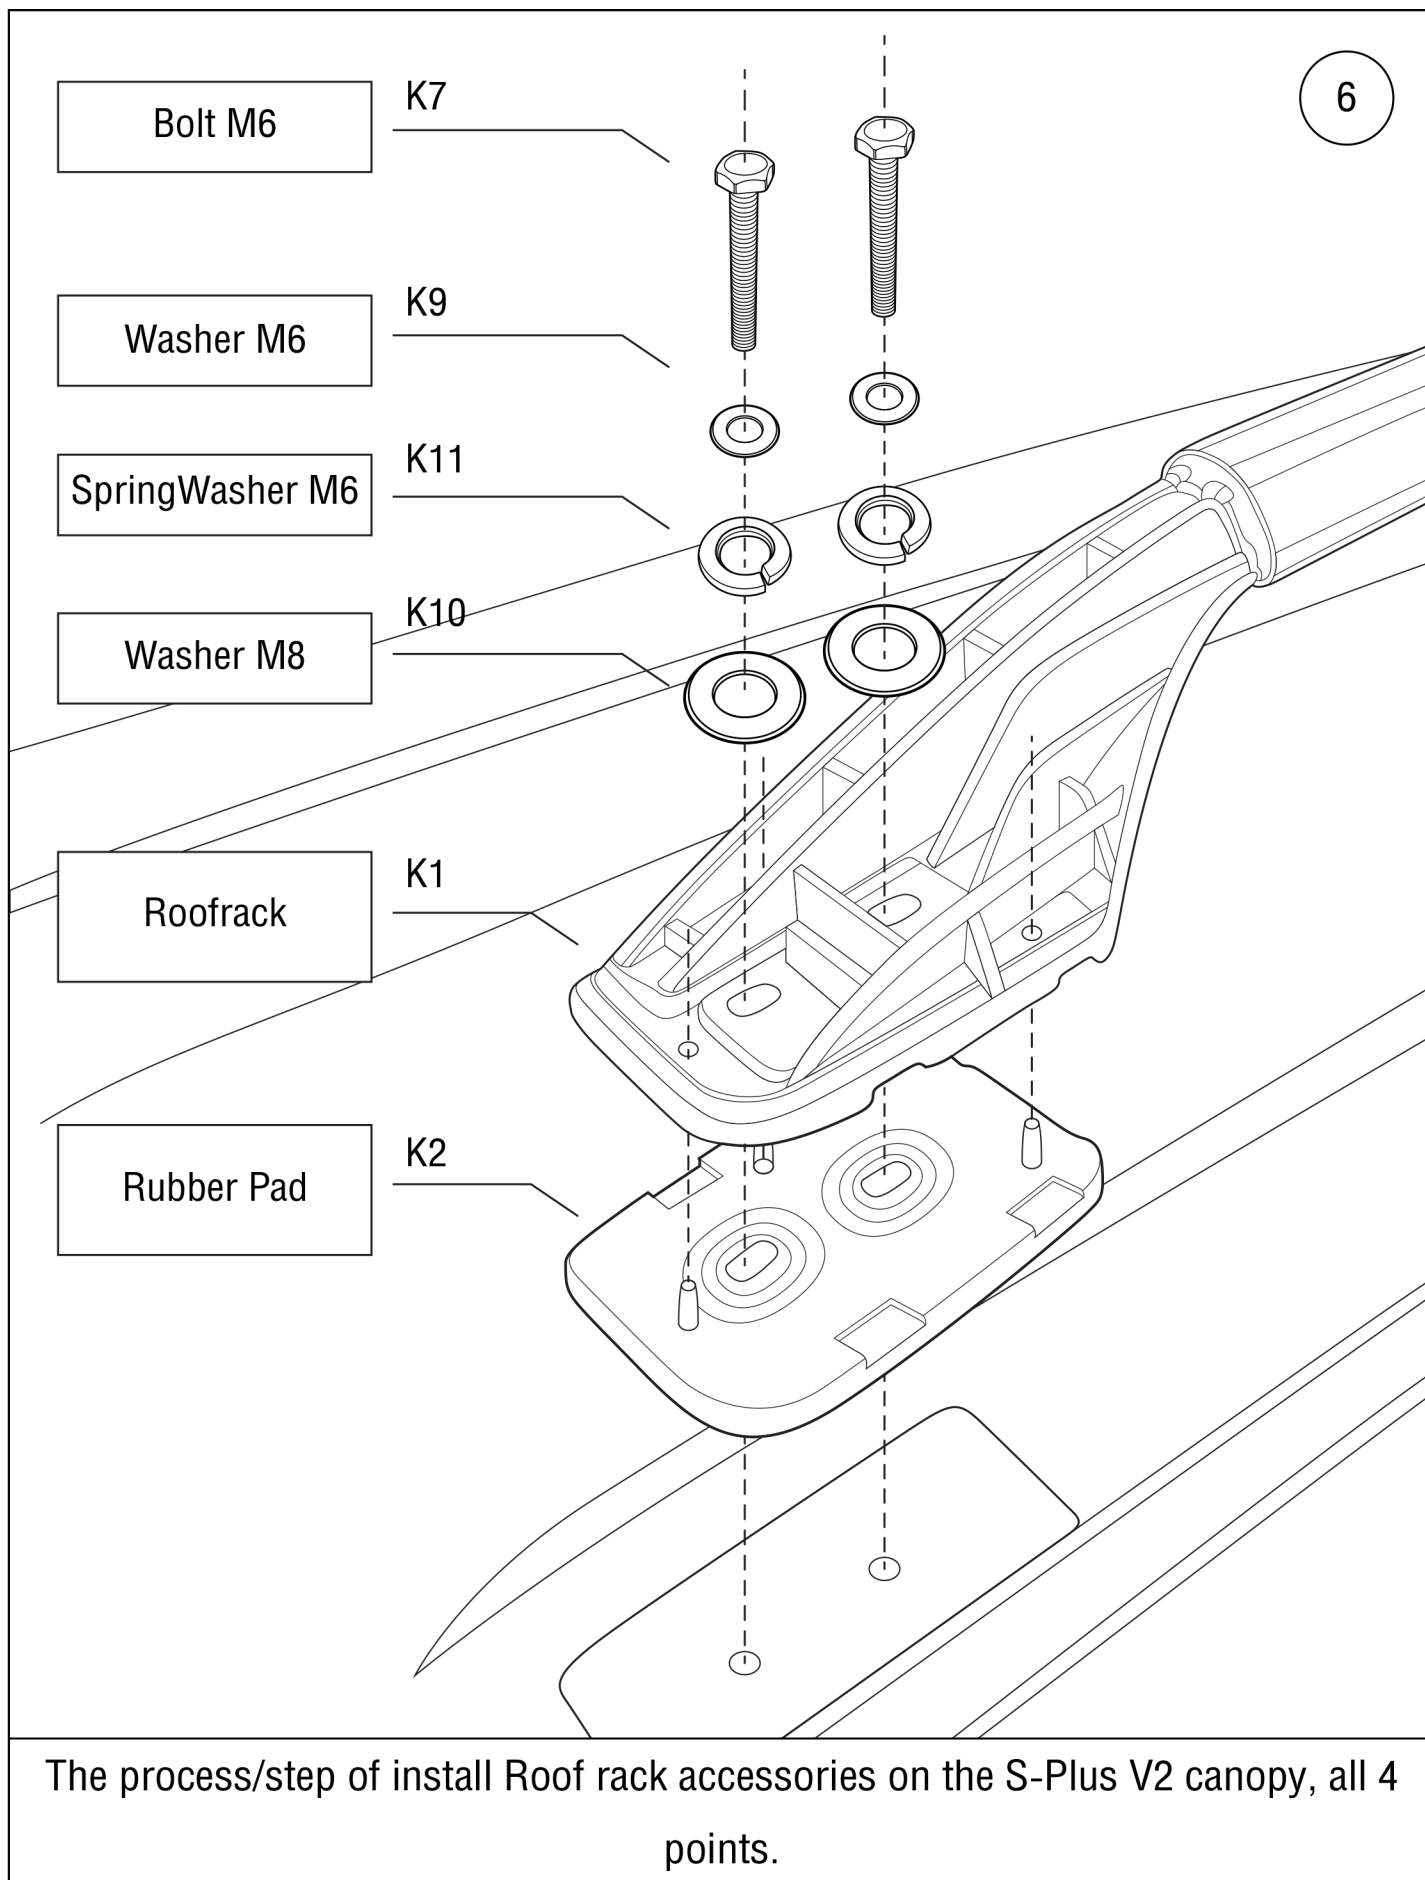

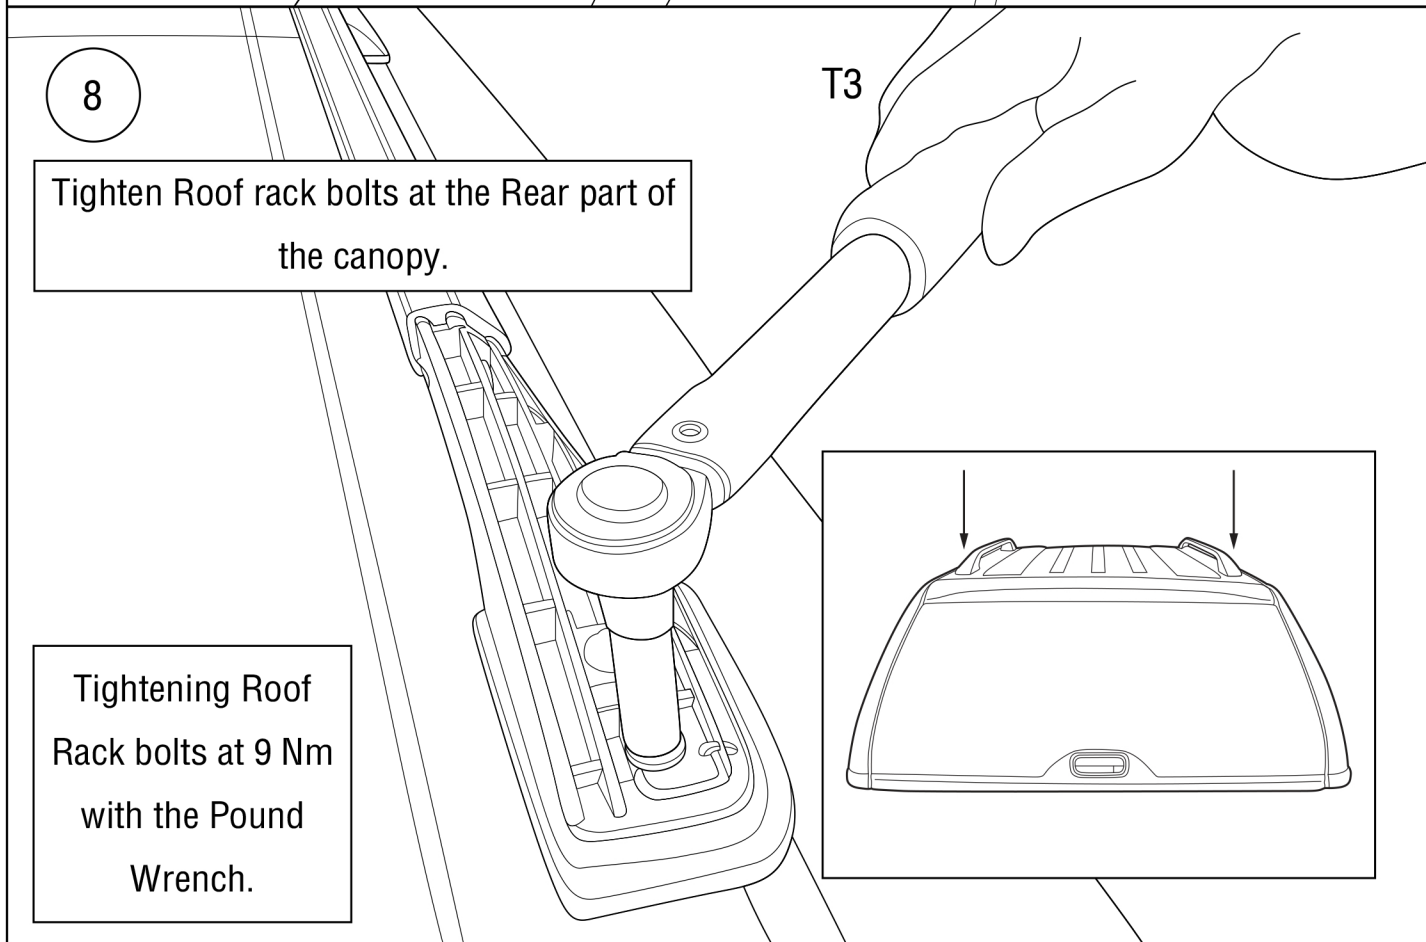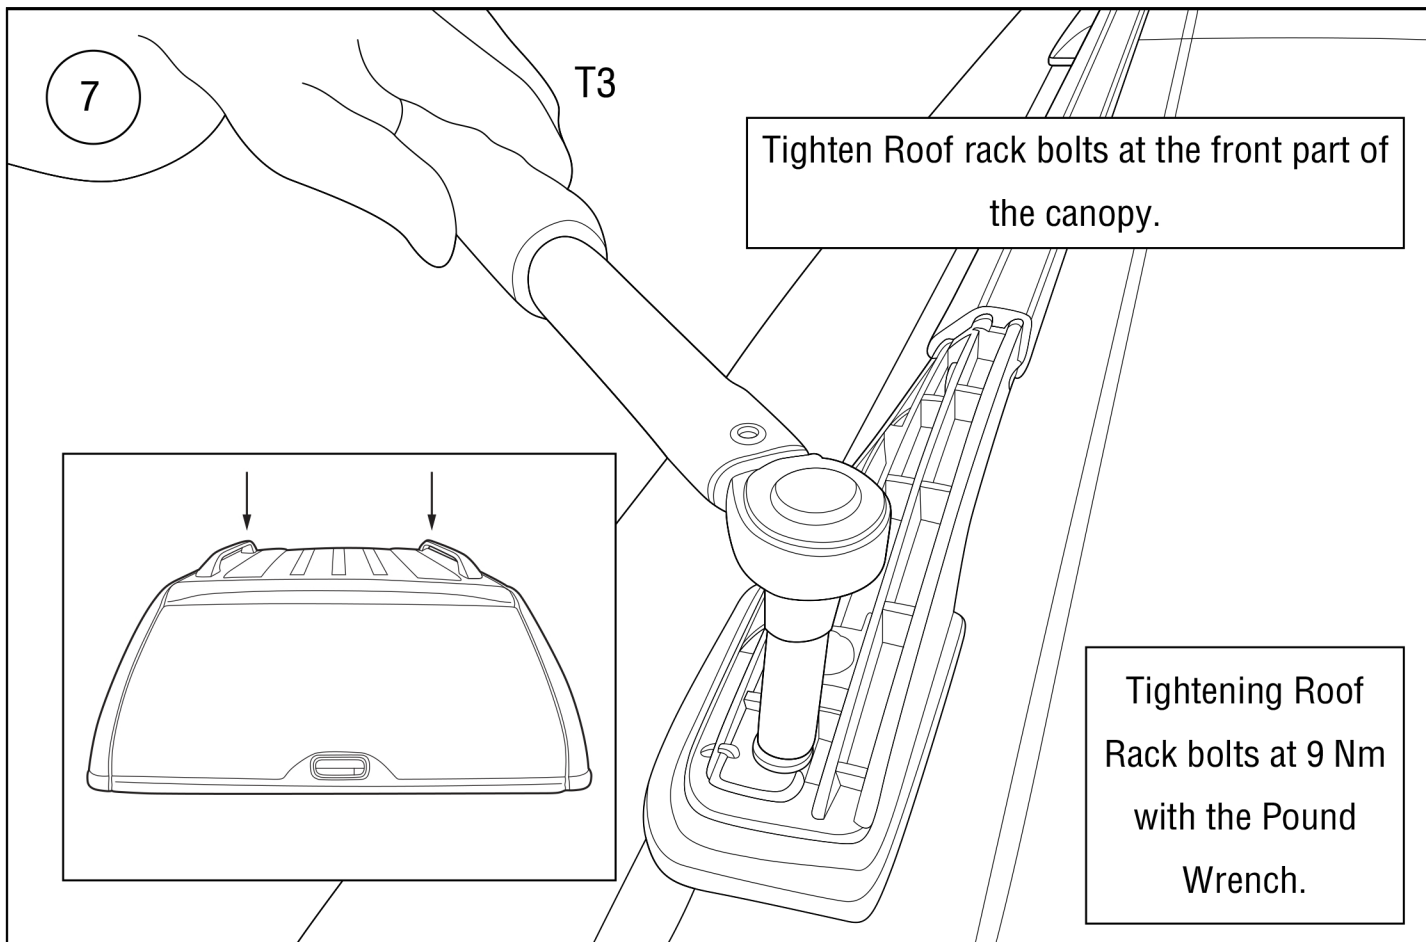

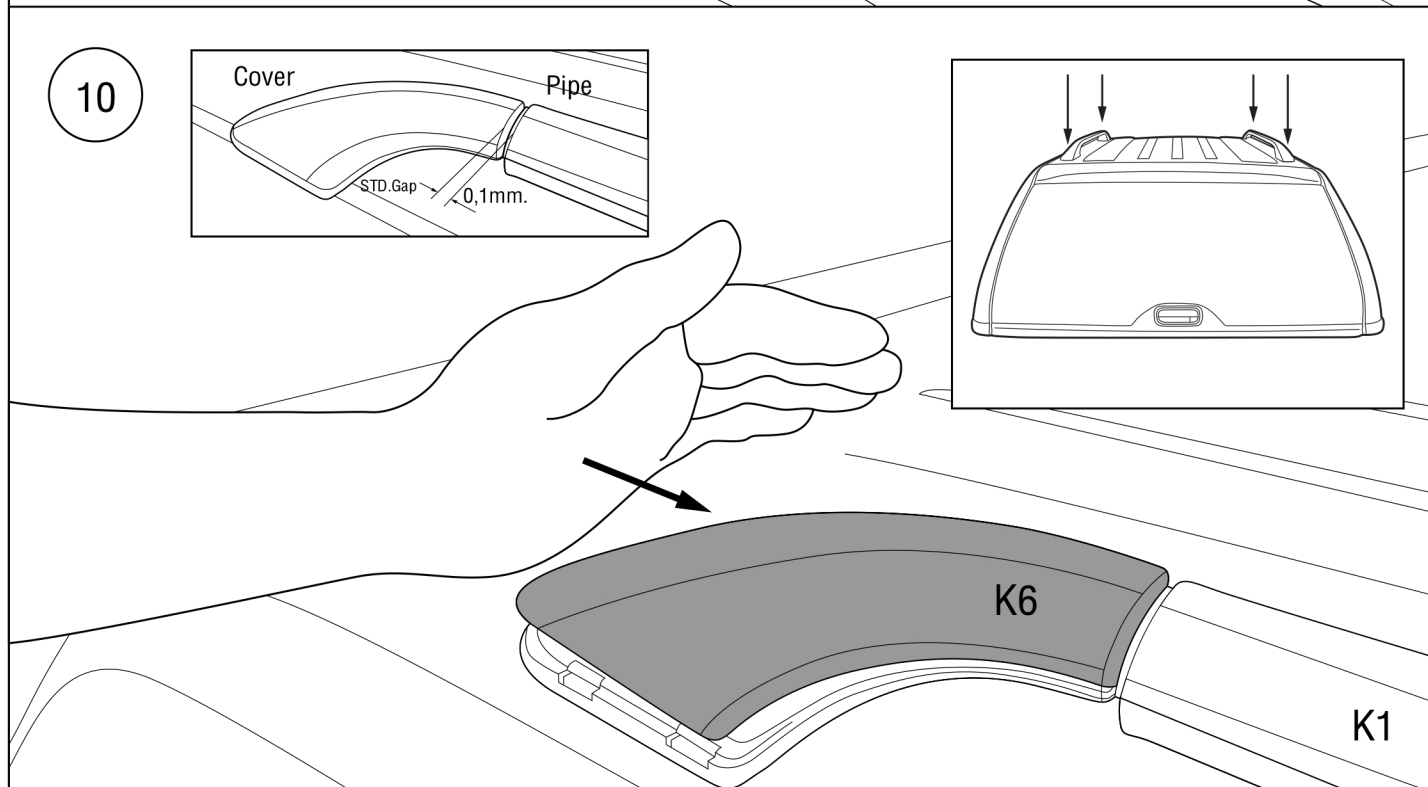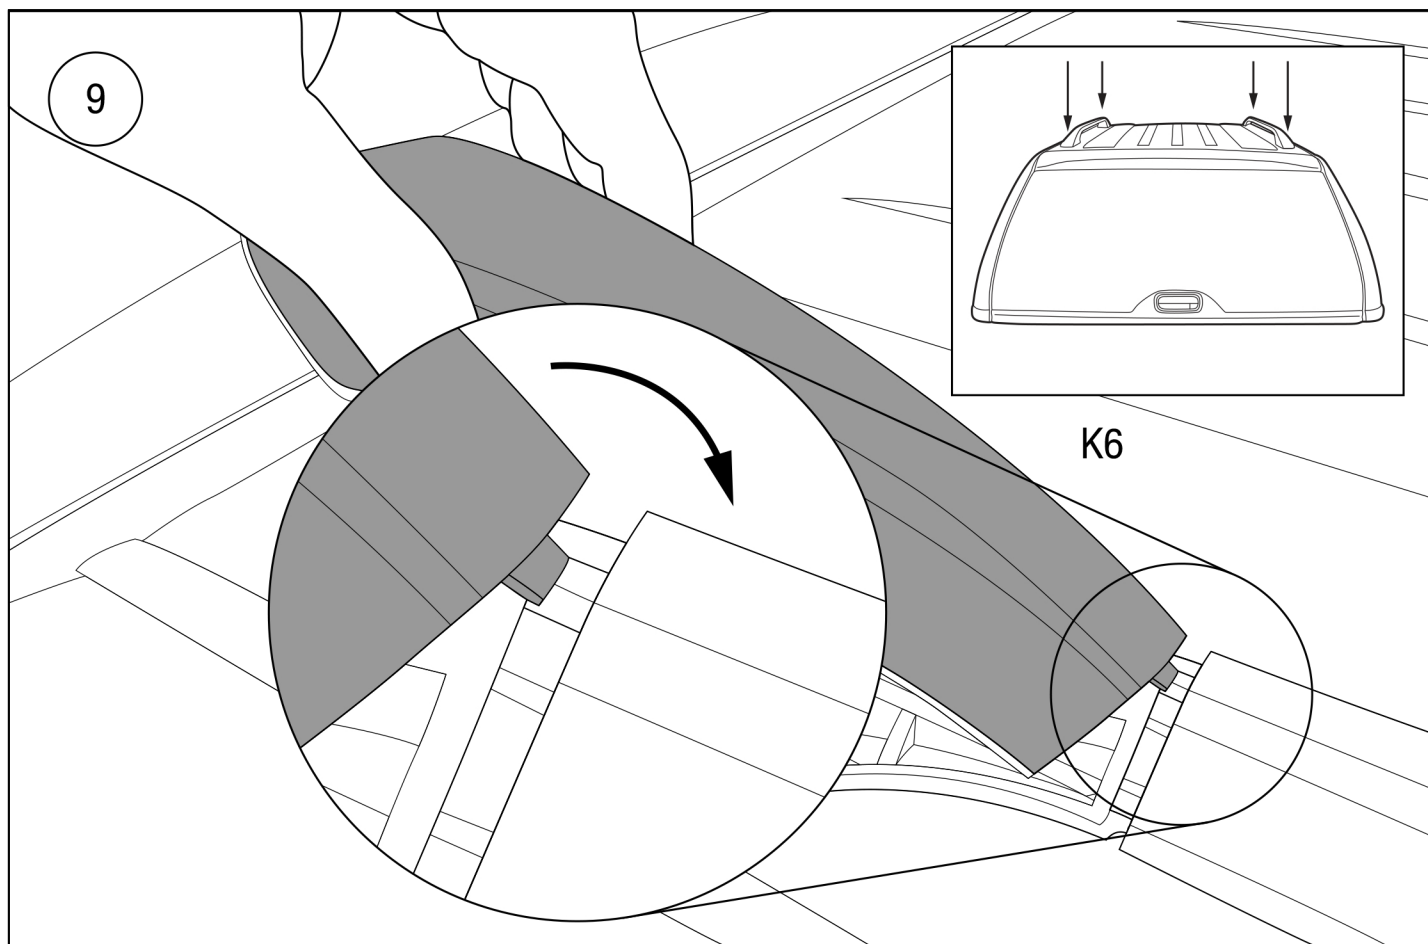


Press and push the Roof rack cover back to the position by hand, then check the gap between cover and roof rack (pipe).



11

## The process of checking and preparing the VW Amarok vehicle before install the canopy.

 
1. Clean up the vehicle body including the top, all sides and Rear tub.
2. Cover the fabric to protect the scratches resistant.

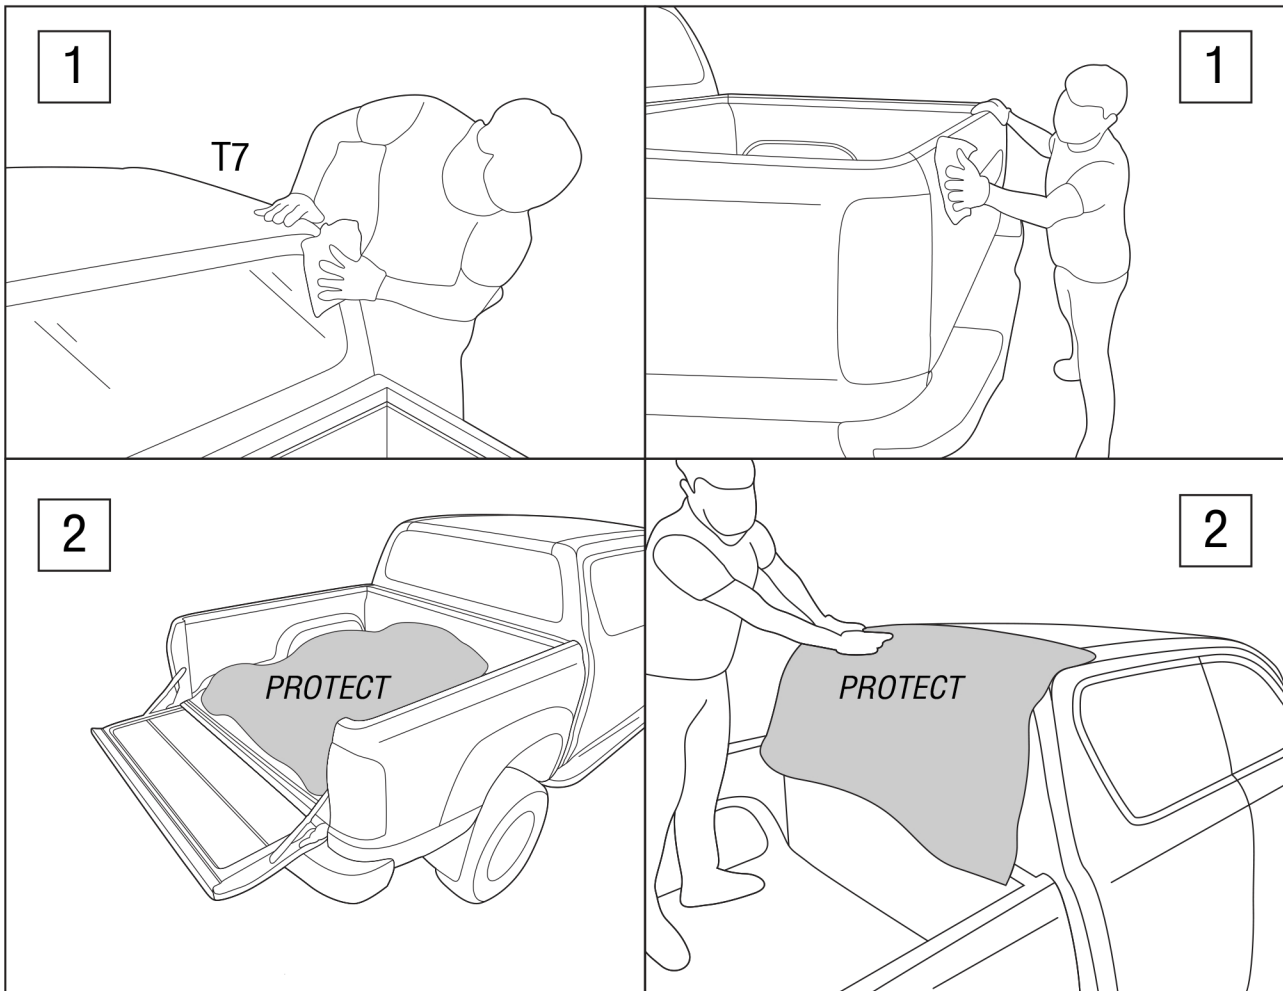




12

 The process of preparing Sammitr Canopy S-Plus V2 model before install on the vehicle.

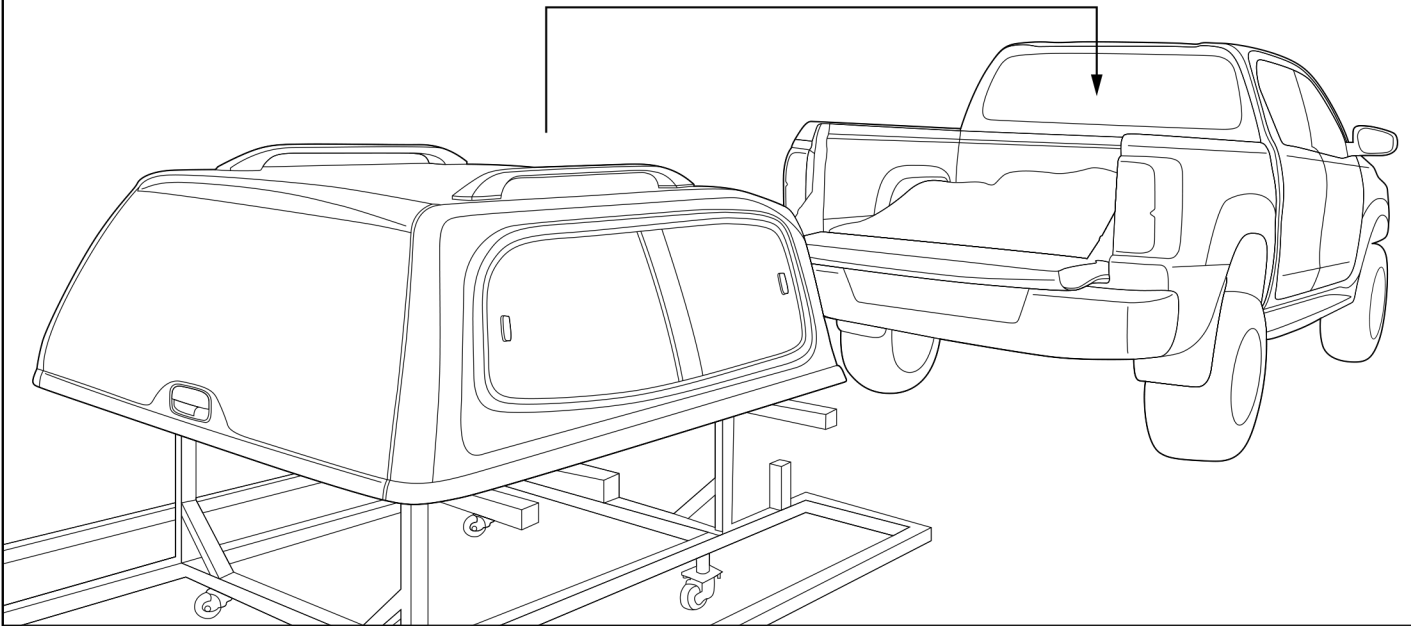


13

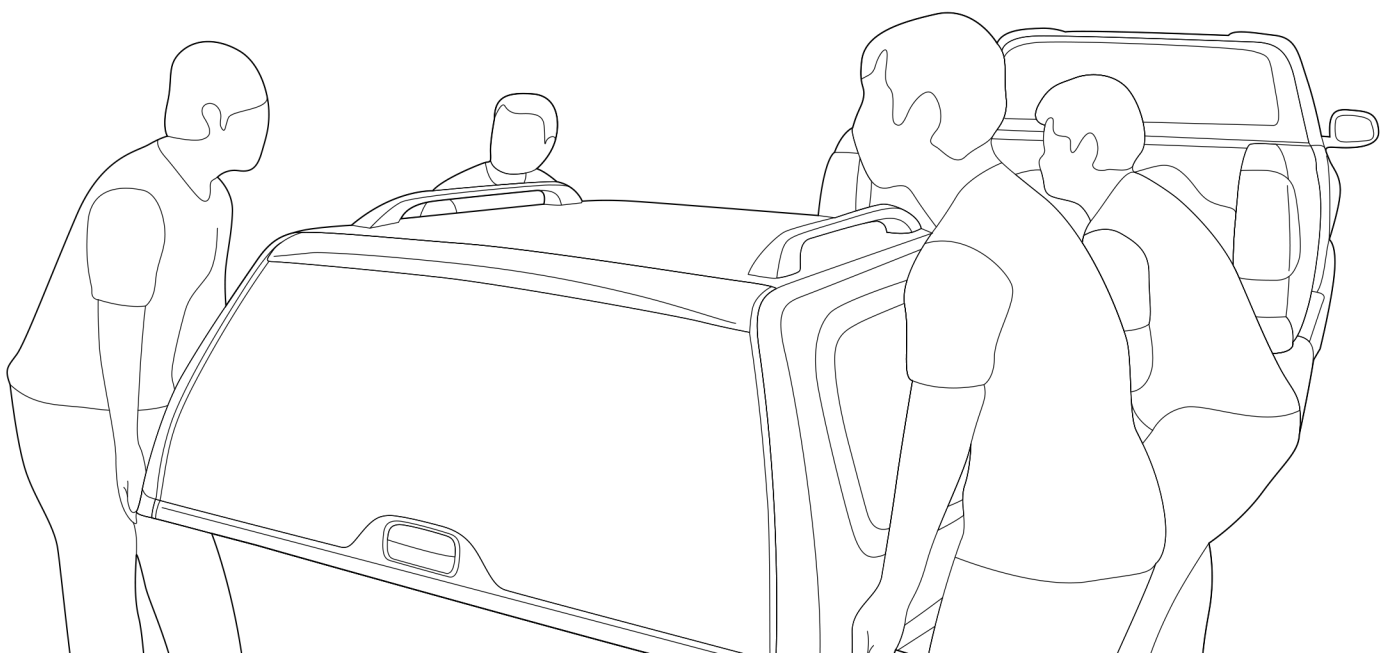 

The process of lifting the canopy onto the vehicle tub by using 4 people for lifting.




 14

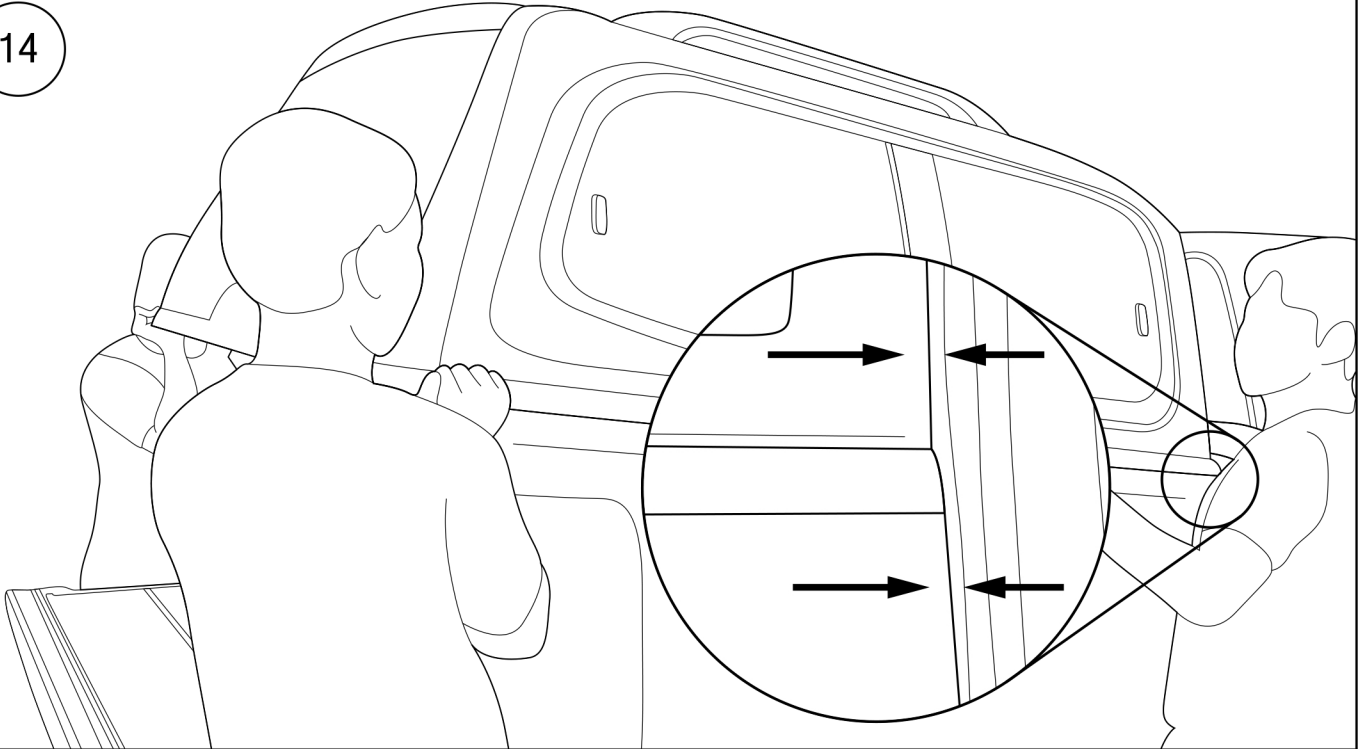


Lift canopy over the pick up truck by rising the rear part higher and the front part to be in the parallel with the edge of the vehicle tub.

 15

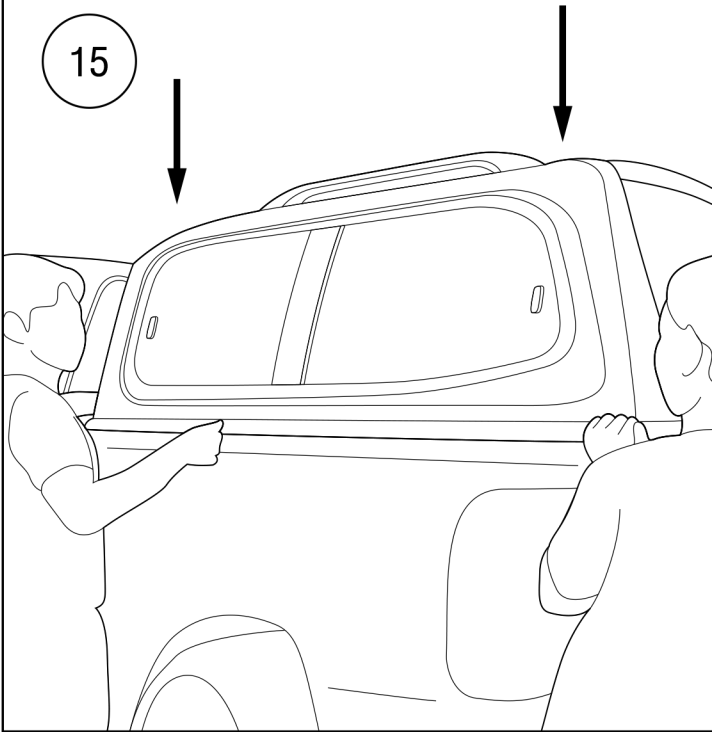

After get the distance in front part and then put the rear part to cover the vehicle tub.

 16

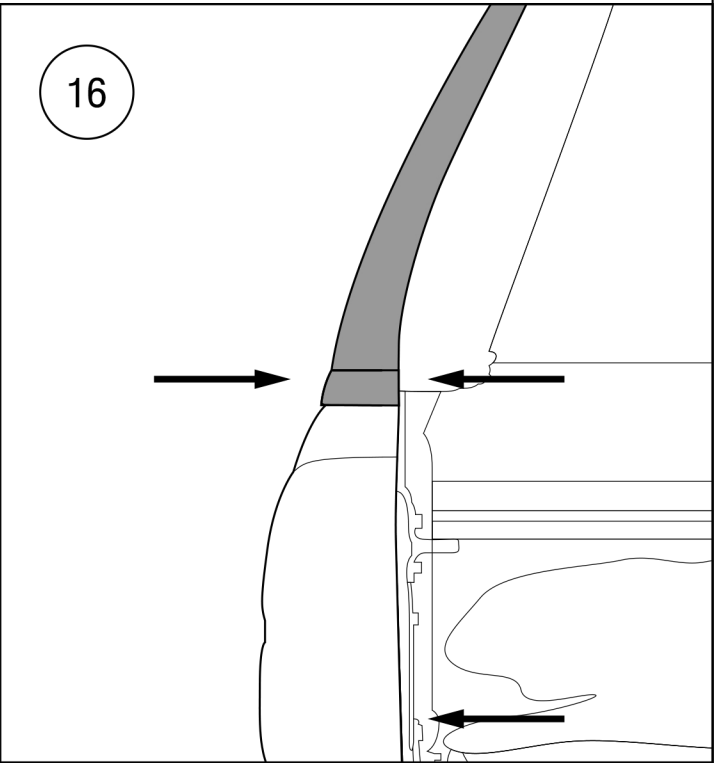


Make sure the distance between canopy edge and vehicle rear tub are equivalent both left and right sides.




Unit of mm.

 17

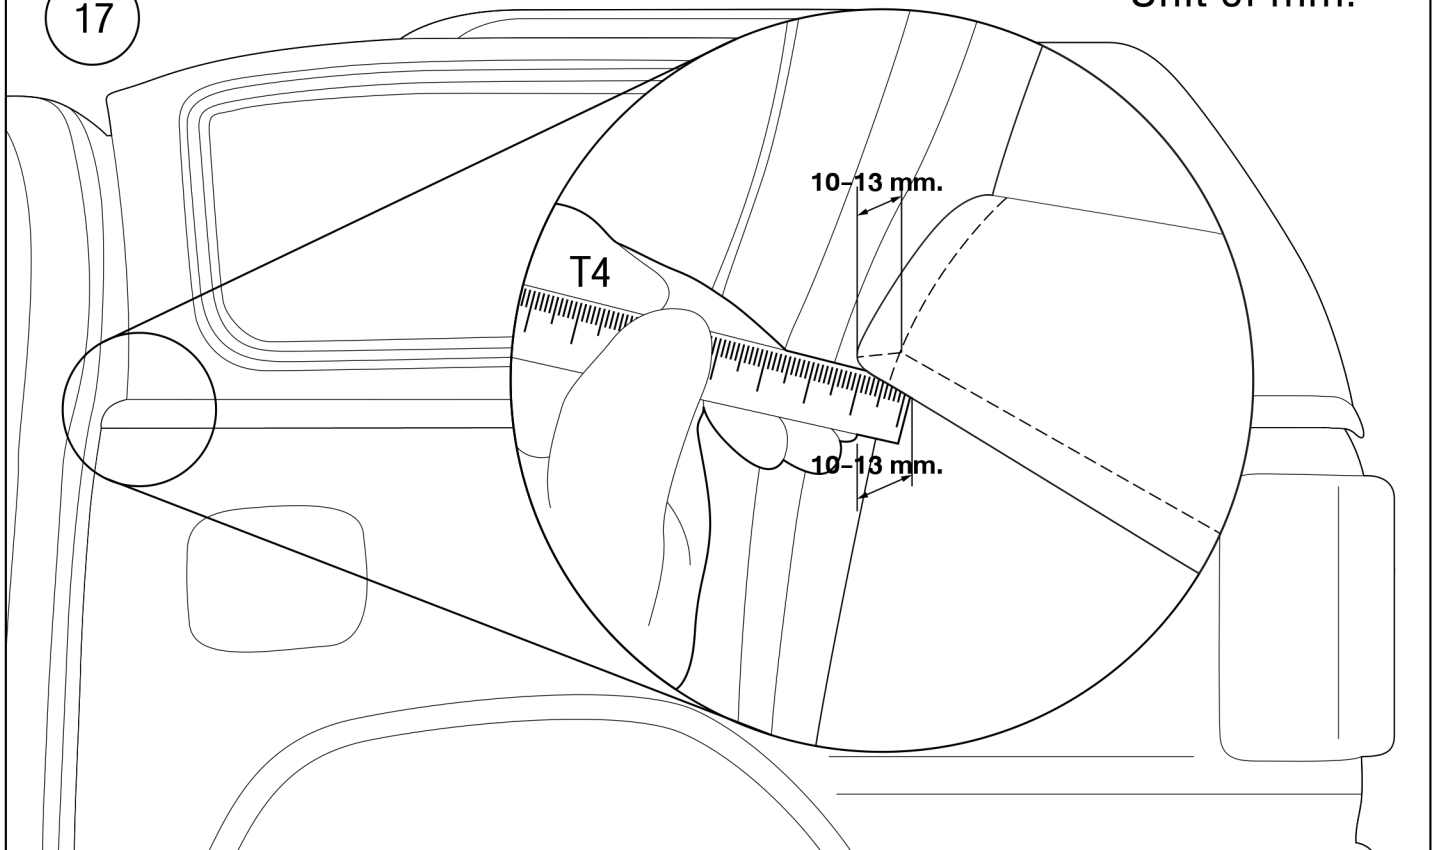

Measure the distance between canopy coverrail and the vehicle, to have the 10-13 mm distance in overall.

 18

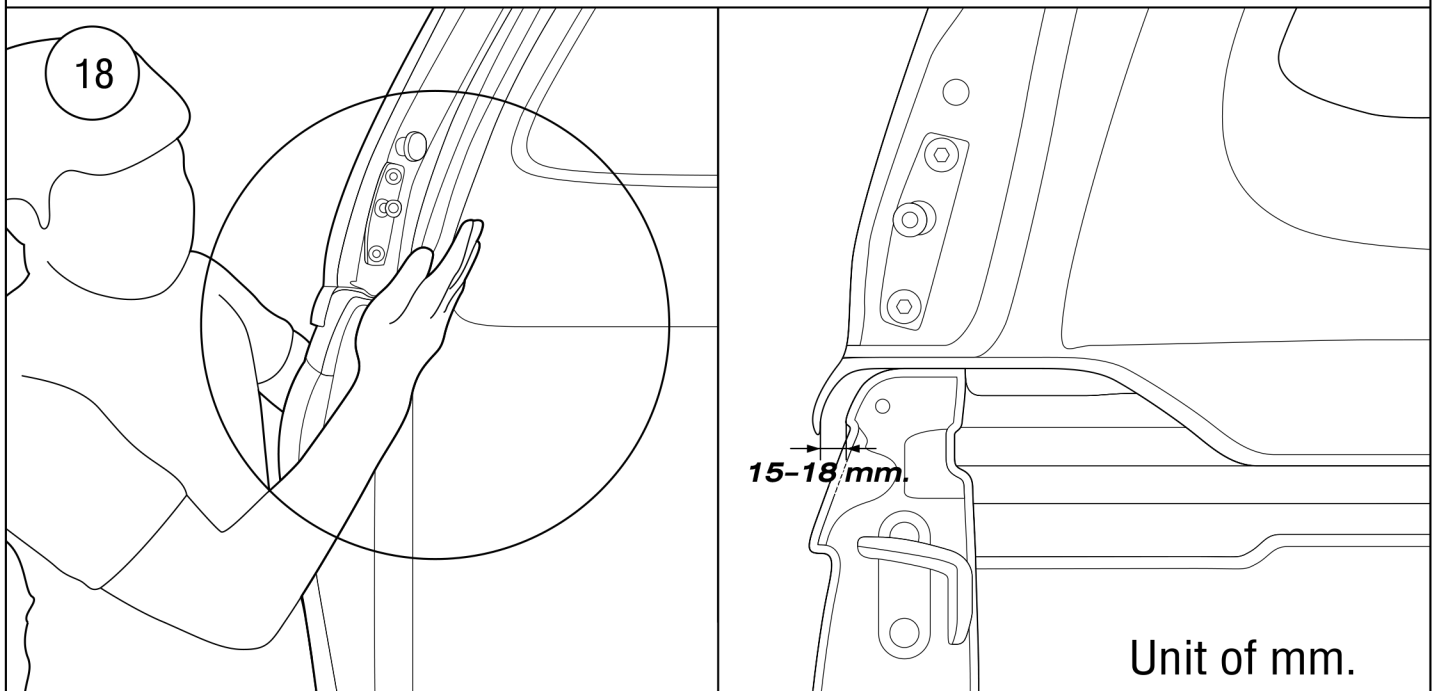


Unit of mm.

After finished measure the front part, check the distance at rear part of canopy which must have the distance of 15-18 mm.





19


## The process of C-Clamp installation S-Plus V2 canopy model with the vehicle.

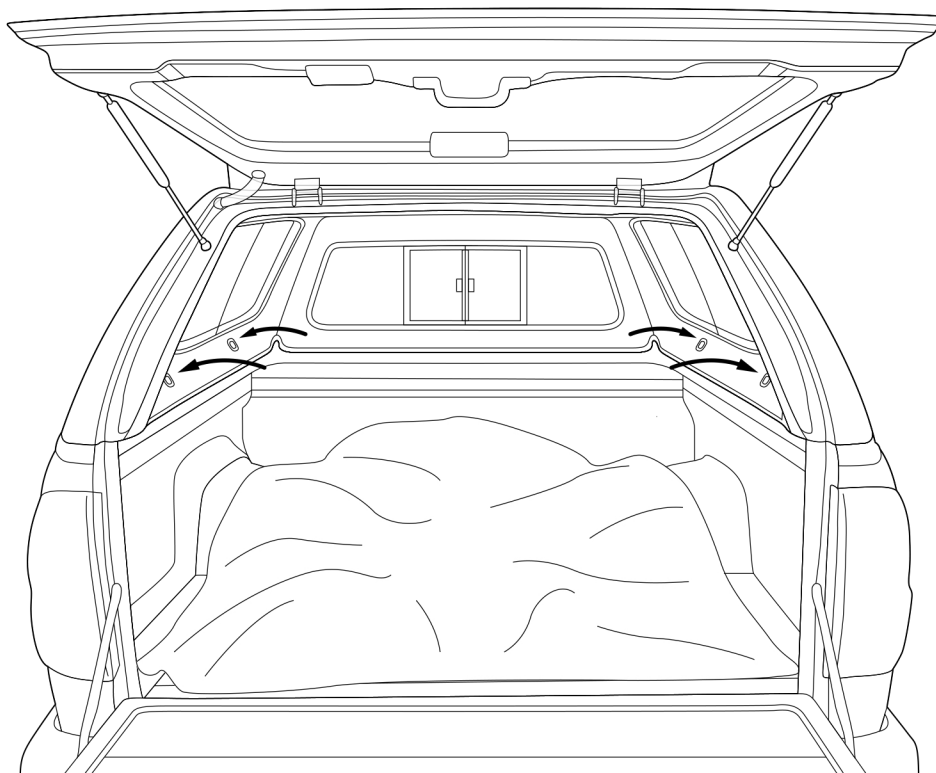 

20

   Open / take off the rubber plug.

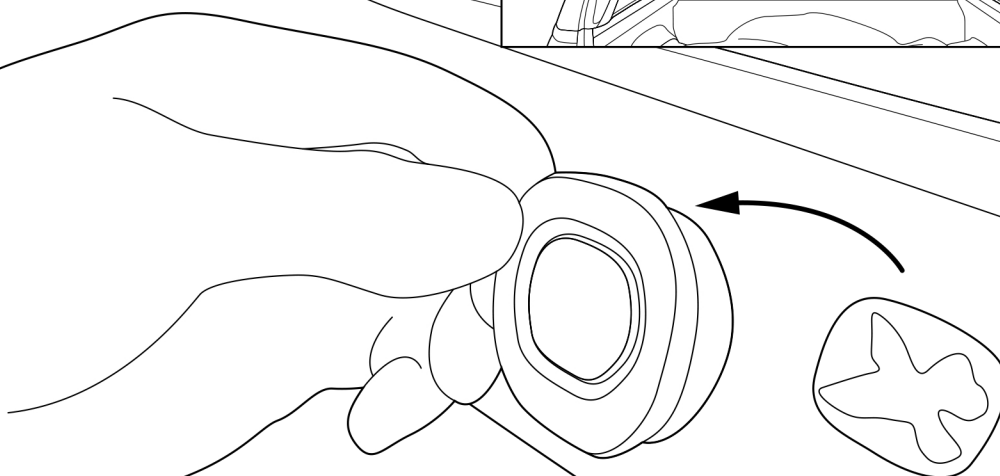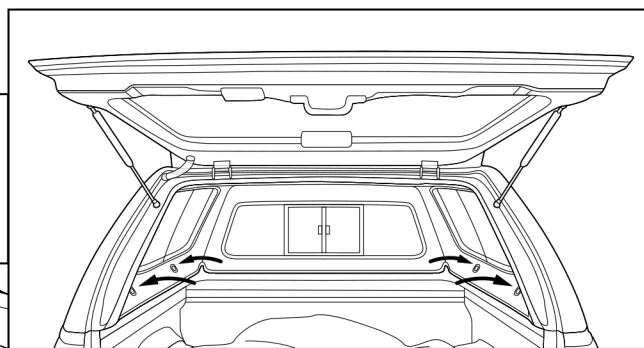

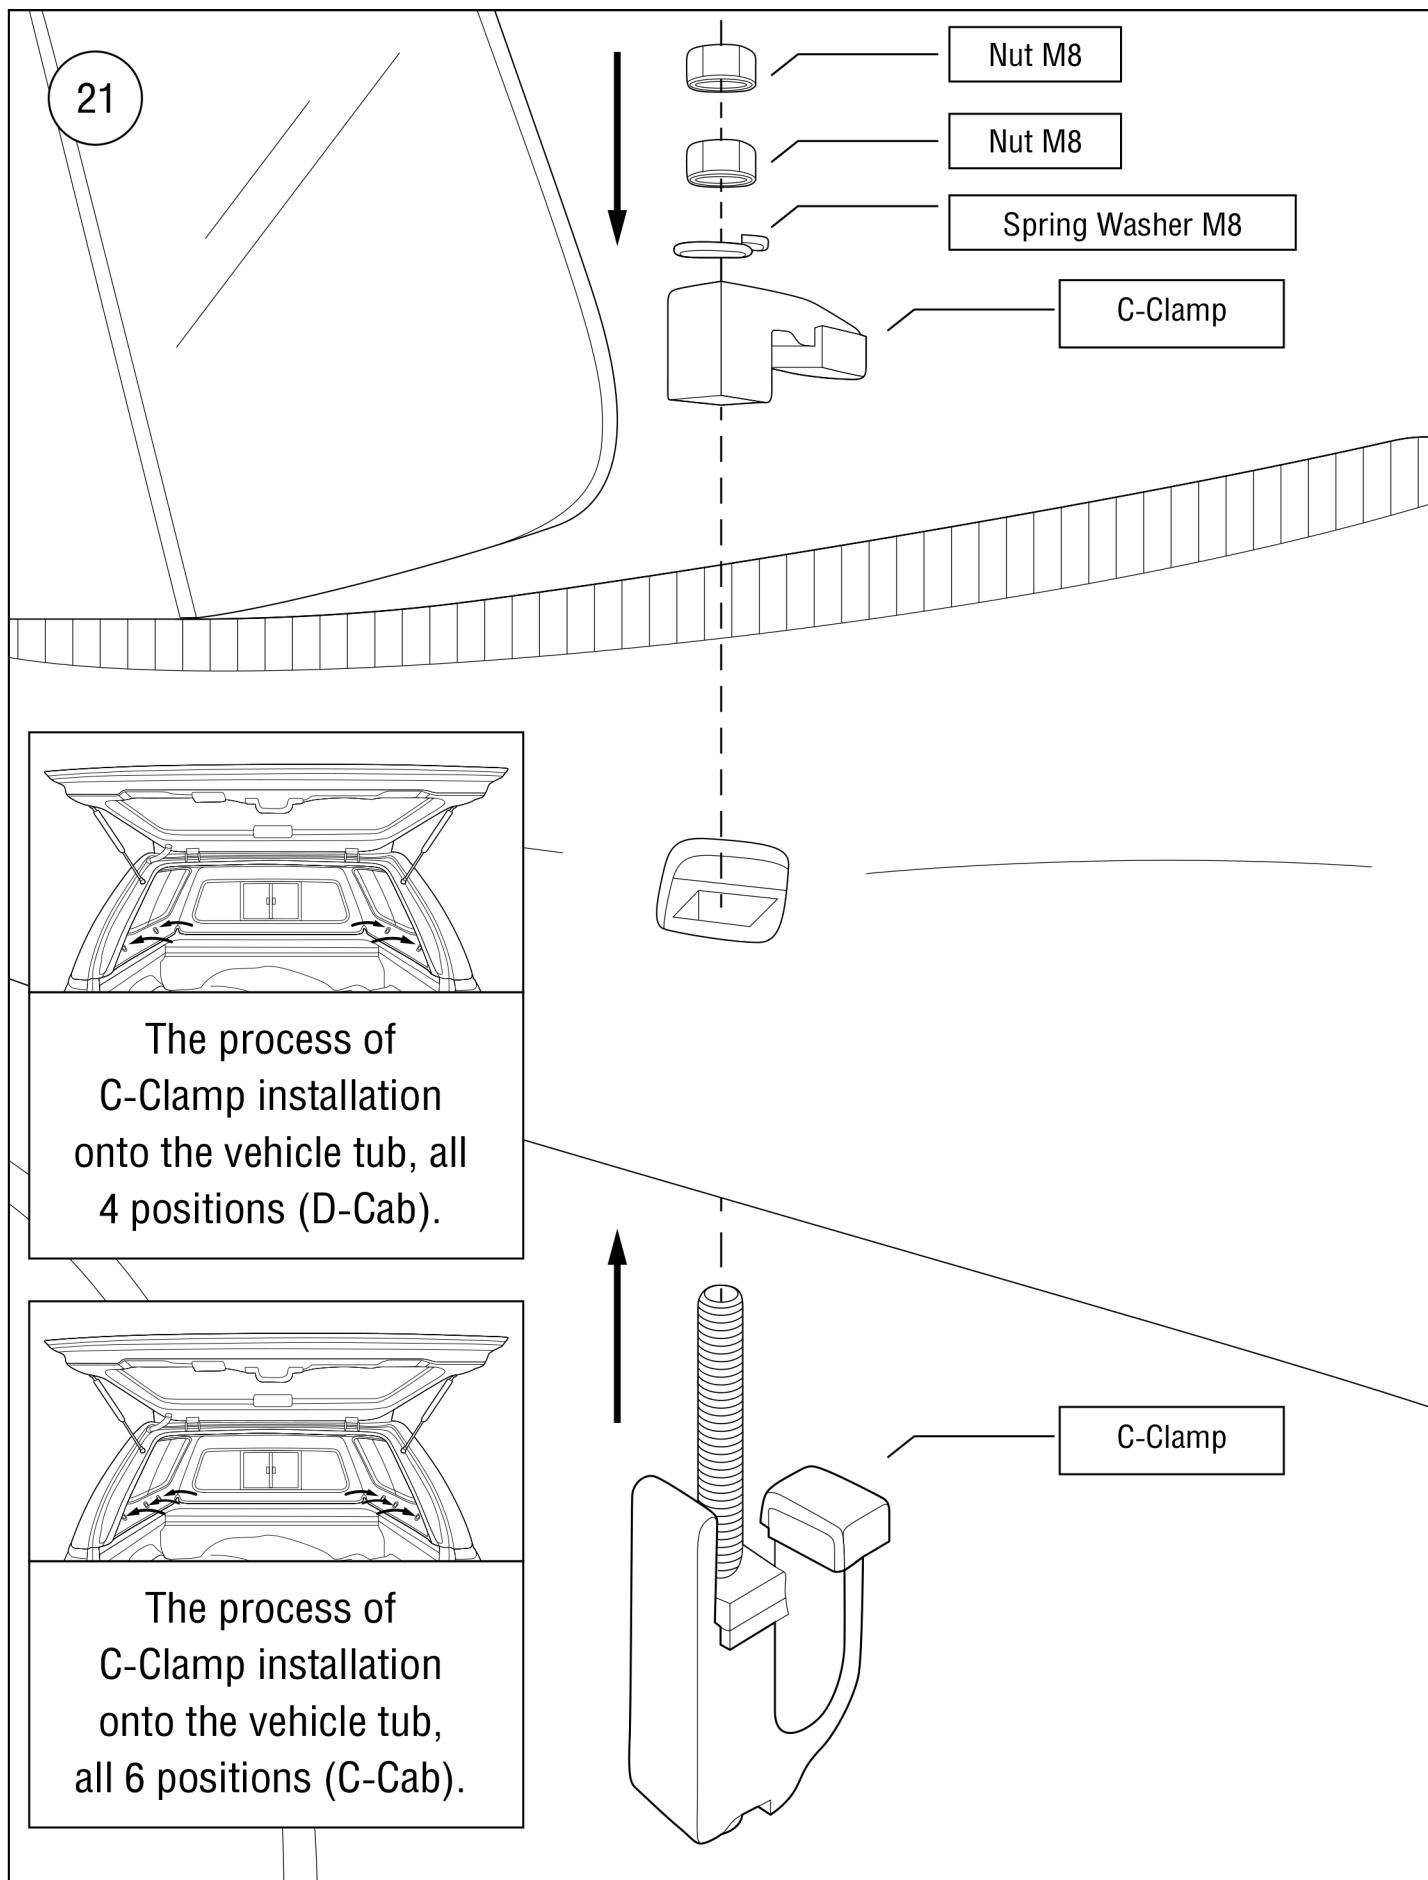






22.1

 Tighten bolts of c-clamp by using pound wrench, with the pressure of 16 Nm.

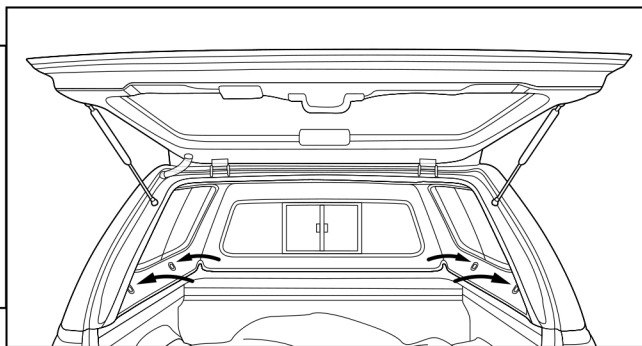


T3

D-Cab

Tighten canopy C-Clamp bolts with vehicle all 4 positons.

 22.2

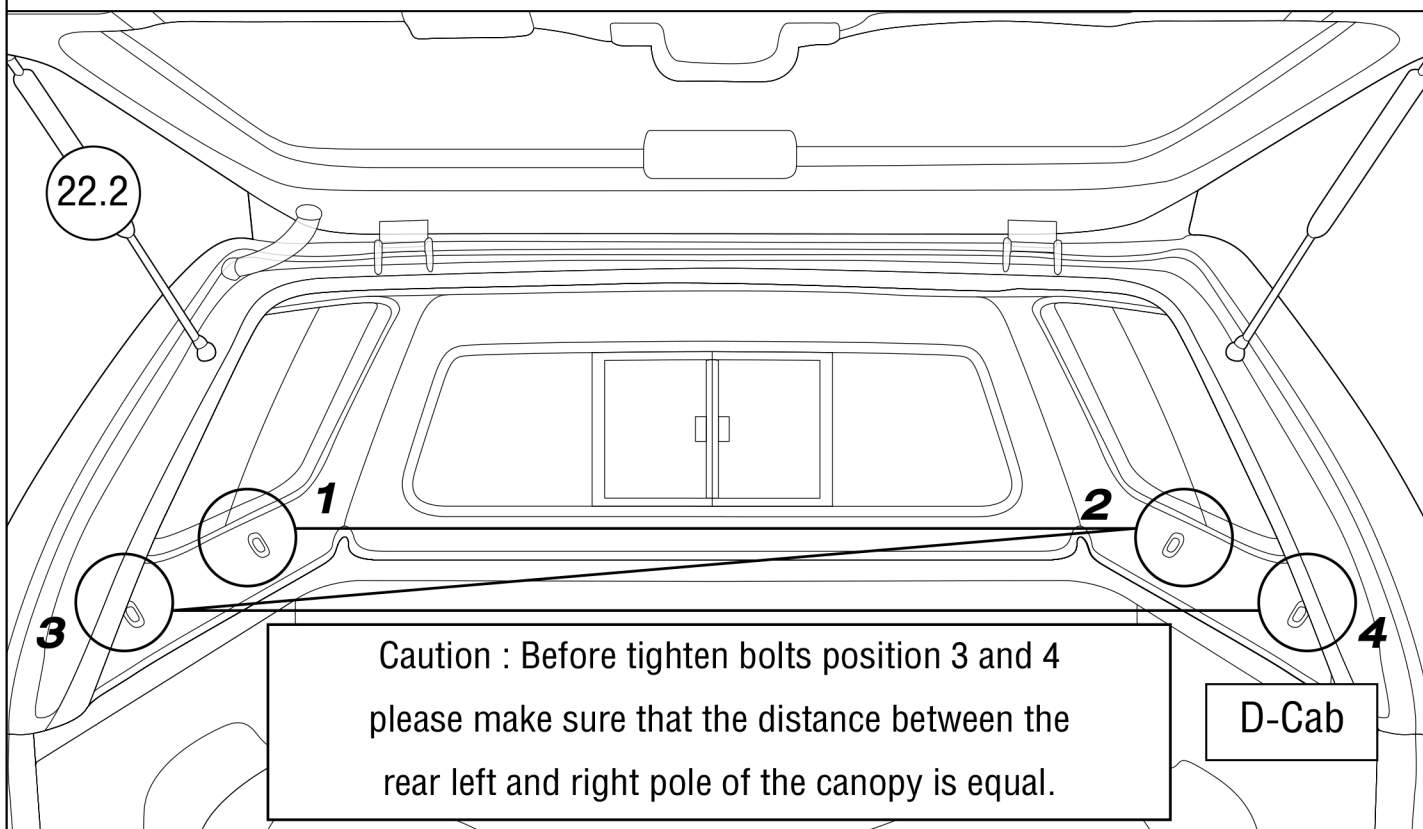

Caution : Before tighten bolts position 3 and 4 please make sure that the distance between the rear left and right pole of the canopy is equal.

 
D-Cab

Steps of canopy C-Clamp bolts tightening onto vehicle.



23.1

Tighten bolts of c-clamp by using pound wrench, with the pressure of 16 Nm.

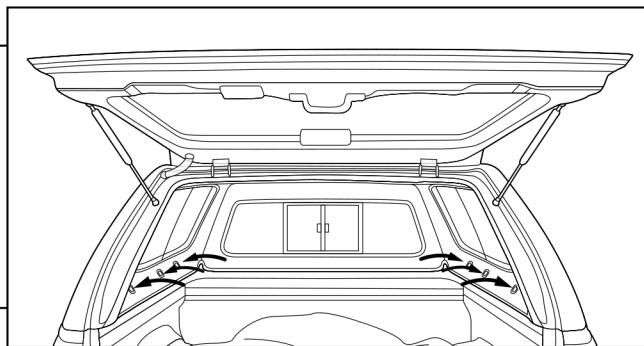


T3

C-Cab

Tighten canopy C-Clamp bolts with vehicle all 6 positons.

 23.2

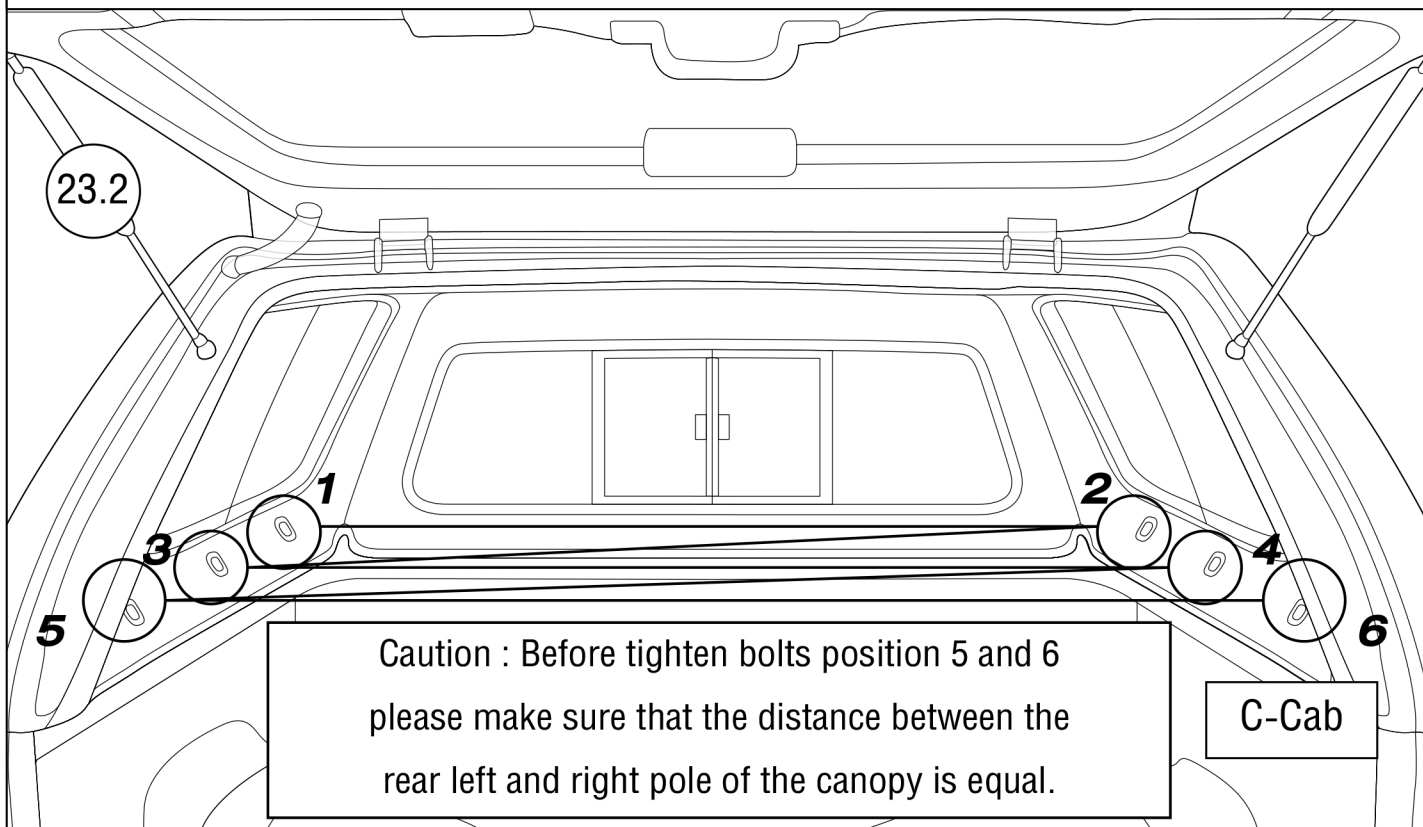

Caution : Before tighten bolts position 5 and 6 please make sure that the distance between the rear left and right pole of the canopy is equal.

 
 
C-Cab

Steps of canopy C-Clamp bolts tightening onto vehicle.







24.1

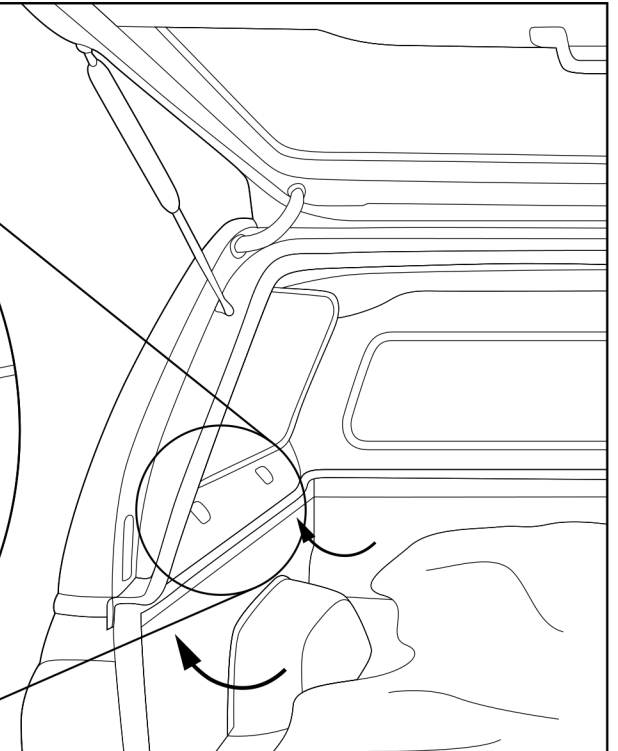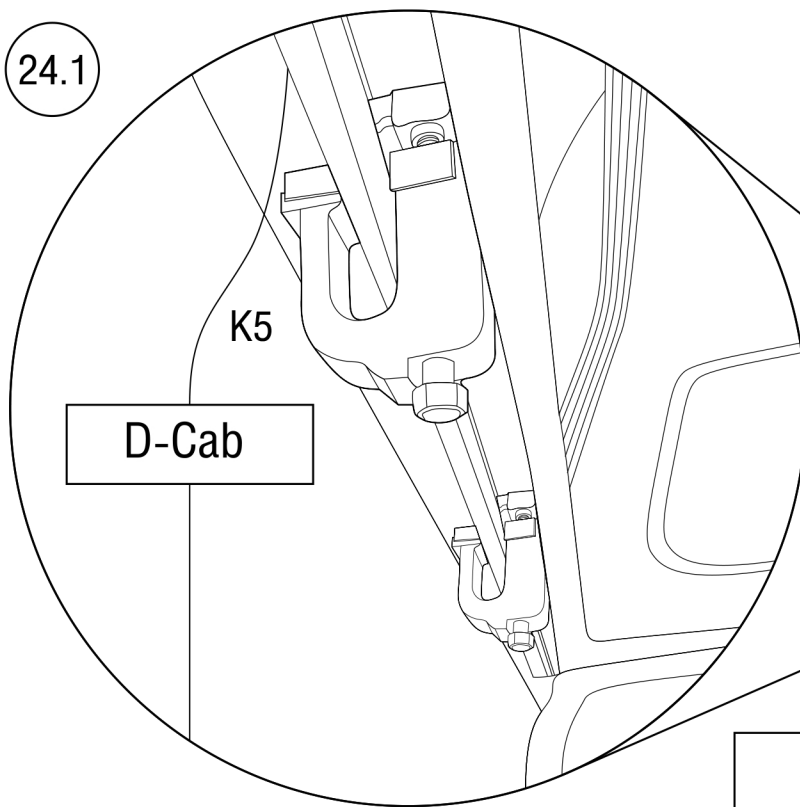

C-Clamp mounting positions  
onto vehicle (Left).

  
24.2

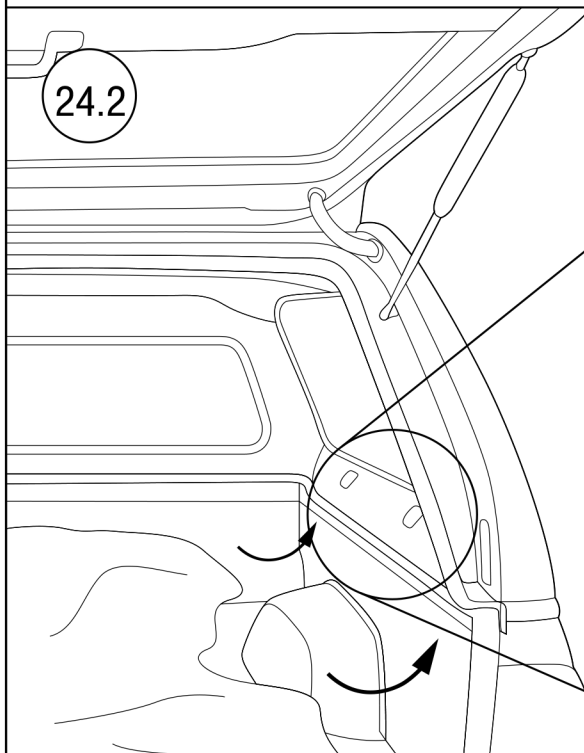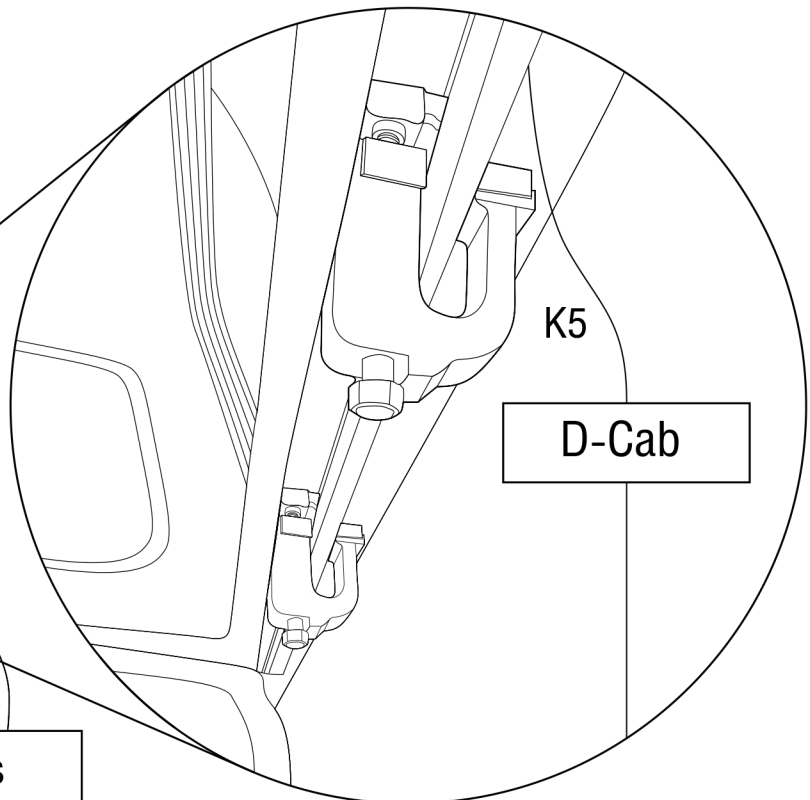

C-Clamp mounting positions  
onto vehicle (Right).




 25.1

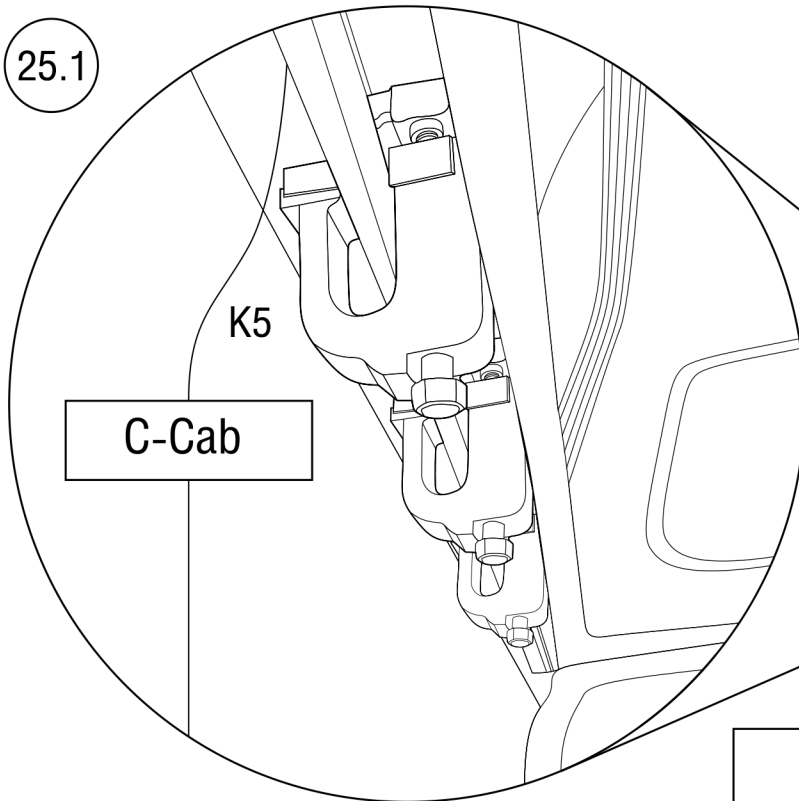


C-Clamp mounting positions  
onto vehicle (Left).

 
25.2

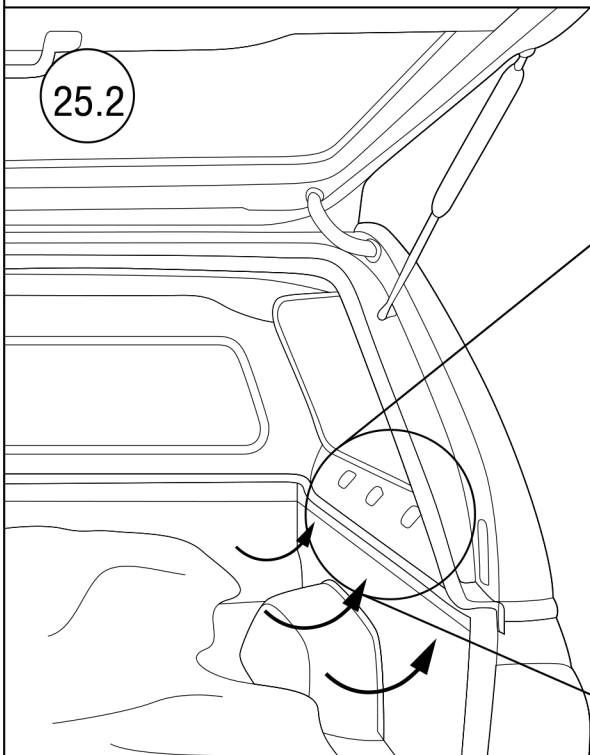

 C-Clamp mounting positions  
onto vehicle (Right).

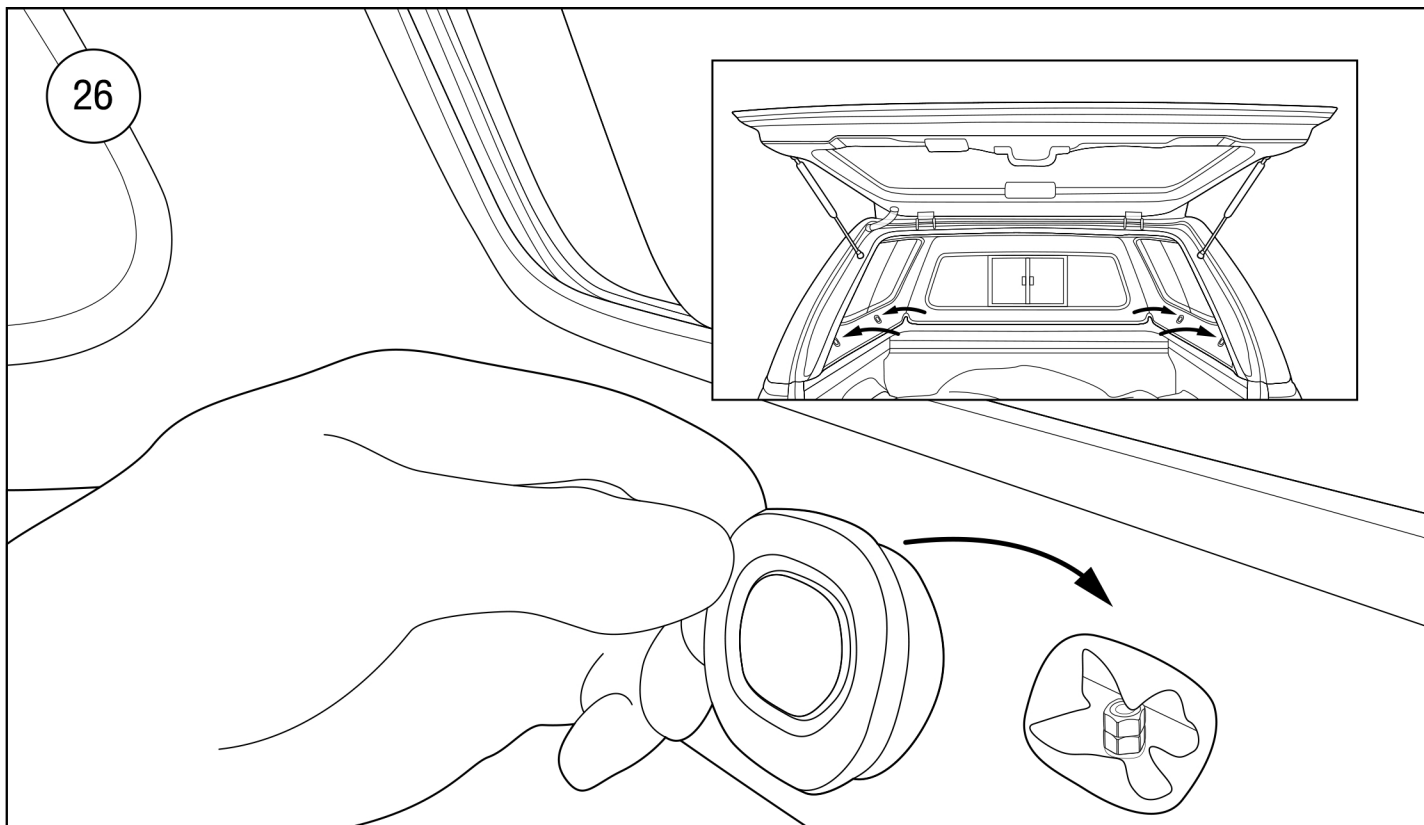

Close the rubber plug.

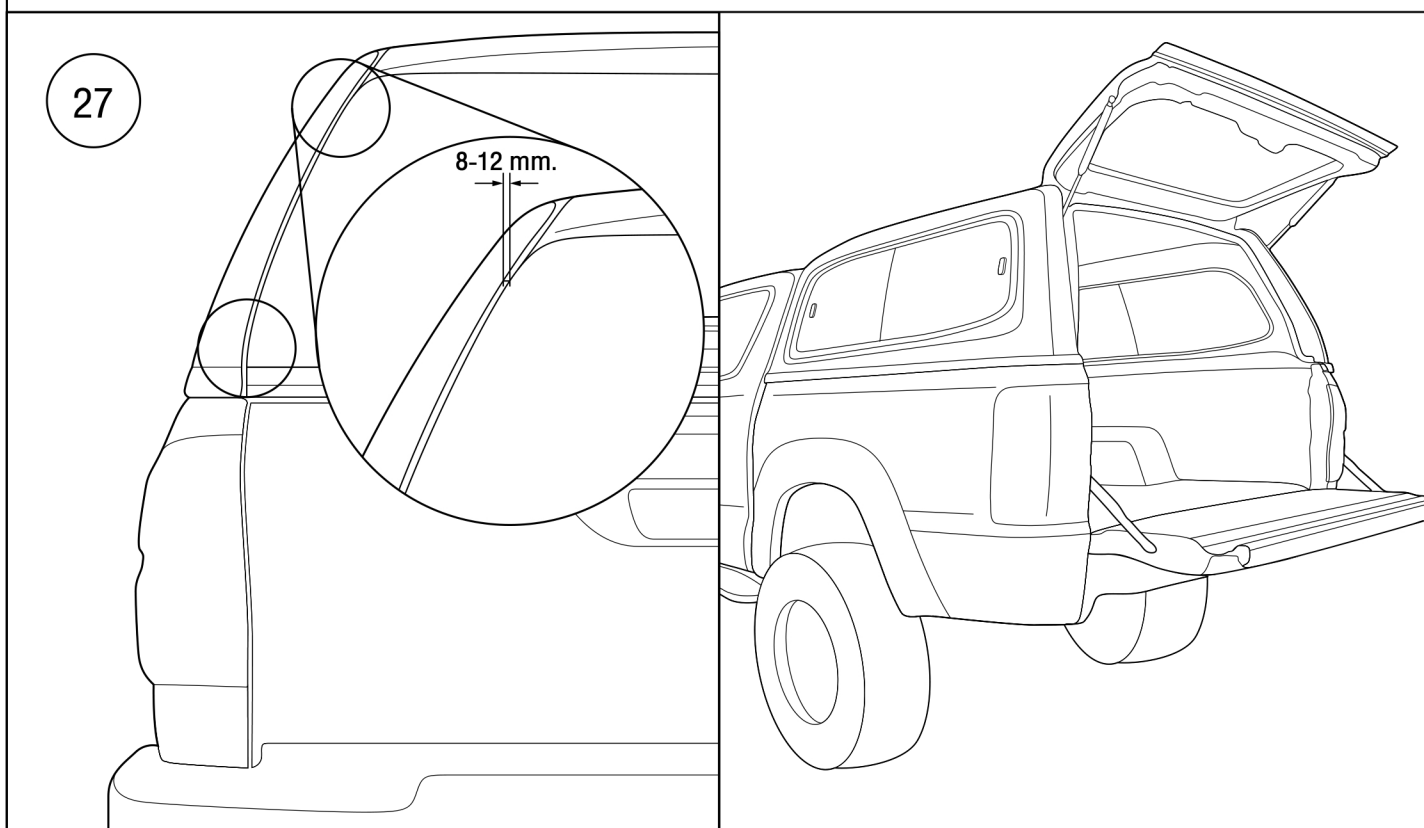 

Measure the distance between backdoor and rear pillar, to have the 8-12 mm. in along the line.

The process of canopy installation is completed.




**SAMMITR**
 
# **Opening Function of all canopy model**





Front Window function usages will be the same for all model, V2, V4 and TL1.

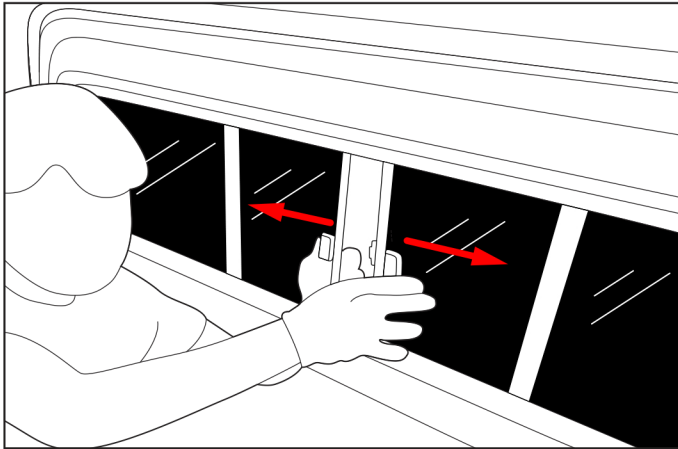


Use the key is unlock function will be the same for all model, V2, V4 and TL1.

  
Open the backdoor function are different.

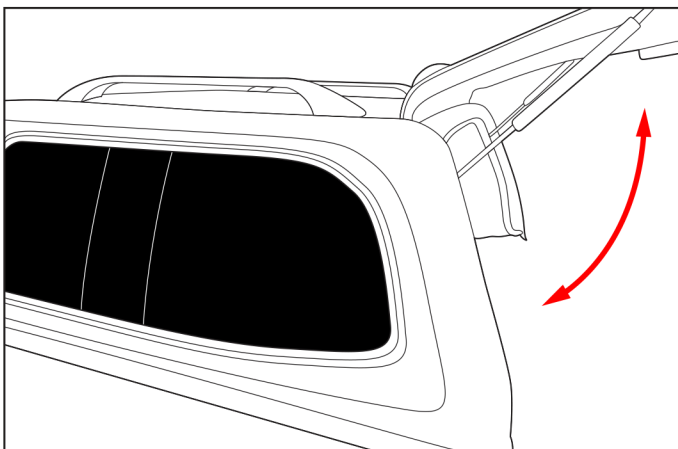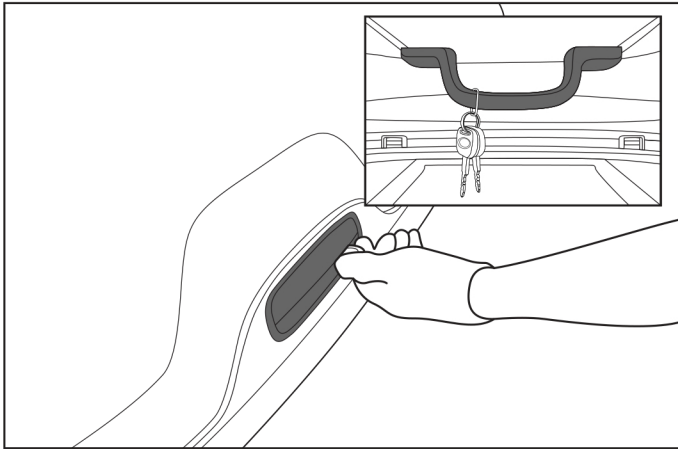


## User manual

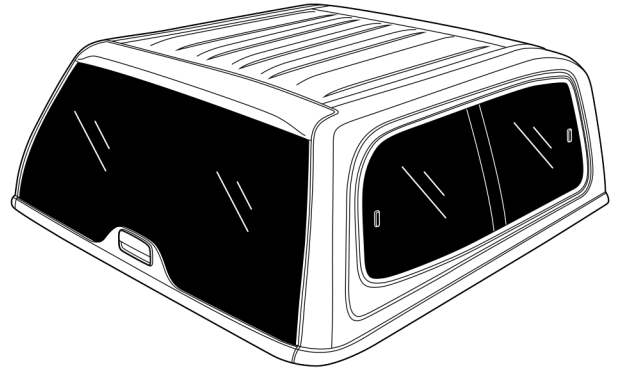 

### Slide Window (Left-Right)

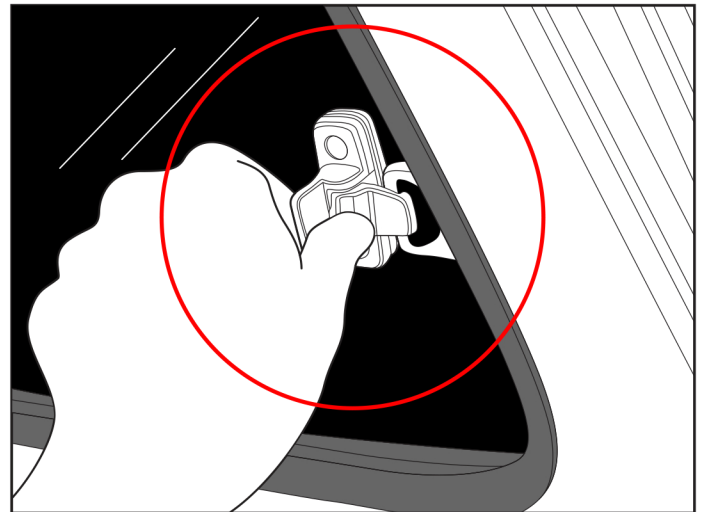 

Squeeze the lock side to open.

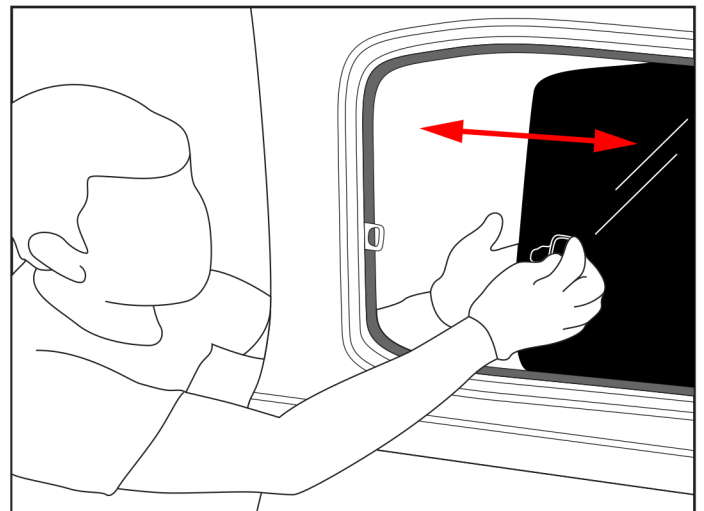 


The Picture shows how to open the side window.







## User manual

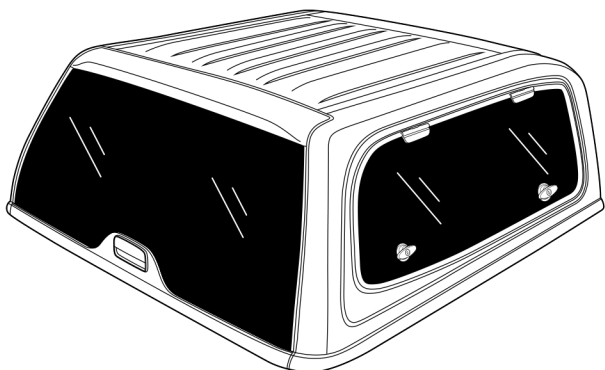 

 Glass Birdwing Window Left-Right  
(Handle Lock)

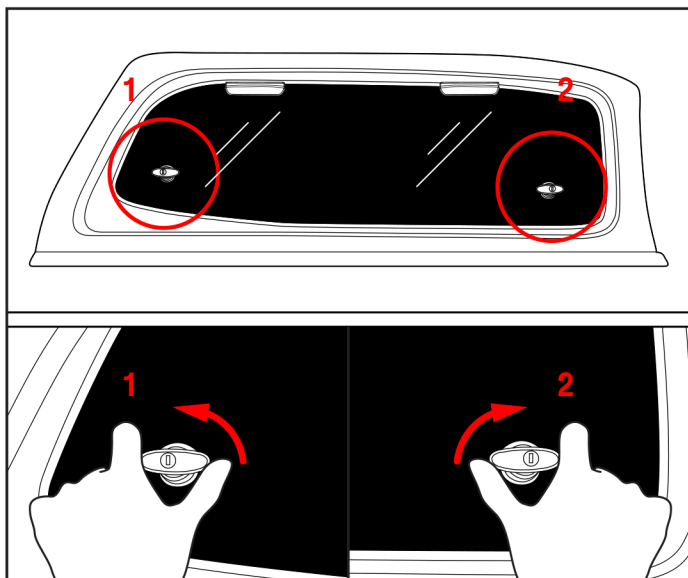


 Turn around the canopy lock as shown in picture to open the side window.

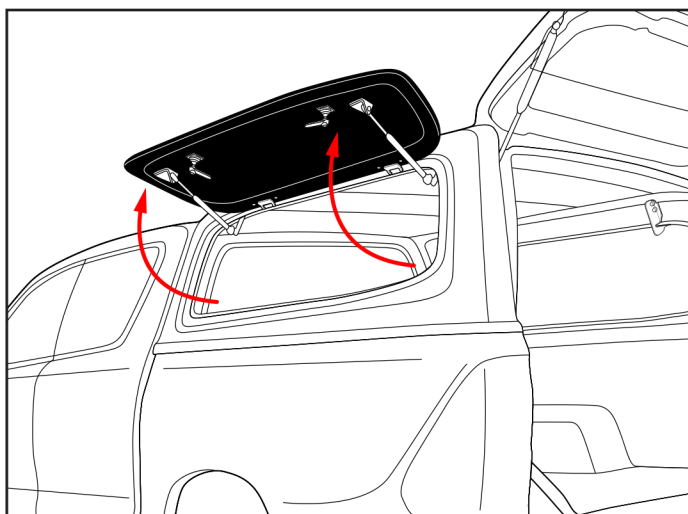


Picture shows how to open the side window.


## User manual

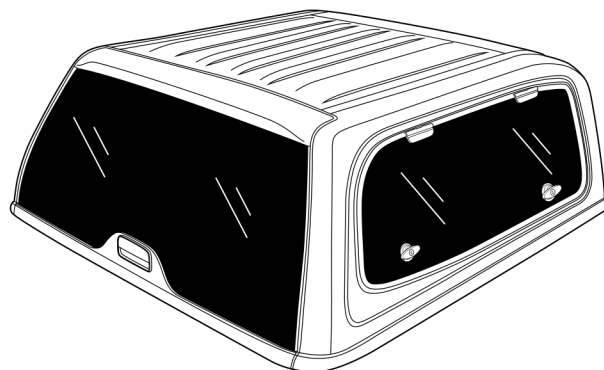 

 Glass Birdwing Window Left-Right  
(Handle Lock)

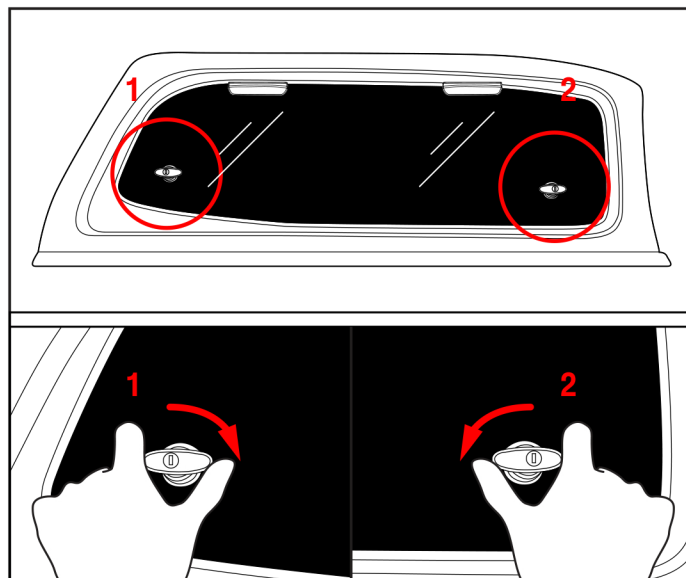

 
Turn around the canopy lock as shown in picture to close the side window.

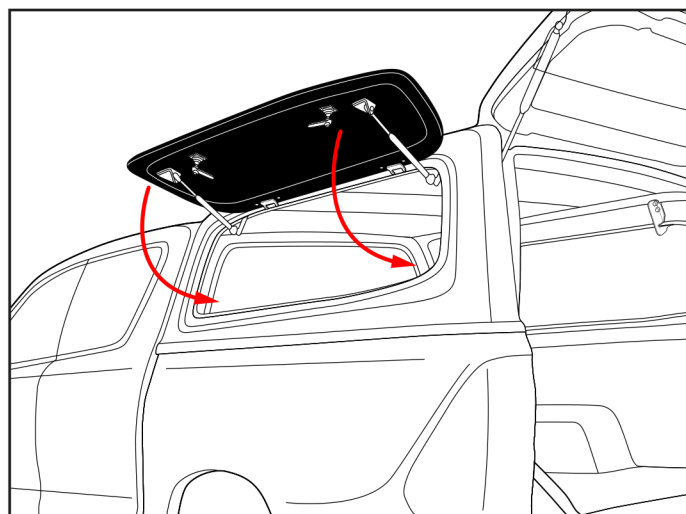


Picture shows how to close the side window.




## User manual

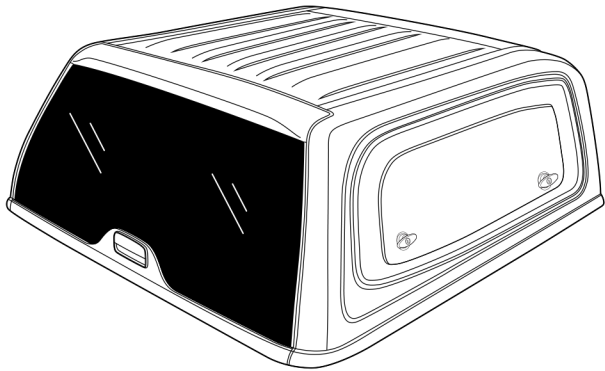 

 **Solid Birdwing Window Left-Right  
(Handle Lock)**

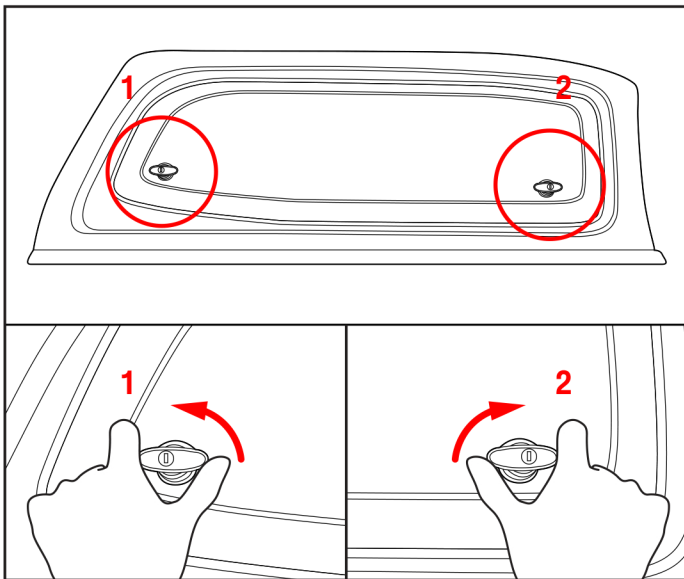


 Turn around the canopy lock as shown in picture to open the side window.

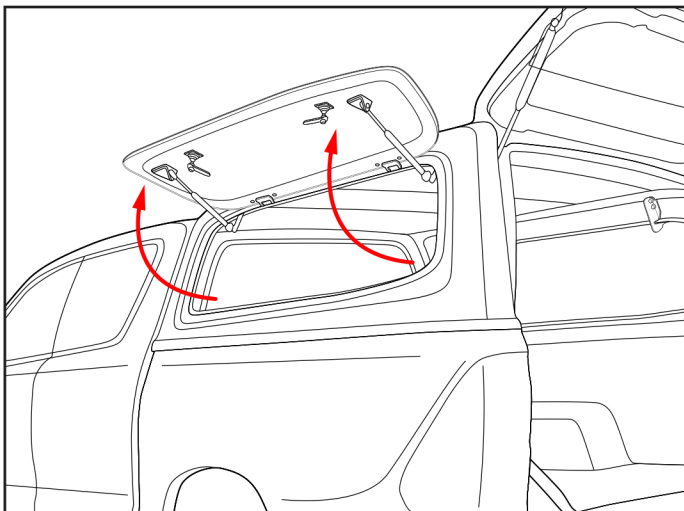


Picture shows how to open the side window.


## User manual

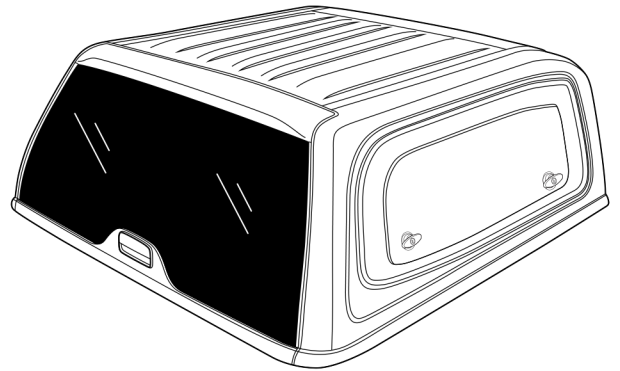 

 **Solid Birdwing Window Left-Right  
(Handle Lock)**

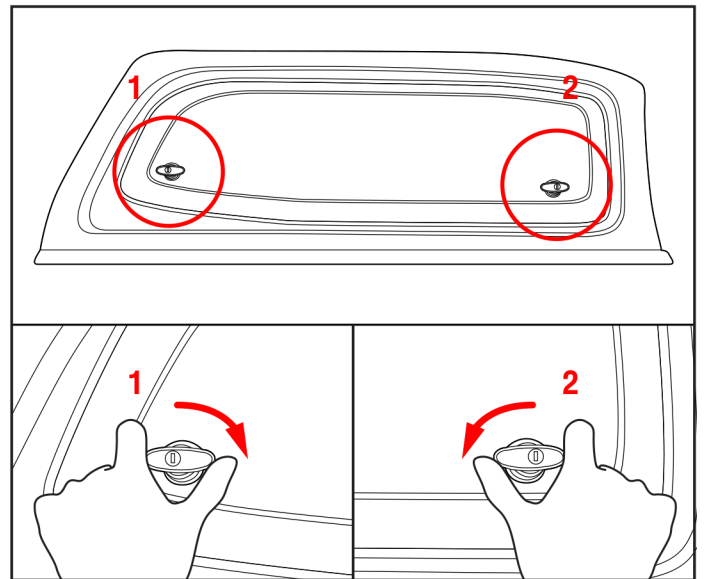

 
Turn around the canopy lock as shown in picture to close the side window.

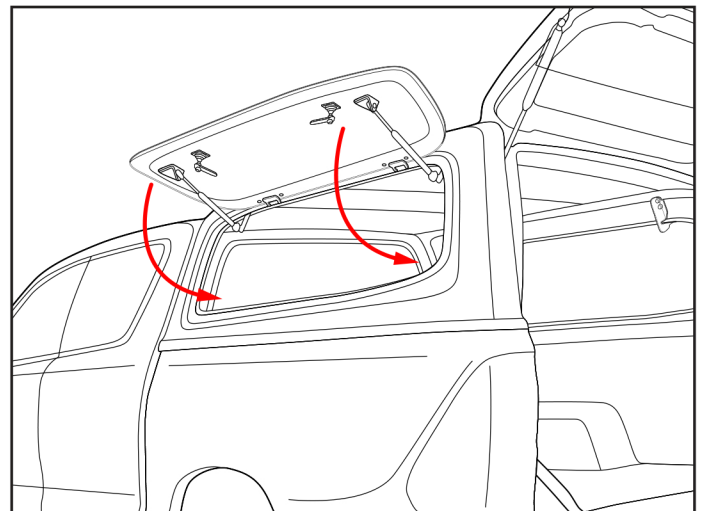


Picture shows how to close the side window.




## User manual

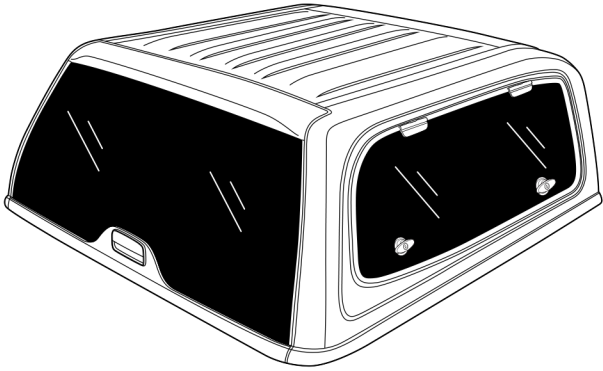 

Backdoor

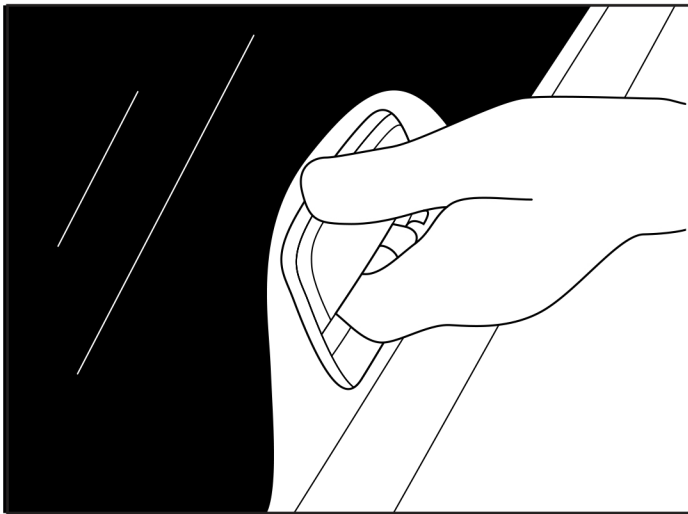 


 Use the handle as shown in picture to open the backdoor.

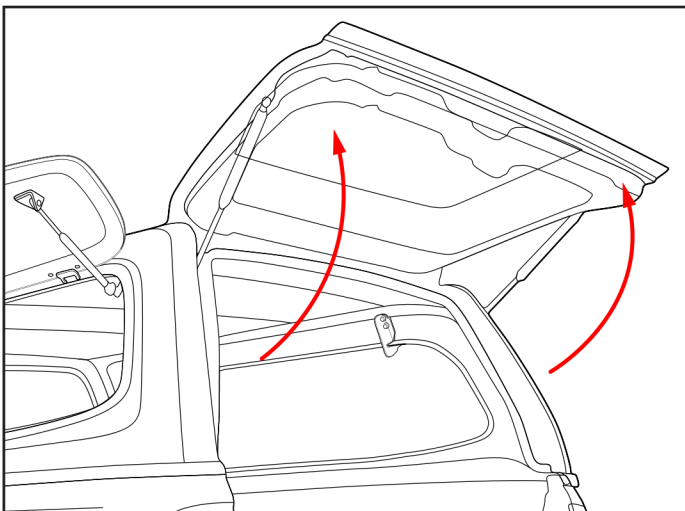


The Picture shows how to open the backdoor.


## User manual

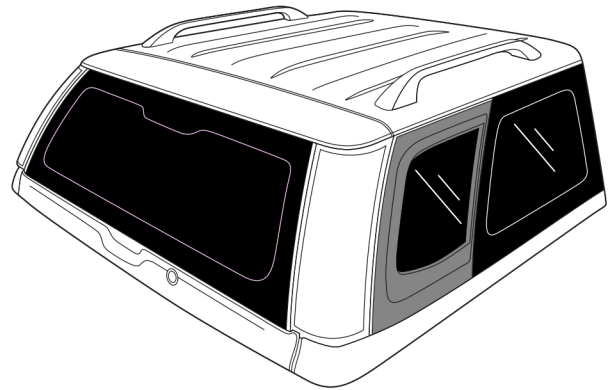 

Slide Window (Left-Right)

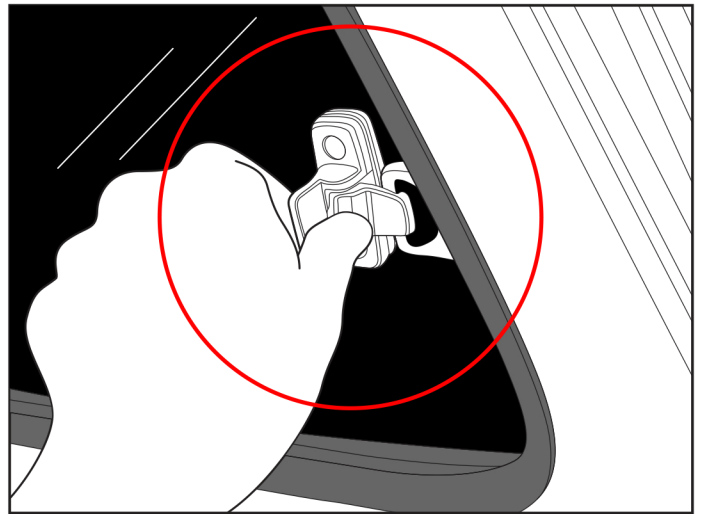 

Squeeze the lock side to open.

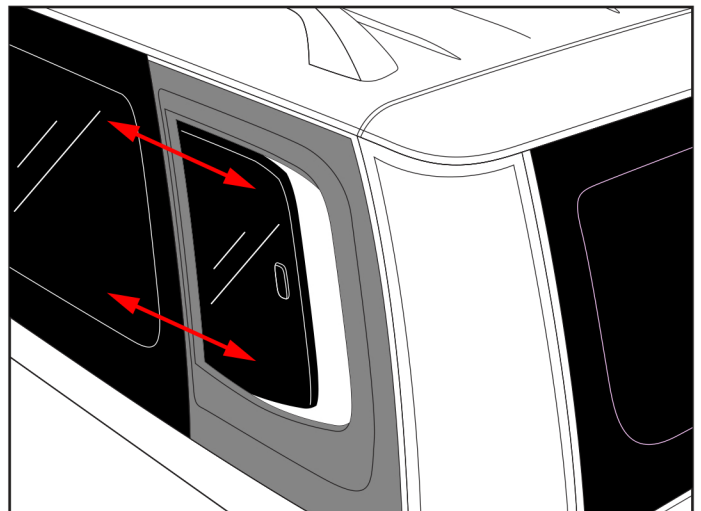 


The Picture shows how to open the side window.







## User manual

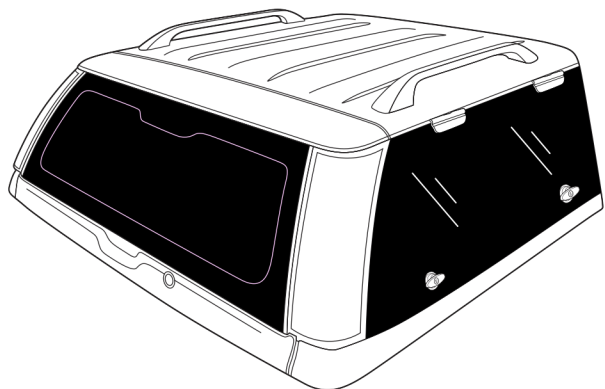 

 Glass Birdwing Window Left-Right  
(Handle Lock)

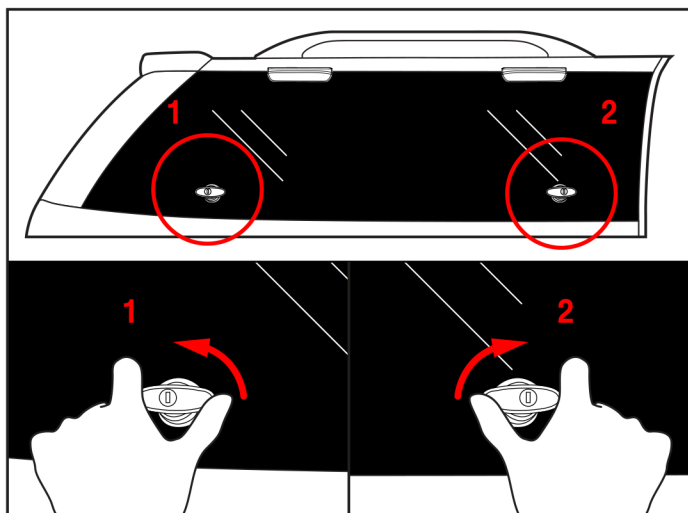


 Turn around the canopy lock as shown in picture to open the side window.

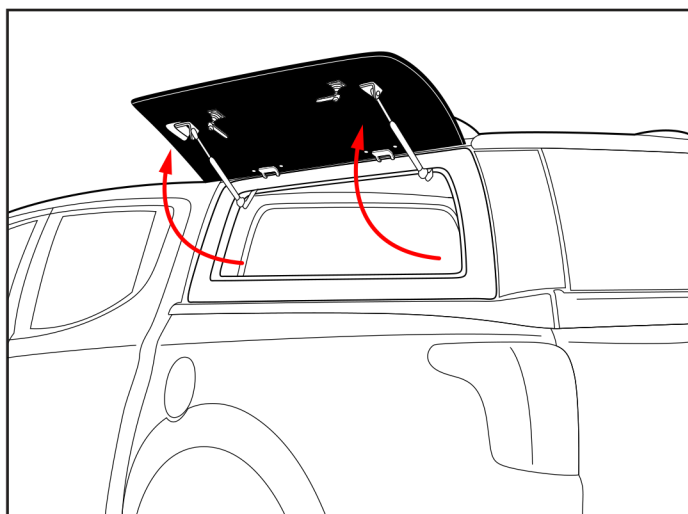


Picture shows how to open the side window.


## User manual

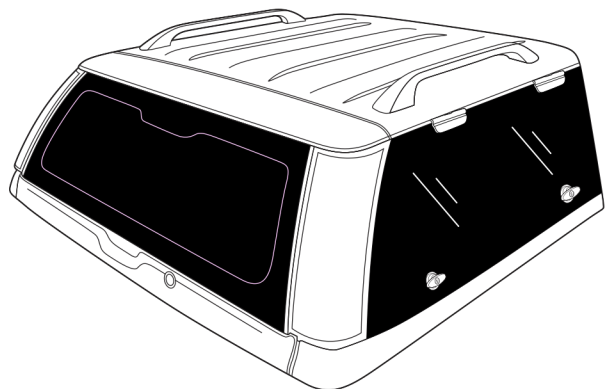 

 Glass Birdwing Window Left-Right  
(Handle Lock)

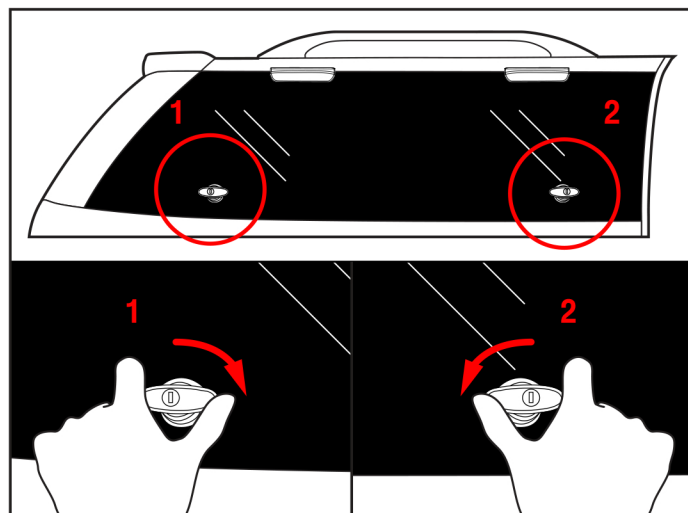

 
Turn around the canopy lock as shown in picture to close the side window.

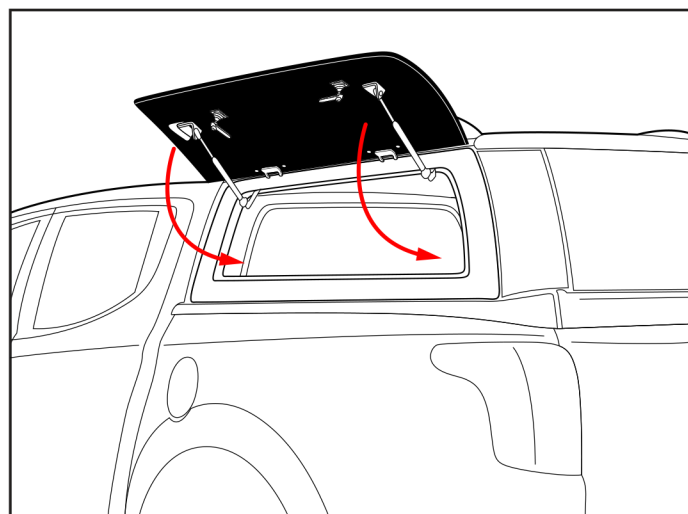


Picture shows how to close the side window.




## User manual

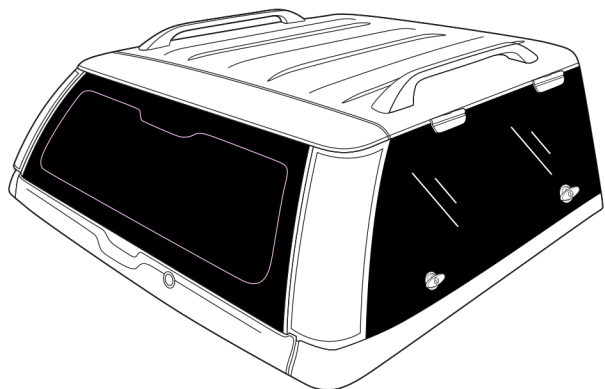 

Backdoor

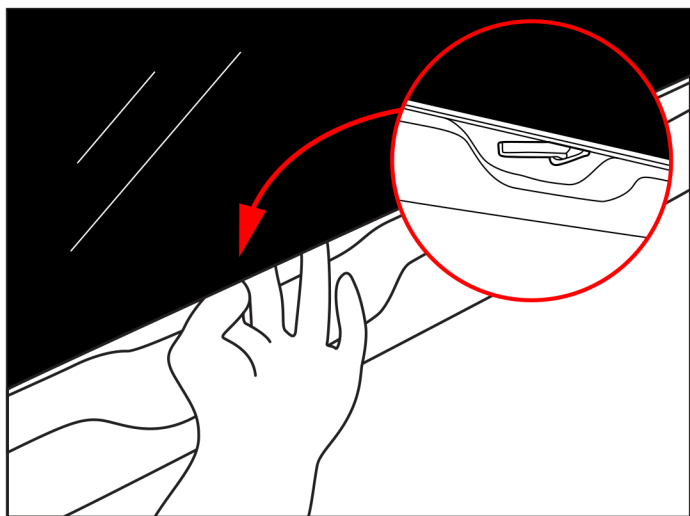 


 Pull the stick of handle to open the back door.

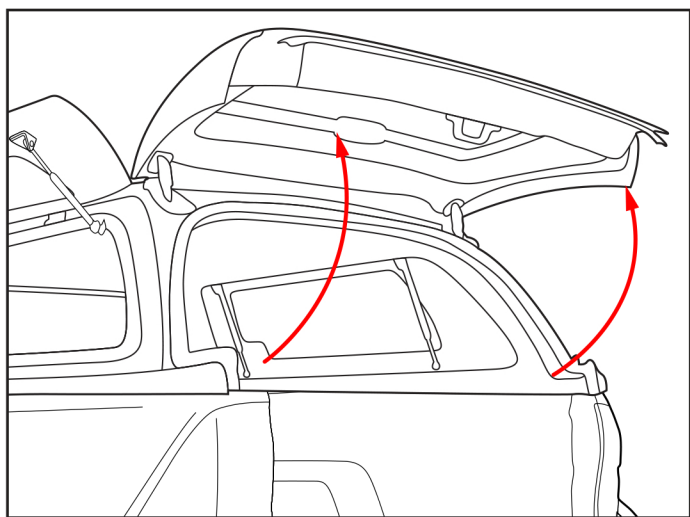


The Picture shows how to open the backdoor.


## User manual

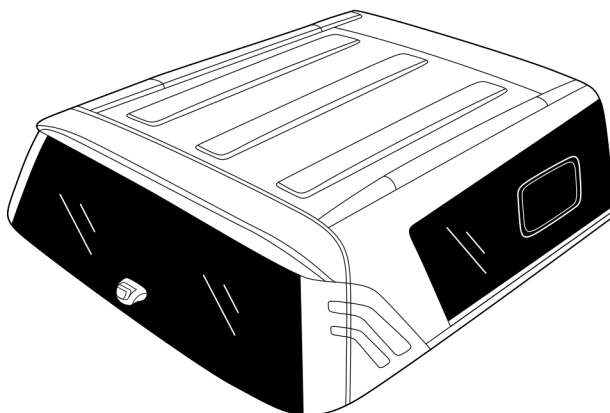 

Slide Window (Left-Right)

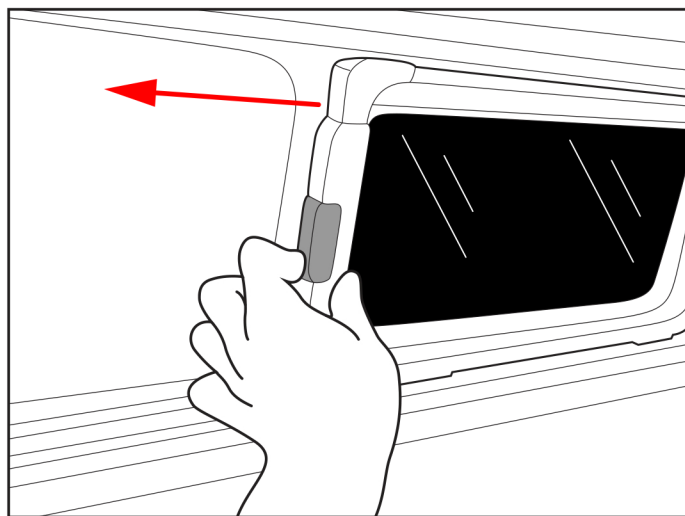 

 
Push the button in side canopy and slide back to open.

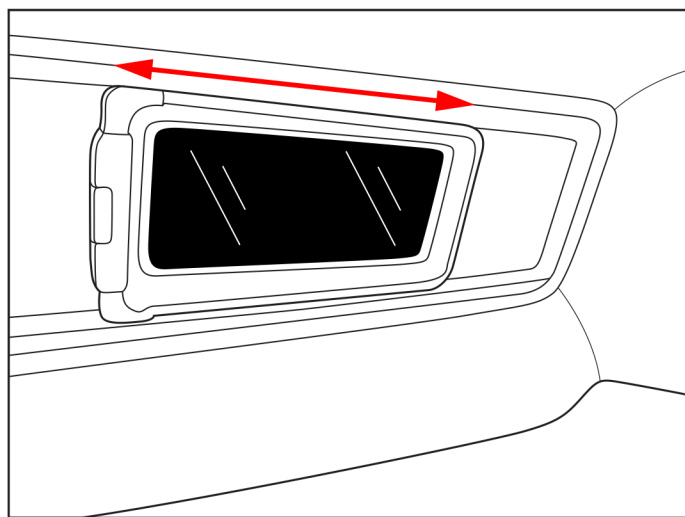


Picture shows how to open the side window from inside.




## User manual

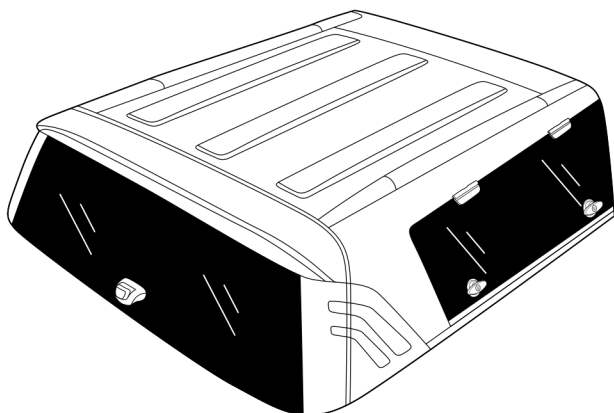 

### Glass Birdwing Window Left-Right (Handle Lock)

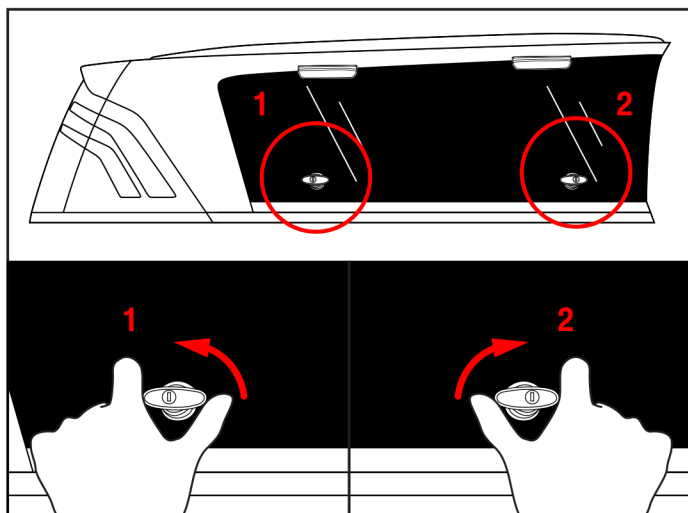 


 Turn around the canopy lock as shown in picture to open the side window.

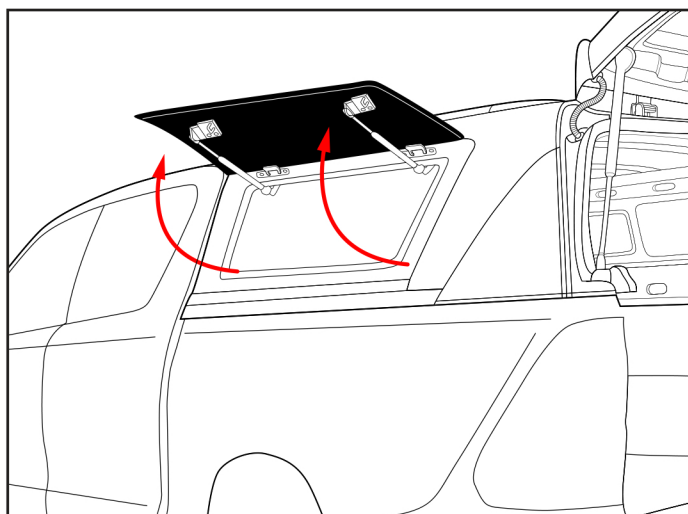


Picture shows how to open the side window.


## User manual

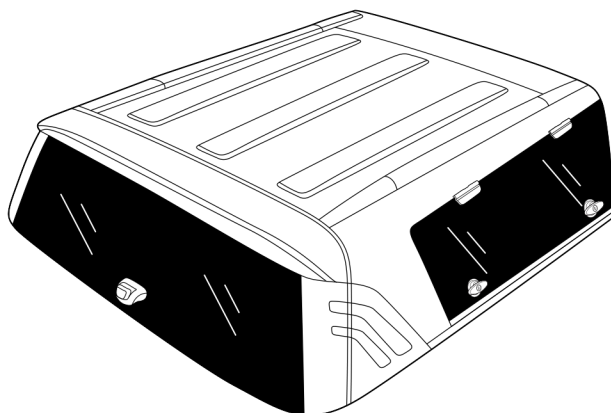 

### Glass Birdwing Window Left-Right (Handle Lock)

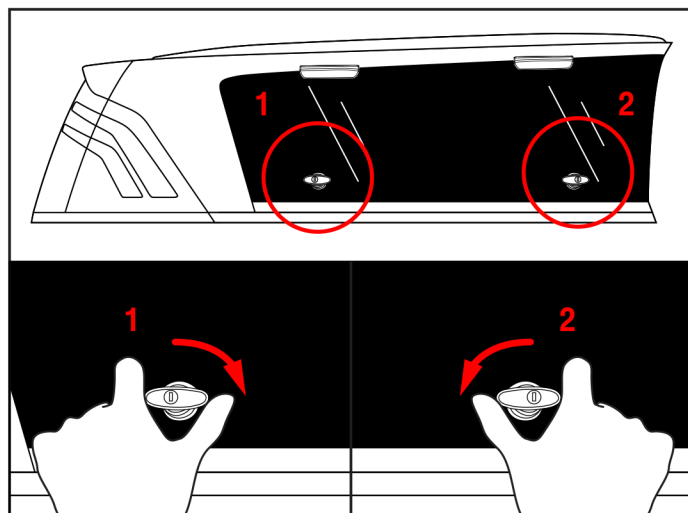 

 
Turn around the canopy lock as shown in picture to close the side window.

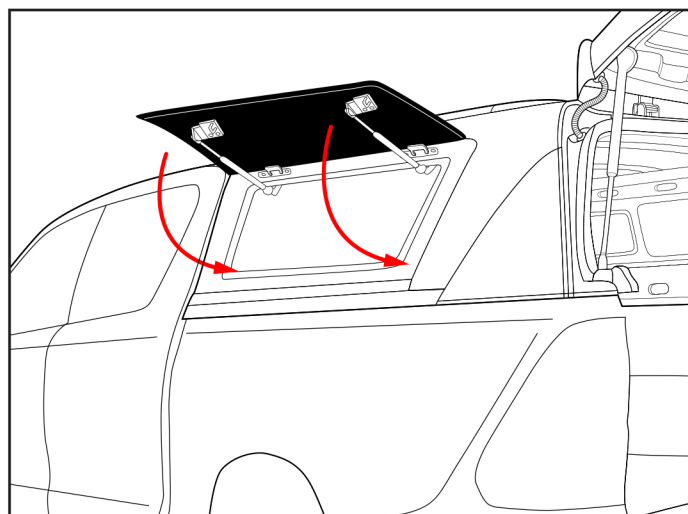


Picture shows how to close the side window.




## User manual

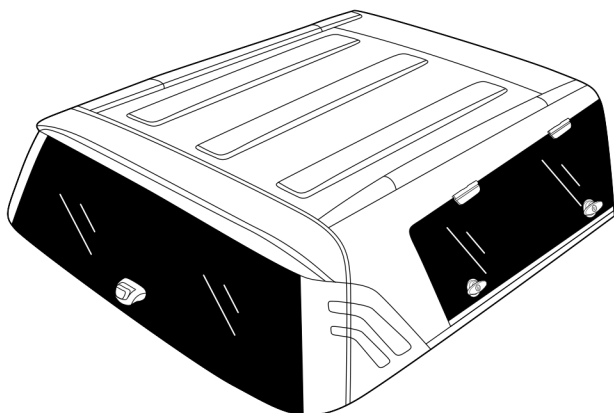 

## Backdoor

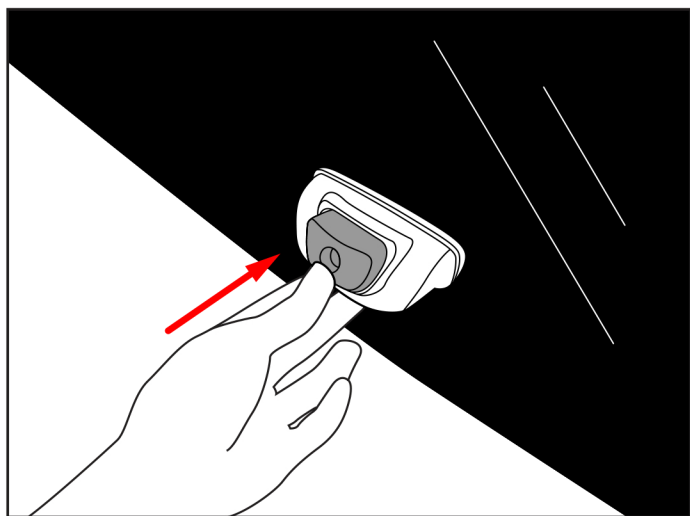 

Push the button to open the back door.

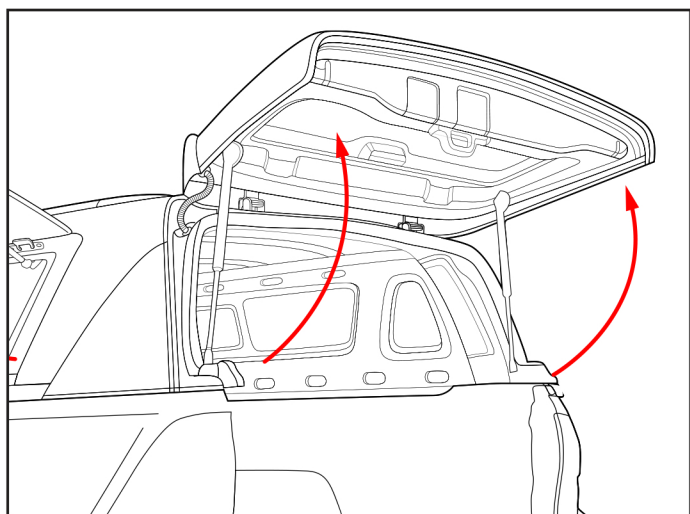 

The Picture shows how to open the backdoor.