



SAMMITR

Date...../...../.....

Version 1.0



SAMMITR

**Electric lock bird wing
Installation Manual**

for

Ford Next Gen


Amarok Next Gen

2023






SAMMITR

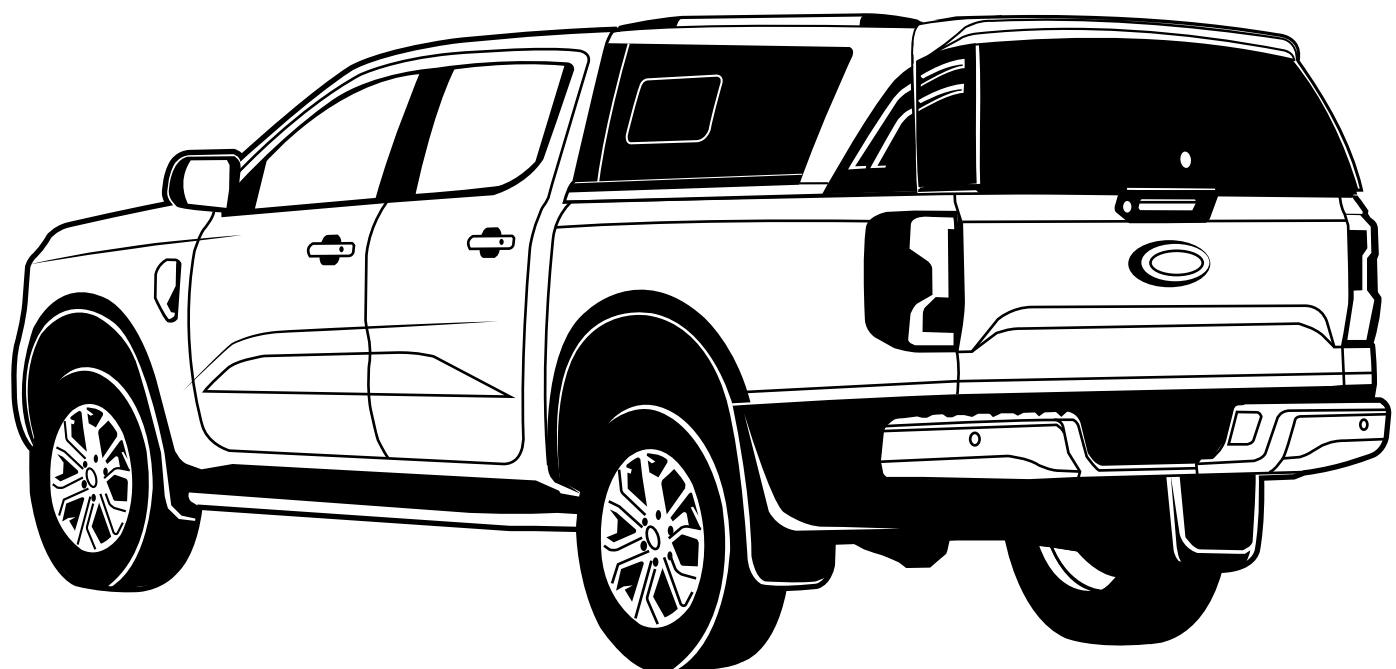




SAMMITR


■ Steel Canopy S-Plus V2

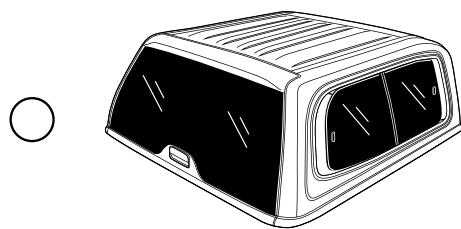


Glass Slide Window

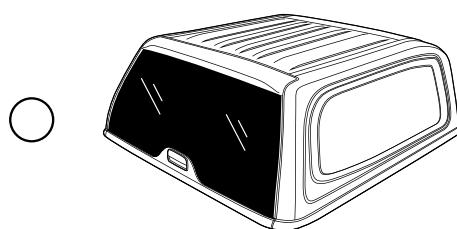


Solid Window

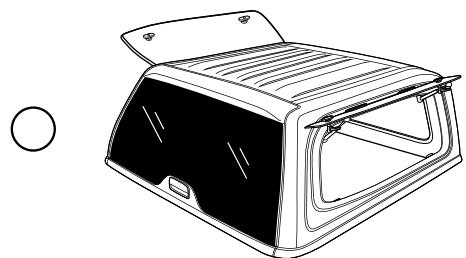

Solid Birdwing Window (Handle Lock)

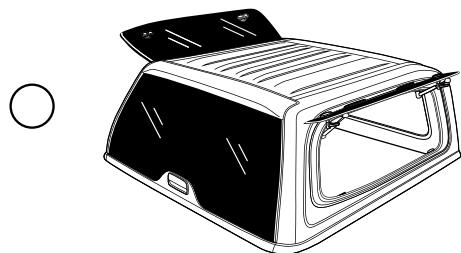


Glass Birdwing Window (Handle Lock)

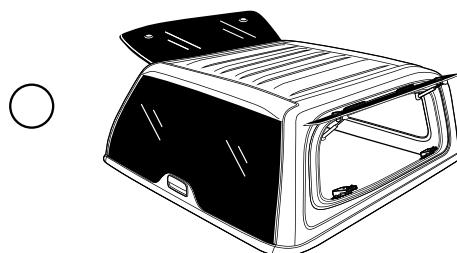


Glass Birdwing Window (Electric Lock)


■ Steel Canopy SUV-Plus V4

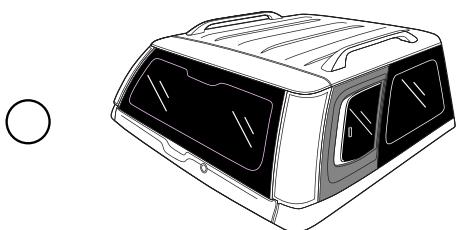


Glass Slide Window

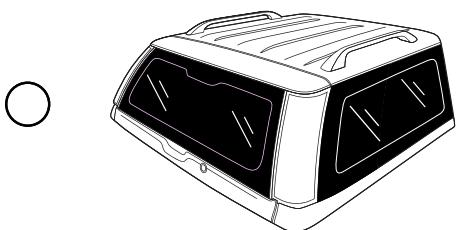

Glass Fix Window

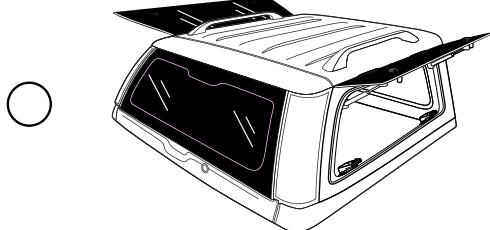


Glass Birdwing Window (Electric Lock)

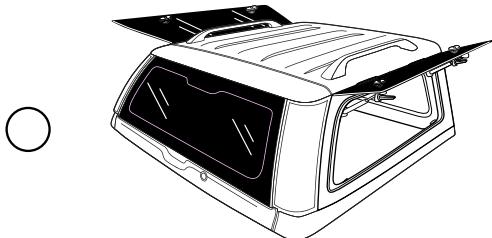


Glass Birdwing Window (Handle Lock)


■ Steel Canopy TL-1

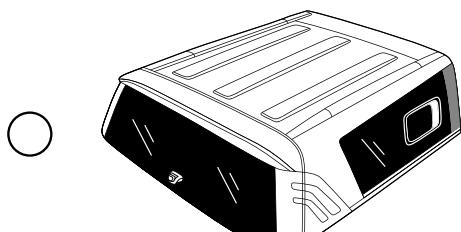

Glass Slide Window

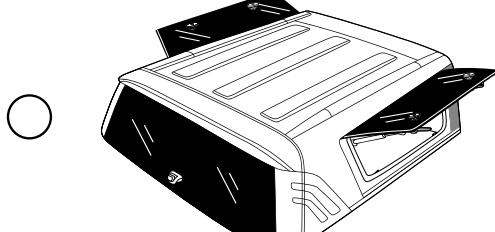

Glass Birdwing Window (Handle Lock)

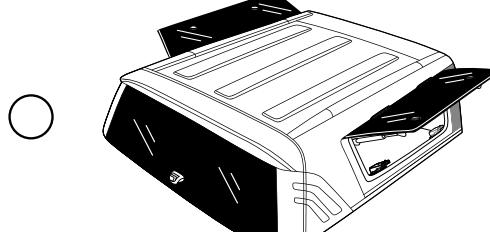

Glass Birdwing Window (Electric Lock)





Mechanical Installation Manual Steel Canopy : TL-1 All Models

Version 1.0


Part In Main Carton

P1: Steel Canopy TL-1

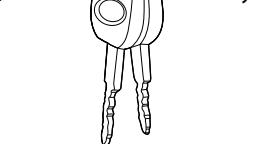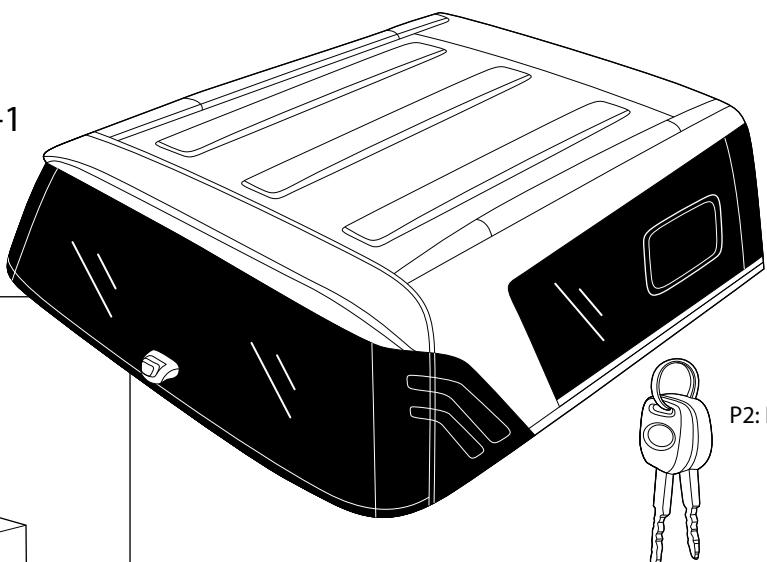


Kit Box


Part List Paper

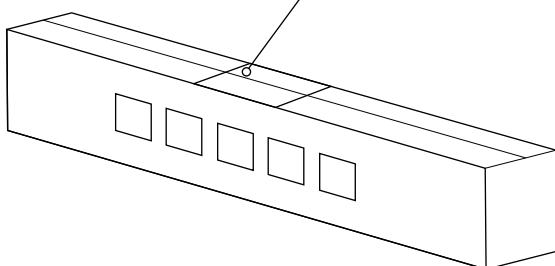


K8 : T Paint

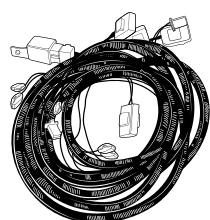


K3 : Wiring No.38

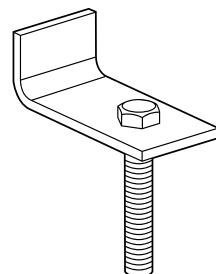

BRKT LOCK ROOF

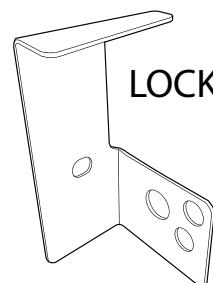


LOCK TAIL GATE RH

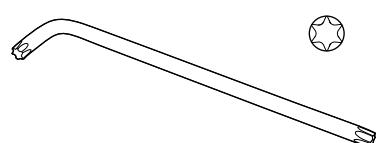


T6 : Hexalobular Wrench # T40


Require Tools

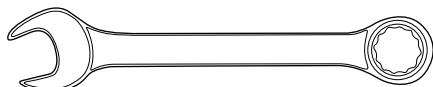

T1 : 13 mm. Wrench

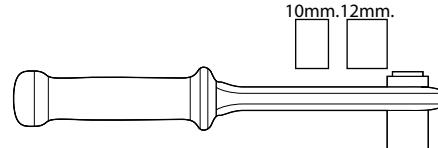


T3 : 10,12mm. Torque Wrench

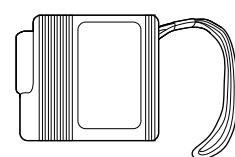

T7 : Measuring Tape/Ruler




T2 : 10 mm. Wrench

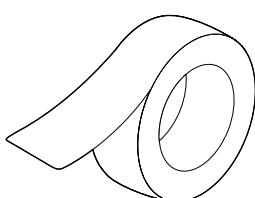

T4 : Tape



T5 : Electric Tape

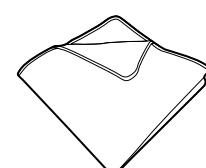


T8 : Fabric





1

The Procedure of checking the Sammitr canopy box before installation.

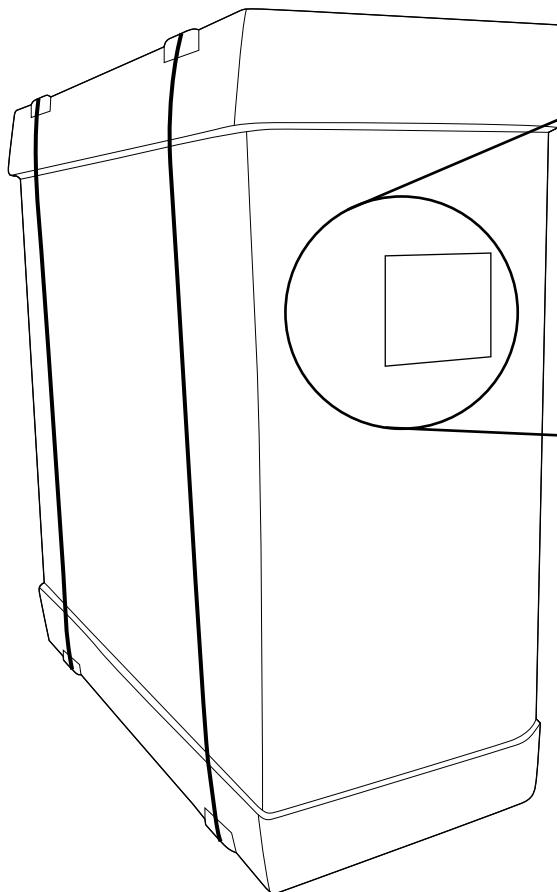

Brand
Model
Type
Year
Color
Part number
Serial number

1. Make sure that Sammitr canopy box is in good condition, No marks, distorts or any damages.
2. Check Model / Year of the canopy and Model / Year of the vehicle which have to be matching.
3. Check canopy serial number / model code and vehicle serial number / model code which have to be matching by looking at the rear canopy handle.
4. Check all the accessories received inside the box with the Packing List.

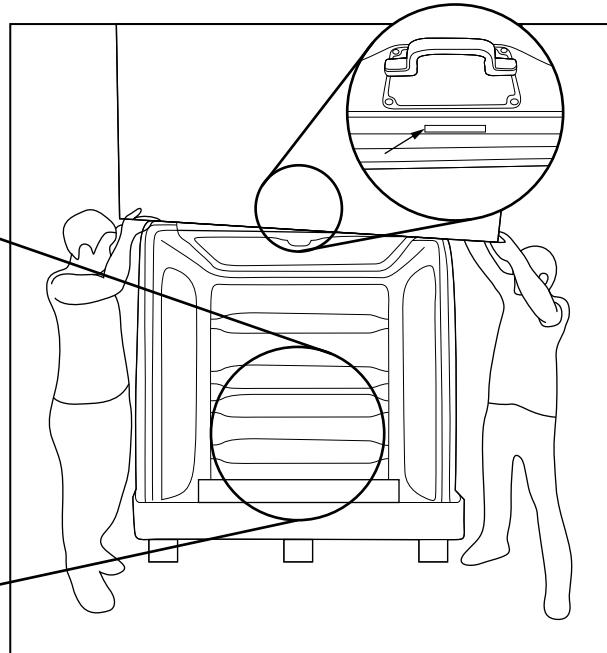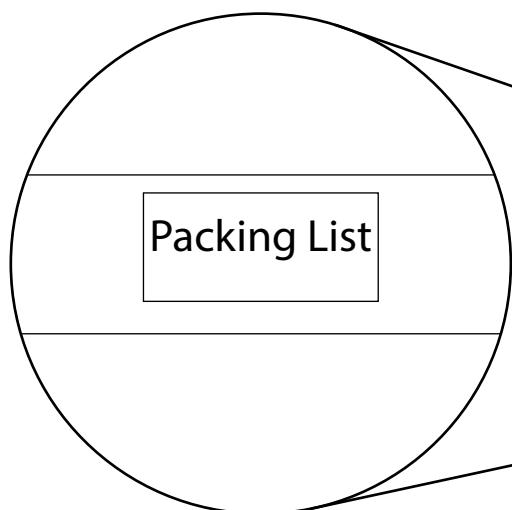




2


The preparation process of Sammitr Canopy TL-1 model before installation with the vehicle.

1

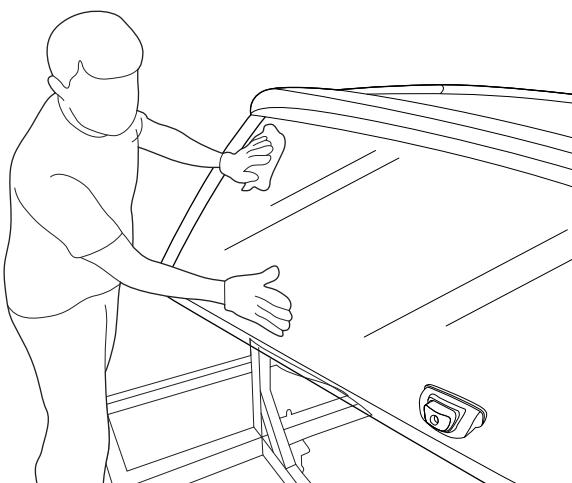


1. Canopy have to be in good condition, no damage, dent, cracks, smooth surface including no window damages or cracks.
2. Locking system is working for both keys.
3. Canopy sides are not damage, dent or cracks.
4. Canopy front window panel is working (open/close), no cracks or damages occurrences.
5. Check the Rear Door by open and close.


2

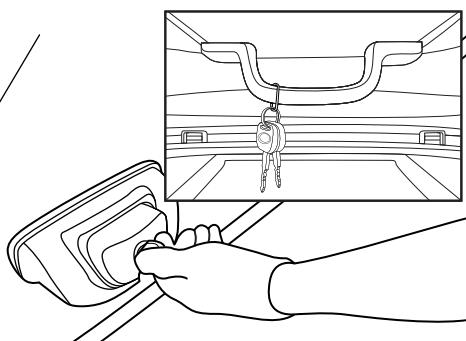


4

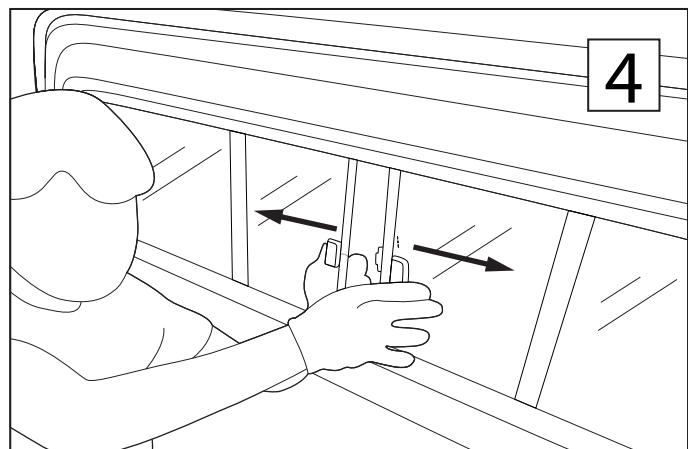

3

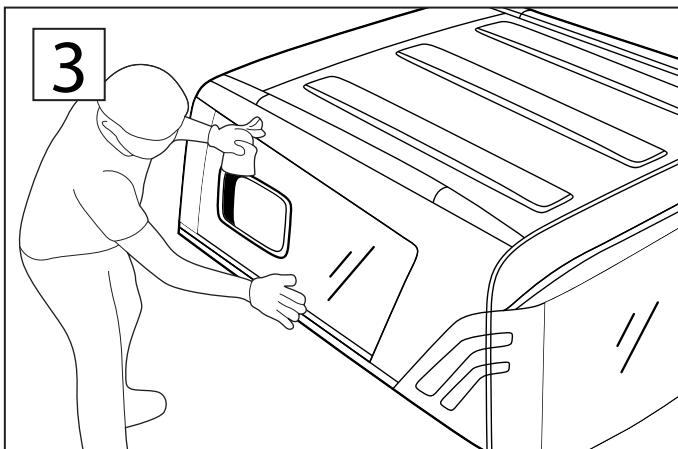


5

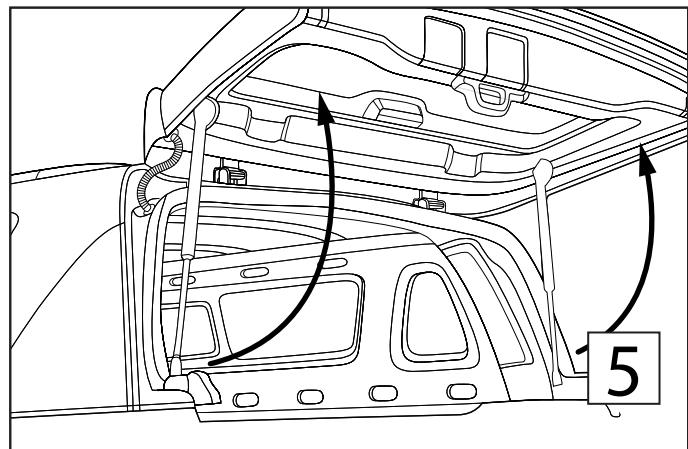




3

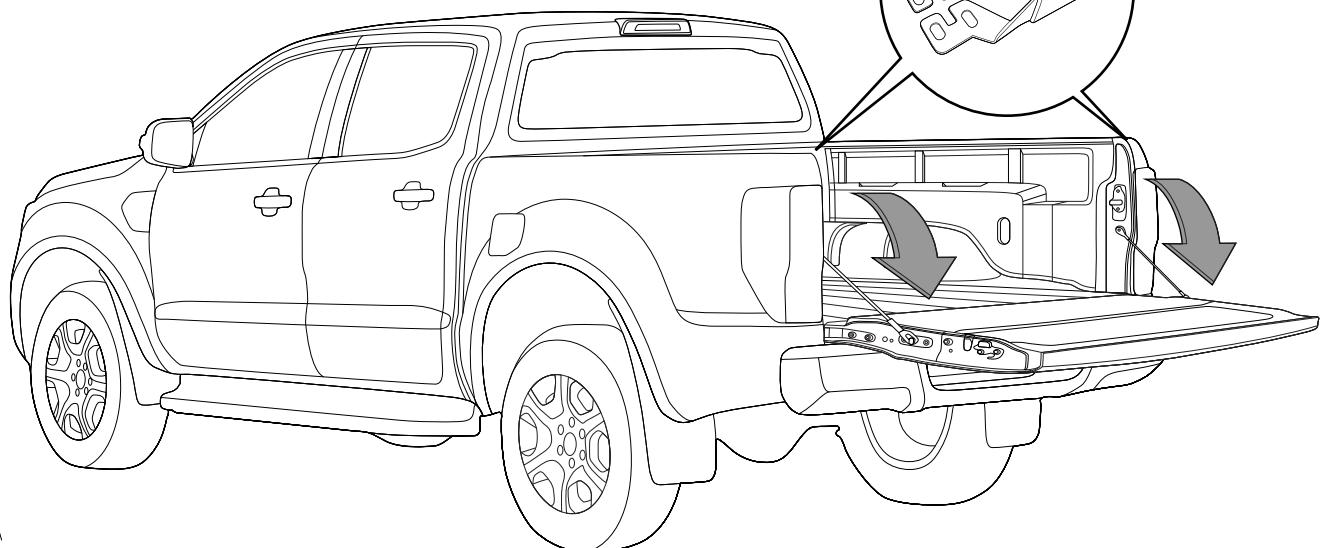

Installation complete.


4

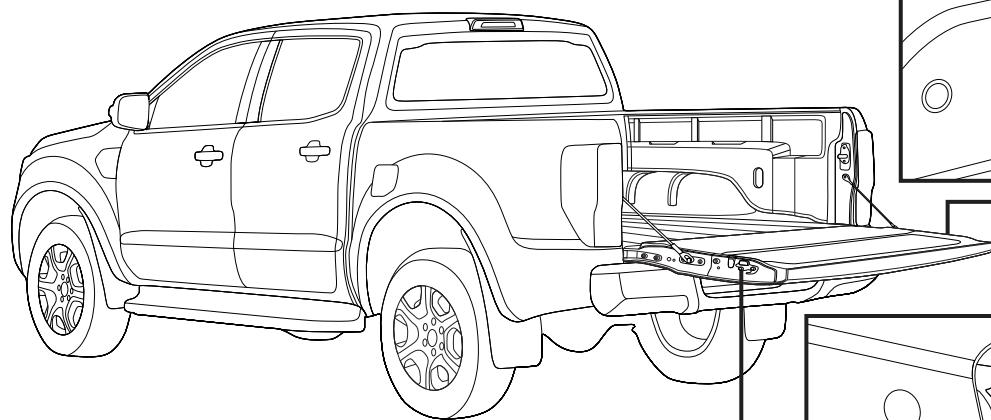


Right Side

Left Side

The Position install of lock Side

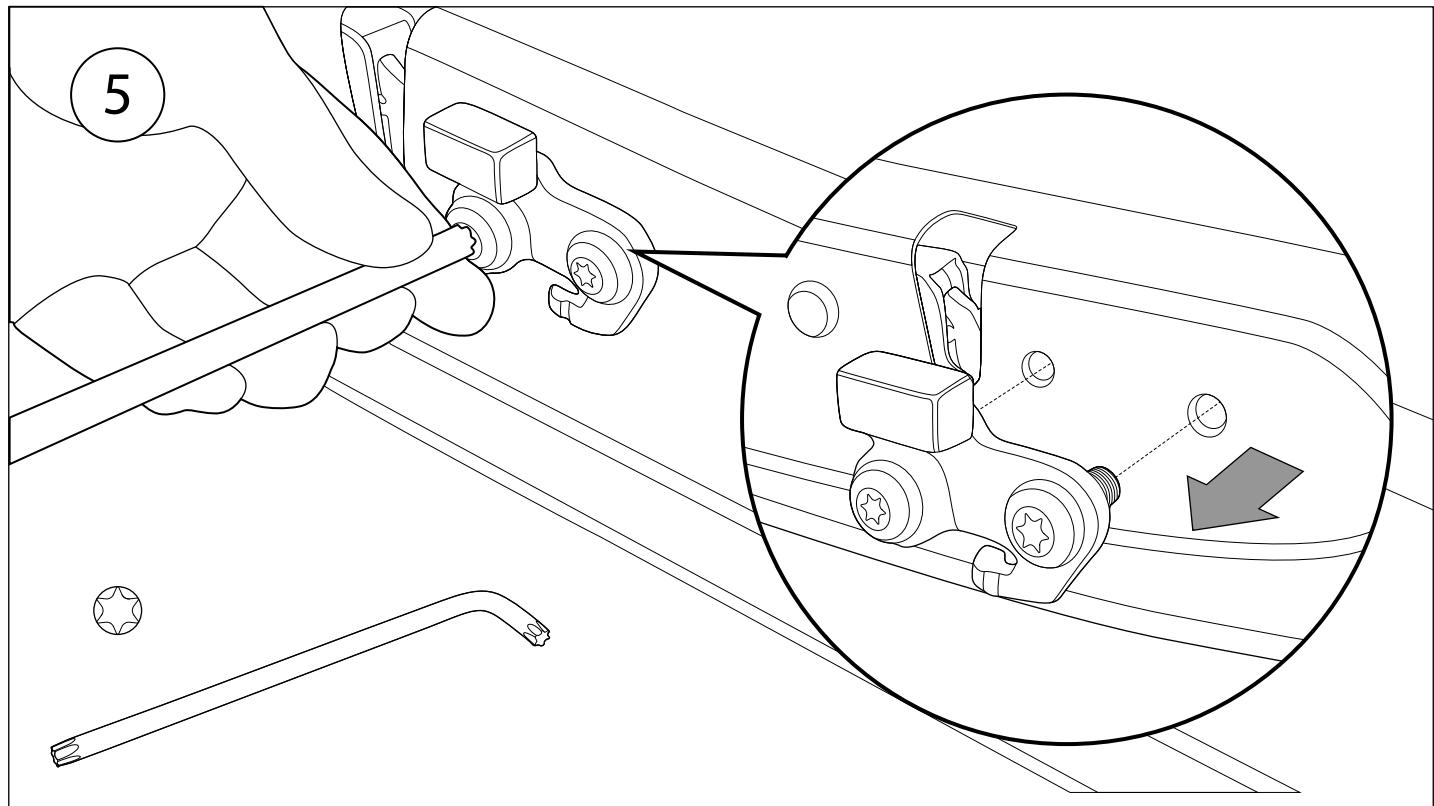

Remove The Lock Side of tailgate. (Left / Right Side)



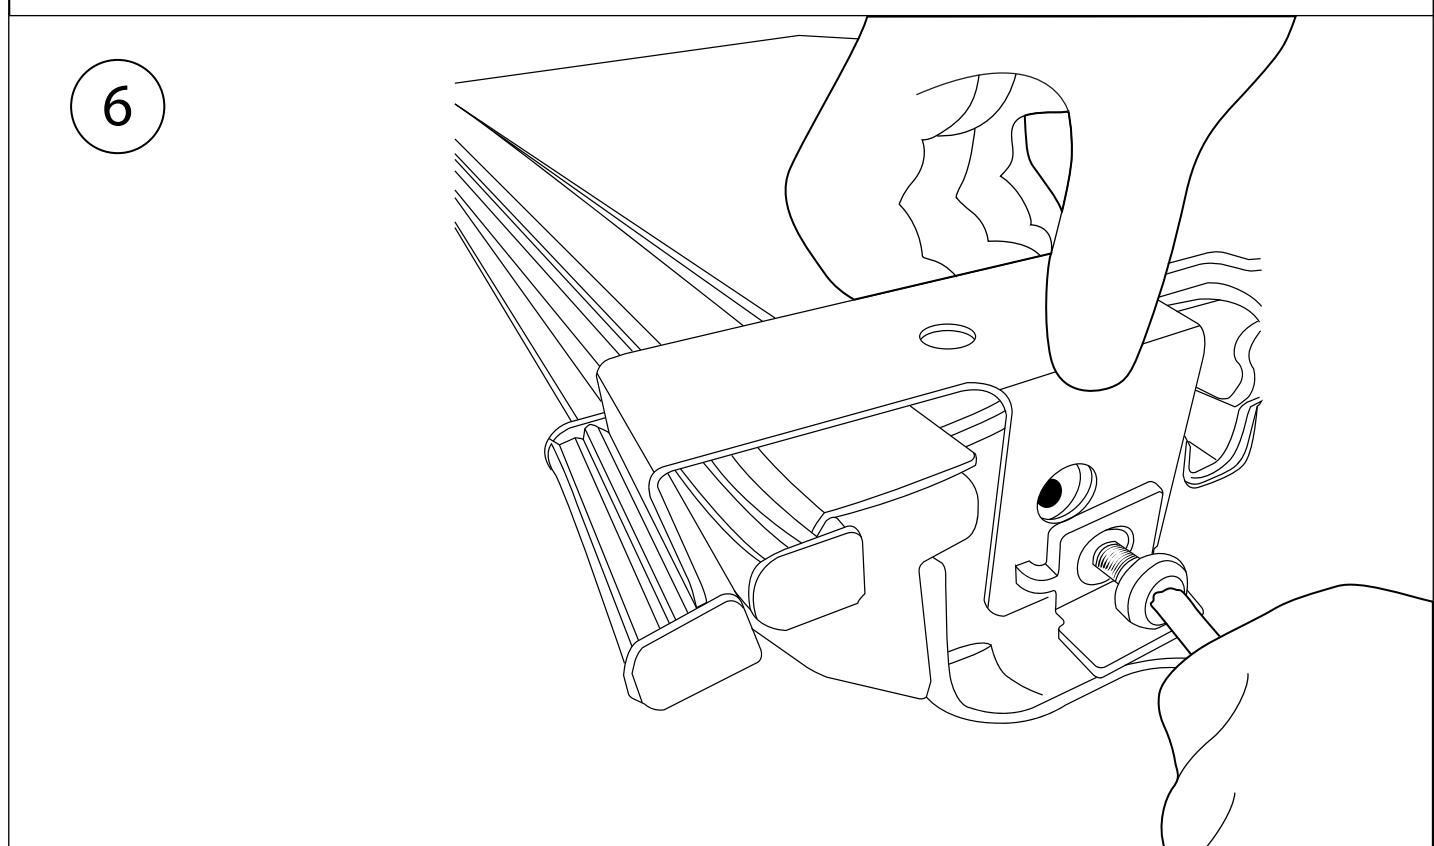


LOCK TAIL GATE RH



7


Tape Glue

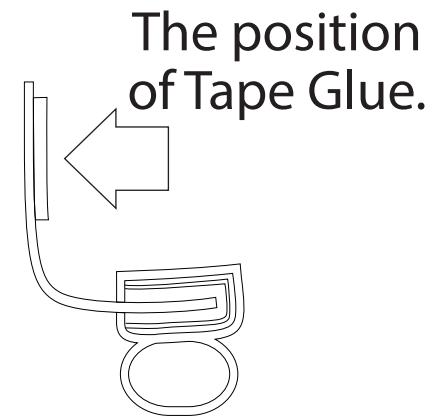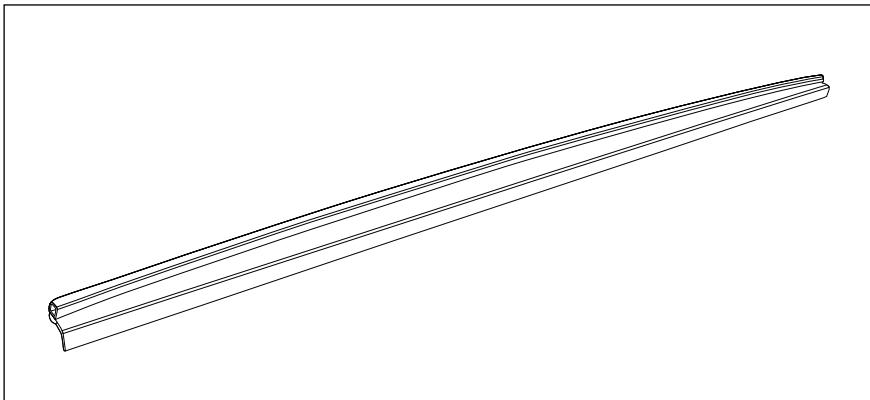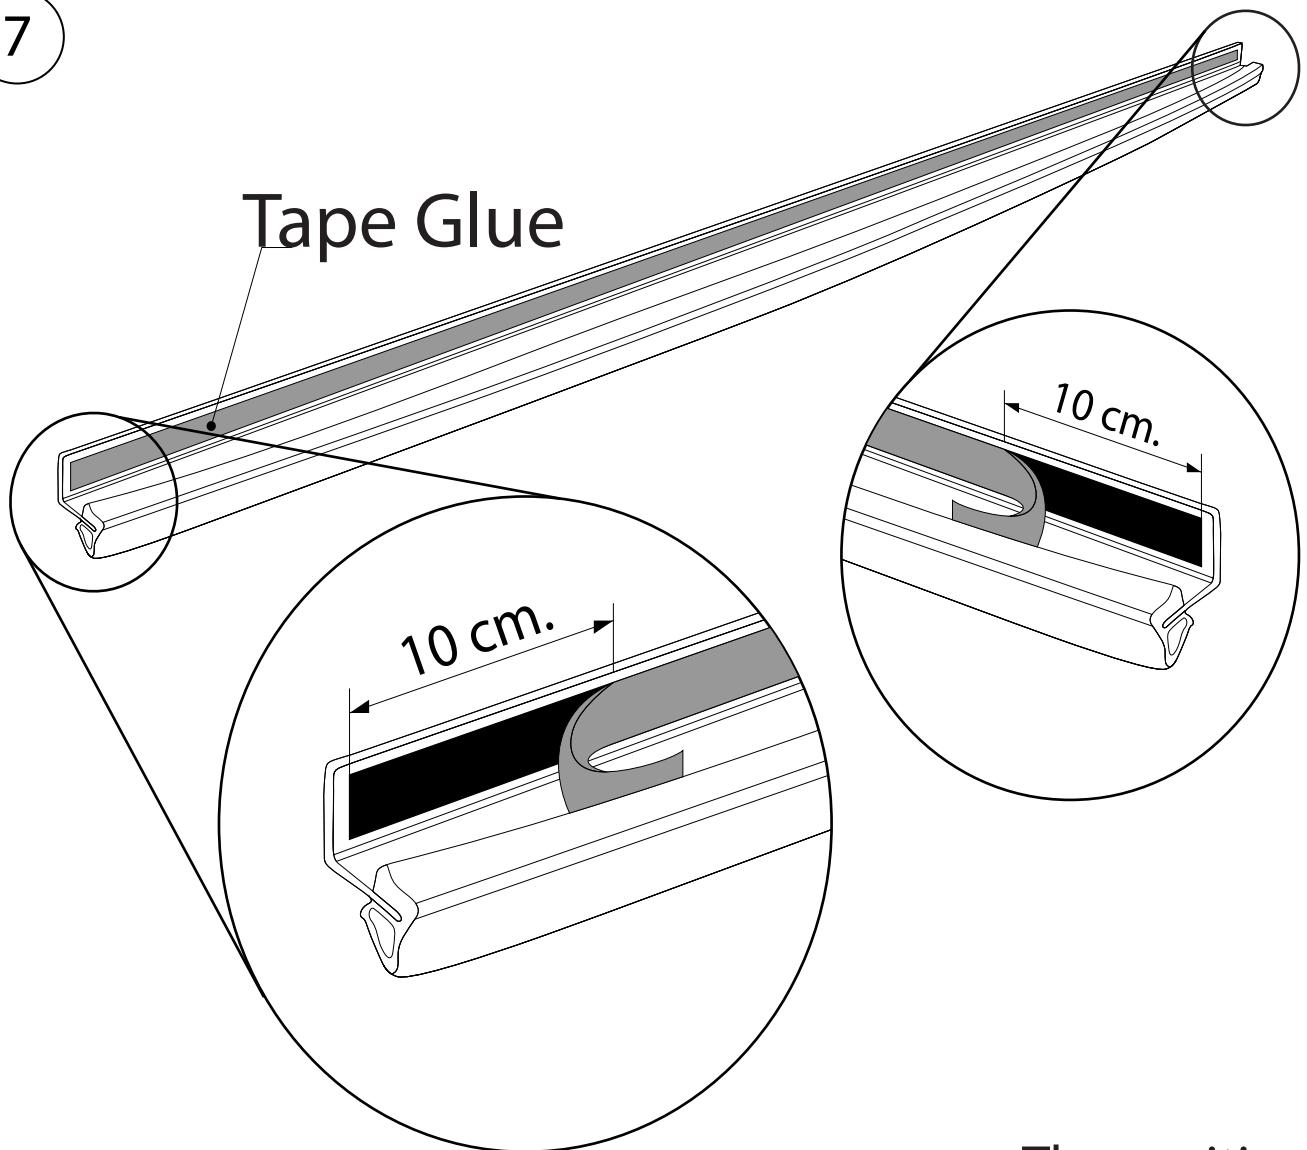

Pull tape glue out 10 cm. on each side.



8

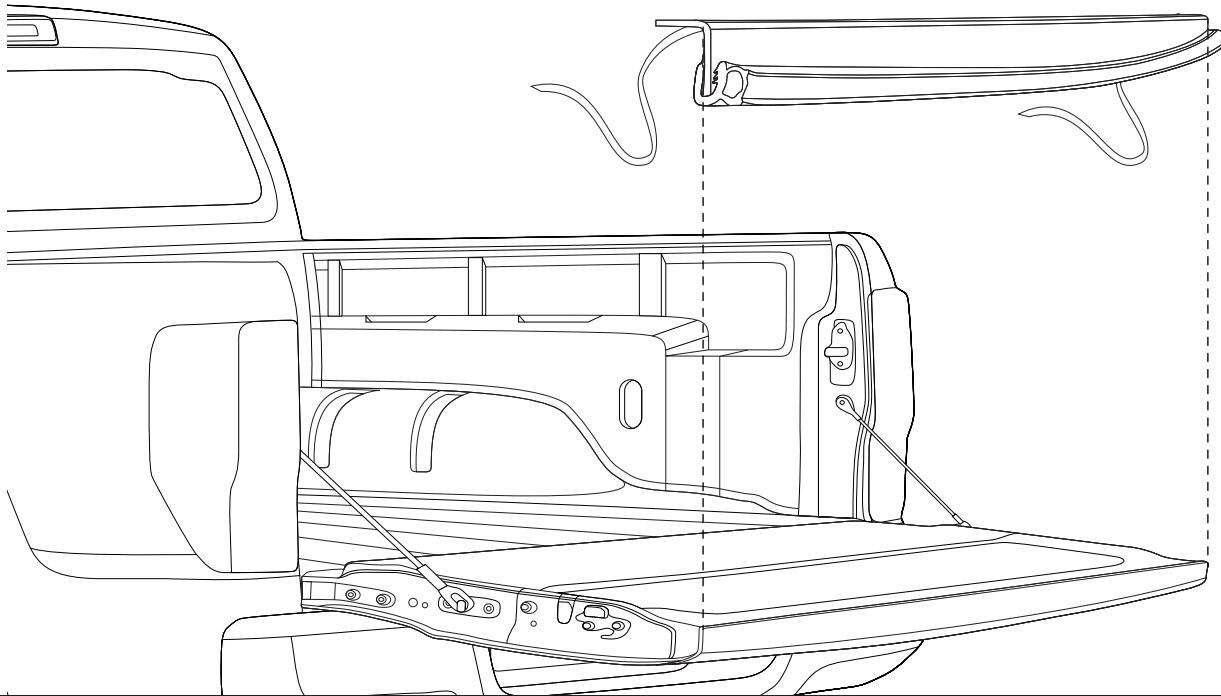

Alignment the position between the edge of tailgate and Frame Weather Strip.

9


Press




Pull the tape glue.



10

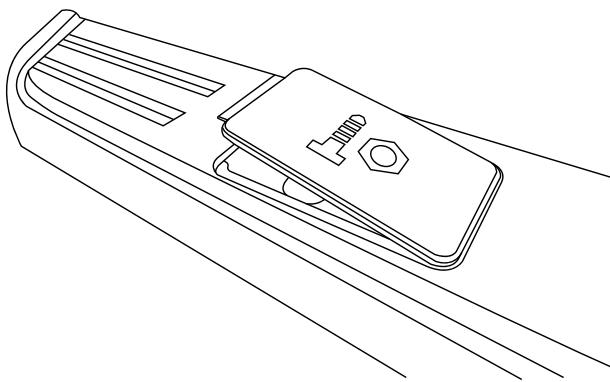


11

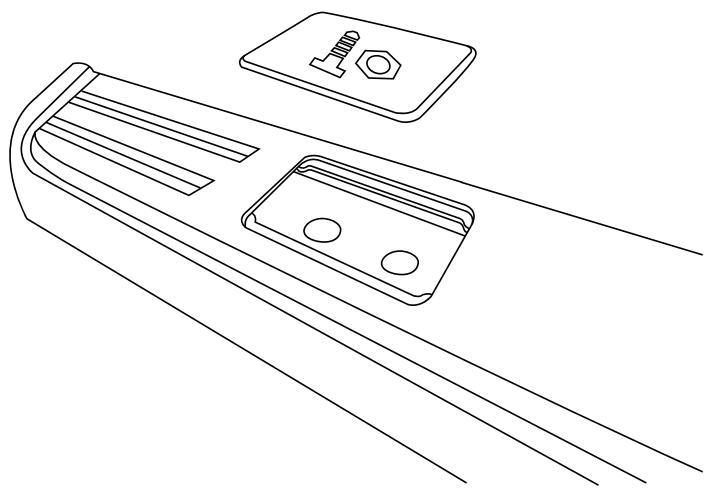

Remove the Cover in order to install the spacer Install canopy
on the vehicle

12

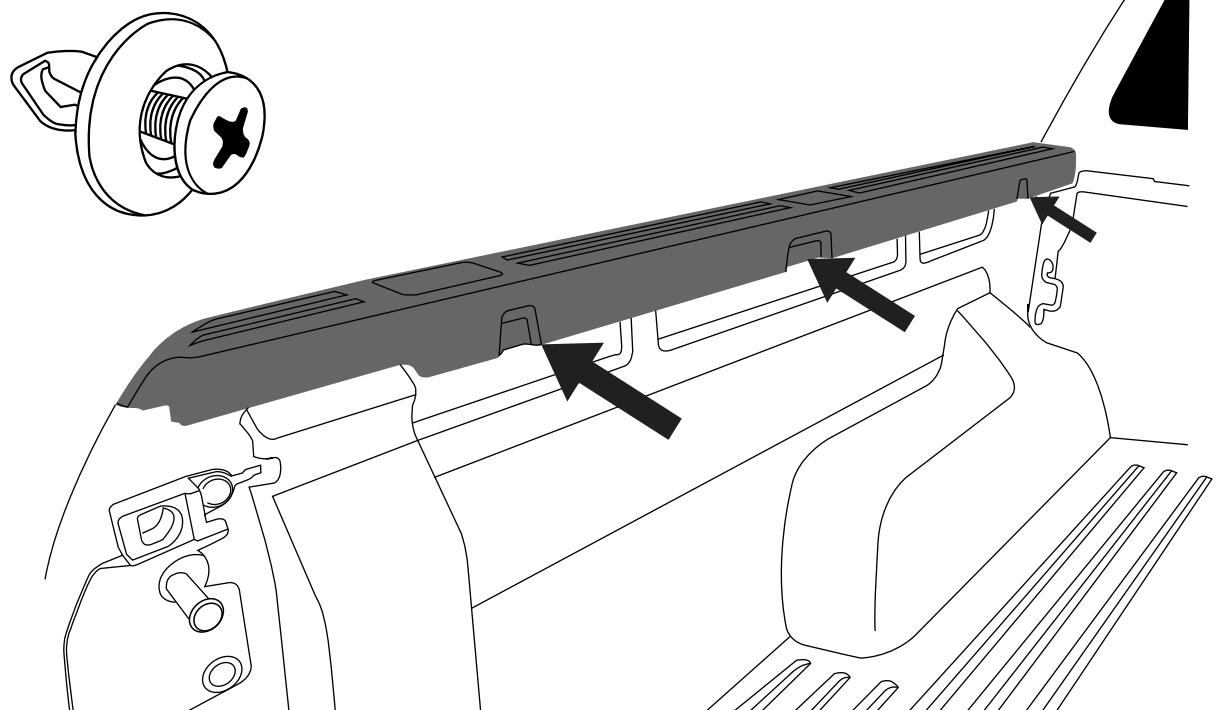


Remove The Hole Rivets 3 Positions. (L)



SAMMITR


13

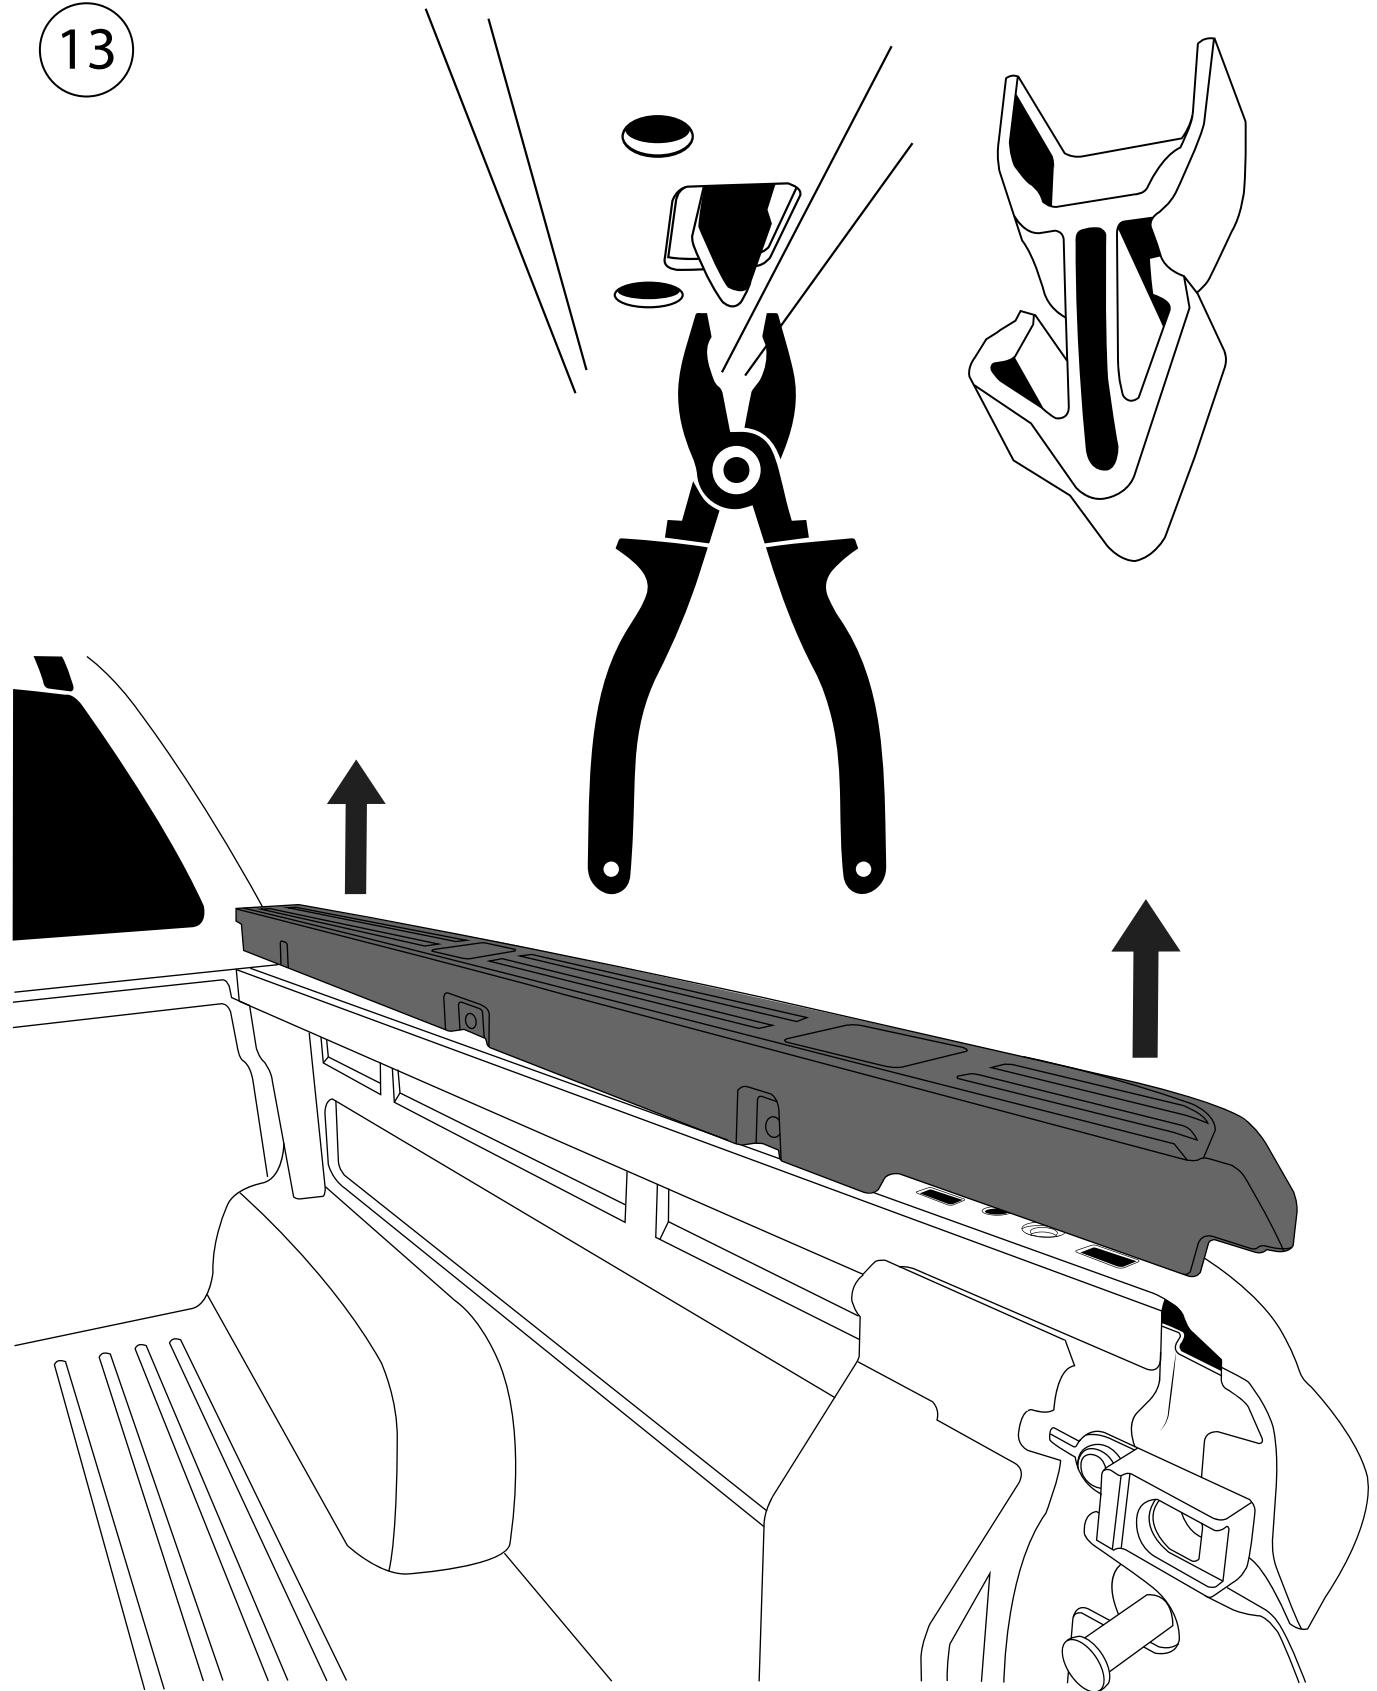


Use The Plier To Clip Lock and Pull the Cover



14 The process of preparing Sammitr Canopy TL-1 model before install on the vehicle.

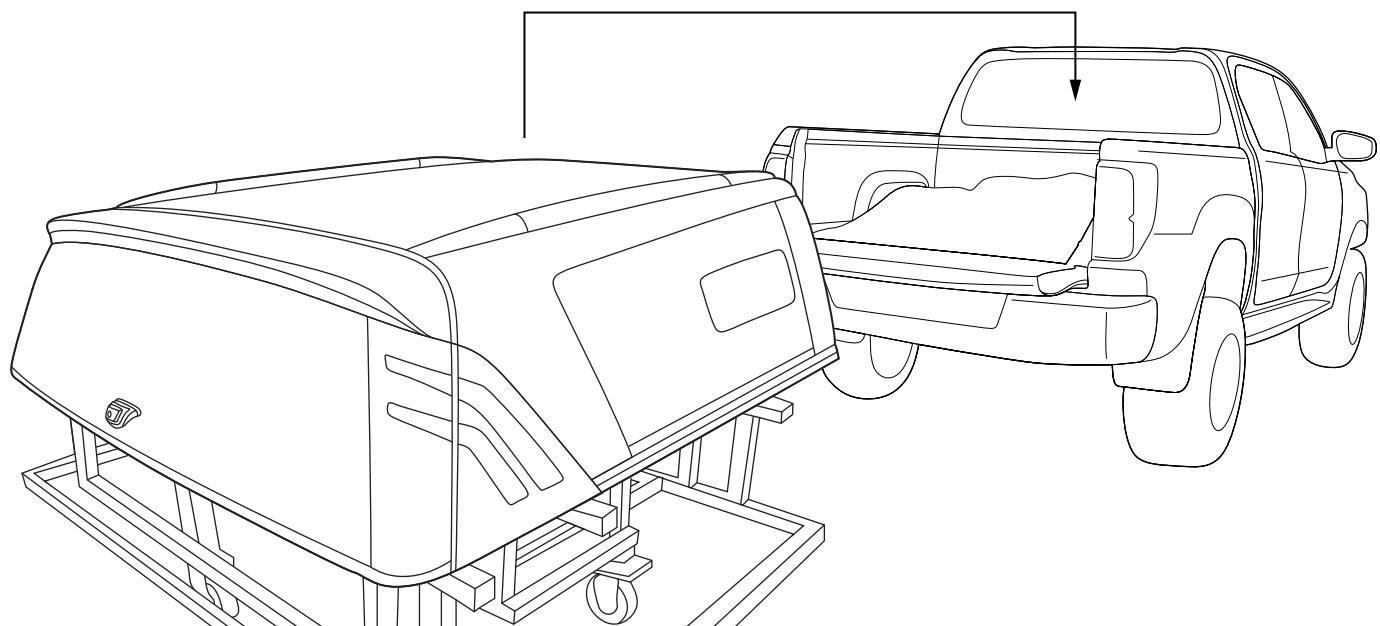


15

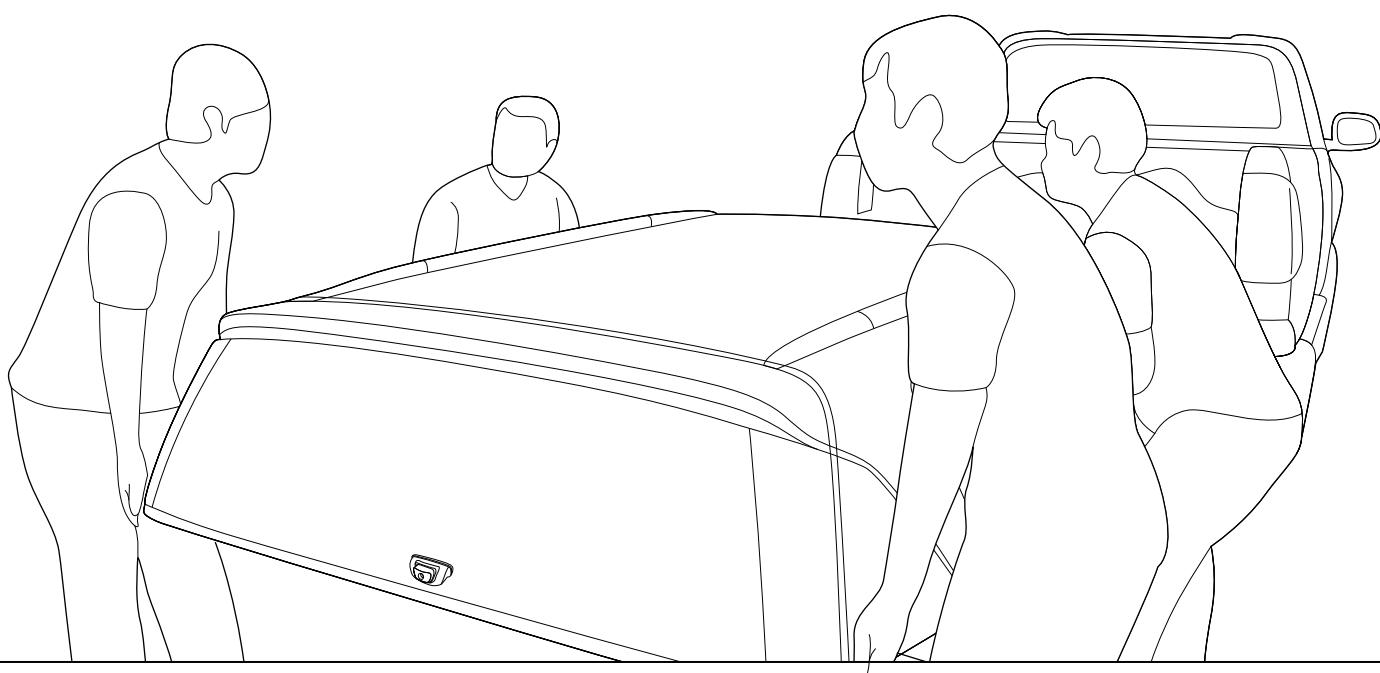

The process of lifting the canopy onto the vehicle tub by using 4 people for lifting.




16

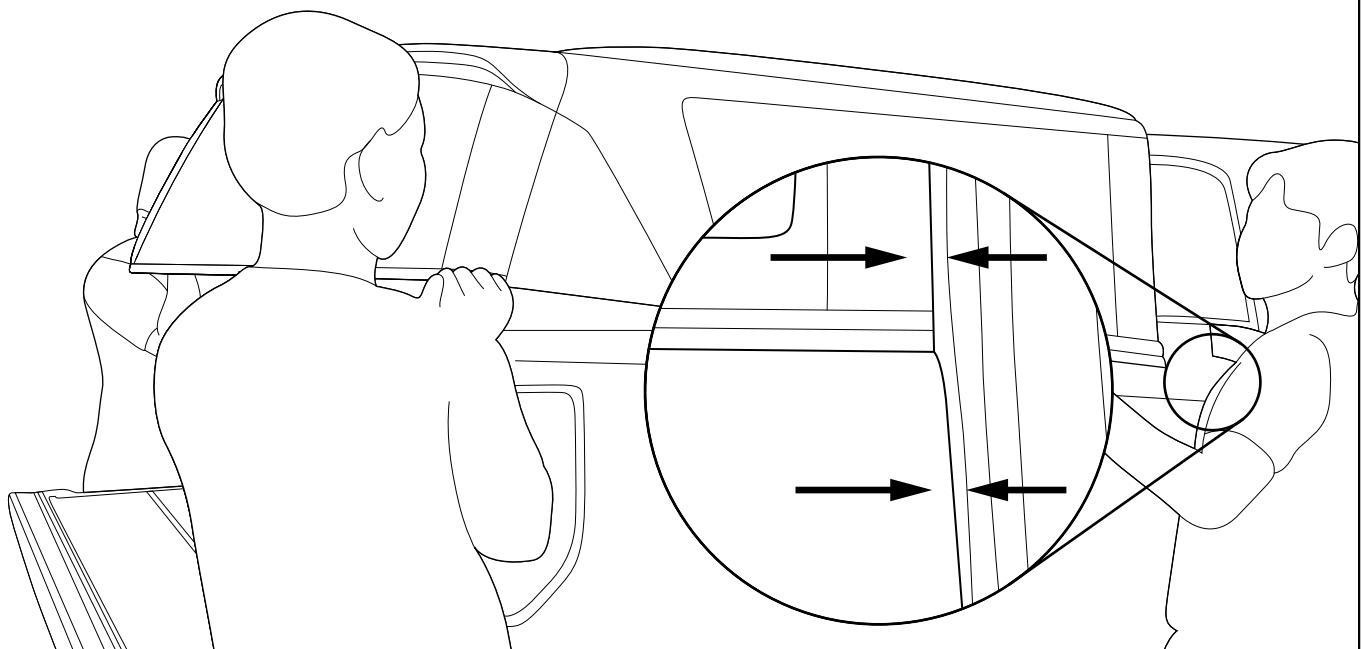


Lift canopy over the pick up truck by rising the rear part higher and the front part to be in the parallel with the edge of the vehicle tub.

17

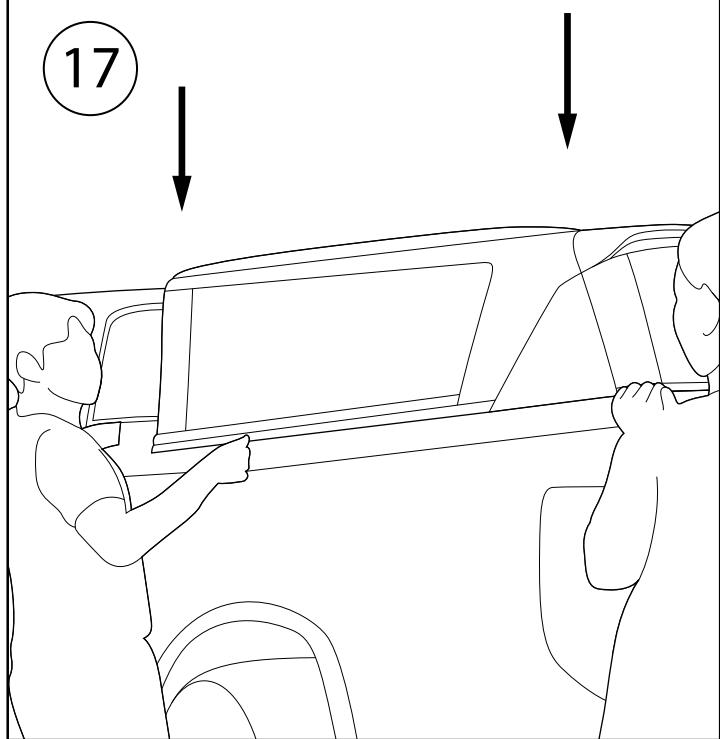

18

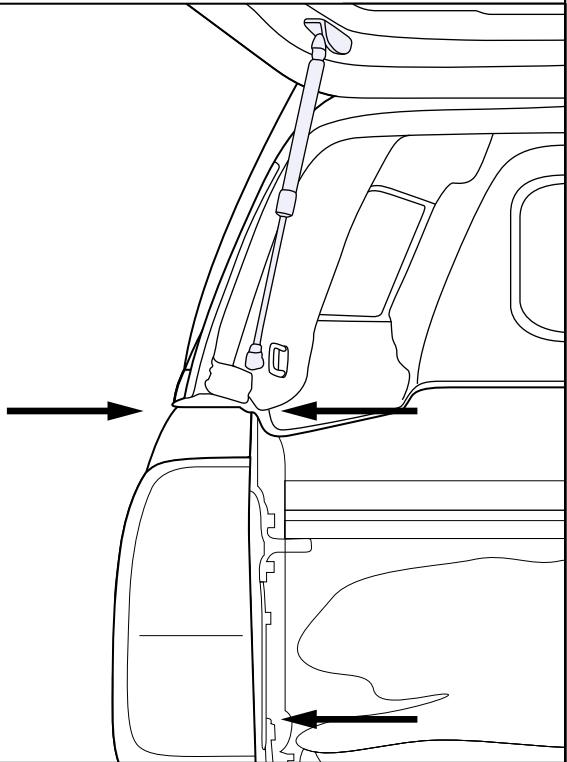


After get the distance in front part and then put the rear part to cover the vehicle tub12

Make sure the distance between canopy edge and vehicle rear tub are equivalent both left and right sides.




19

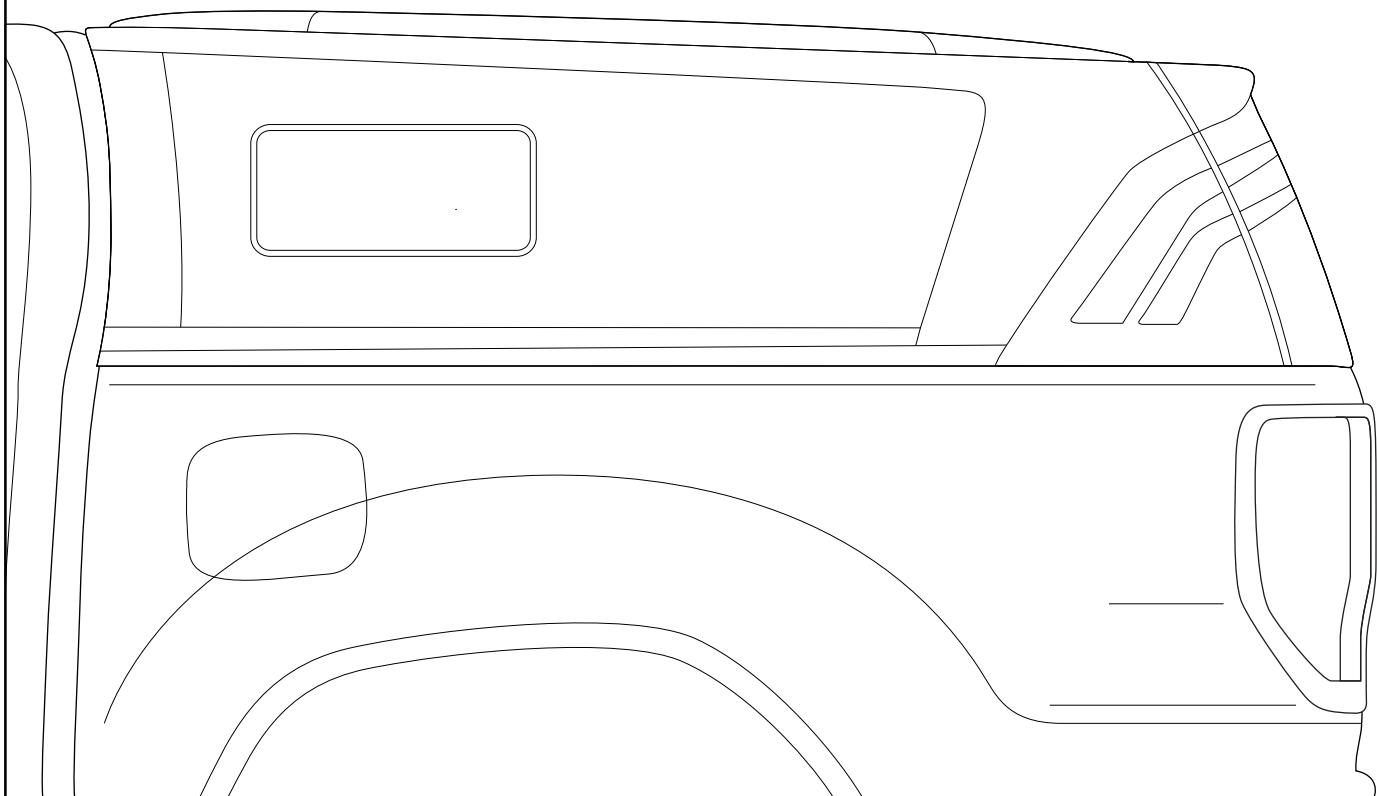


Side edge of canopy to be in the parallel with the Side edge of the vehicle tub.

20

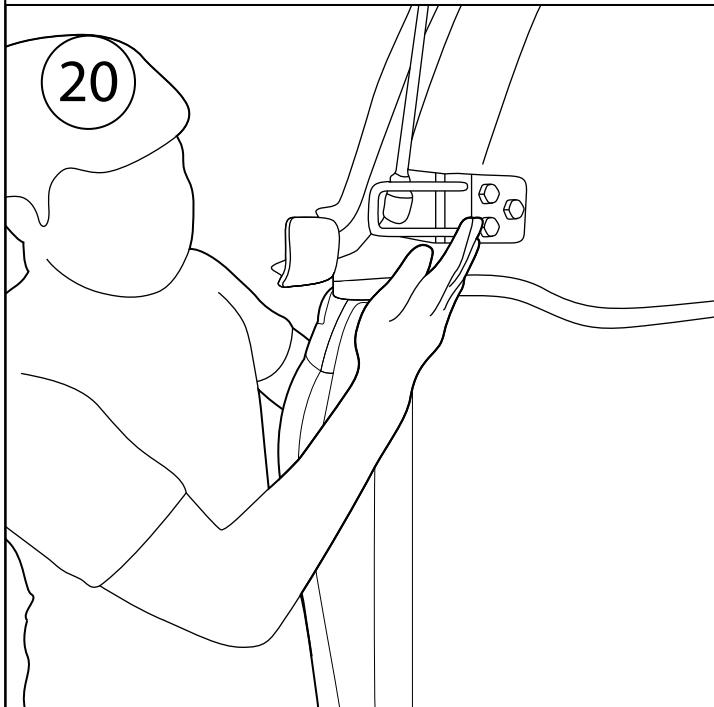

21

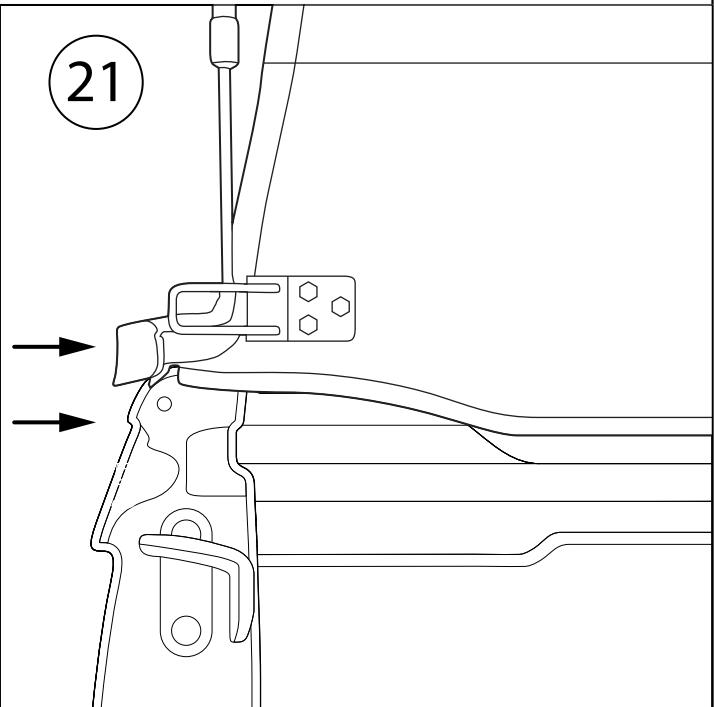


After finished measure the side part, check the distance at rear part of canopy which must have to be in the parallel with the Rear edge of the vehicle tub.





22

The process of C-Clamp installation
TL-1 canopy model with the vehicle

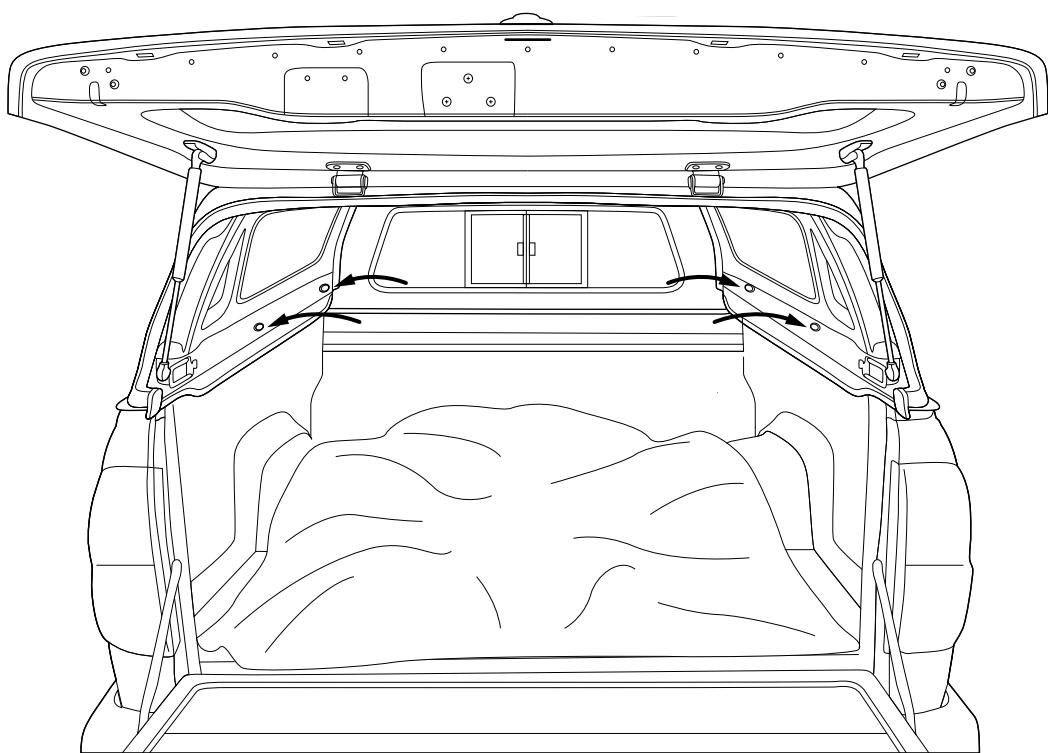


23

Open / take off the rubber plug

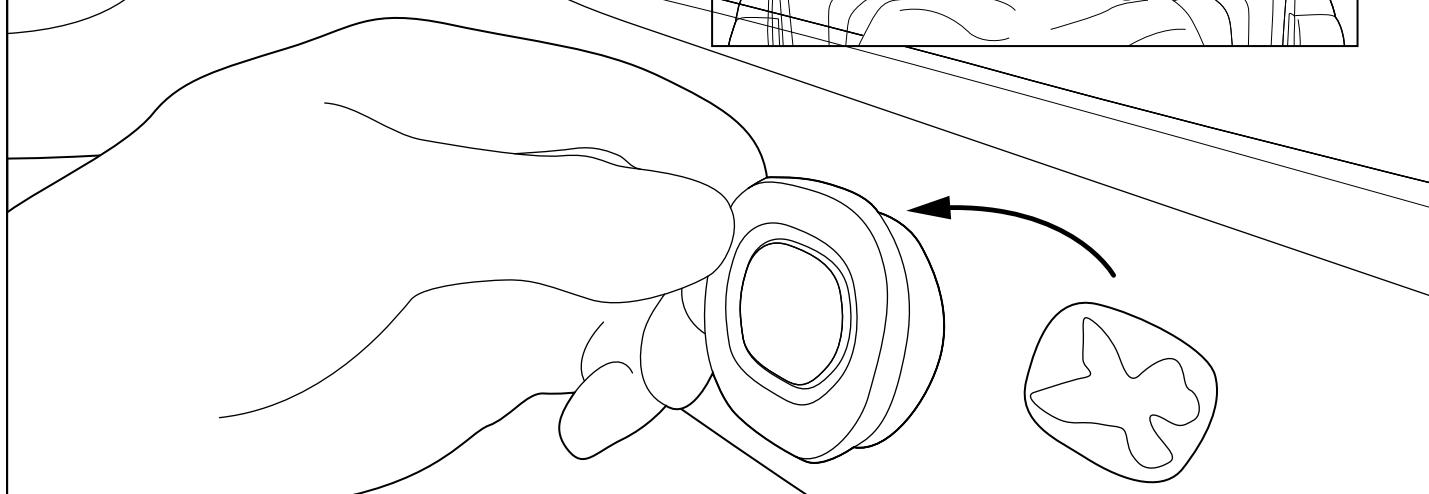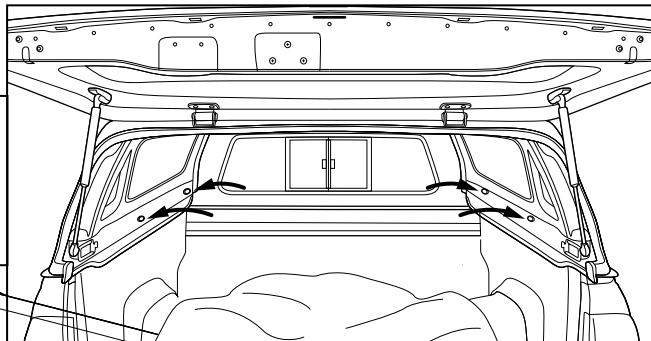




24

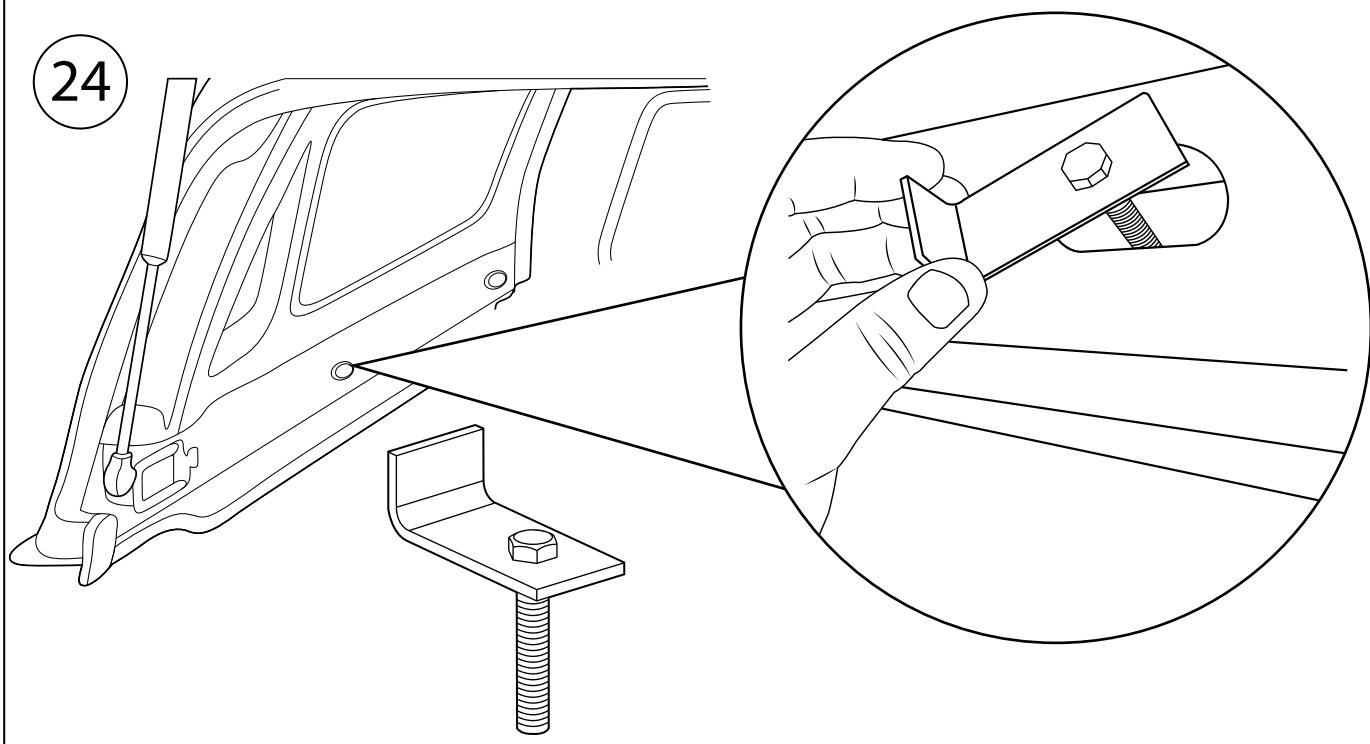

Bracket Lock Roof Bolt M8 mounting positions
onto vehicle (left).


25

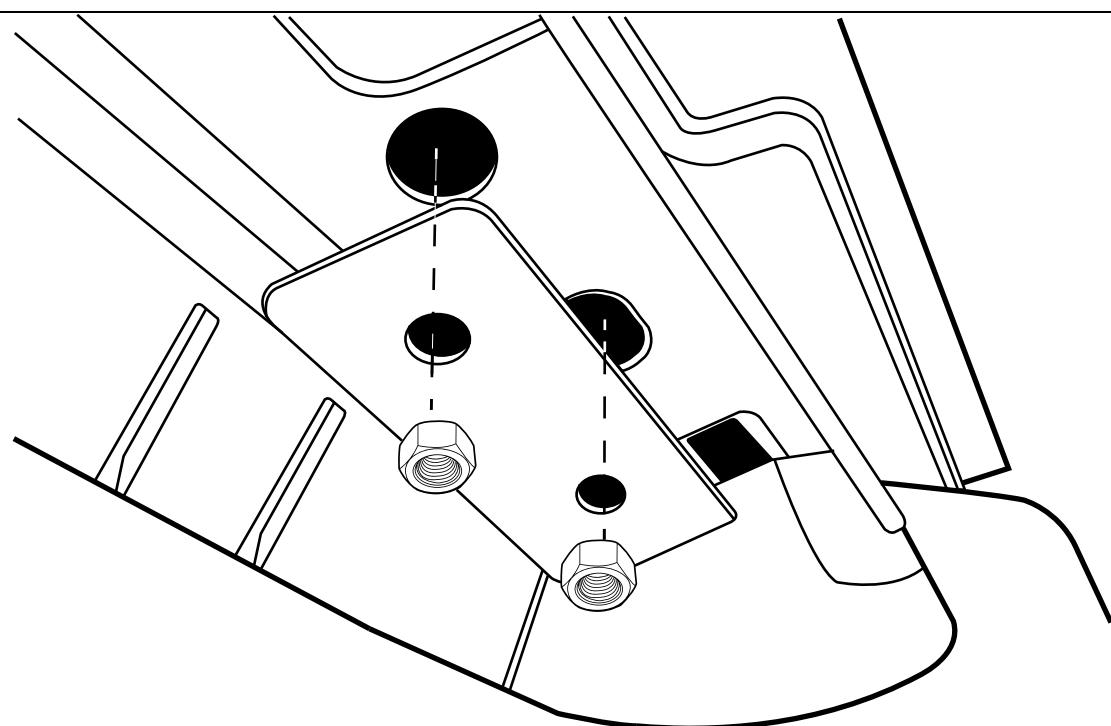


Install bracket to gether with M8 Nut along the spacer
till canopy body spot.



26

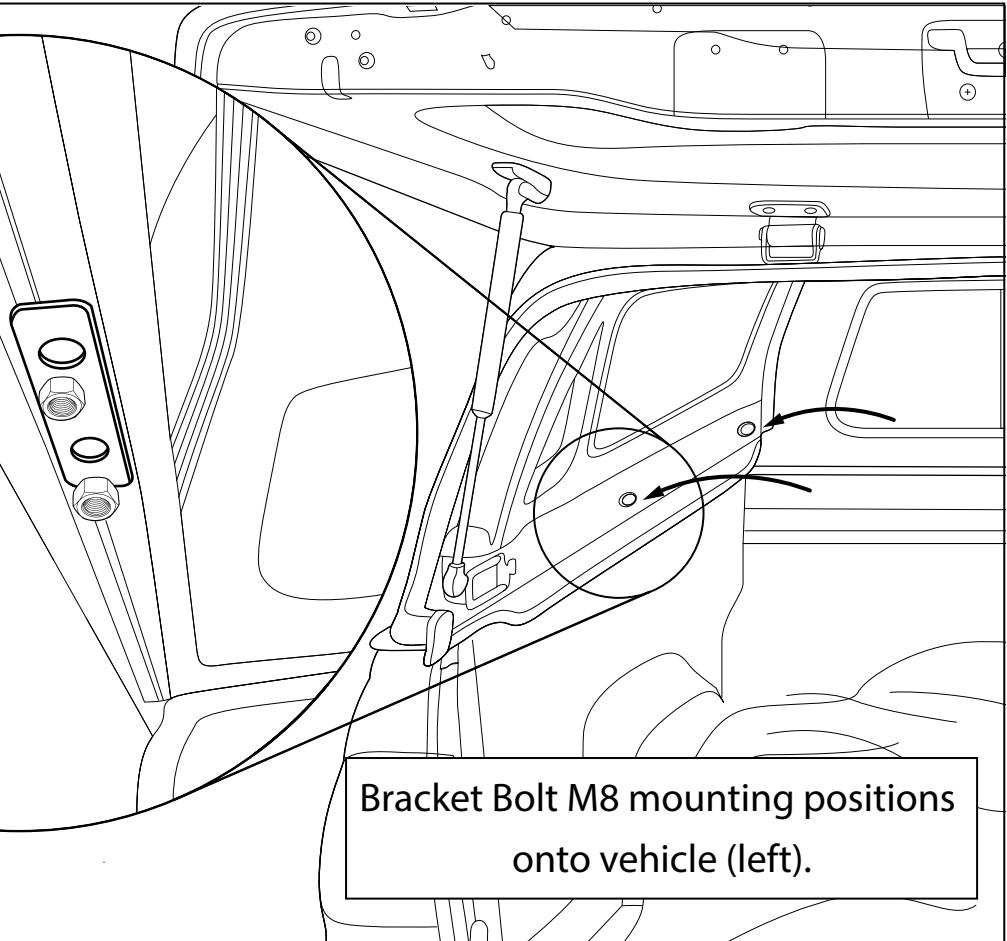


27

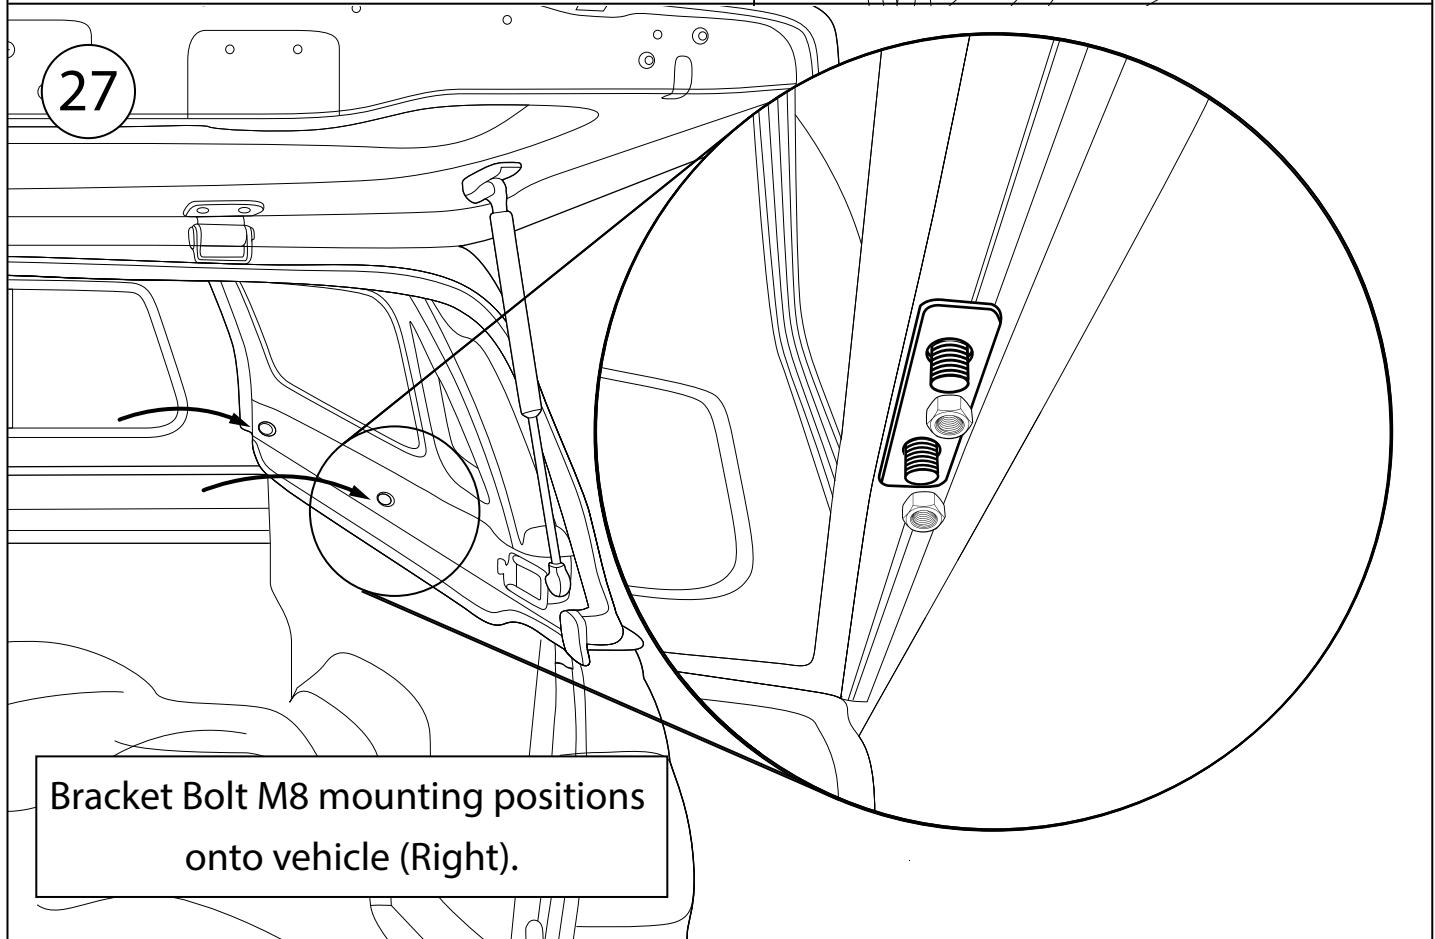




28

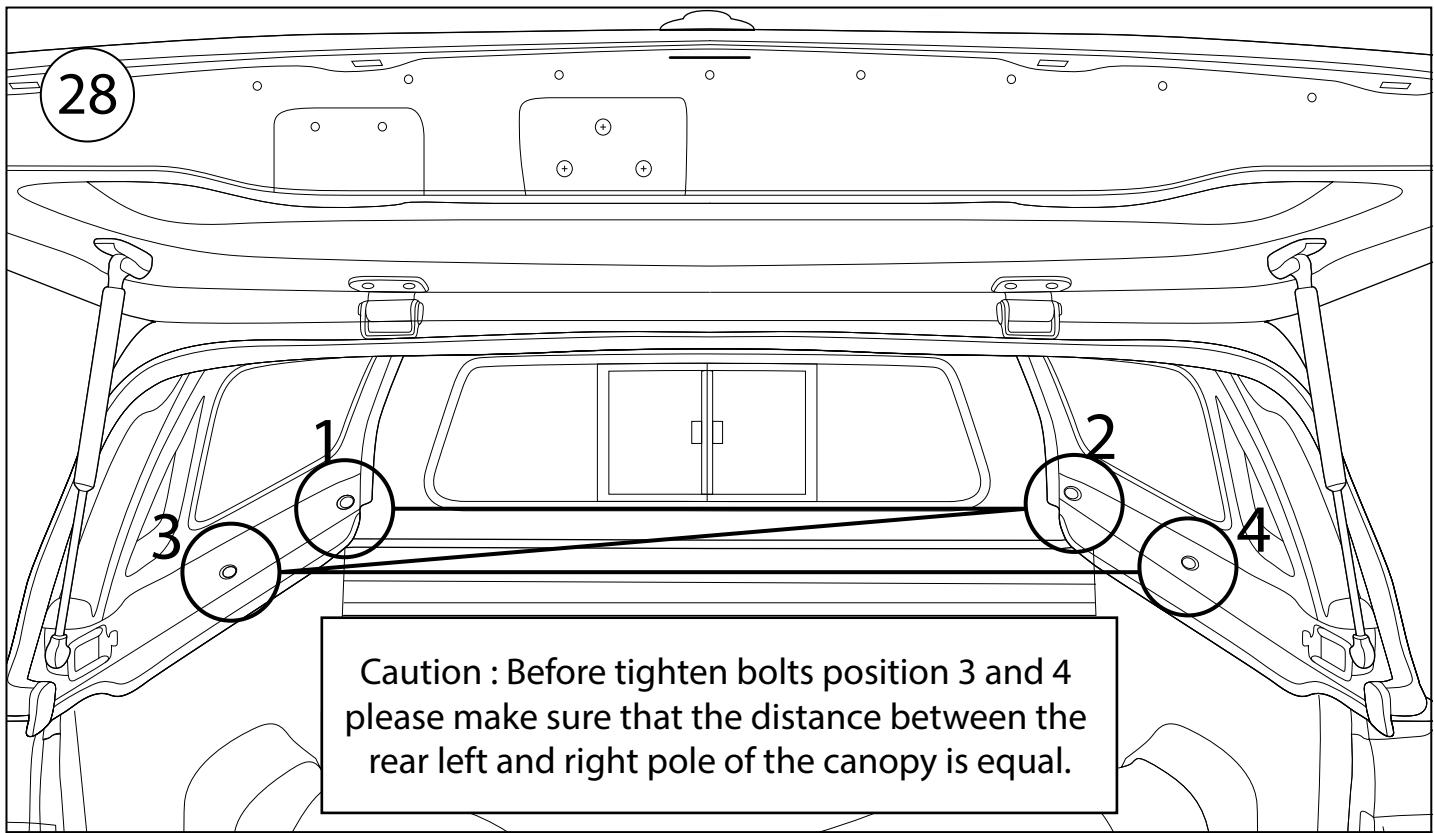

Steps of canopy C-Clamp bolts tightening onto vehicle.

29

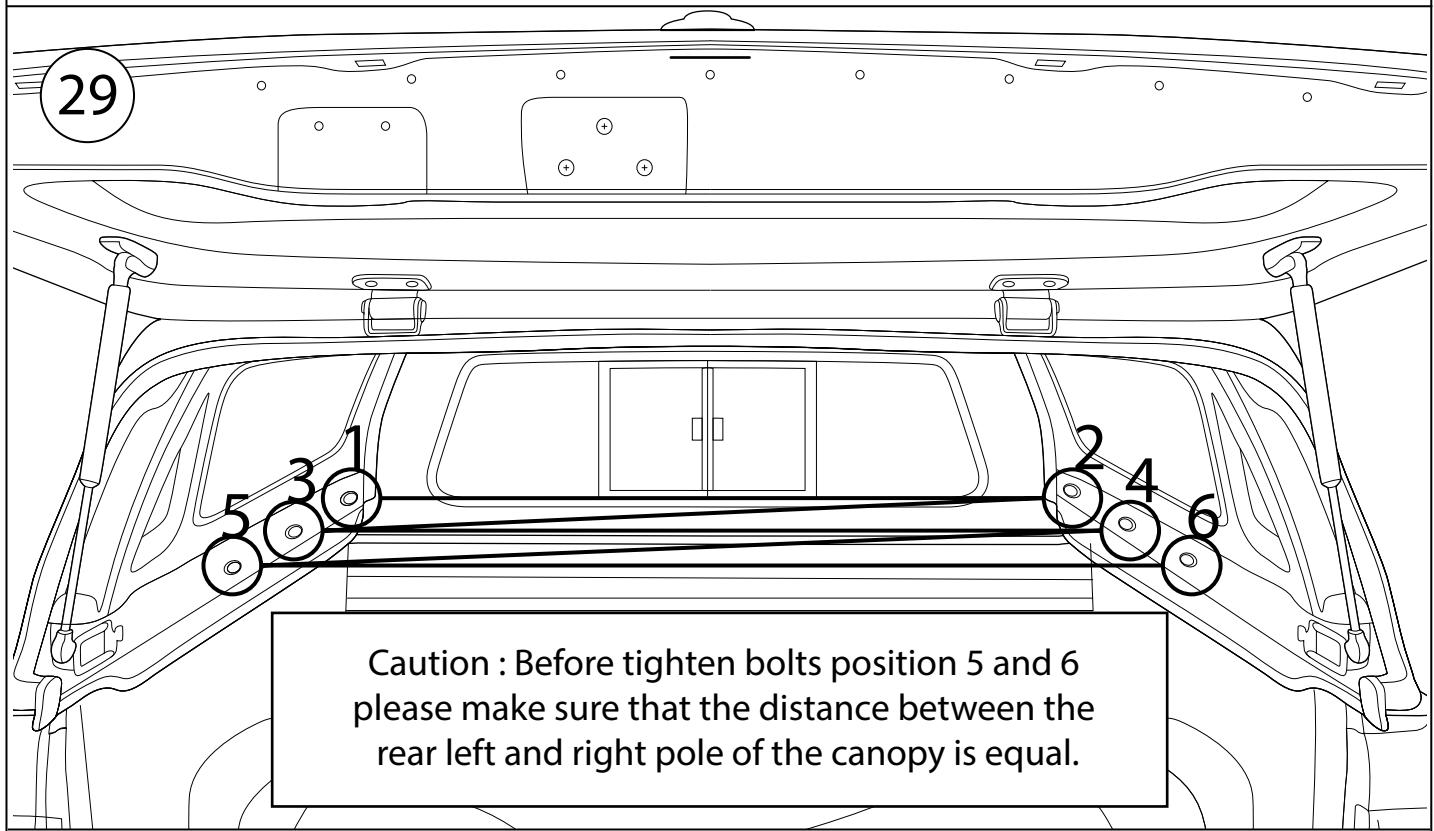


Steps of canopy C-Clamp bolts tightening onto vehicle.





SAMMITR


Electric Lock Installation

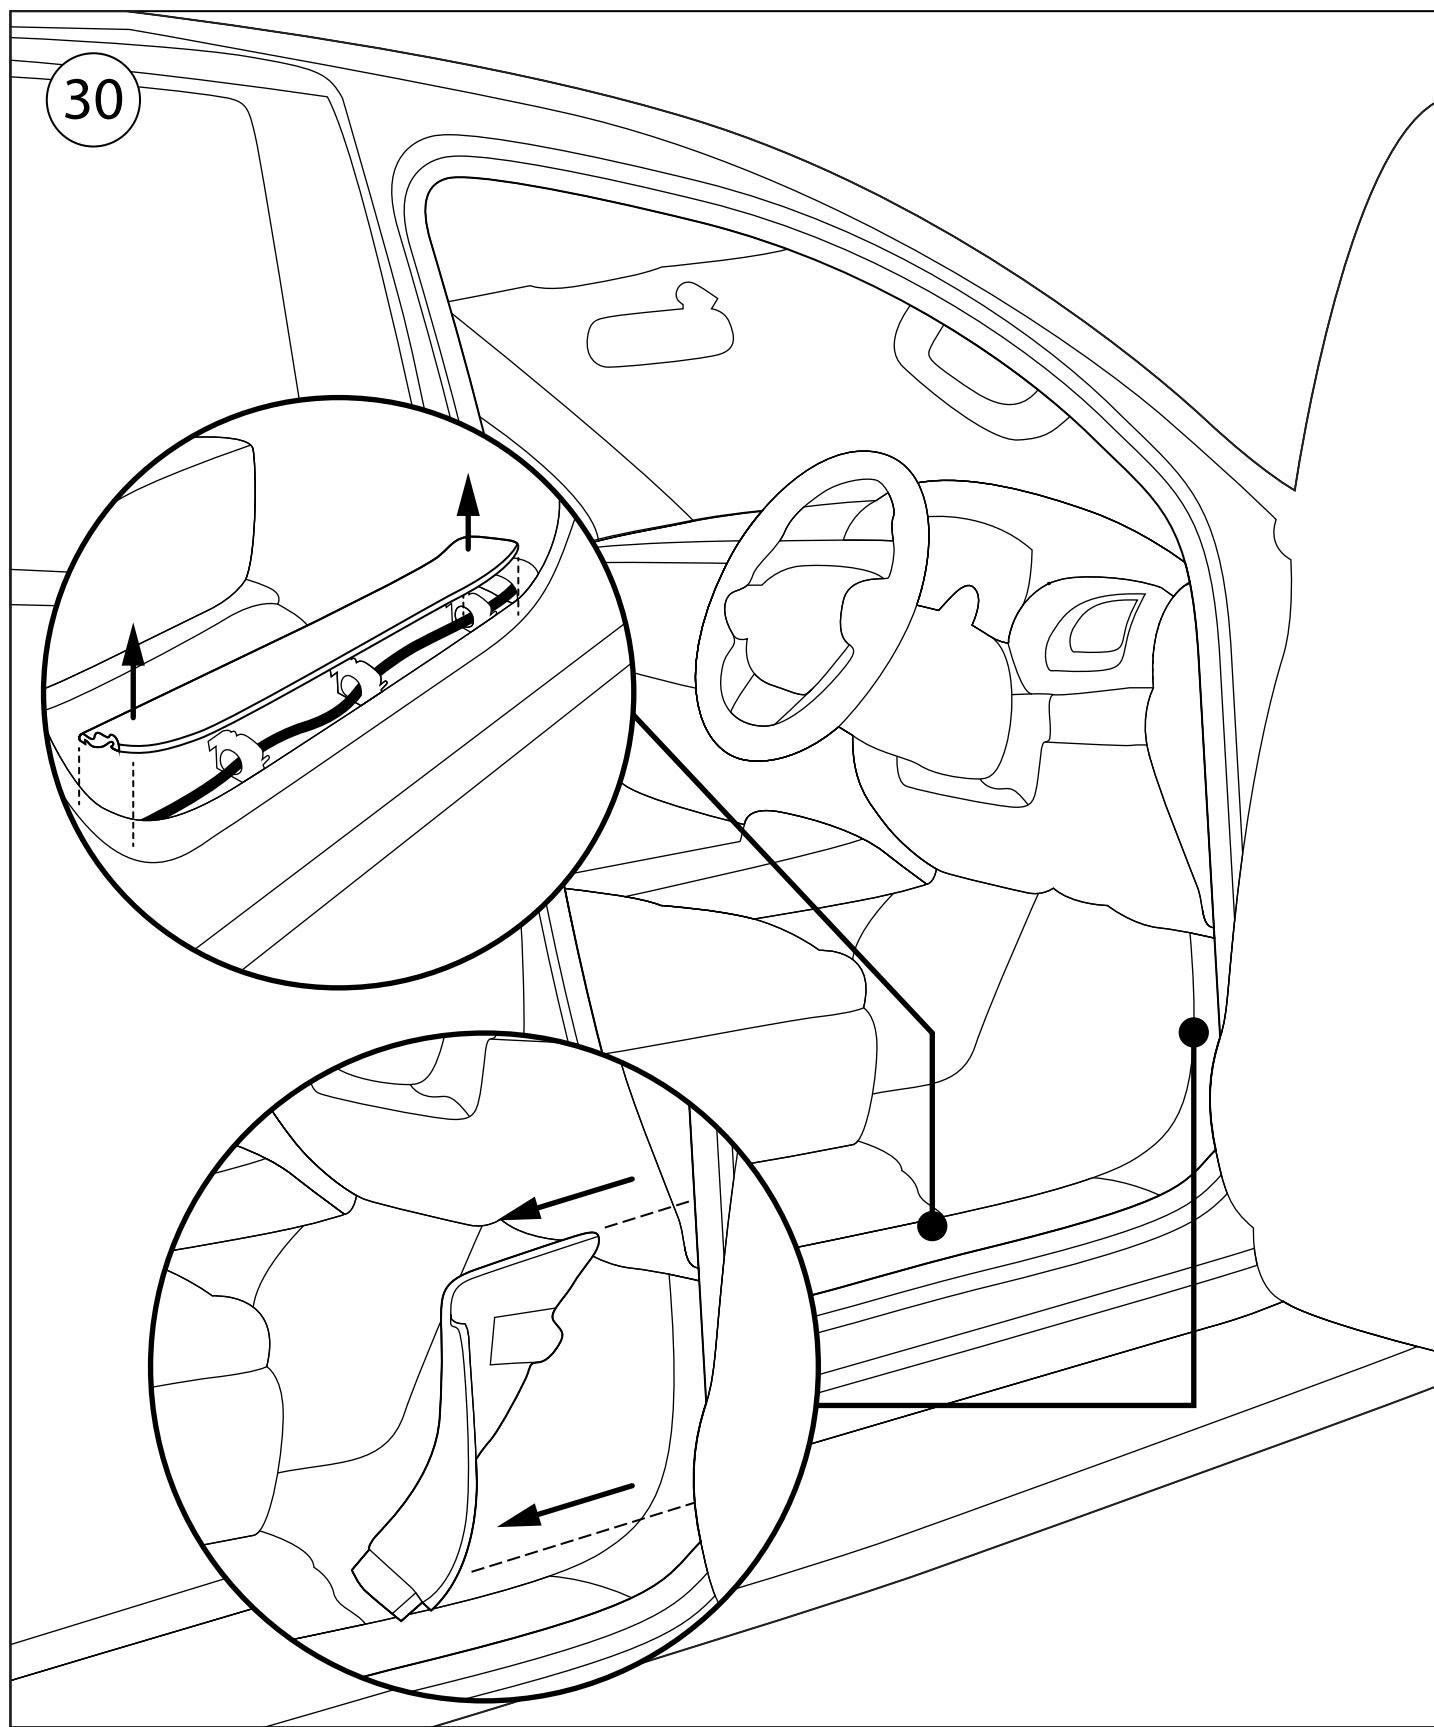


Take off the Wiring Cover at the driver side in order to check the wiring position.

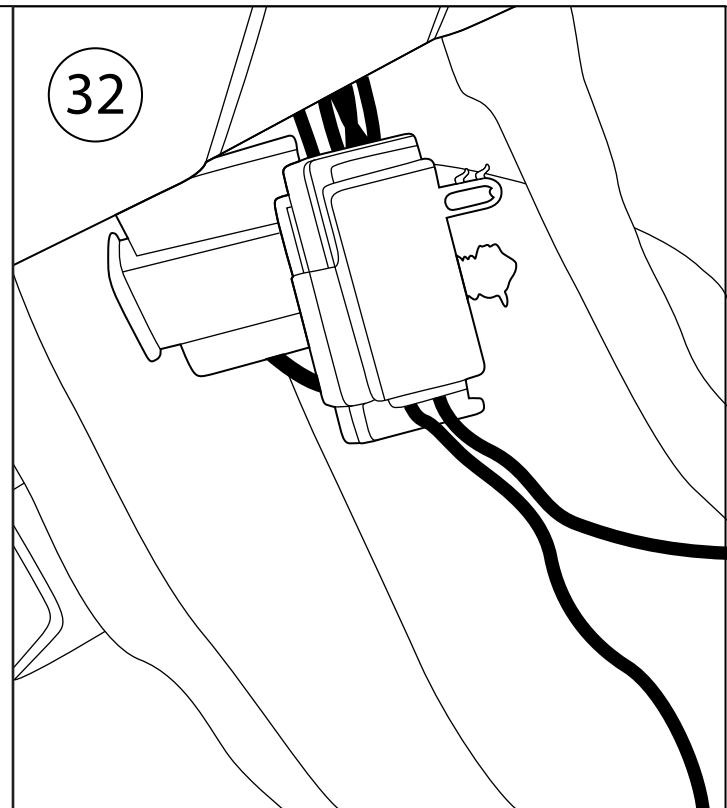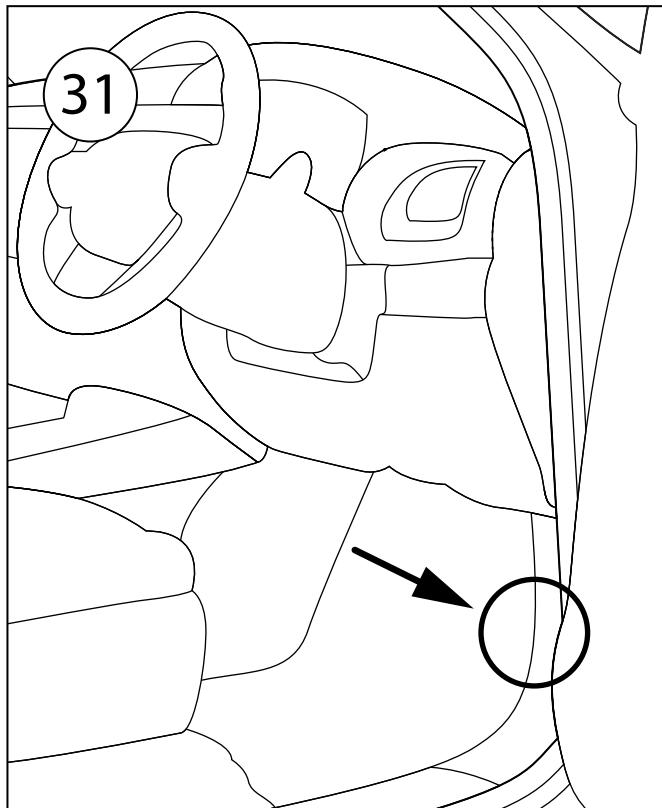


Control Box position that will connect with Harness Central Lock No.38

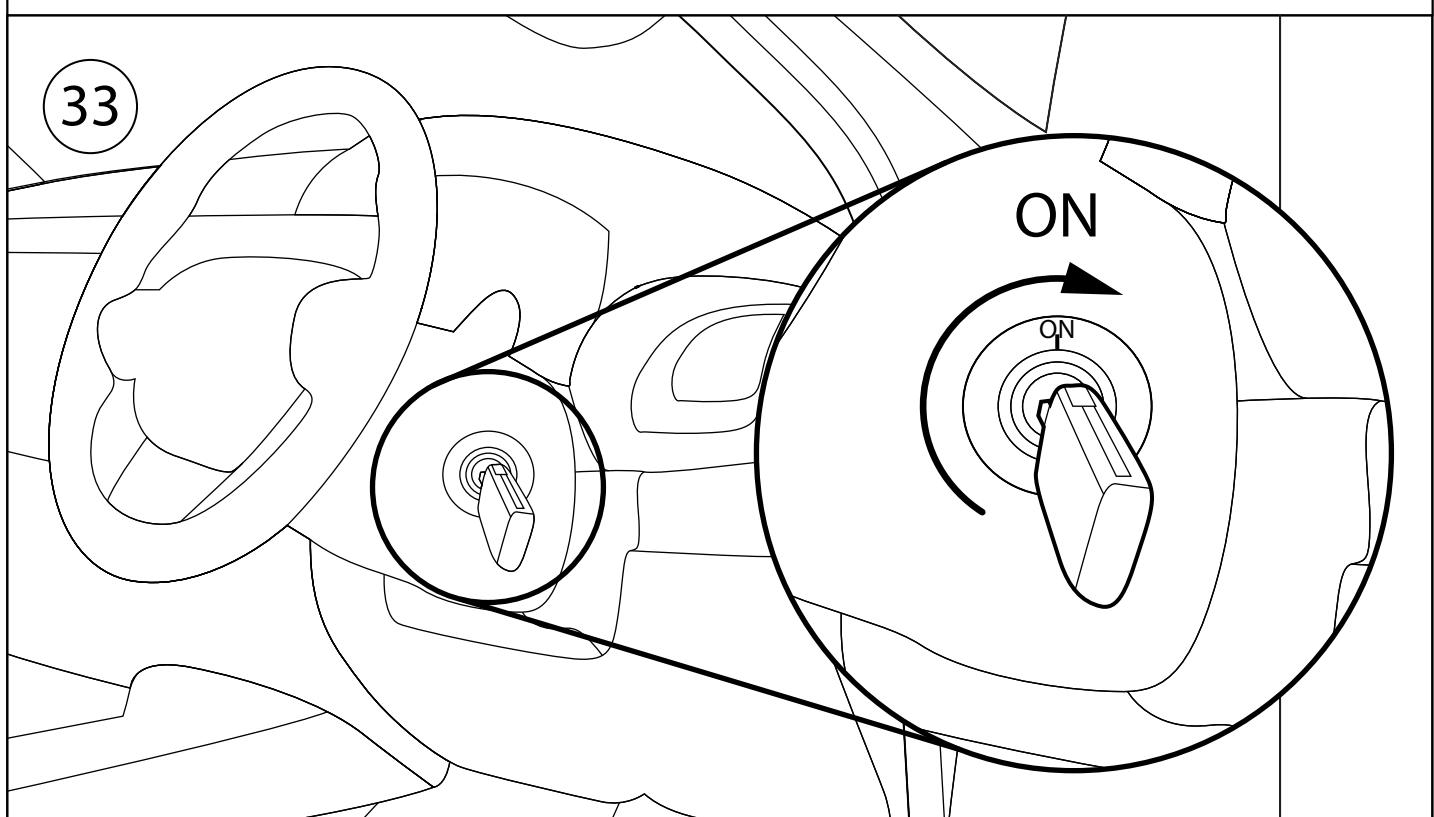

Step of checking Switch on position, begin with turning the key to ON position.

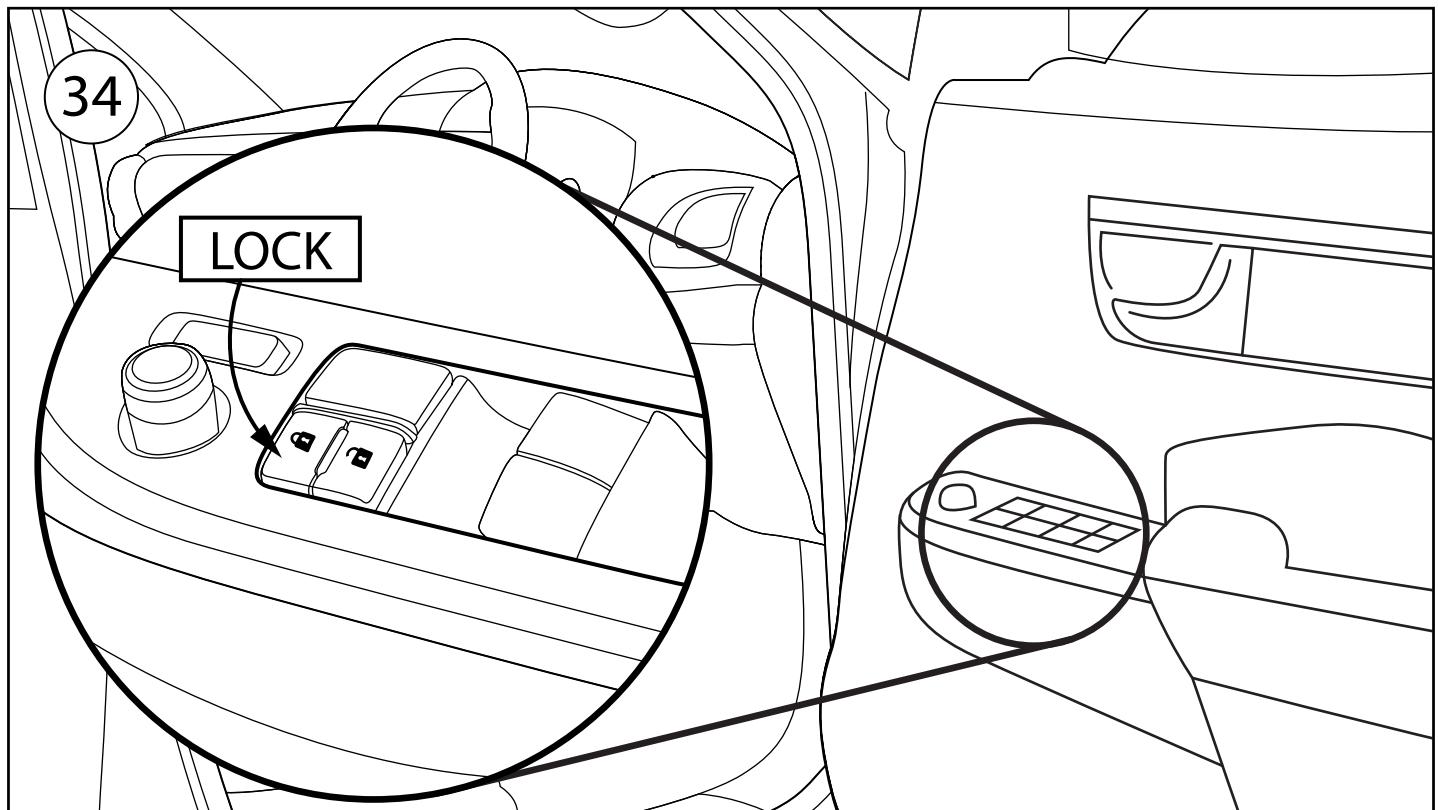



Step of Checking the light of the Central Lock (Lock), begin with push the Lock button at the door panel.

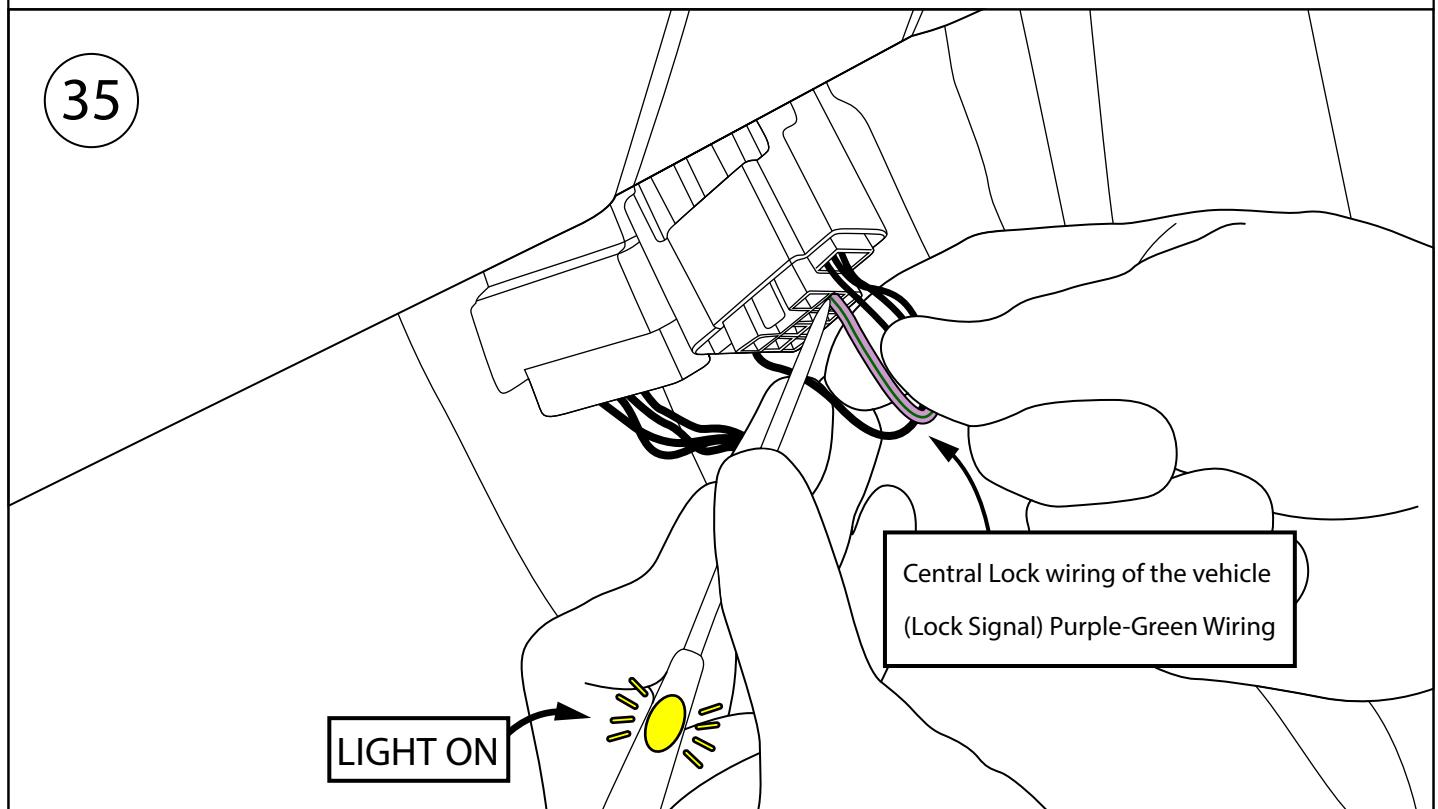

Checking the light of the Central Lock (Lock) of vehicle position by using the Test Lamp kit.




36

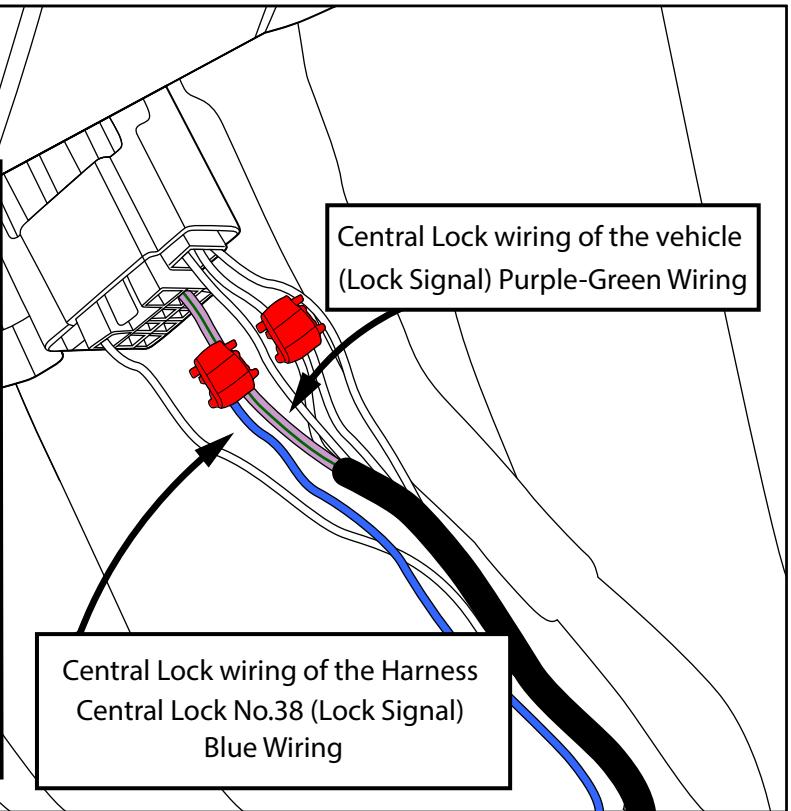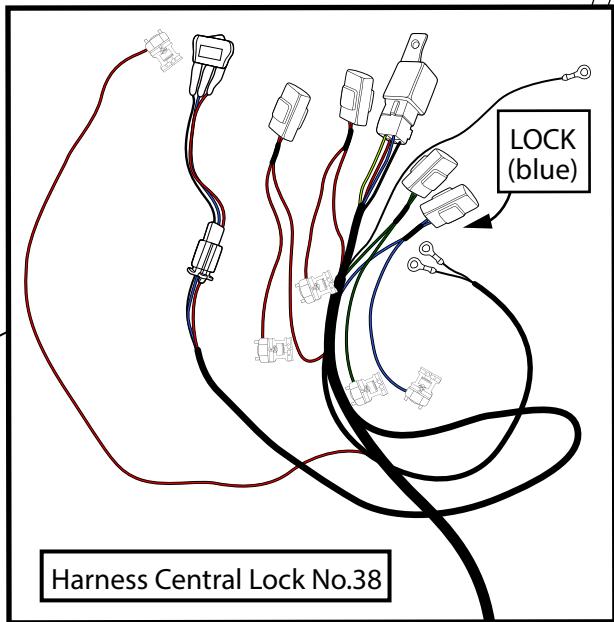

Connects the Blue Wiring (Central Lock/Lock Switch) of the Harness Central Lock No.38 with the Purple-Green wiring (PU/LG) of the vehicle (Lock Signal).


37

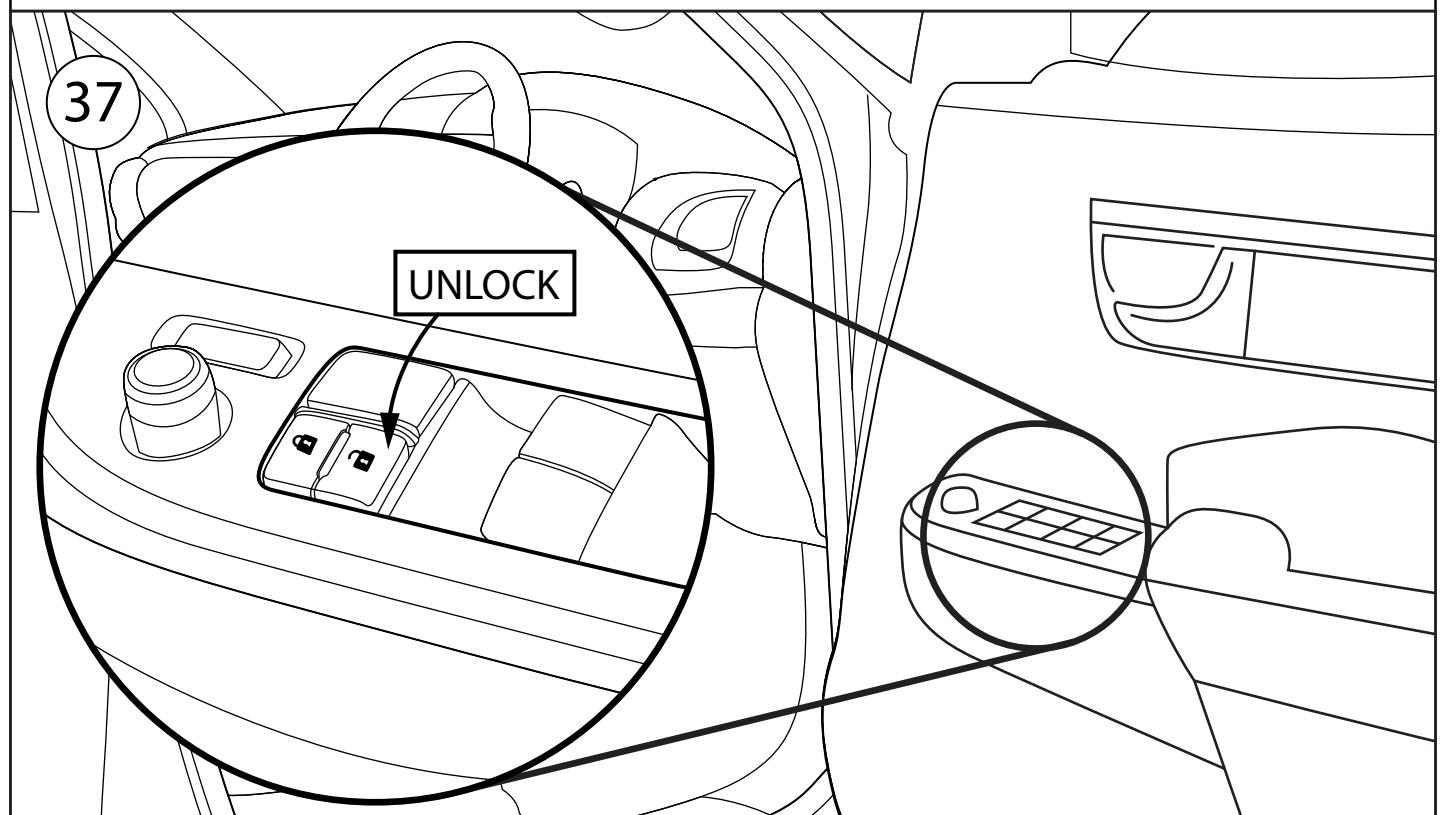

Step of Checking the light of the Central Lock (UnLock), begin with push the UnLock button at the door panel.




38

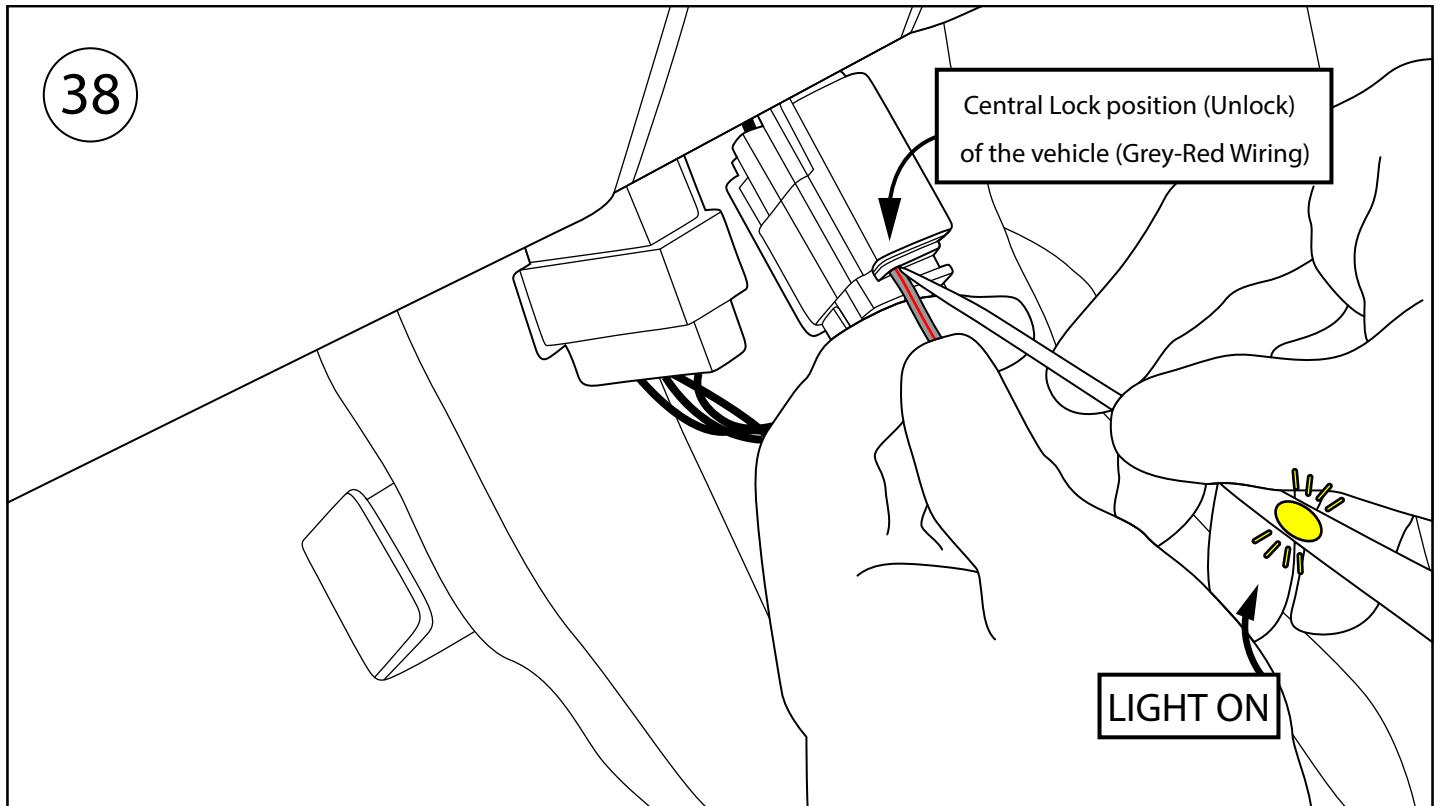


Checking the light of the Central Lock (Unlock) of vehicle position by using the Test Lamp kit.


39

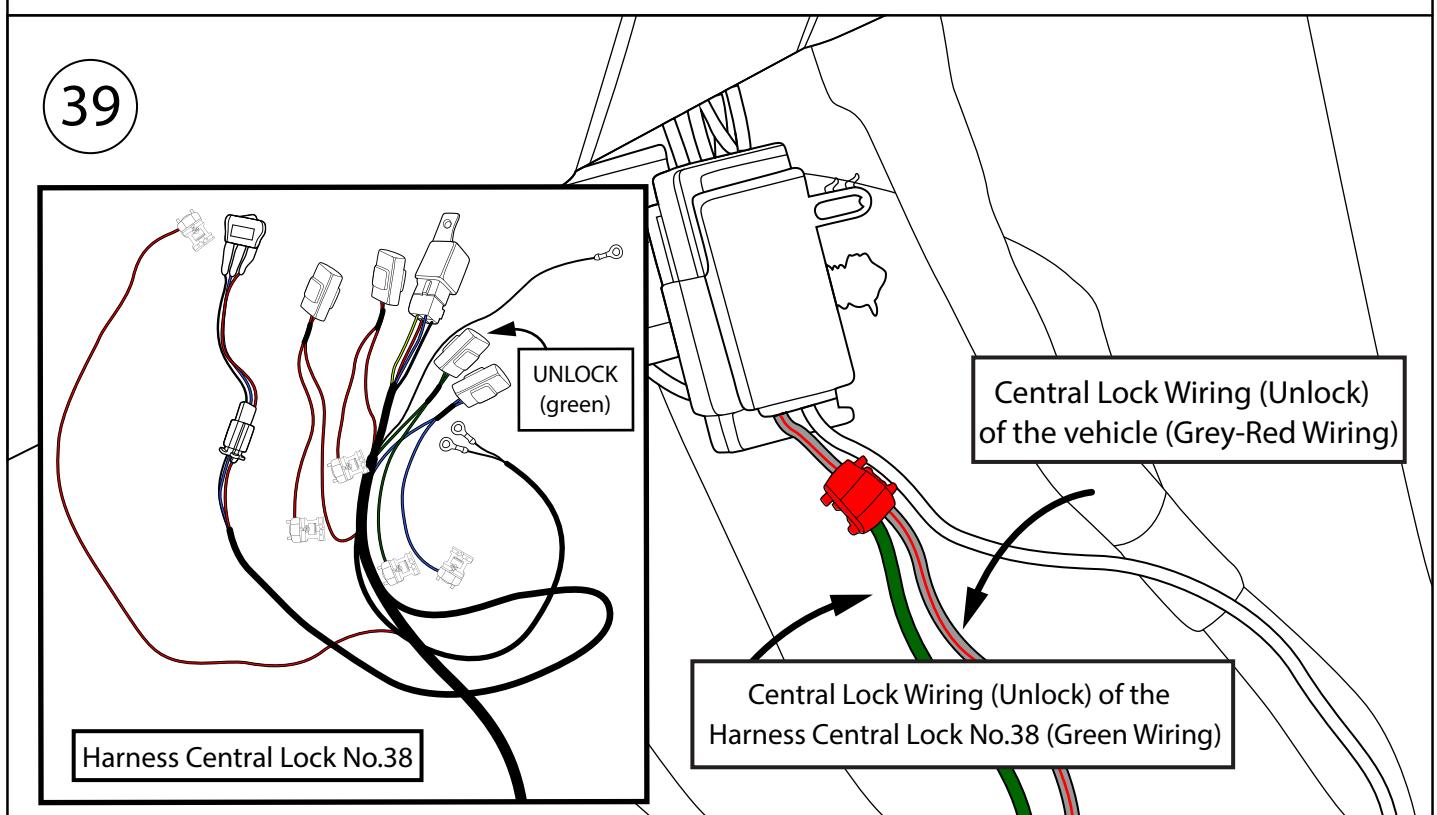

Connects the Green Wiring (Central Lock/Unlock Switch) of the Harness Central Lock No.38 with the Grey-Red Wiring (GR-RD) of the vehicle (Unlock Signal).

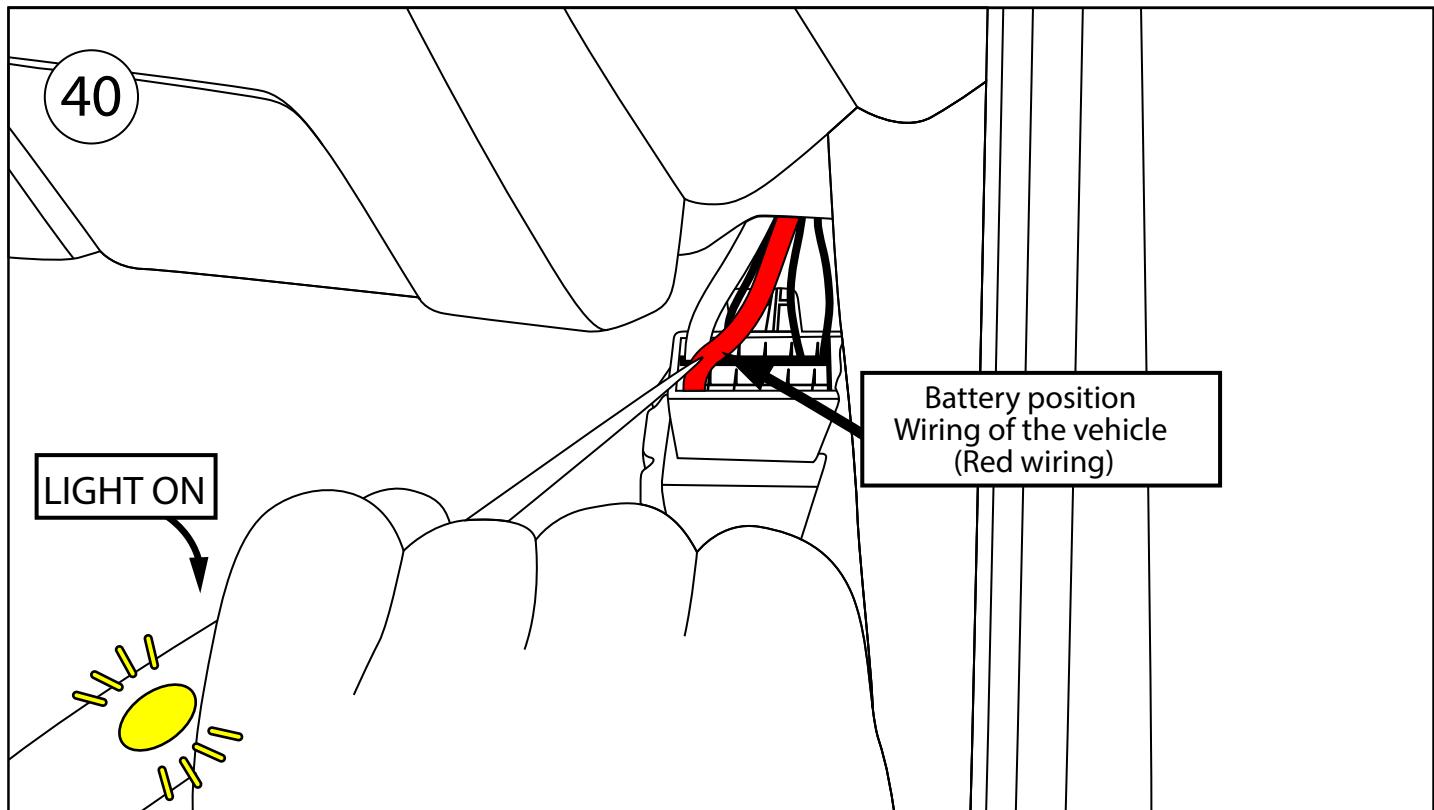

Checking the Battery (12V) light of the vehicle position by using the Test Lamp kit.

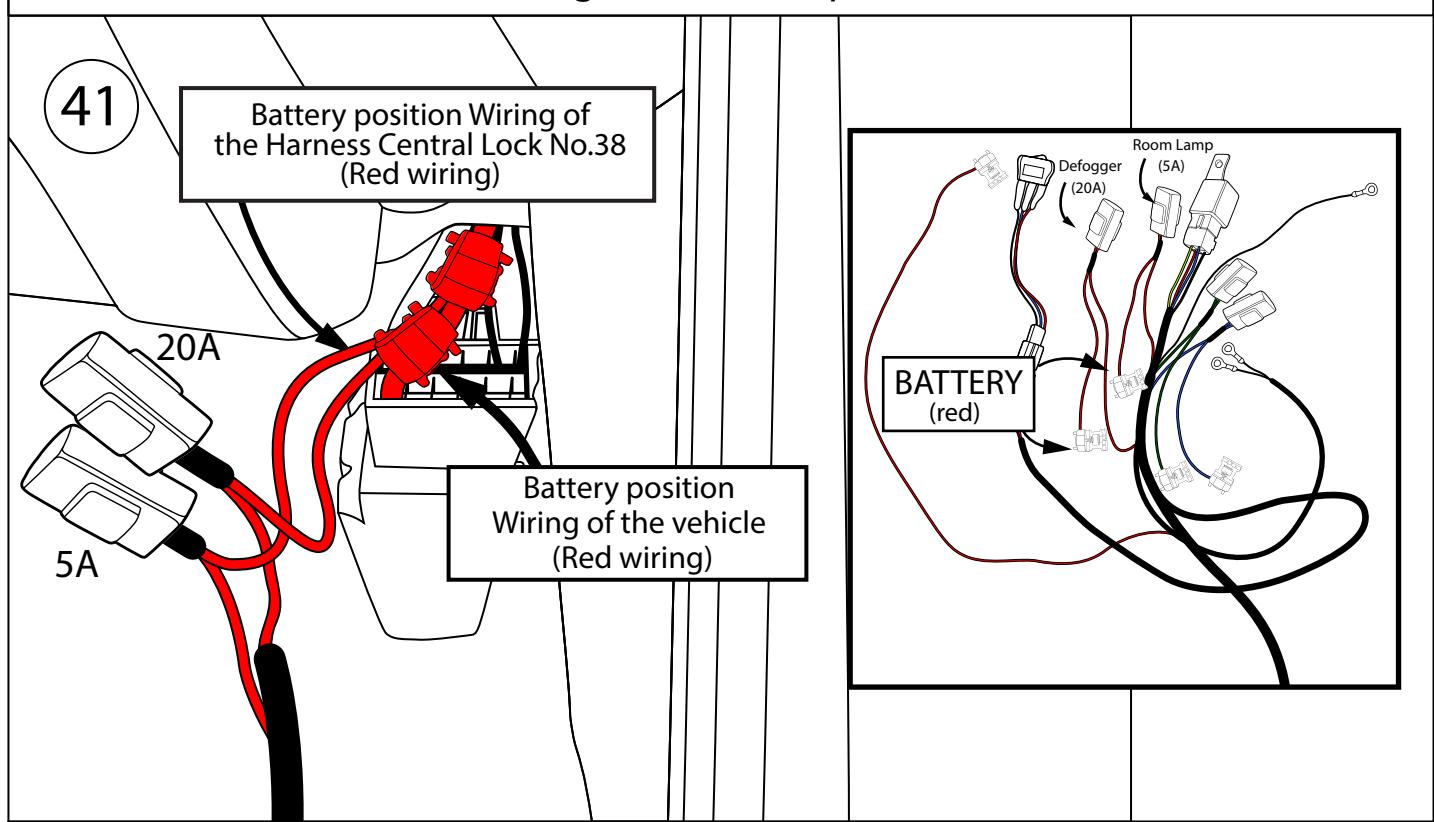


Connects the Red Wiring Defogger (20A) and Red Wiring Room Lamp (5A) of the Harness Central Lock No.38 with the Red Wiring Battery (12V) of the vehicle as shown in picture.



42

Ground Wiring connect position
(black)

Ground Wiring connect position
(black)

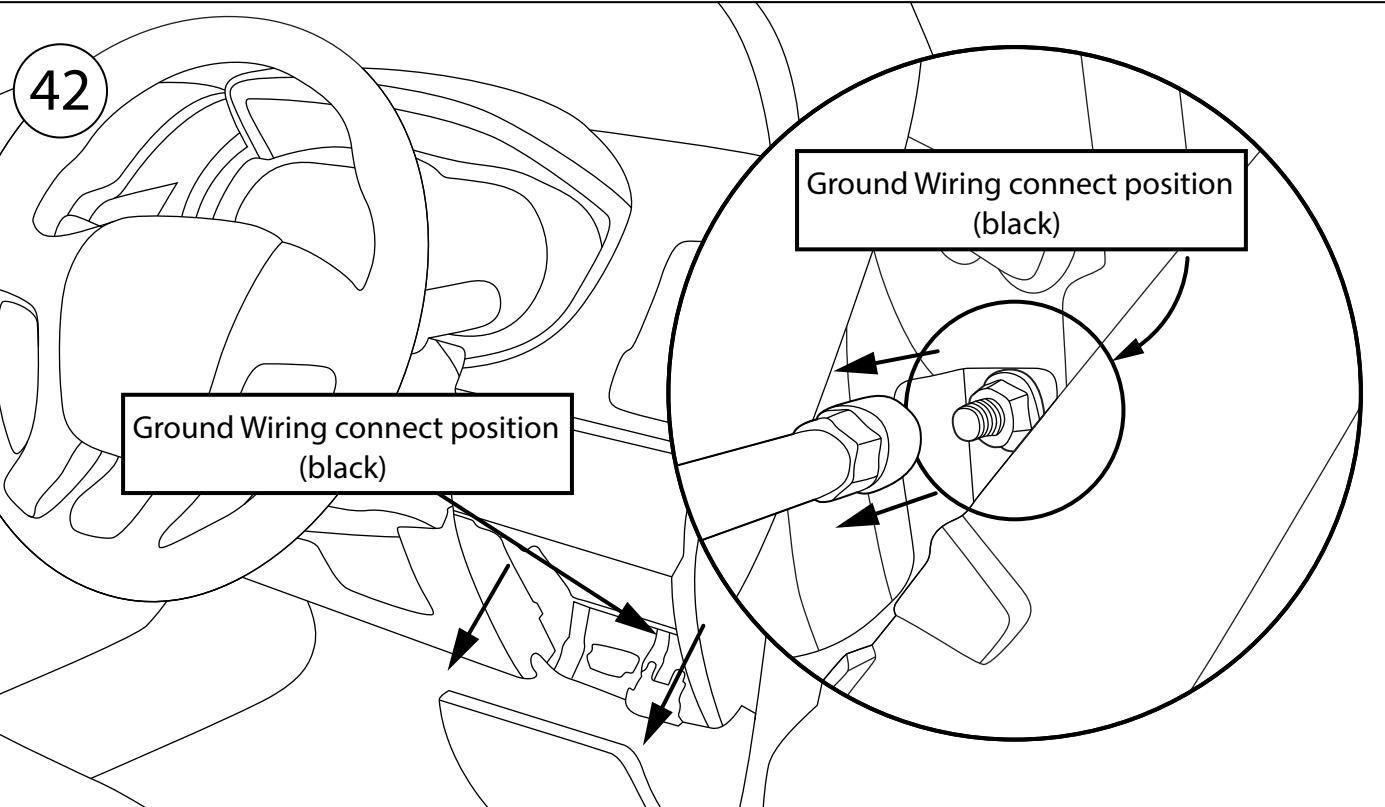



Take off the Cover at the Driver side in order to connect the Black Wiring of the Harness Central Lock No.38 with the Vehicle Structure. Take off the Bolt by using wrench No.10

43

Ground Wiring connect position
(black)

GROUND
(black)

Harness Central Lock No.38

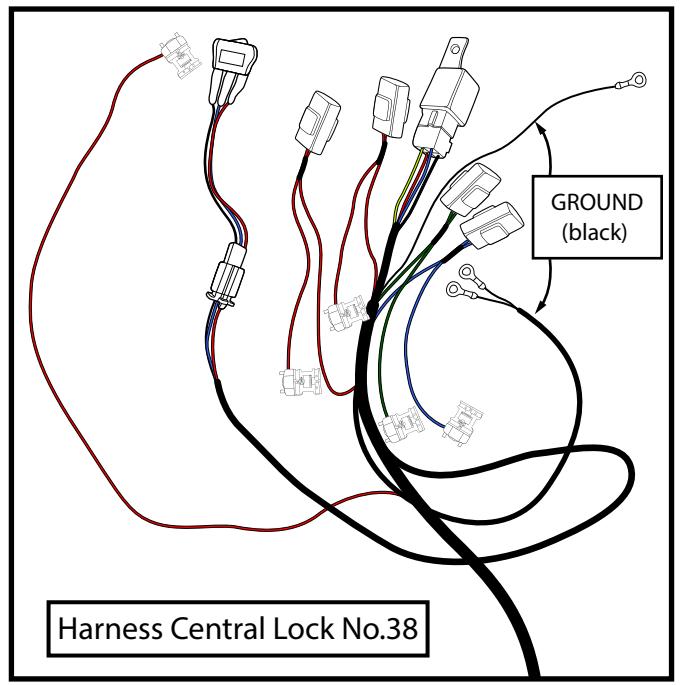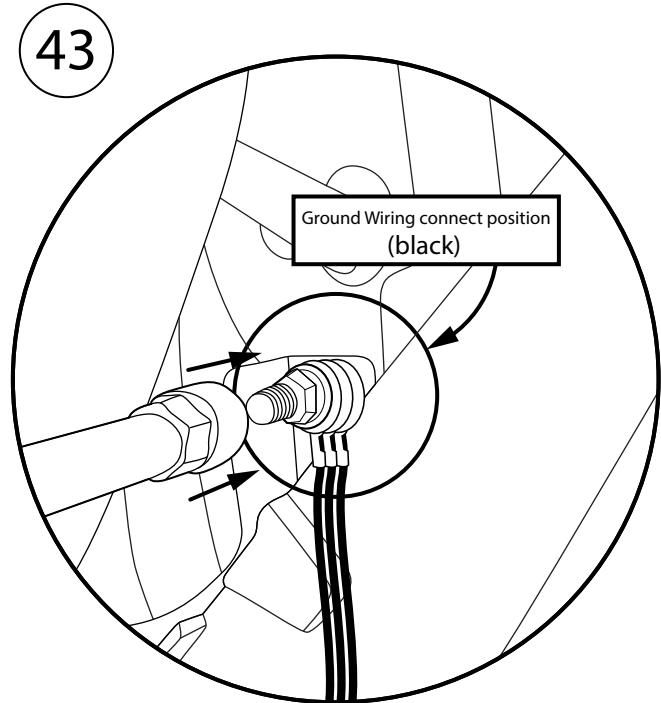


Connect the Black Wiring (Ground) of the Harness Central Lock No.38 with the Vehicle Structure and using wrench tighten.



44

Defogger circuit switch installation in case not using defogger switch of the Harness Central Lock No.38.

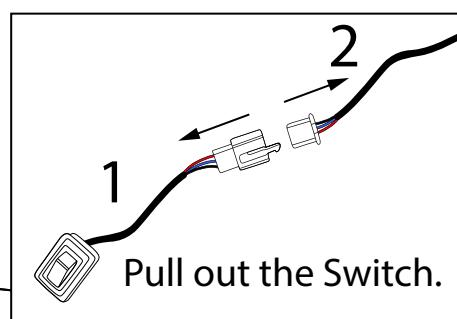


2

1

Defogger circuit switch installation of the Harness Central Lock No.38 of the Ford Ranger vehicle.


45

2

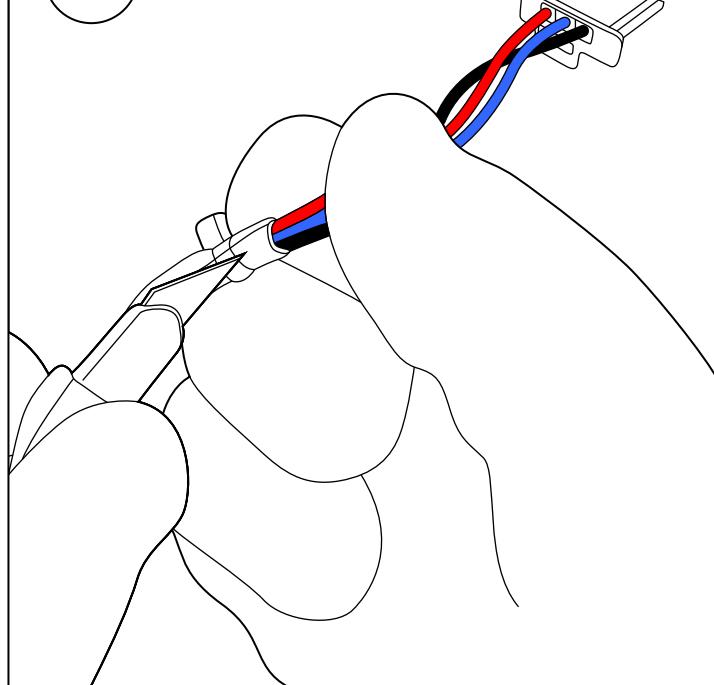

46

Relay

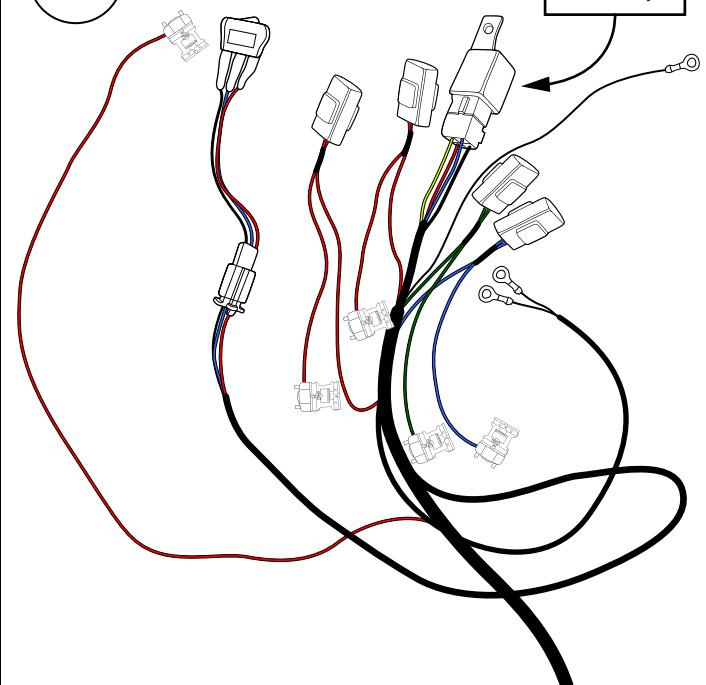


Cut-off the cable

Relay Set of the Harness Central Lock No.38




47

Beware!
Wiring damage.

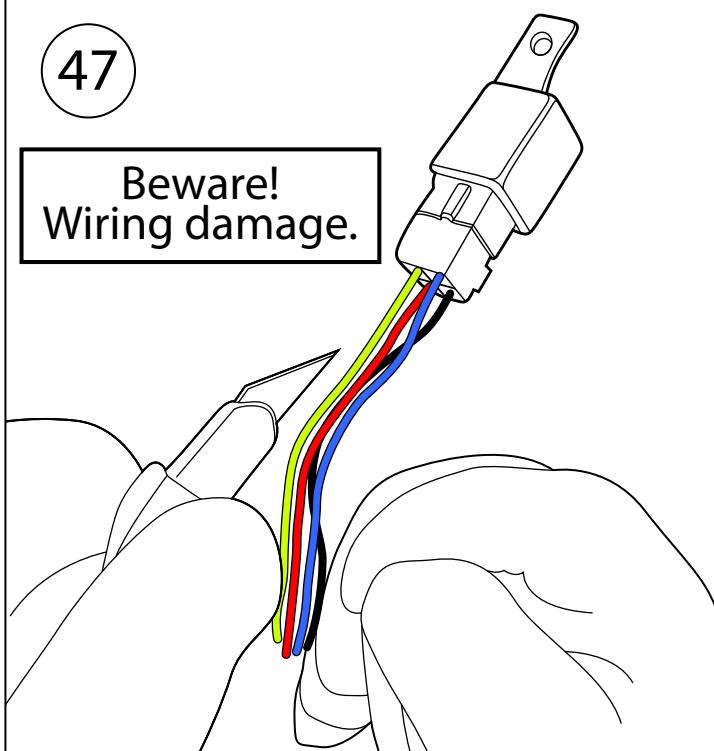

48

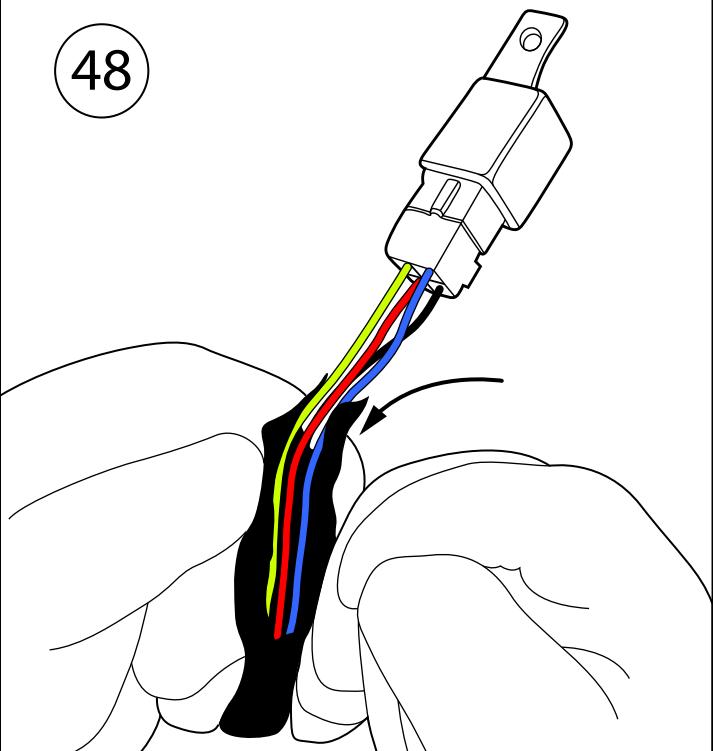


Cut-Off the tape of the Relay.

Pull out the tape


49

Beware!
Wiring damage.

2

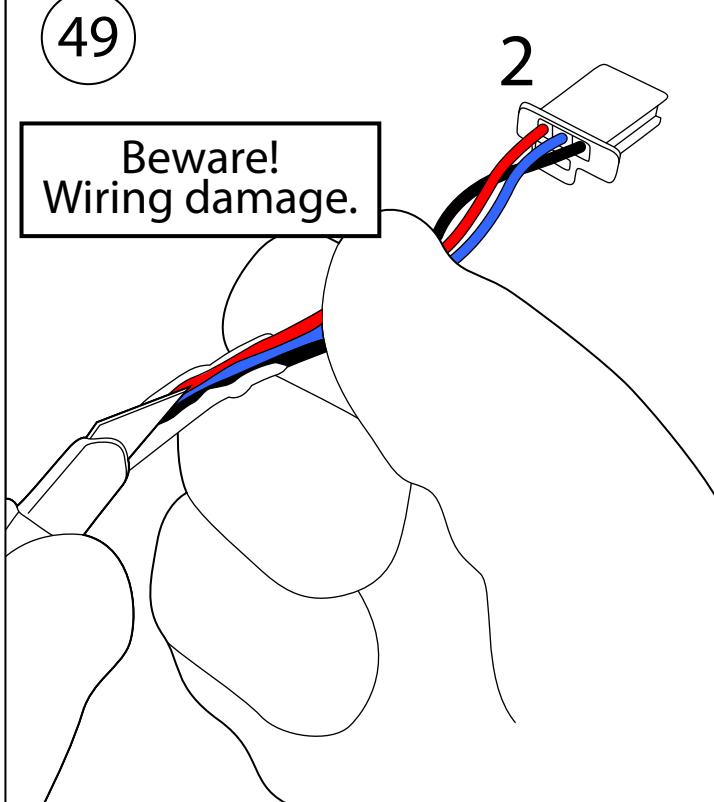

50

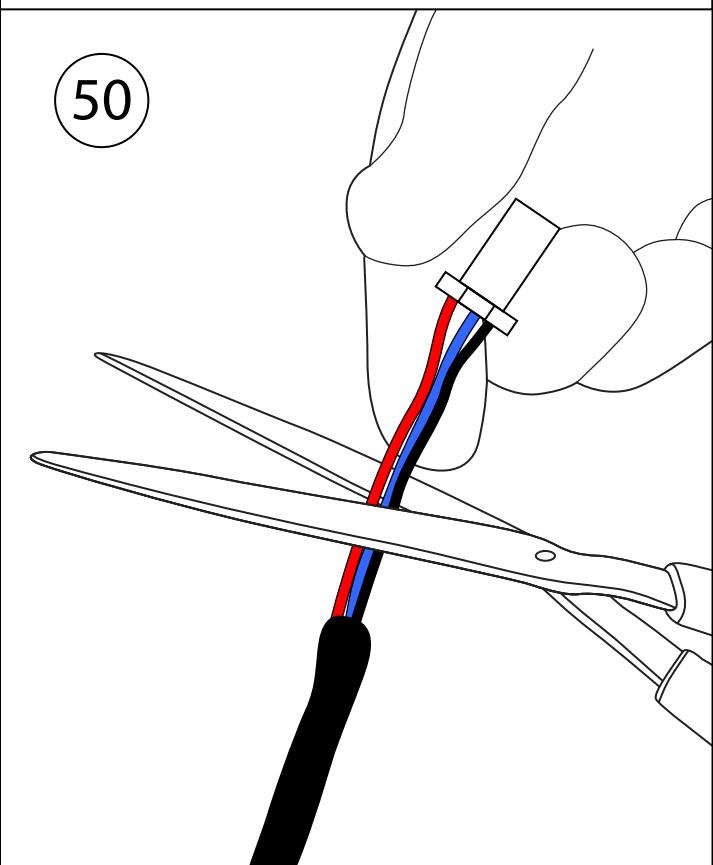


Cut the switch cable insulation pipe.


Cut the end of the defogger switch cable.




51

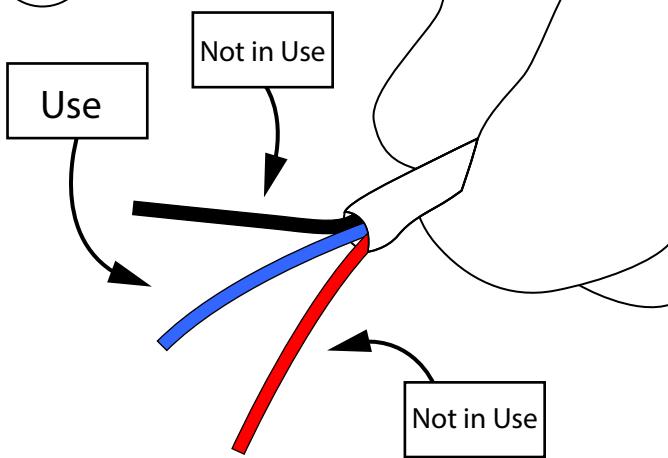

52

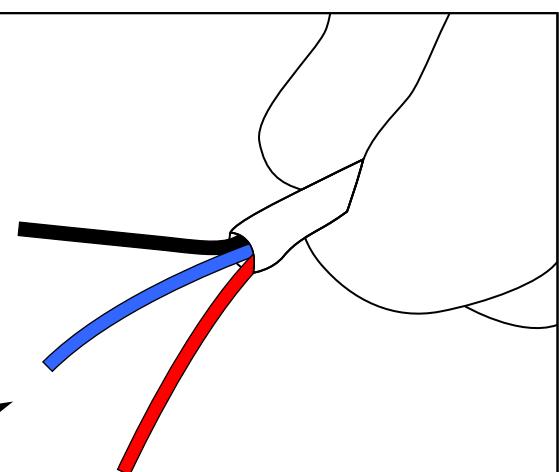


Connects with
the vehicle
defogger wiring.

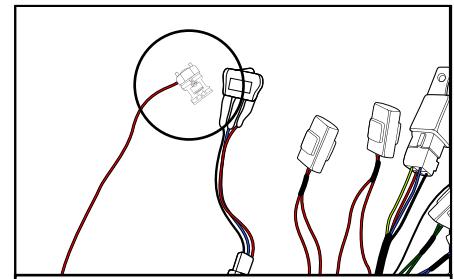

Take the Electro-tap from the Switch On
of the Harness Central Lock No.38
connecting with the defogger wiring.


After Cut the end of the defogger switch cable,
the wiring that will be using for connecting is
the Blue colour.

53

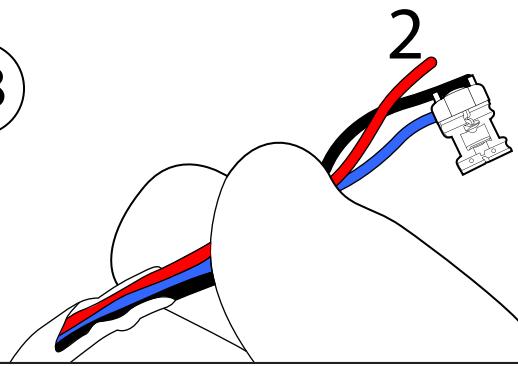

From item 24 : Electro-tap that connect
with the blue wiring.

54

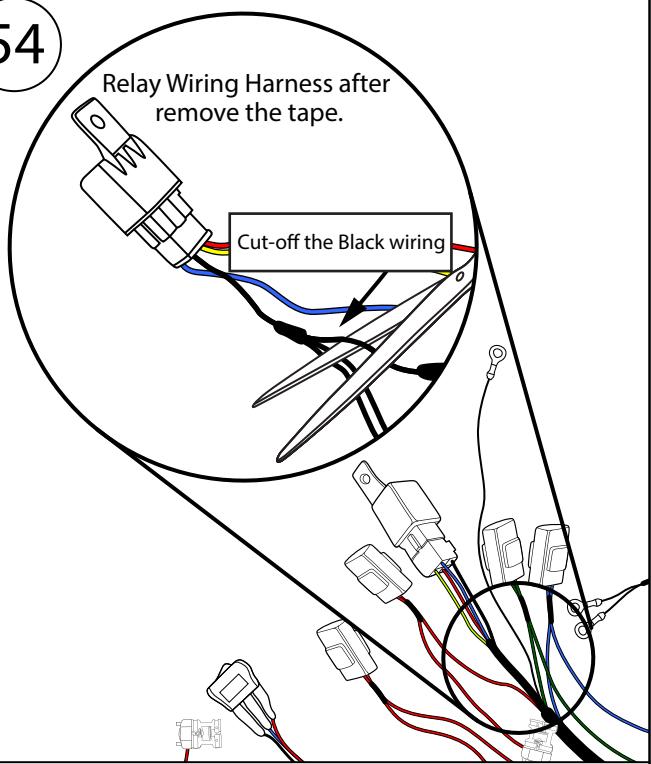


Cut the black wiring of the defogger wiring harness
in order to remove the black wiring from
the Relay wiring harness.

Take off the Red and Black wiring out of the defogger
switch set, only leave the blue wiring in.




55

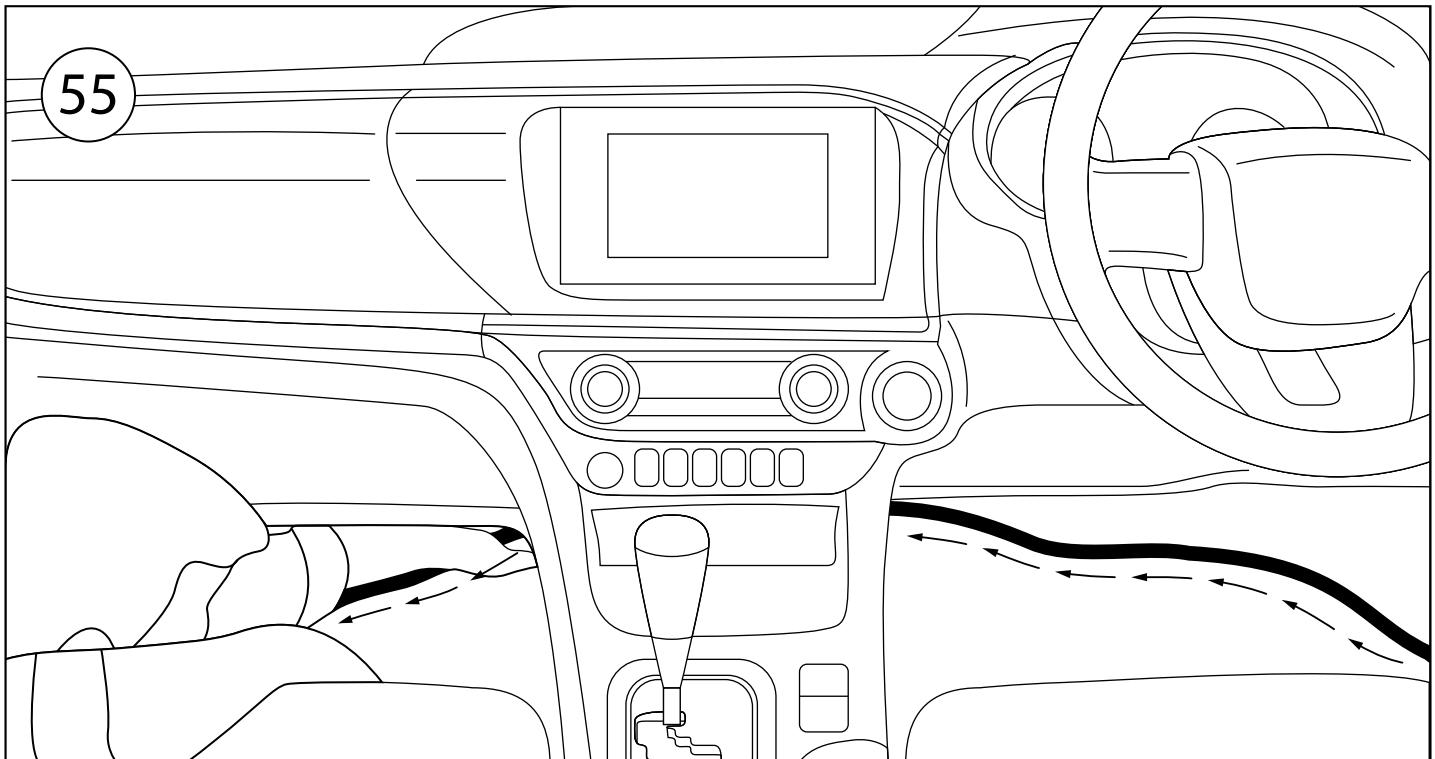

Running the wiring from the driver side through the passenger side as shown in picture.


56

56.1

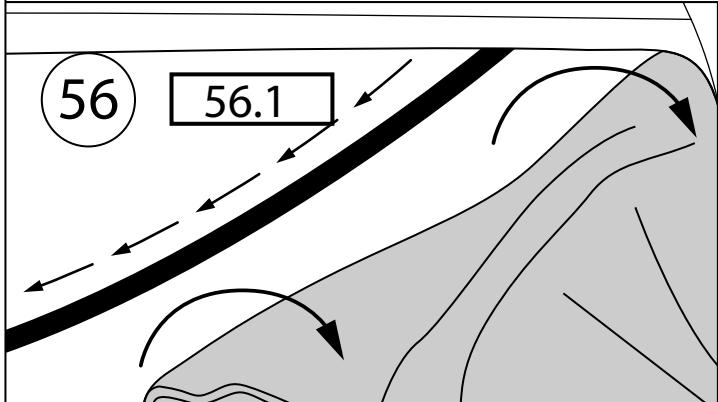

Take off the vehicle rubber pad in order to keep/hide the wiring.



56.2

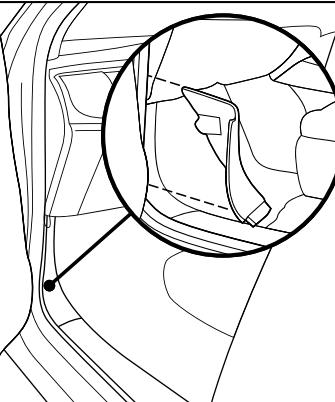

Take off the cover at the passenger position side in order to check the Defogger wiring of the vehicle.





57

57.2

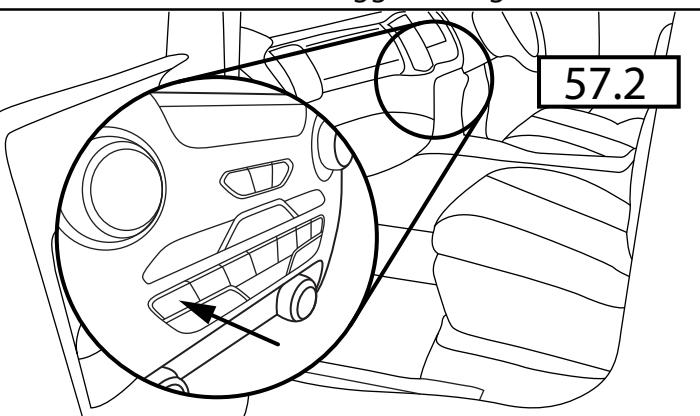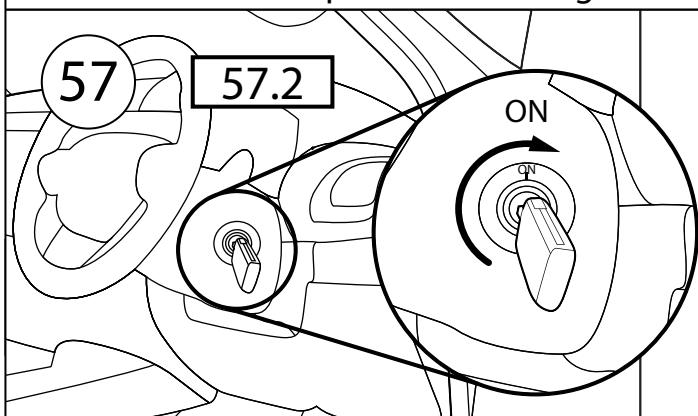

Checking the defogger system by turn ON and push the defogger button at the console pad.

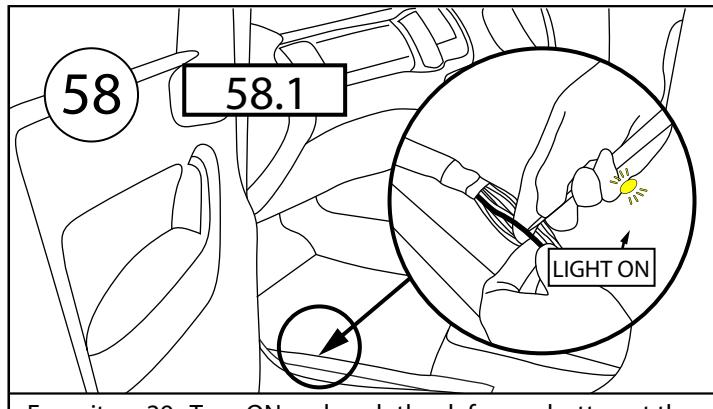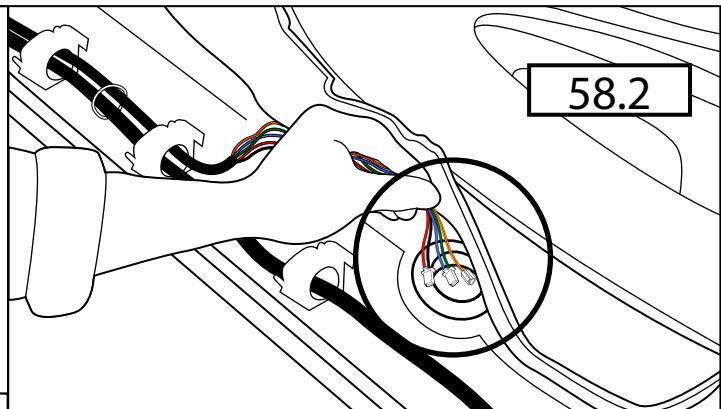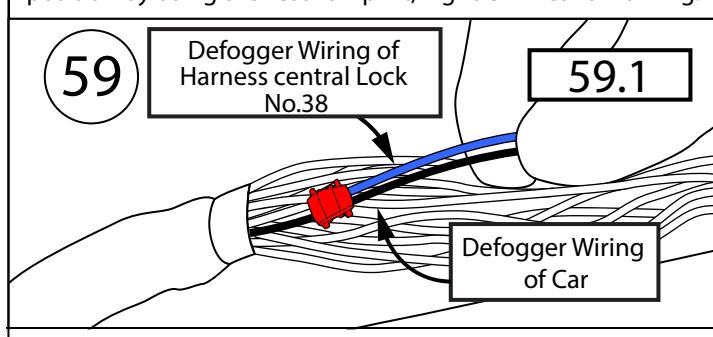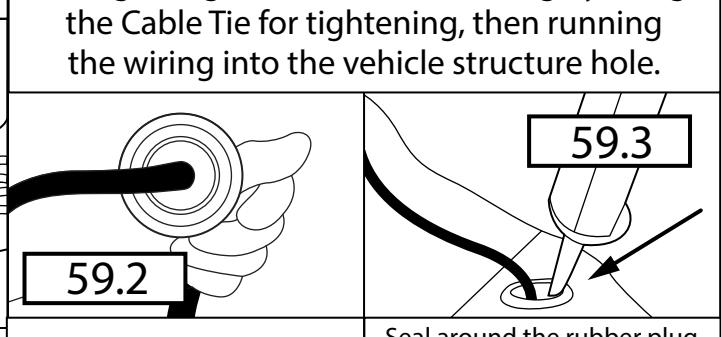

 <p>58</p> <p>58.1</p>	 <p>58.2</p>
<p>From item 29 : Turn ON and push the defogger button at the console pad, After that check the defogger wiring at passenger position by using the Test Lamp kit, Light On means working.</p>	
 <p>59</p> <p>59.1</p>	 <p>59.2</p> <p>59.3</p>
<p>Connects the Blue Wiring (Defogger) of the Harness for Installation No.38 with the Black Wiring (Defogger) of the vehicle by using the Electro-tap.</p>	<p>Run the wiring into the rubber plug</p> <p>Seal around the rubber plug wiring hole in order to protect water leaking. Wait for 15 minutes until it's dry.</p>

60

The Step of wiring running diagram


Point 1 Wiring running from driver side through passenger side.

Point 2 Running canopy wiring via vehicle wiring hole/pipe along under the chassis.


Point 3 Wiring that run under vehicle along the chassis.

Point 4 Wiring that run via chassis at the fender area.


Point 5 Wiring that running up the rear light in order to connect with the other wiring set.

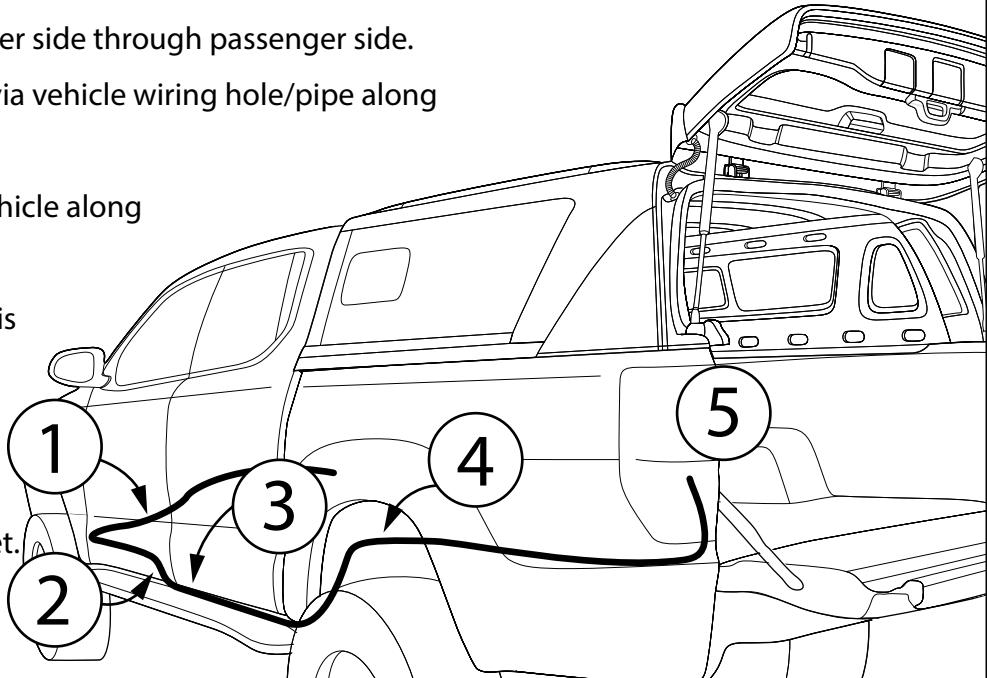


The Step of wiring running diagram for the Harness Central Lock No.38

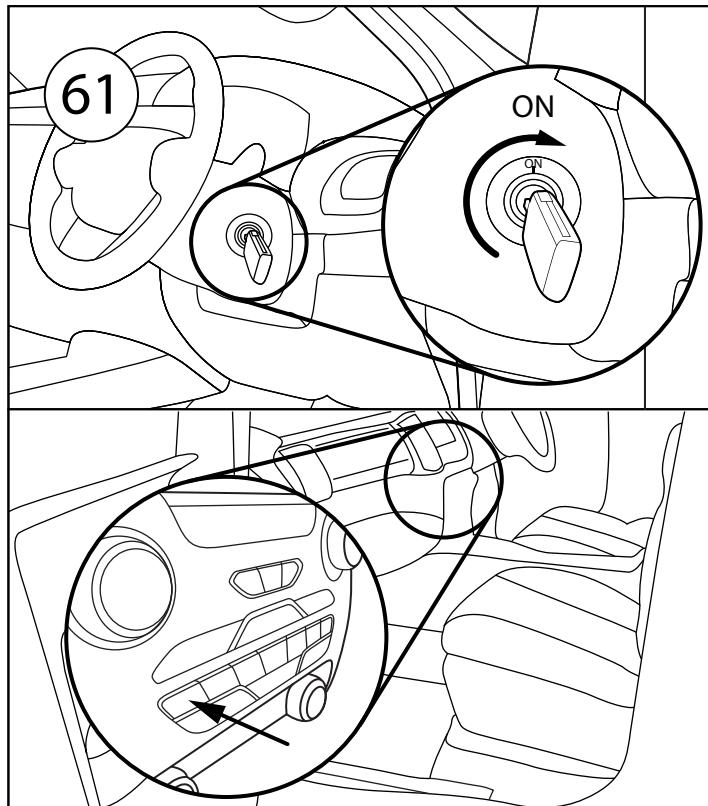


Checking the defogger system by turn ON and push the defogger button at the console pad.

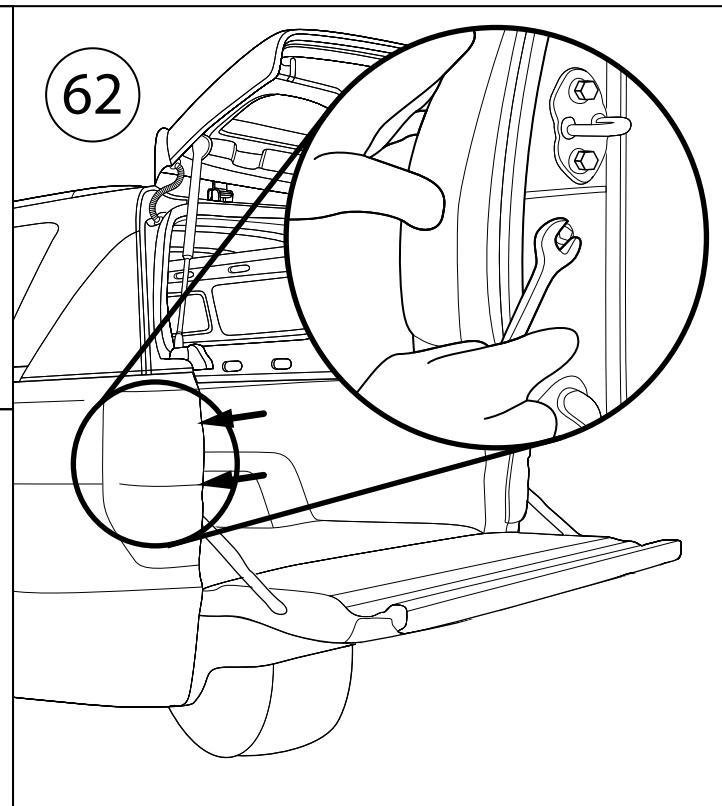

Take off the Rear Light by using wrench No.10

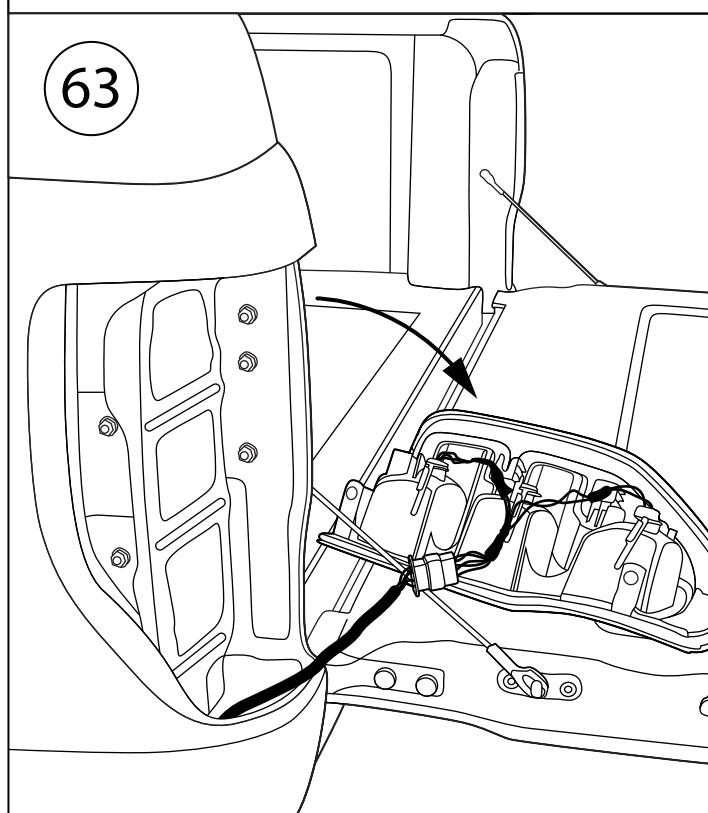

Take off the Rear Light vehicle.

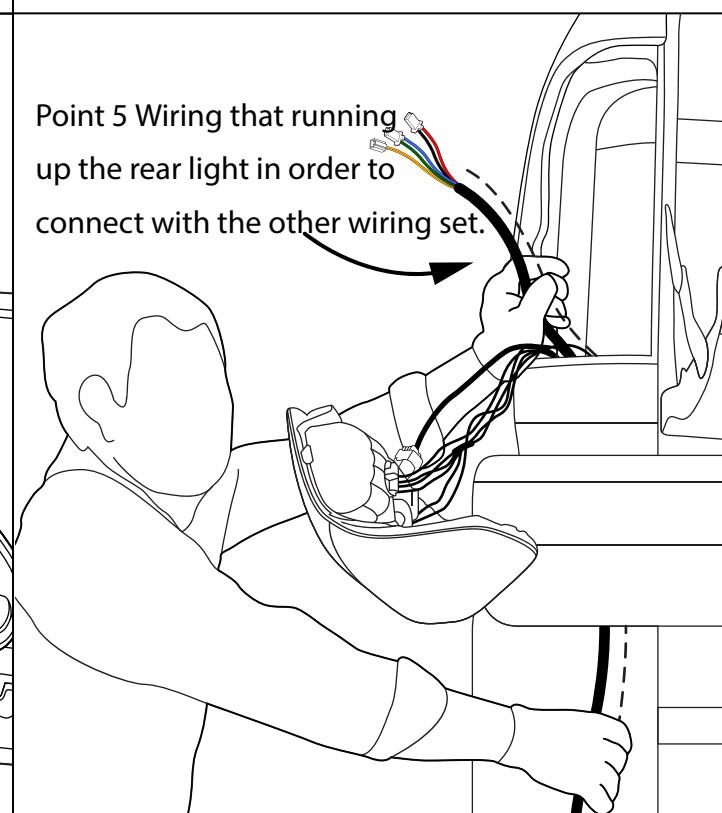

Running the Harness Central Lock No.38 up to the vehicle rear light in order to connects with the Harness Central Lock No.40.



64



Tub with Liner

Left Side

65

Tub without Liner

Left Side

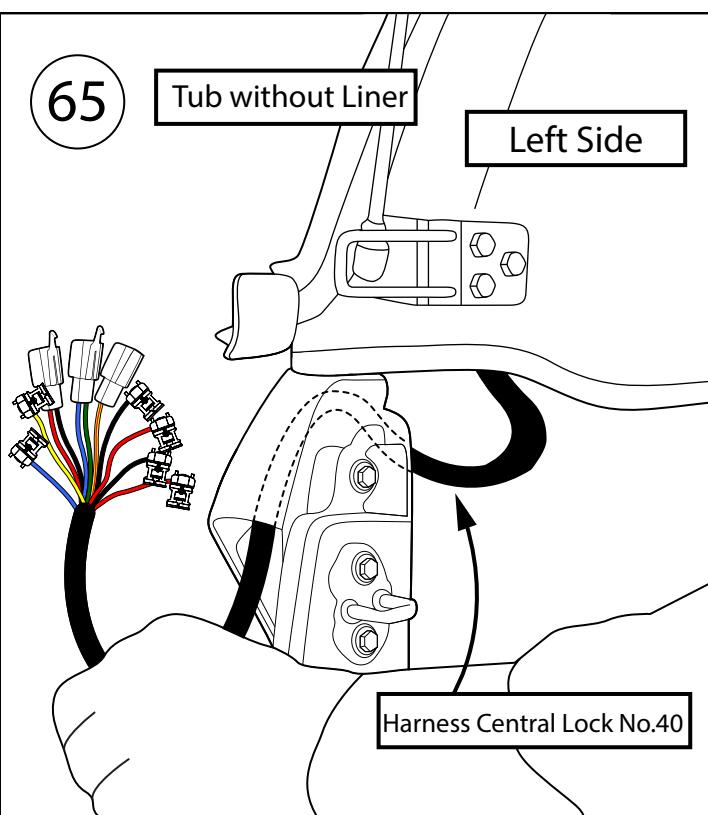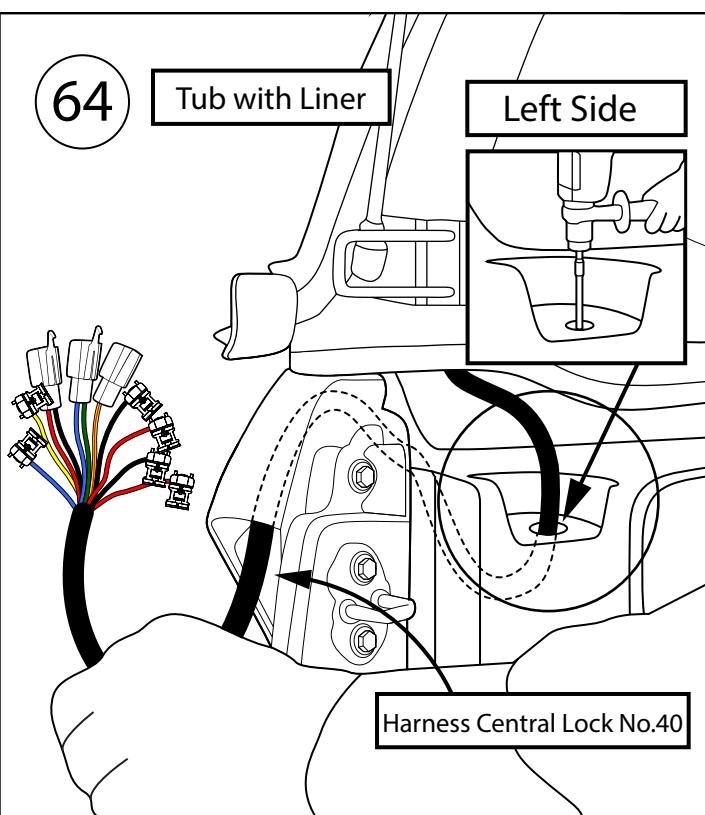

Punch the hole at the liner around 16mm. in order to run the Harness Central Lock No.40 through the vehicle tub channel out of the Rear Light socket.

Run the Harness Central Lock No.40 along the vehicle tub channel out of the Rear Light Socket.

66

Left Side


Harness Central Lock No.40

Left Side

Harness Central Lock No.38

67

Central Lock
Wire Connect

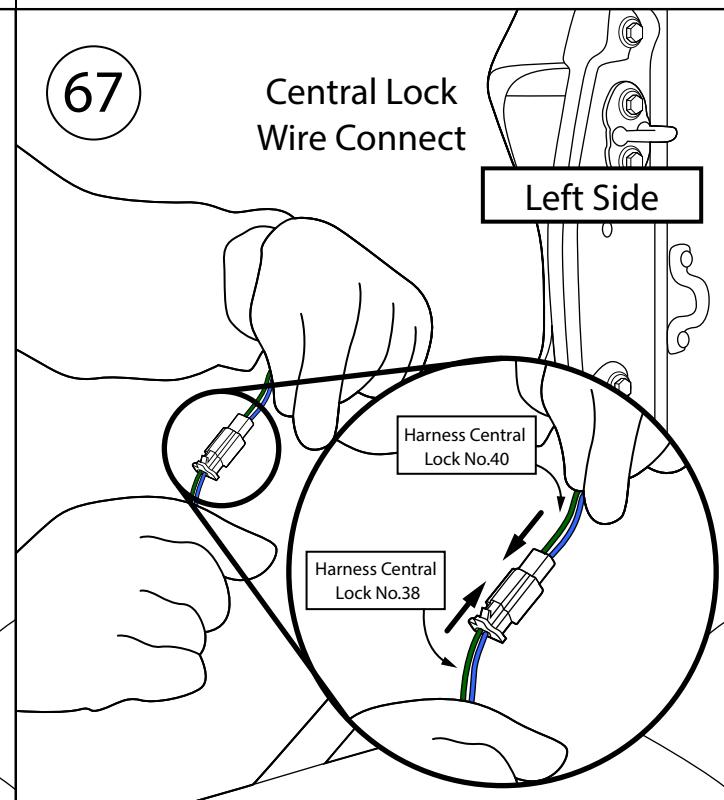

The Harness Central Lock No.40 wiring vehicle position and the Harness Central Lock No.38 wiring set.

The process of connecting the Central Lock (BL,DG) wiring of the Harness Central Lock No.40 with the Central Lock (BL,DG) wiring of the Harness Central Lock No.38.



68


Room Lamp
Wire Connect

Left Side

69

Defogger
Wire Connect

Left Side

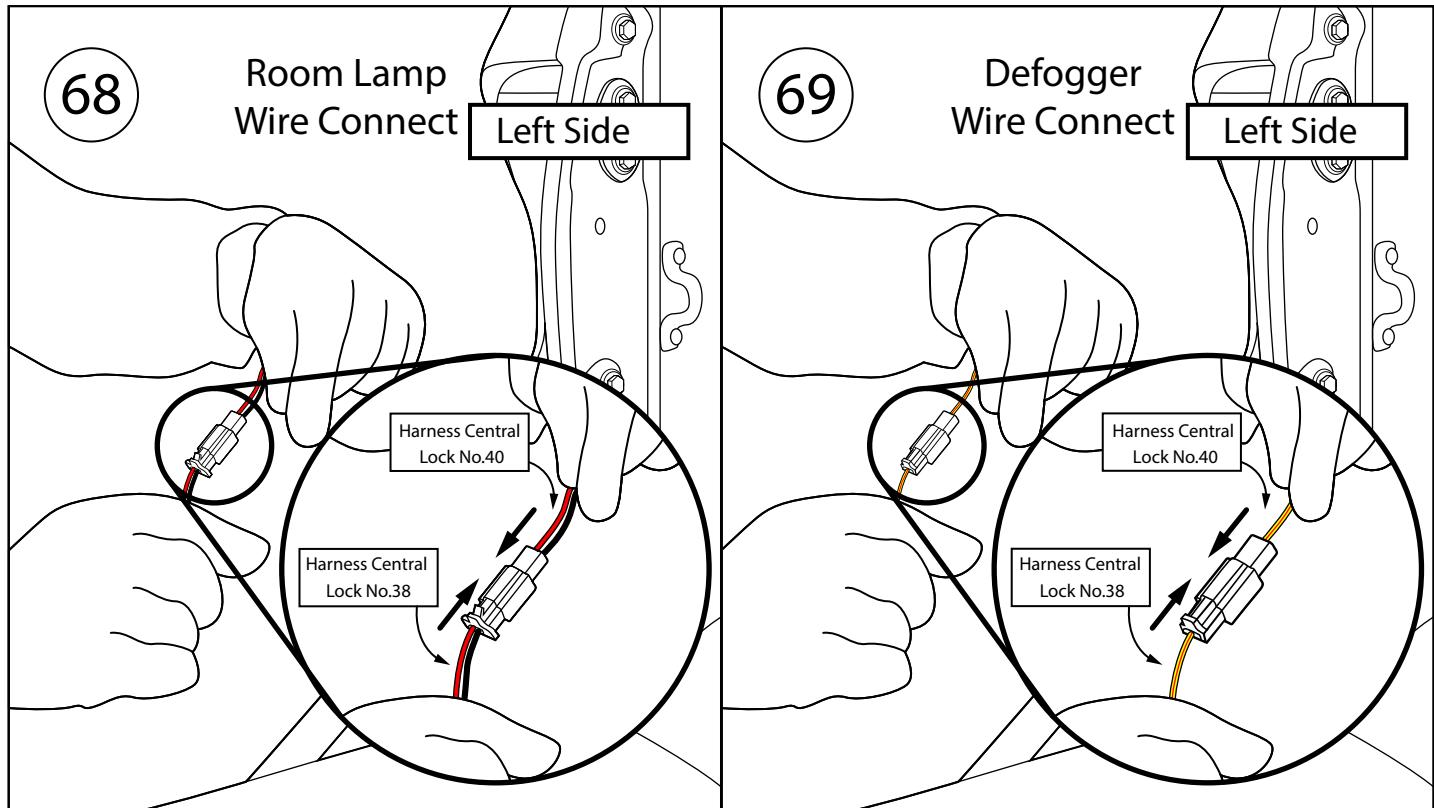

The process of connecting the Room Lamp (RD,BK) wiring of the Harness Central Lock No.40 with the Room Lamp (RD,BK) wiring of the Harness Central Lock No.38.

The step of connecting the Defogger (YL/RD) wiring of the Harness Central Lock No.40 with the Defogger (YL/RD) wiring of the Harness Central Lock No.38.

70

Third Brake Light Wire Connect

Connect Position

Harness Central Lock No.40


Third Brake Light (Green) (Car)

Left Side

Brake Light (Light Green) of the vehicle rear light connect position.




71

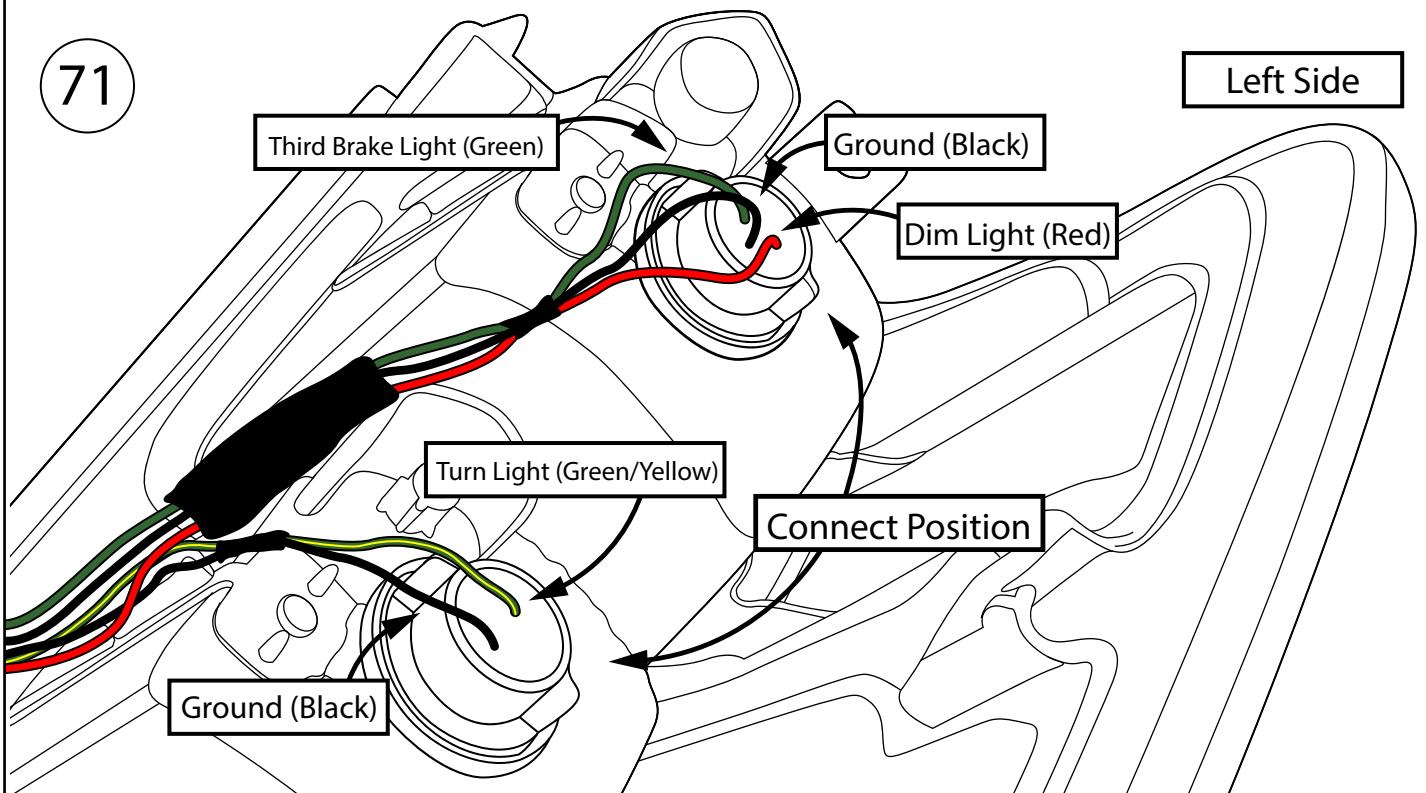


Left Side

Third Brake Light , Brake Light , Dim Light , Turn Light and Ground of the vehicle wire connect position.

72

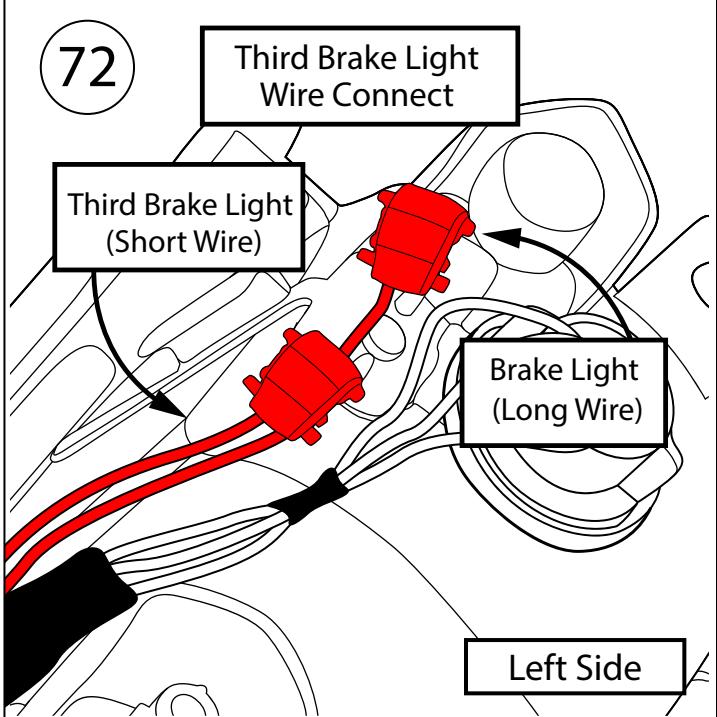


73

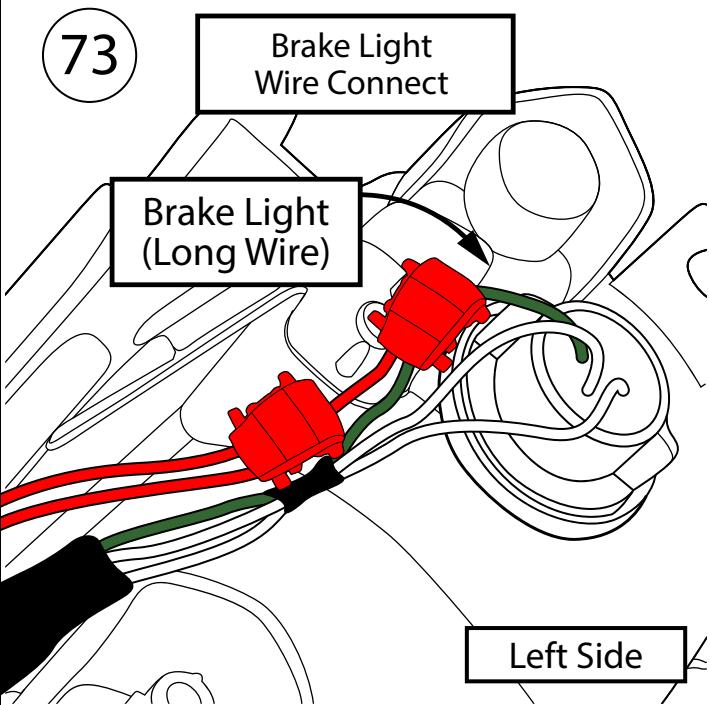


Left Side


Bring the red wiring, Third Brake Light (Short wire) of the Harness Central Lock No.40 connecting with Brake Light (Long wire) of the Harness Central Lock No.40.

After finish the installation step no.43 Bring the Red Wiring, Brake wiring (Long wire) of the Harness Central Lock No.40 connecting with the wiring (Green wire) of the vehicle.

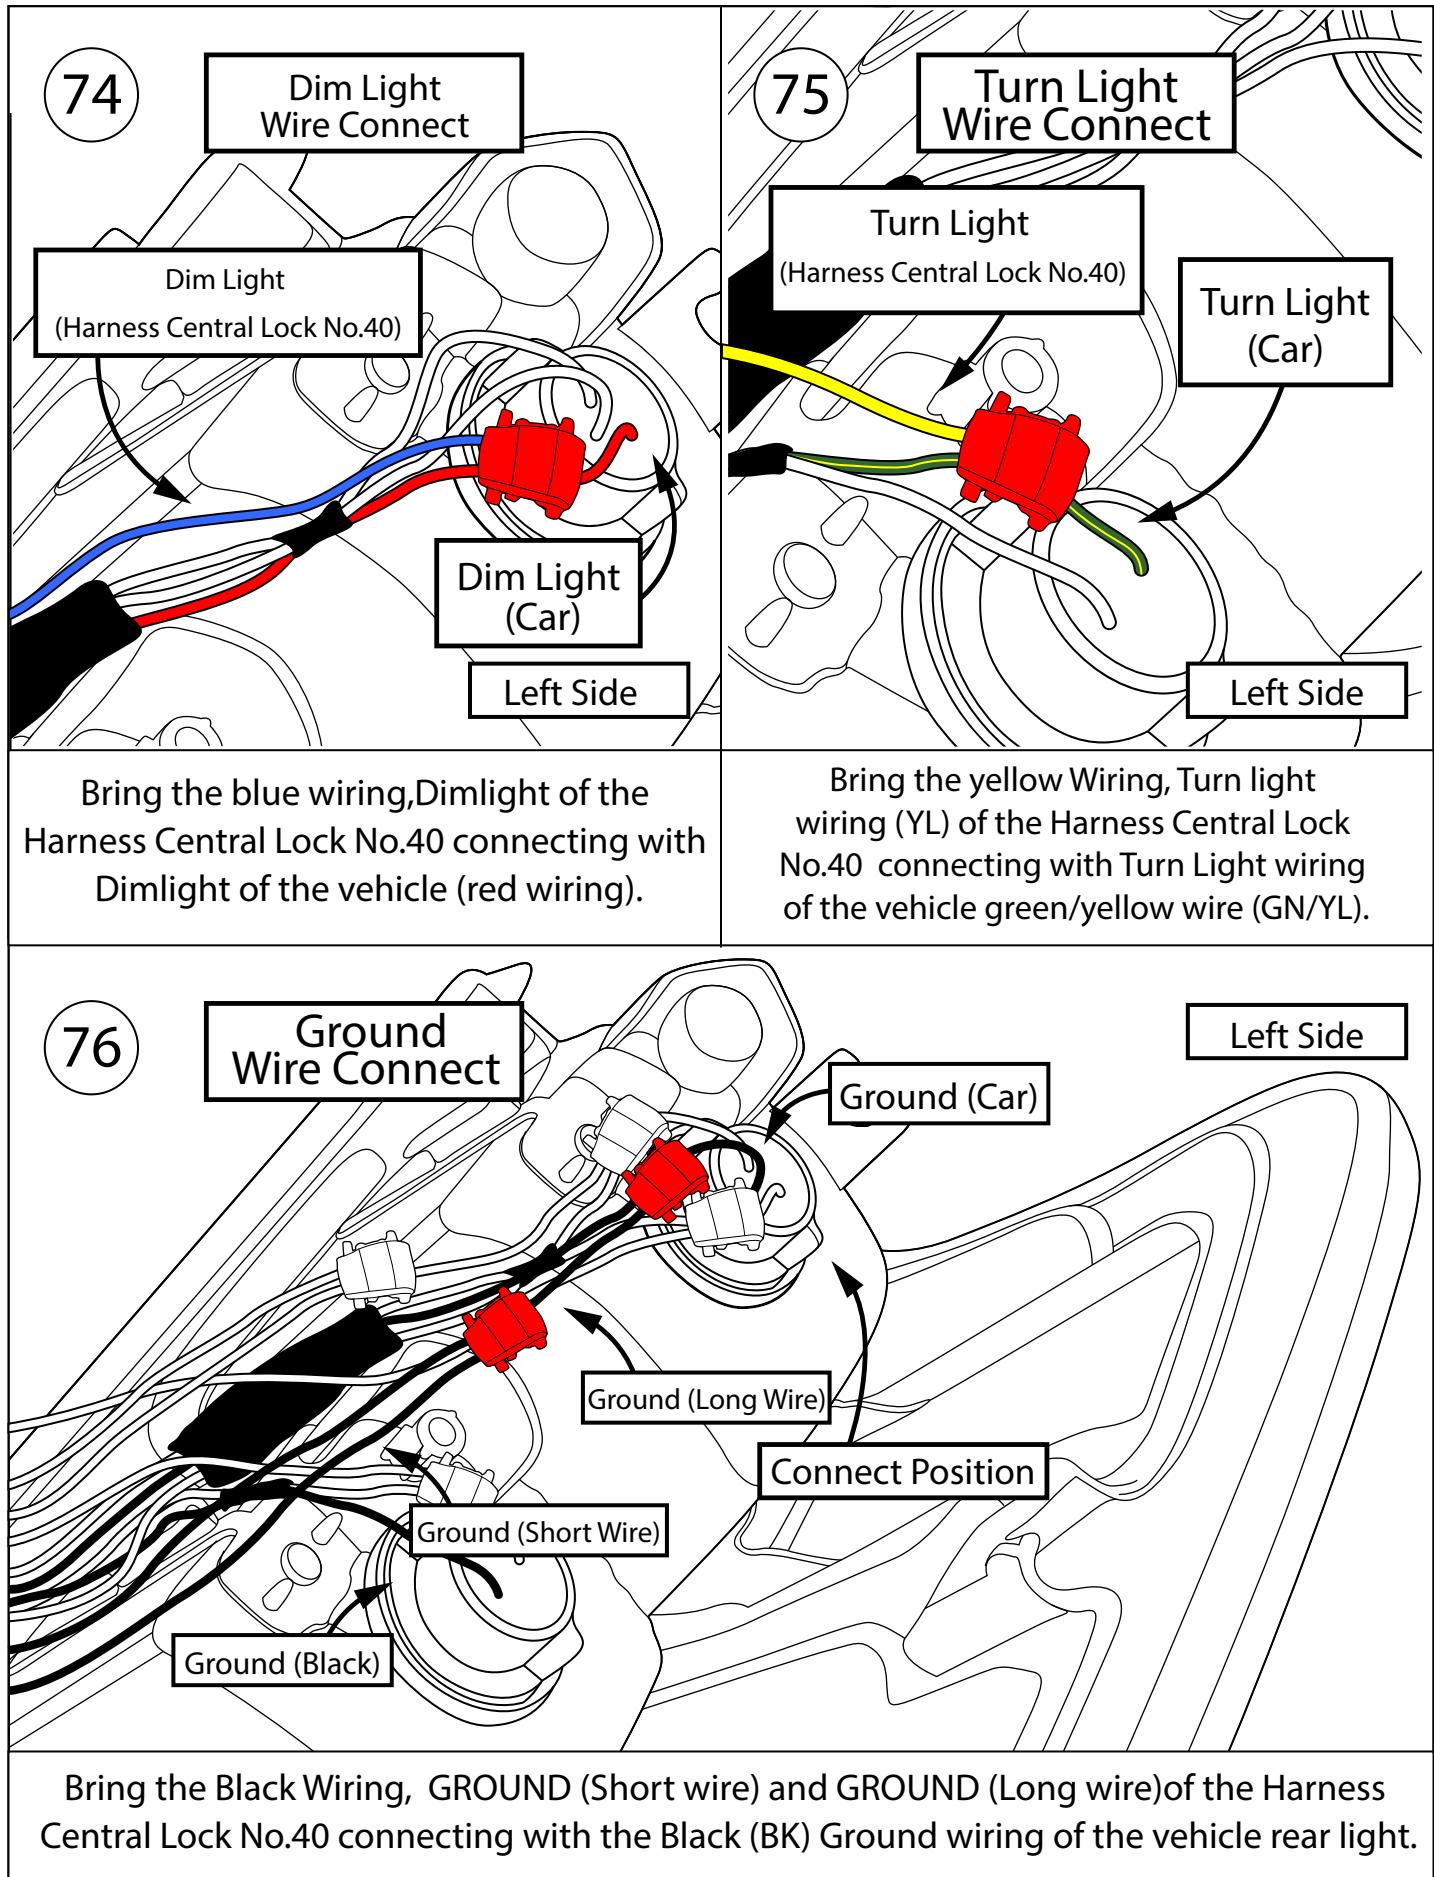


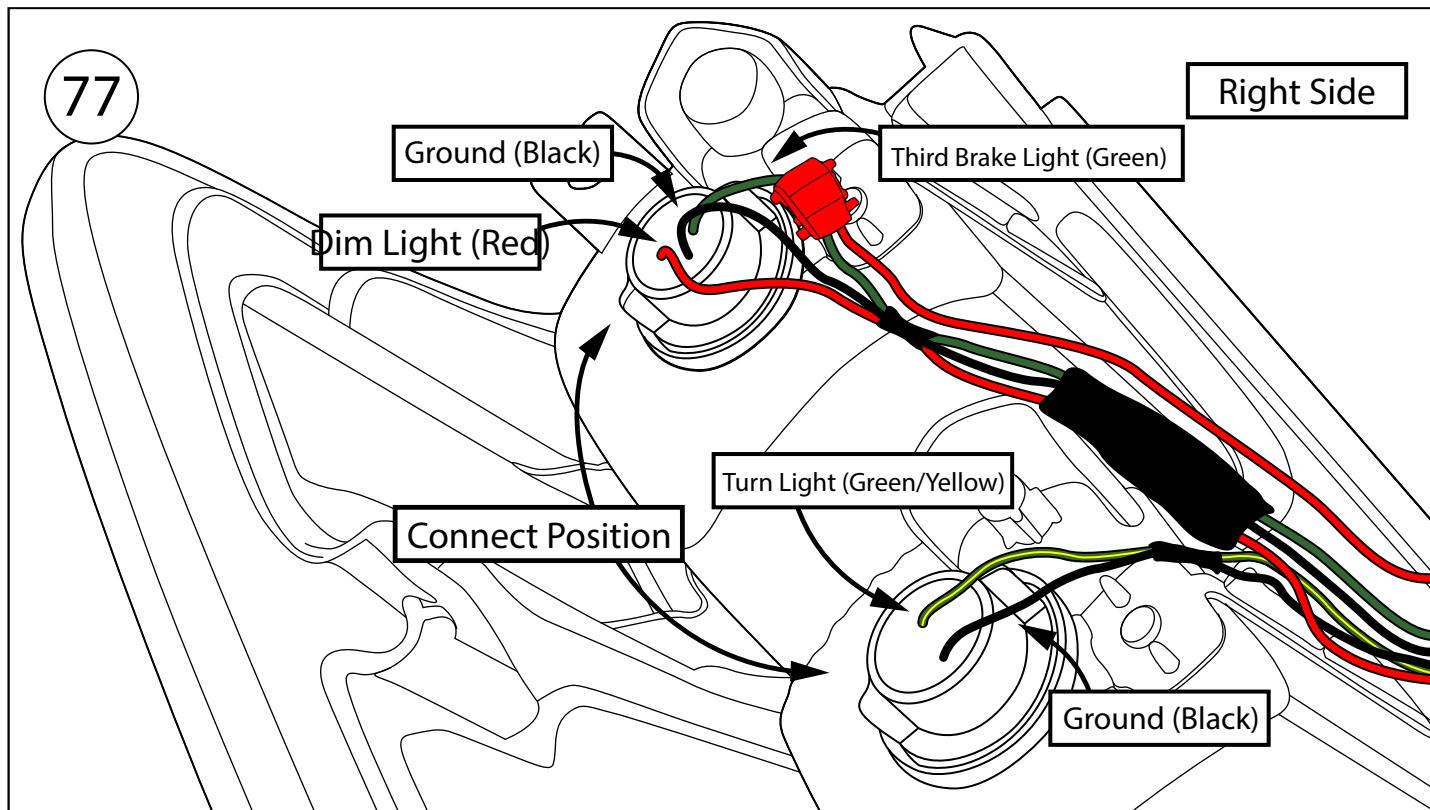


Third Brake Light , Brake Light , Dim Light , Turn Light and Ground of the vehicle wire connect position.

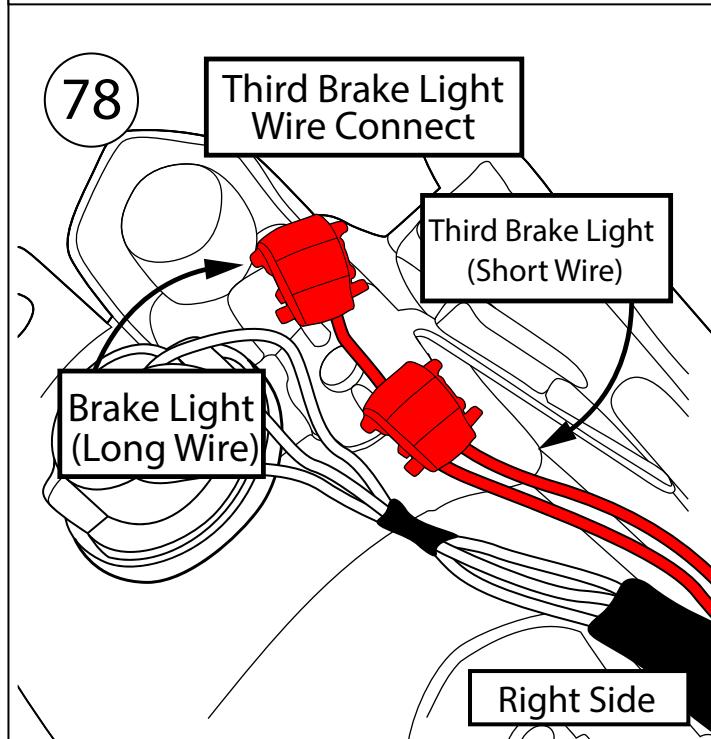

Bring the red wiring, Third Brake Light (Short wire) of the Harness Central Lock No.40 connecting with Brake Light (Long wire) of the Harness Central Lock No.40.

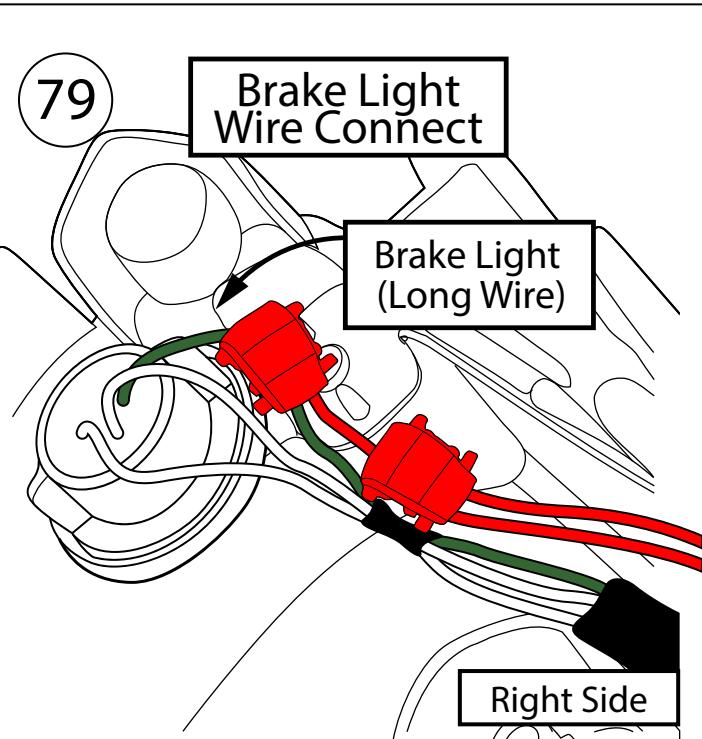


After finish the installation step no.49 Bring the Red Wiring, Brake wiring (Long wire) of the Harness Central Lock No.40 connecting with the wiring (Green wire) of the vehicle.

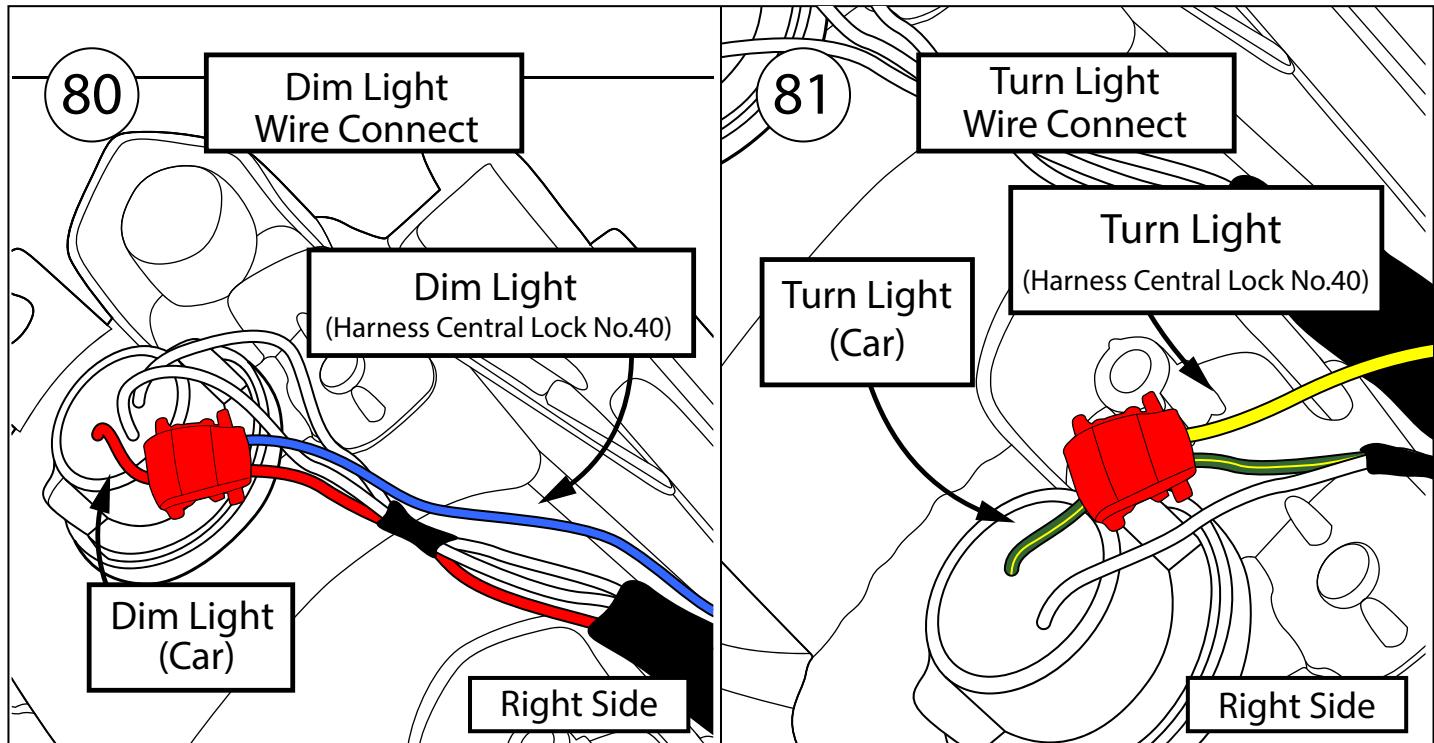

Bring the blue wiring, Dimlight of the Harness Central Lock No.40 connecting with Dimlight of the vehicle (red wiring).


Bring the yellow Wiring, Turn light wiring (YL) of the Harness Central Lock No.40 connecting with Turn Light wiring of the vehicle green/yellow wire (GN/YL).

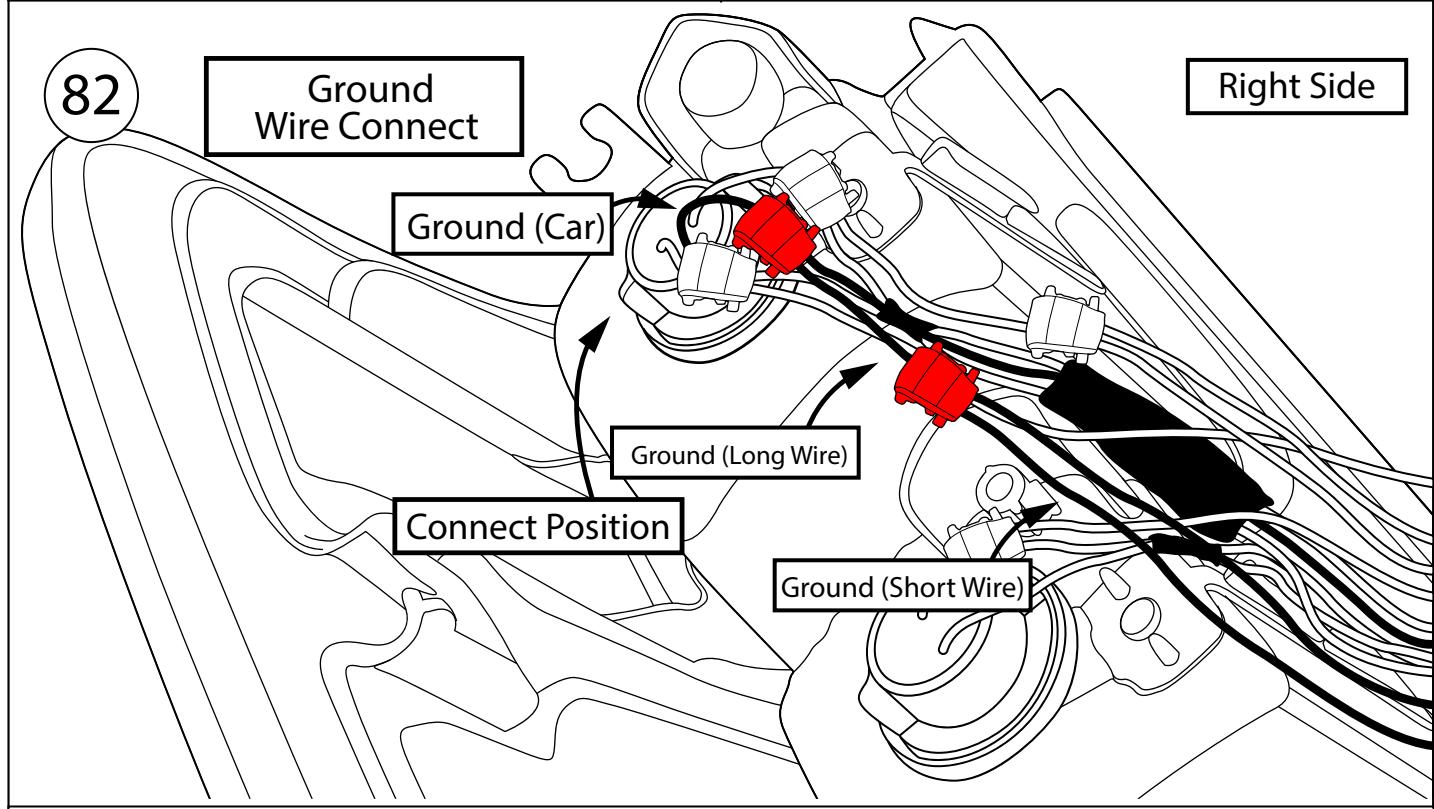

Bring the Black Wiring, GROUND (Short wire) and GROUND (Long wire) of the Harness Central Lock No.40 connecting with the Black (BK) Ground wiring of the vehicle rear light.




83

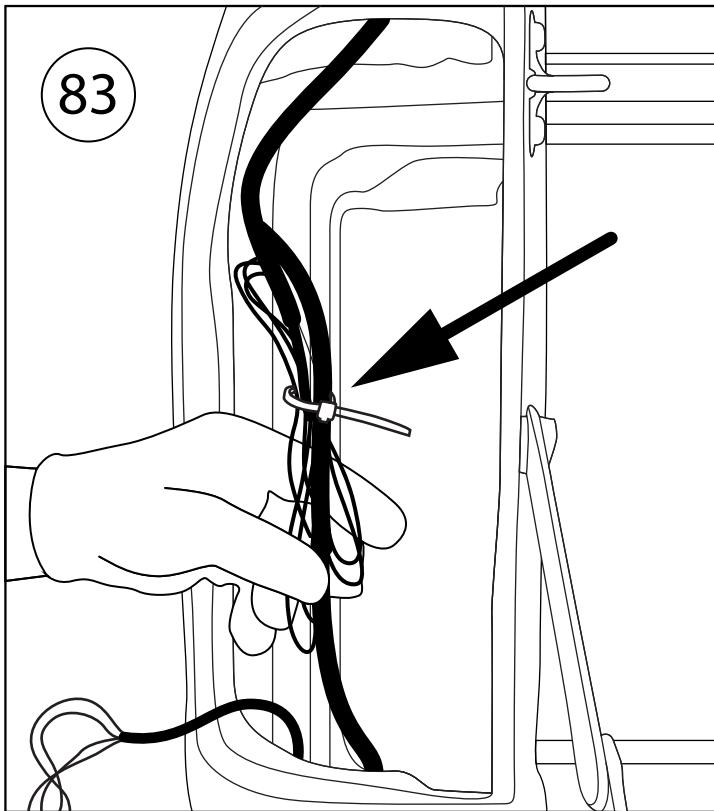


Tight up all the wiring by using
the Cable Tie

84

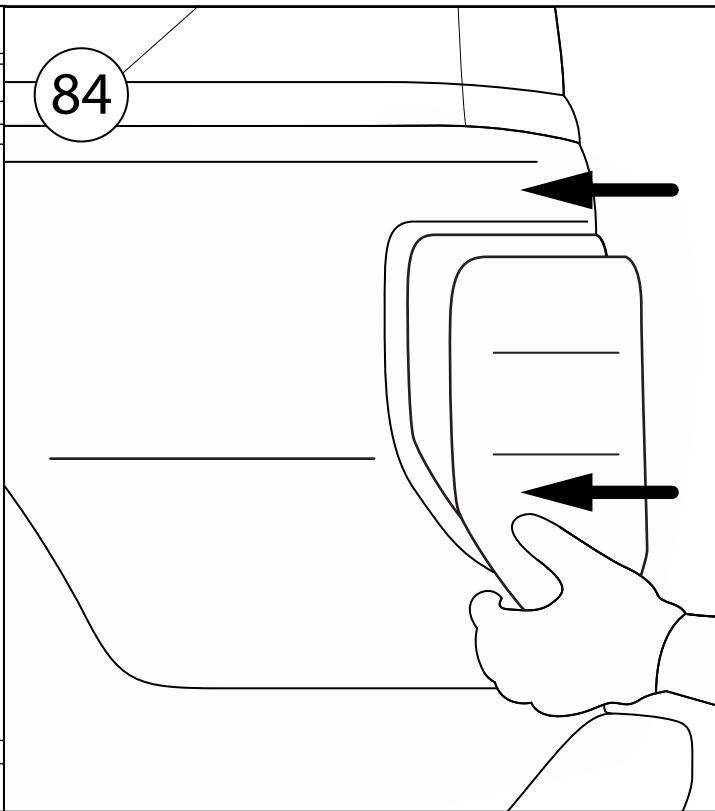


Reassemble the vehicle rear light.

85

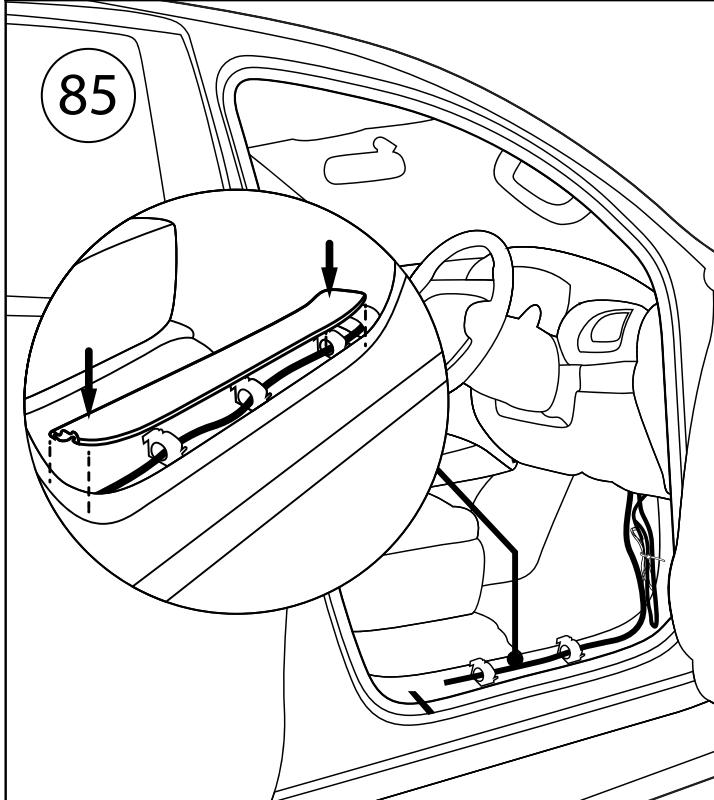

86

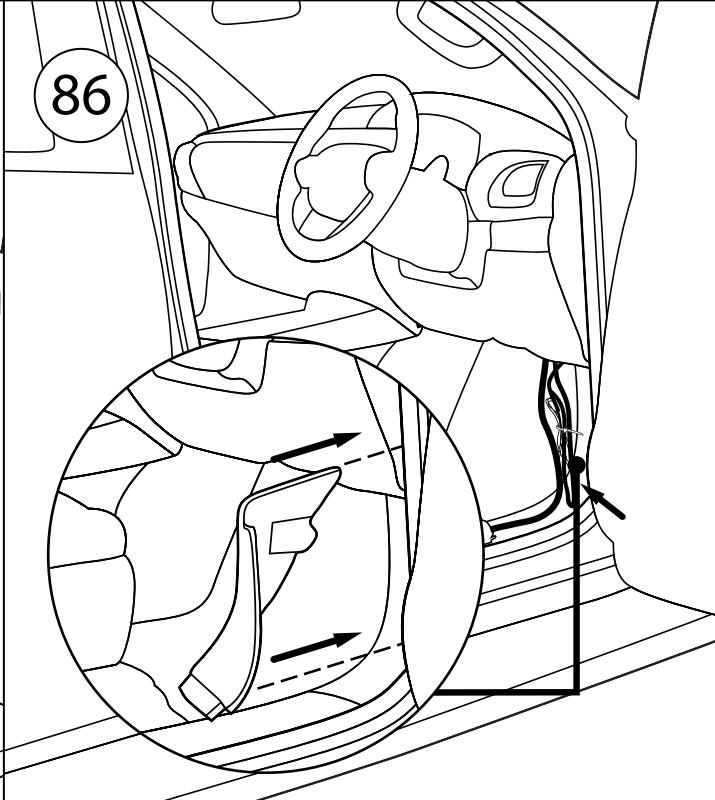

Tight up the wiring at the driver side by using the Cable Tie,
then close the vehicle cover.




87

Check the Central Lock / Room Lamp working.



Central Lock checking by pressing the vehicle remote key at the Lock position, Canopy will be lock and cannot open.


88

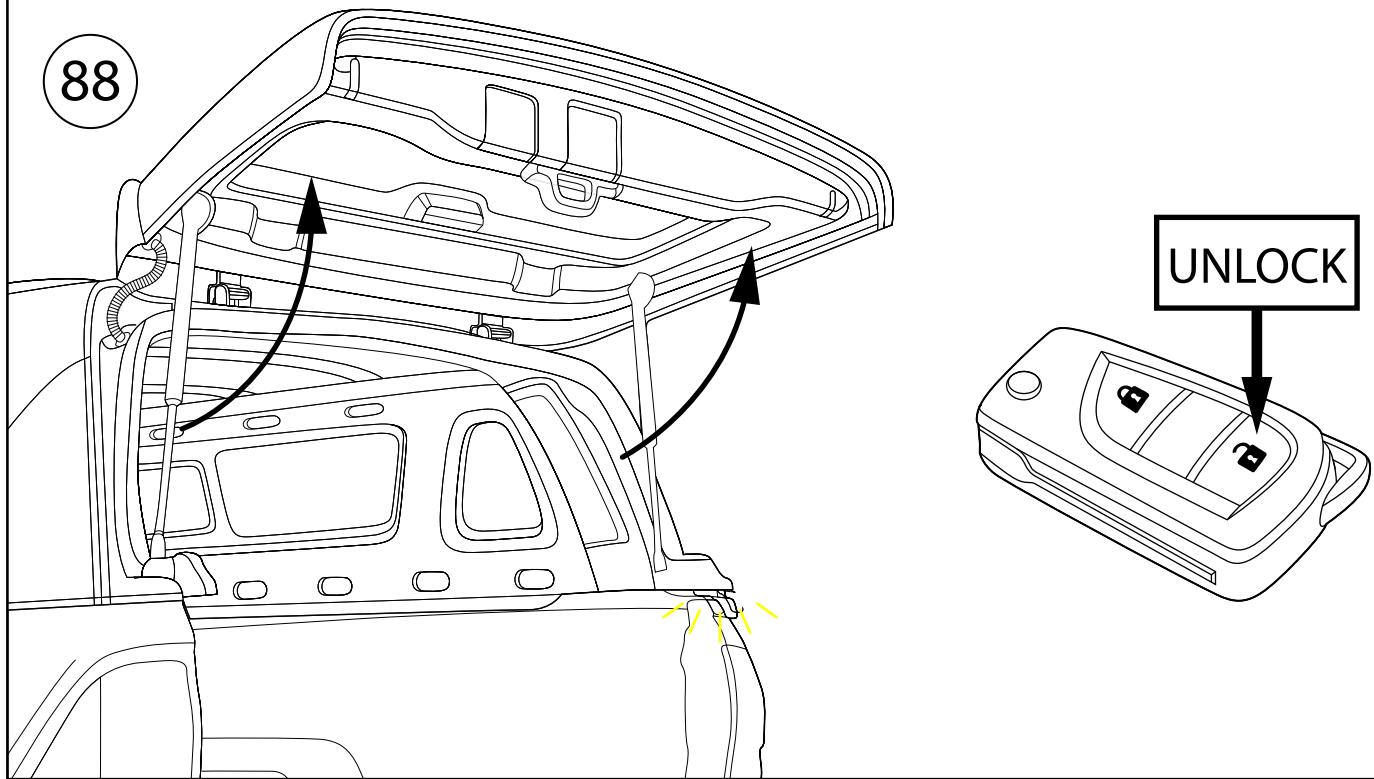

Central Lock checking by pressing the vehicle remote key at the Unlock position, Canopy will be open.



89

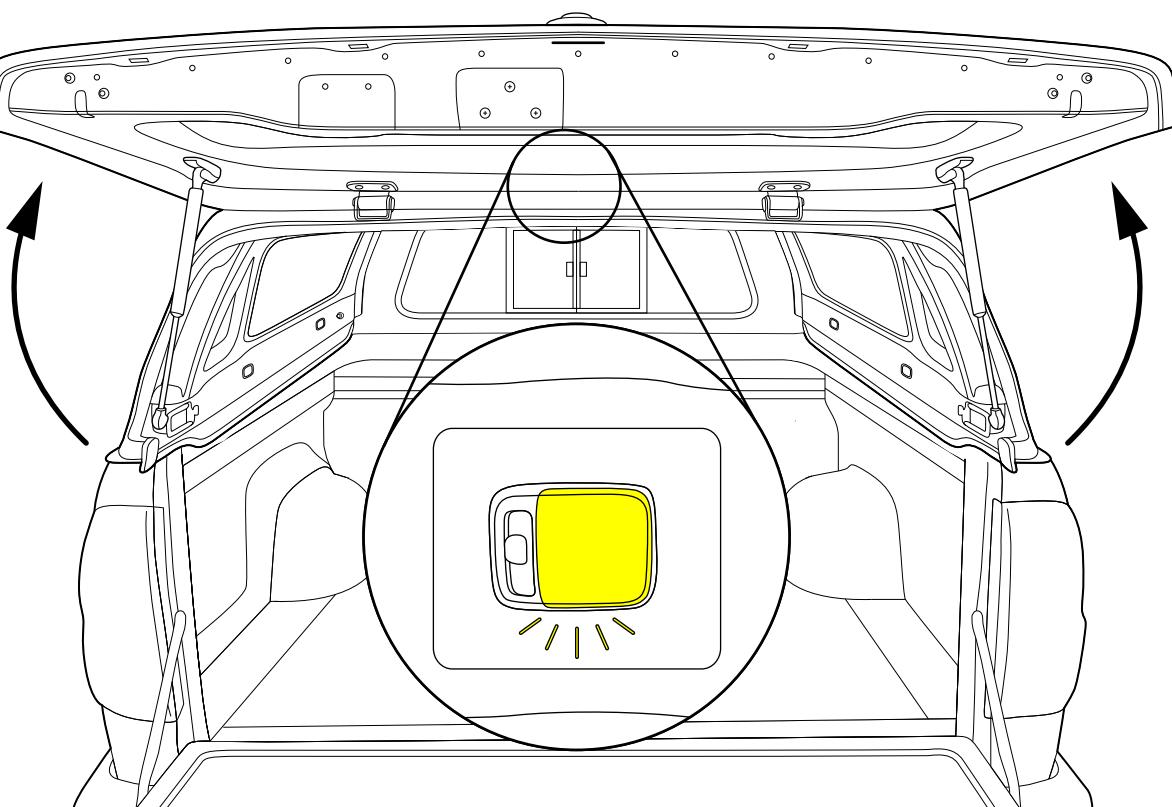


Room Lamp checking by opening the rear door then
the Room Lamp will be on.




Electric Lock Installation Manual EBW Version 2.0

TL-1

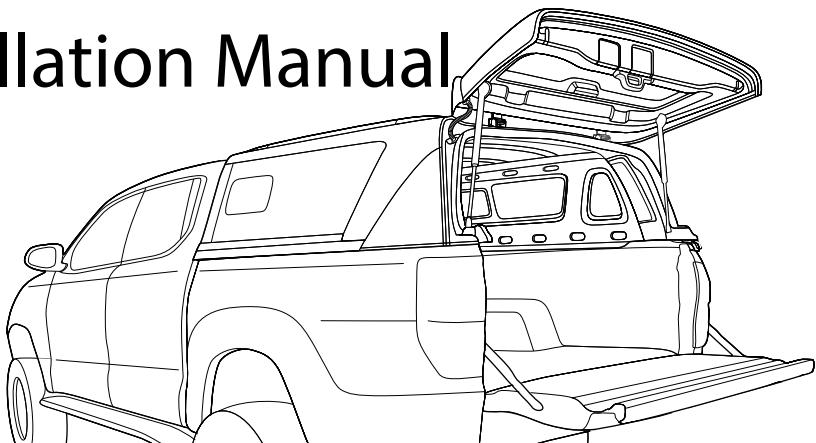

Canopy Wire set

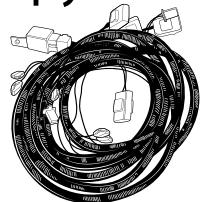

C1: Harness Central
Lock No.38

Require Tool




T1 : 10 mm. Wrench



T2 : 19 mm. Wrench

90


Install Canopy On Tub

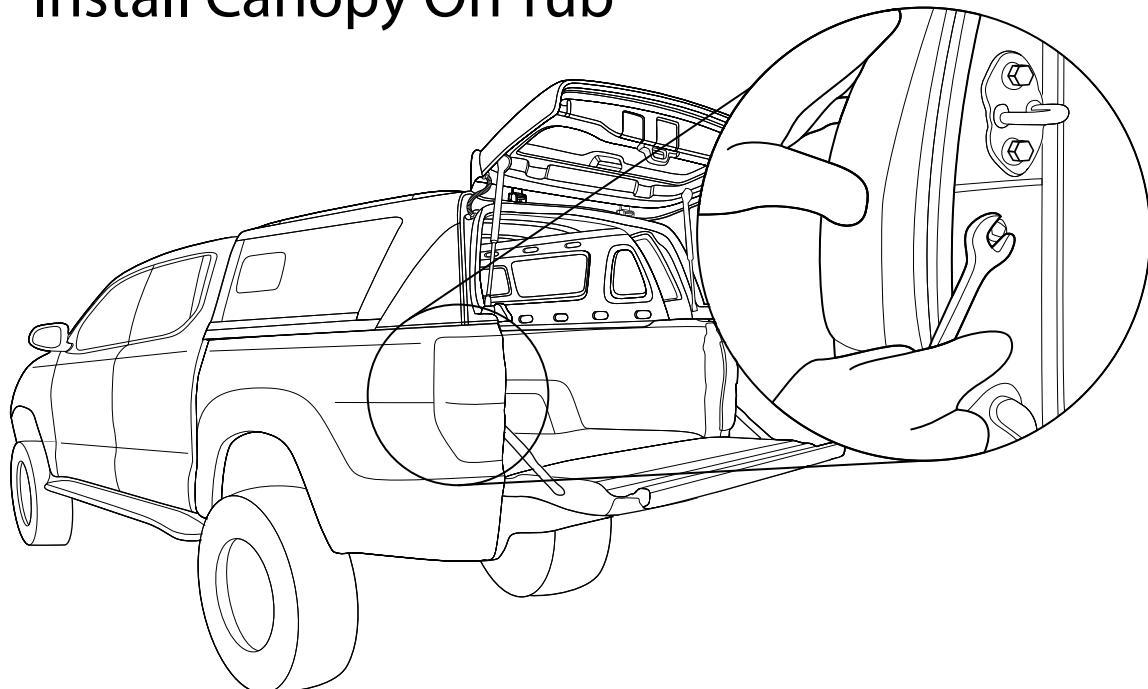

After connects all the Electric lock wiring, then take off the rear light cover by using wrench no.10 loosen the nuts.




91

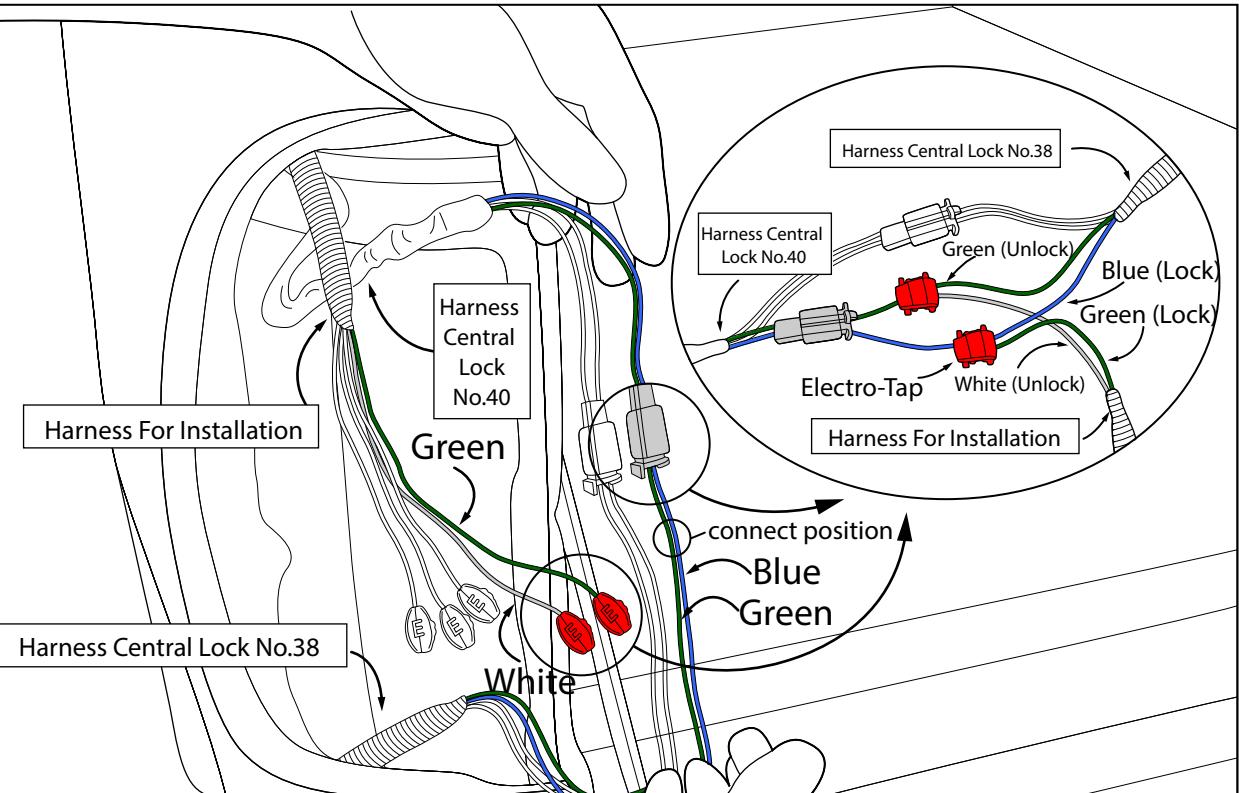

Bring White Wiring (Unlock) of the Harness for installation wiring set connects with the Green Wiring (Unlock) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).

Bring Green Wiring (Lock) of the Harness for Installation wiring set connects with the Blue Wiring (Lock) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).

92

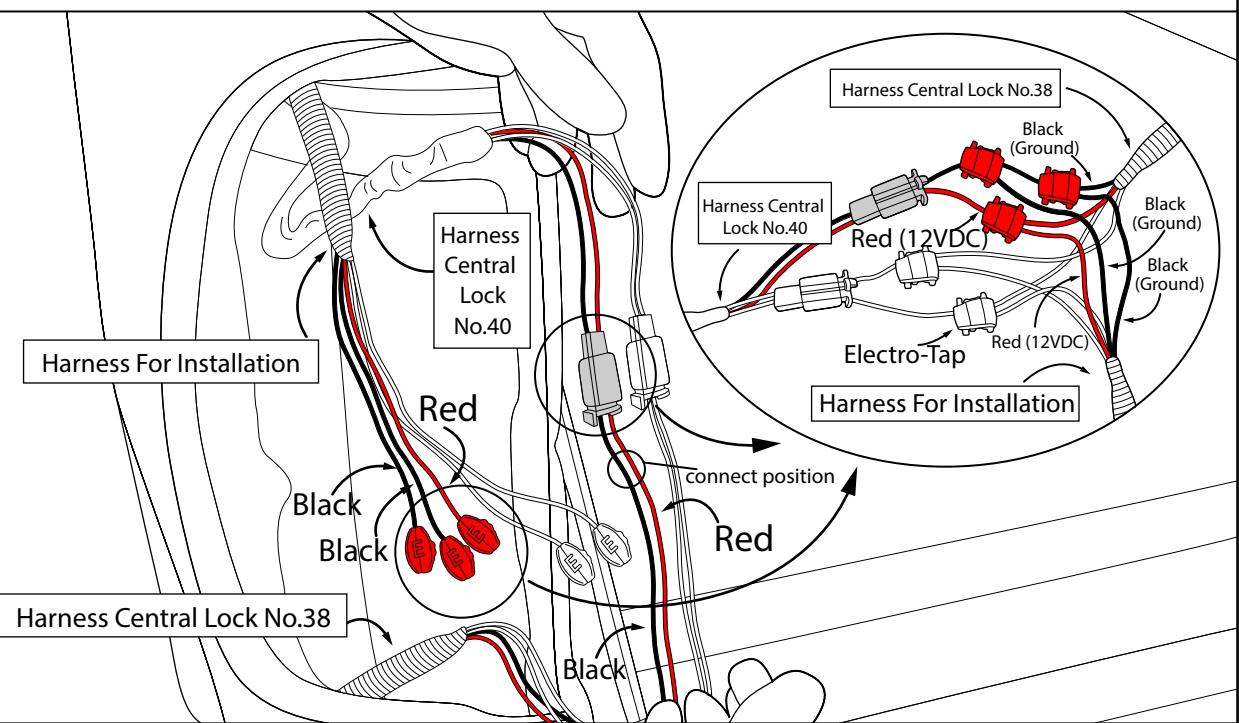

Bring the Red Wiring (12VDC) of the Harness for Installation wiring set connects with the Red Wiring (12VDC) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).


Bring the two Black (Ground) wiring of the Harness for installation set to connect with the Black (Ground) wiring of the Harness Central Lock No.38 set by using the ELECTRO-TAP (Red Colour).



93


User Manual

TL-1

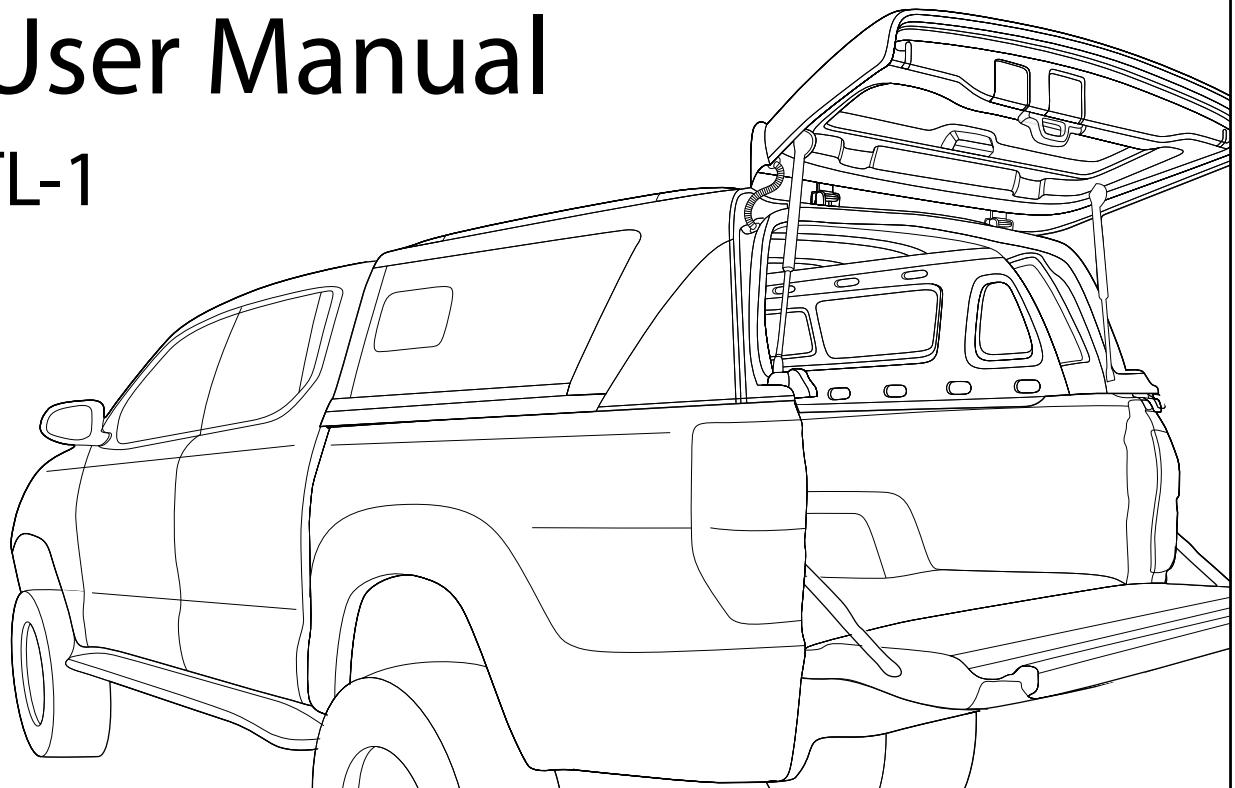

Instructions for using the Electric Lock.


94

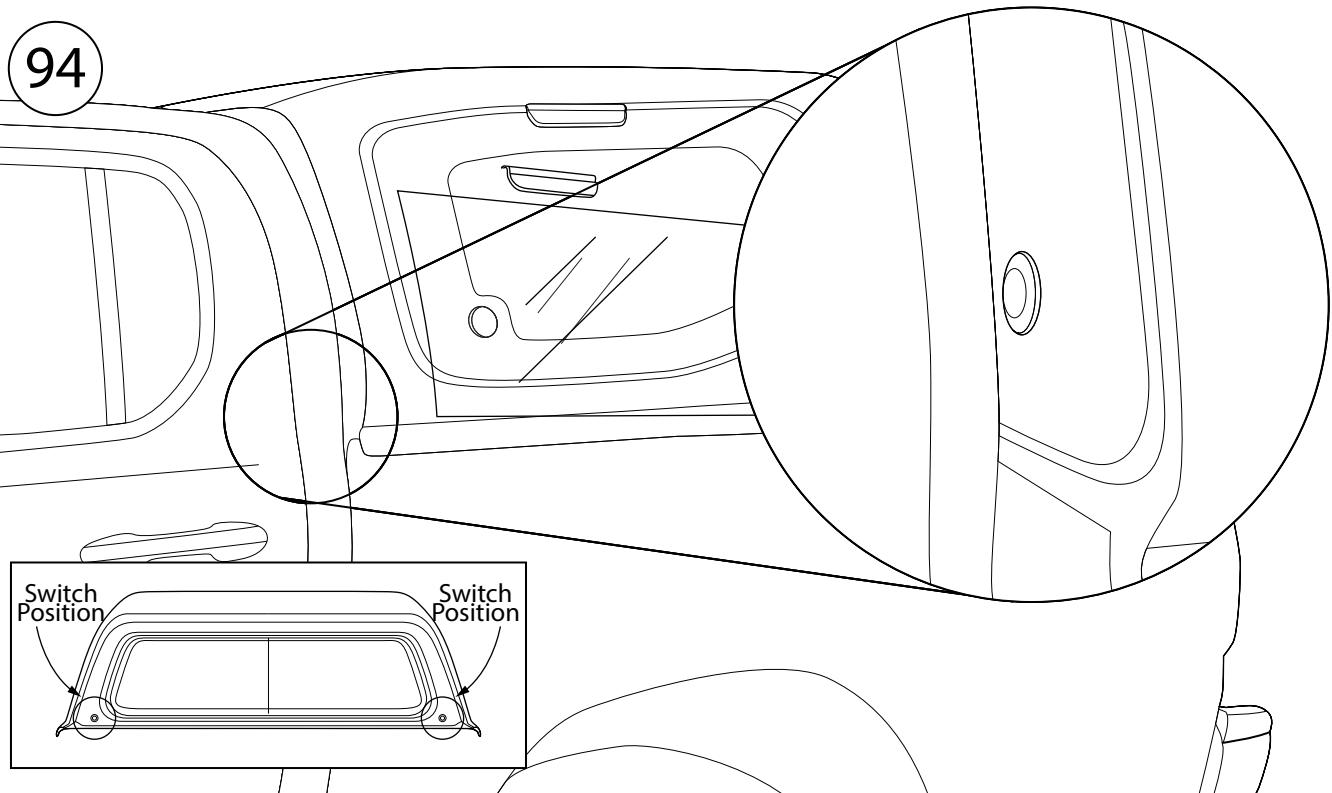

The picture shows Electric Lock switch button positions.




95

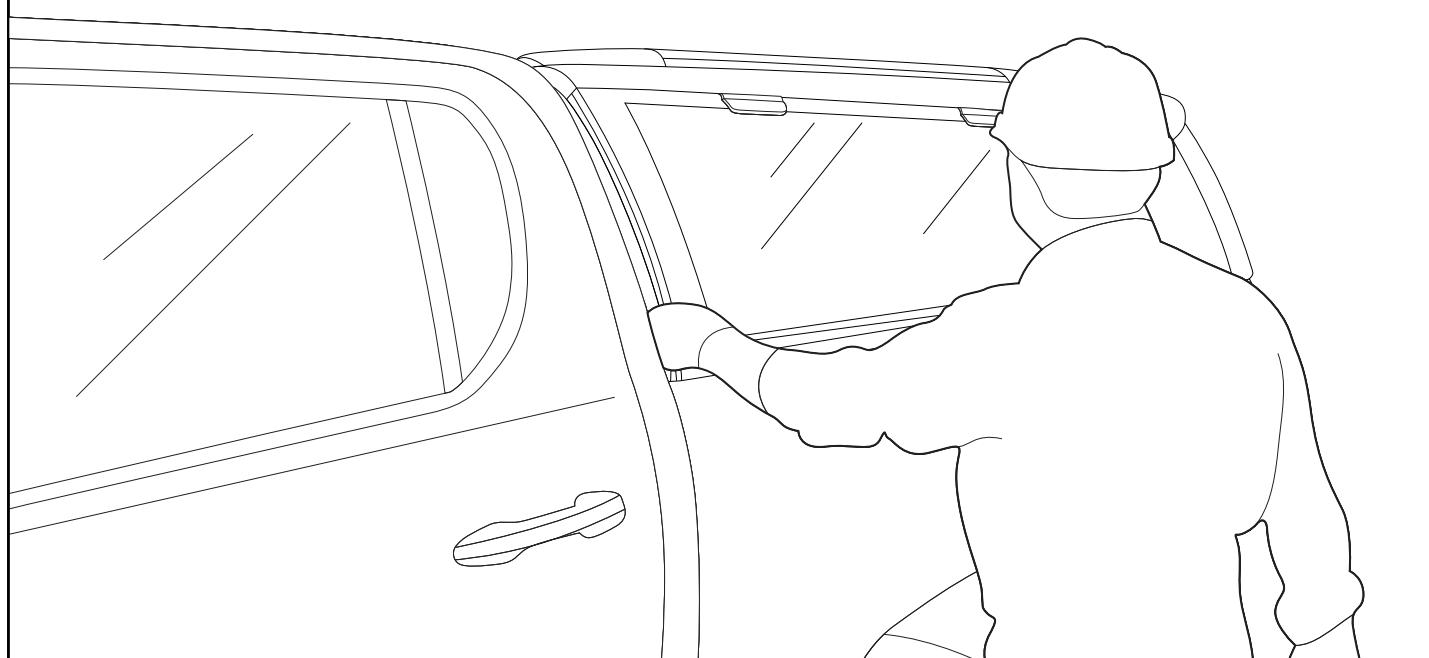

The picture shows the usage of Electric Lock button.


96

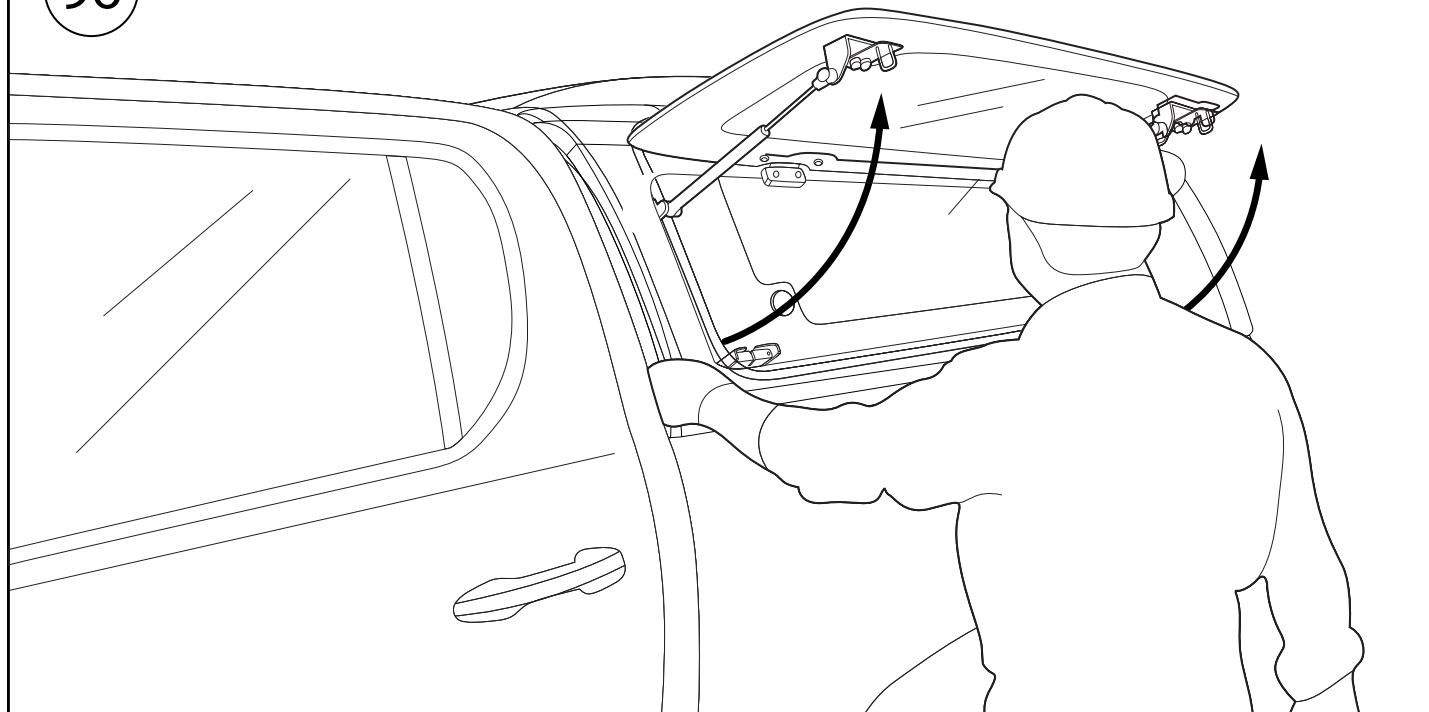

When push the Electric Lock button, the window will open as shown in picture.




97

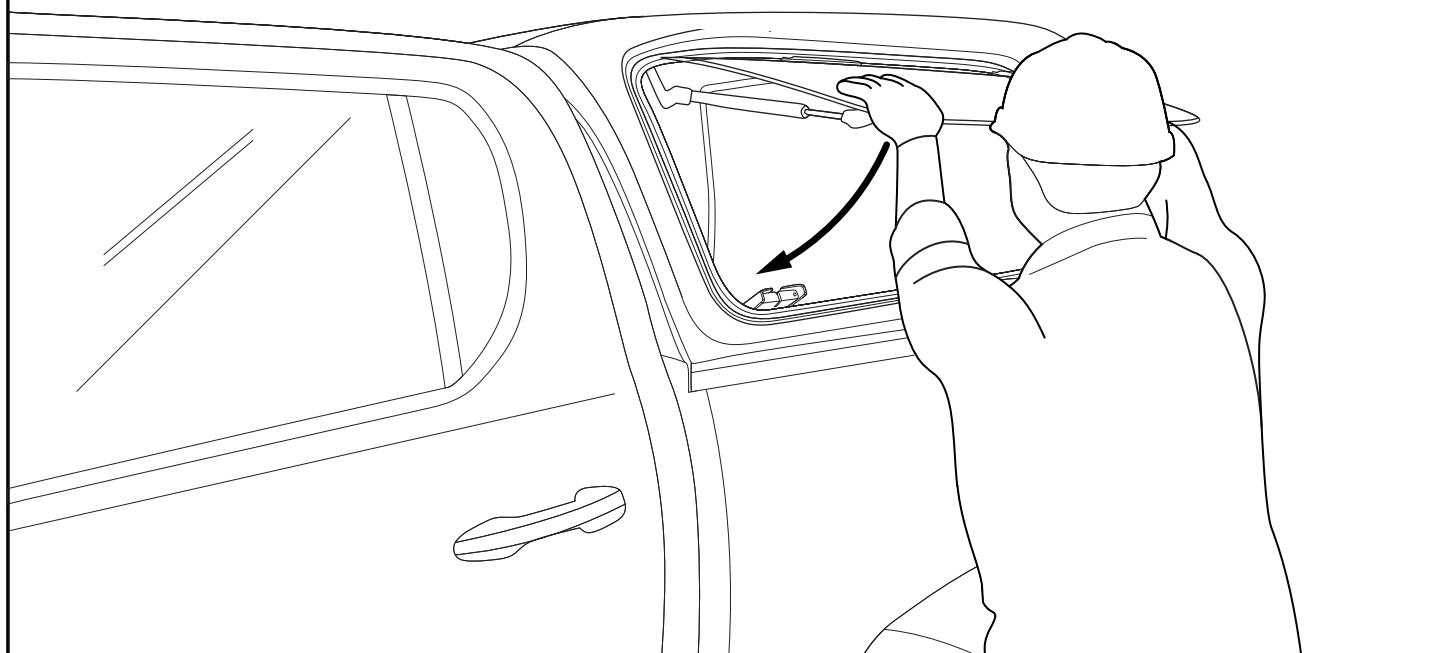

The picture shows the Electric Lock, window will be close.


98

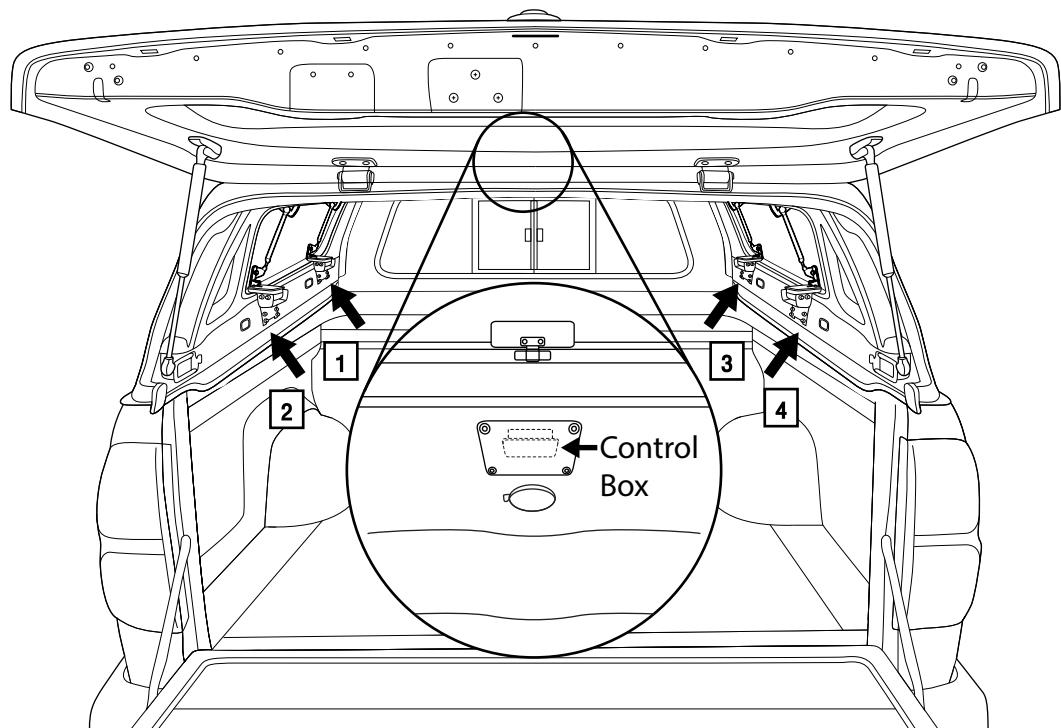

The picture shows the Electric Lock and Control Box position.



99

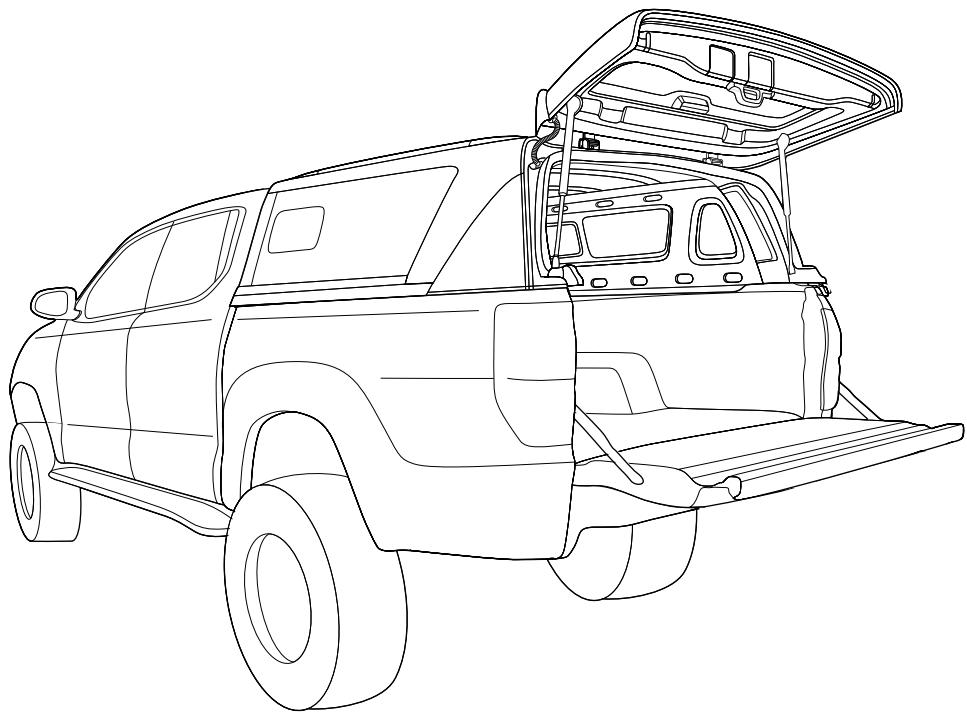

Complete the Electric Lock system.




SAMMITR

Electrical Installation




100

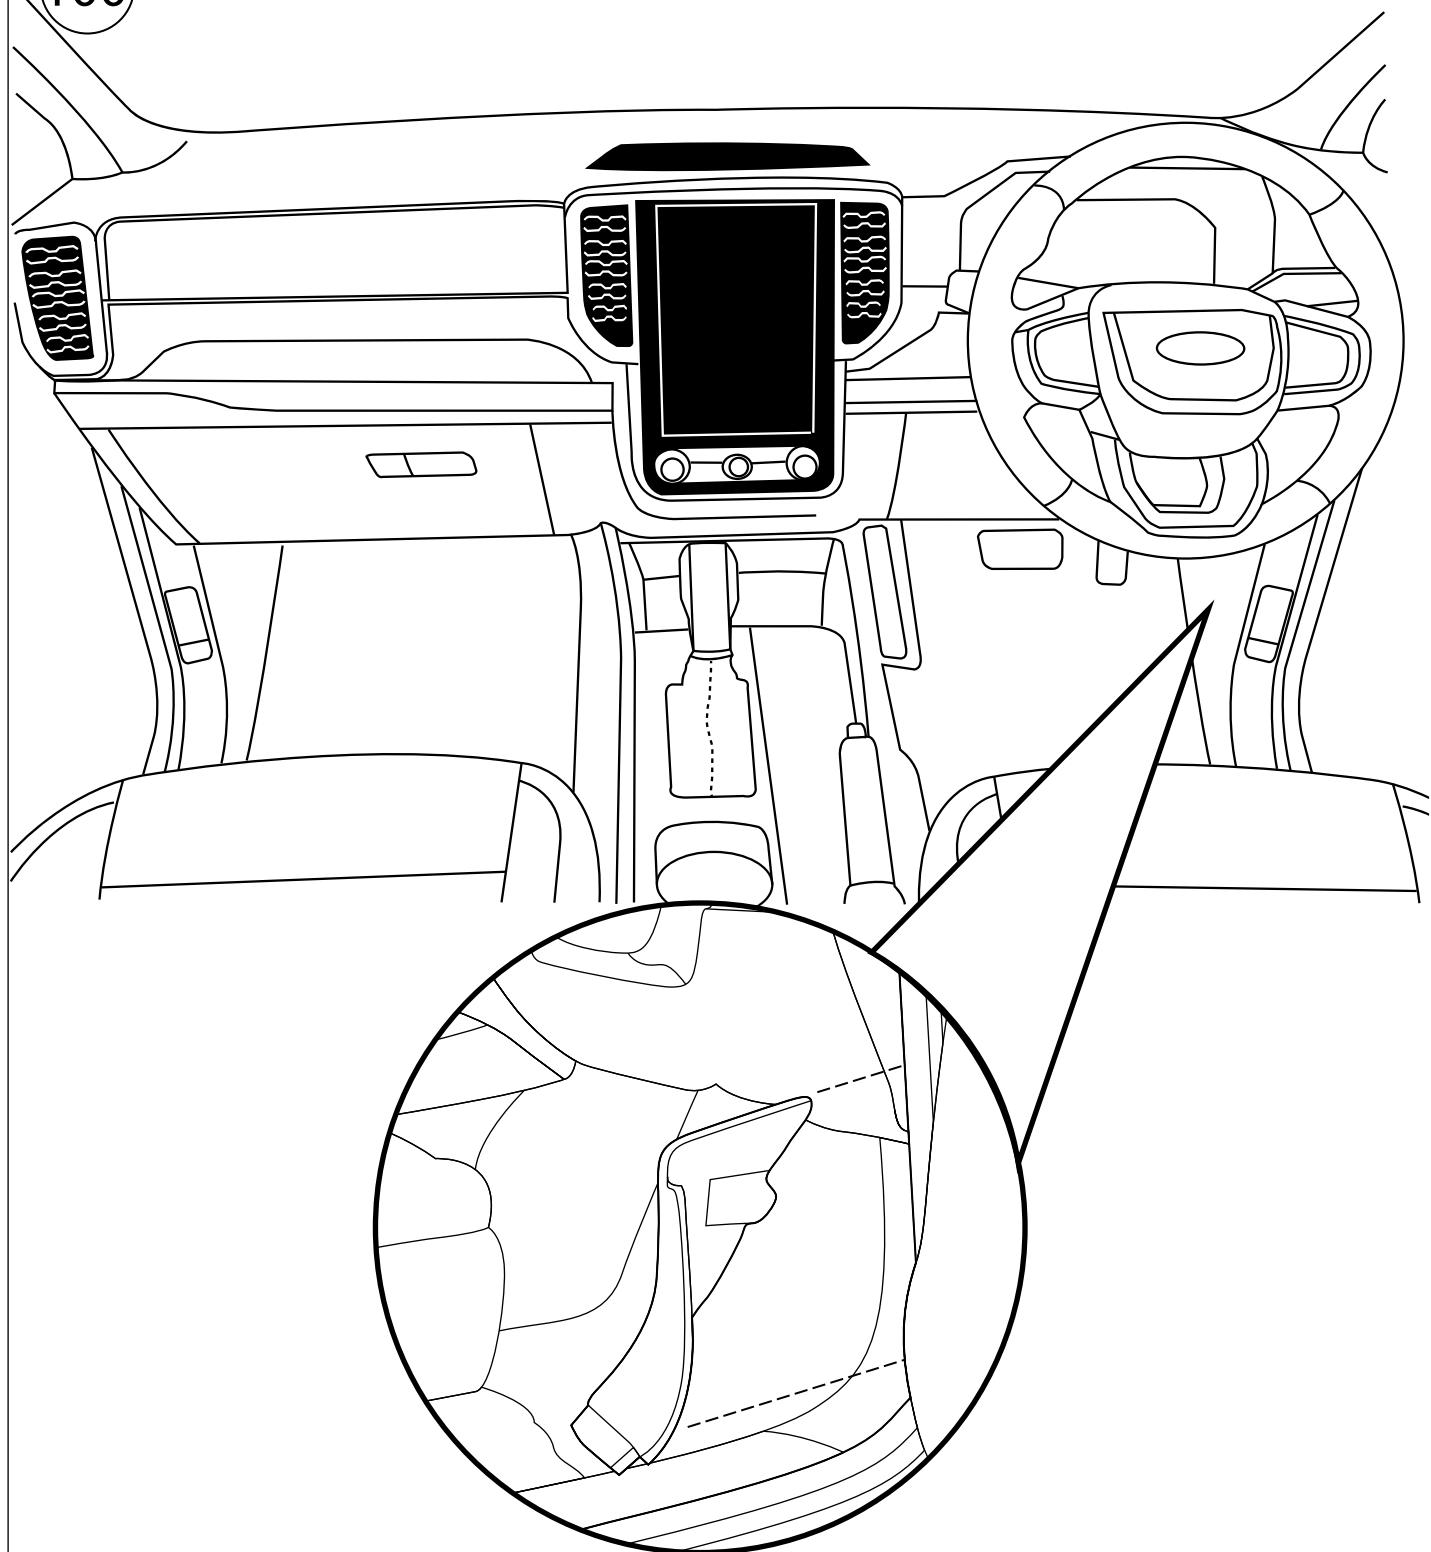

Take off the Wiring Cover at the driver side in order to
check the wiring position.




101

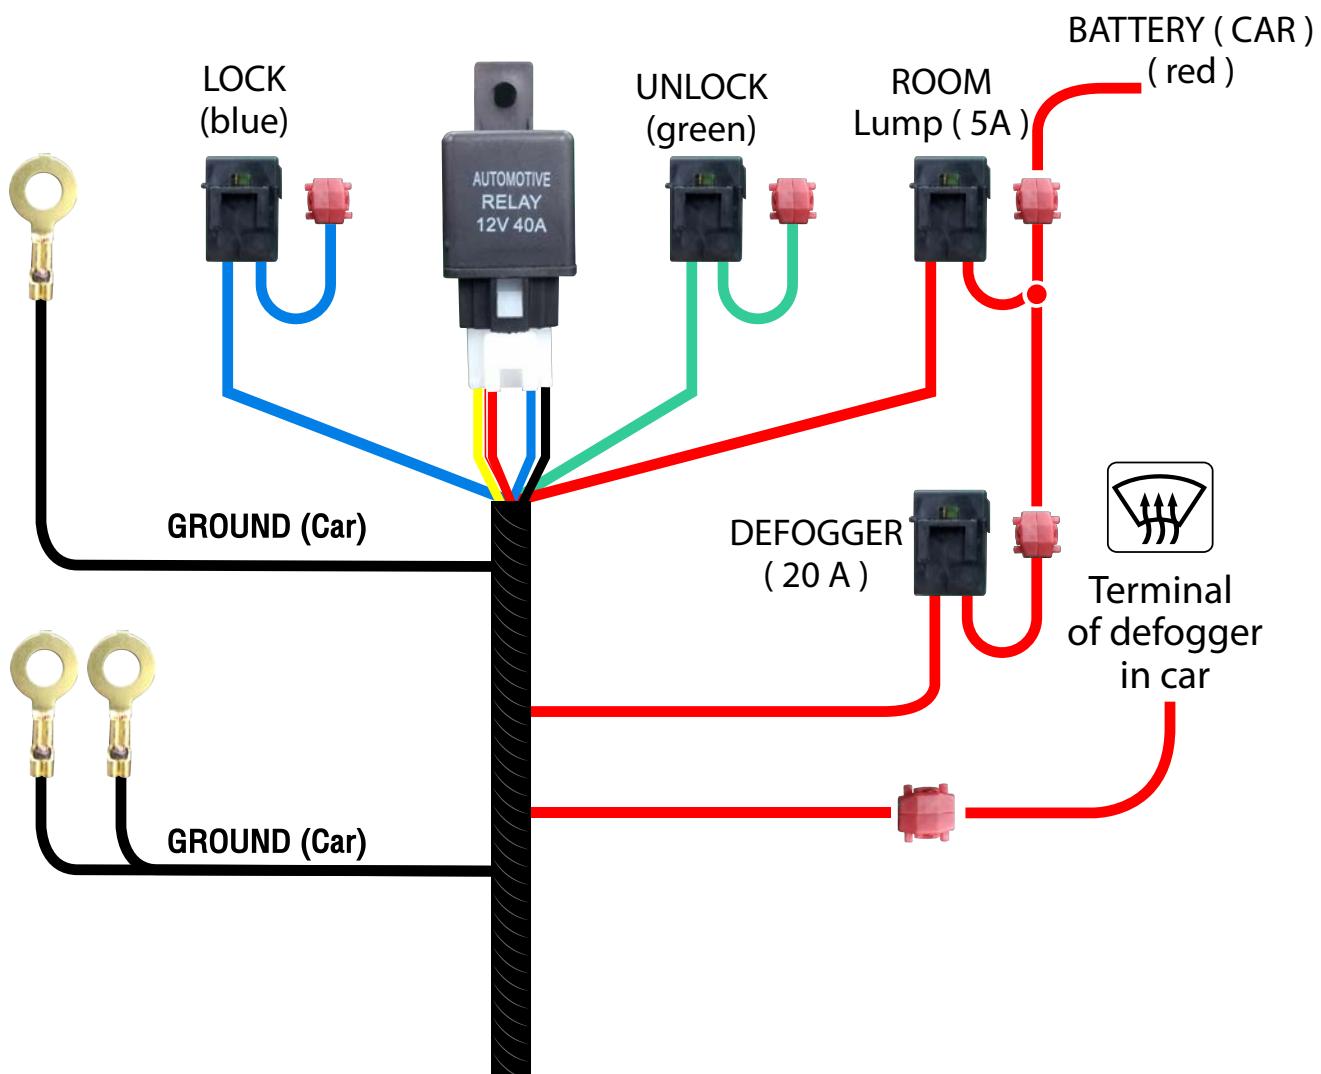


Harness Central Lock No.38



102

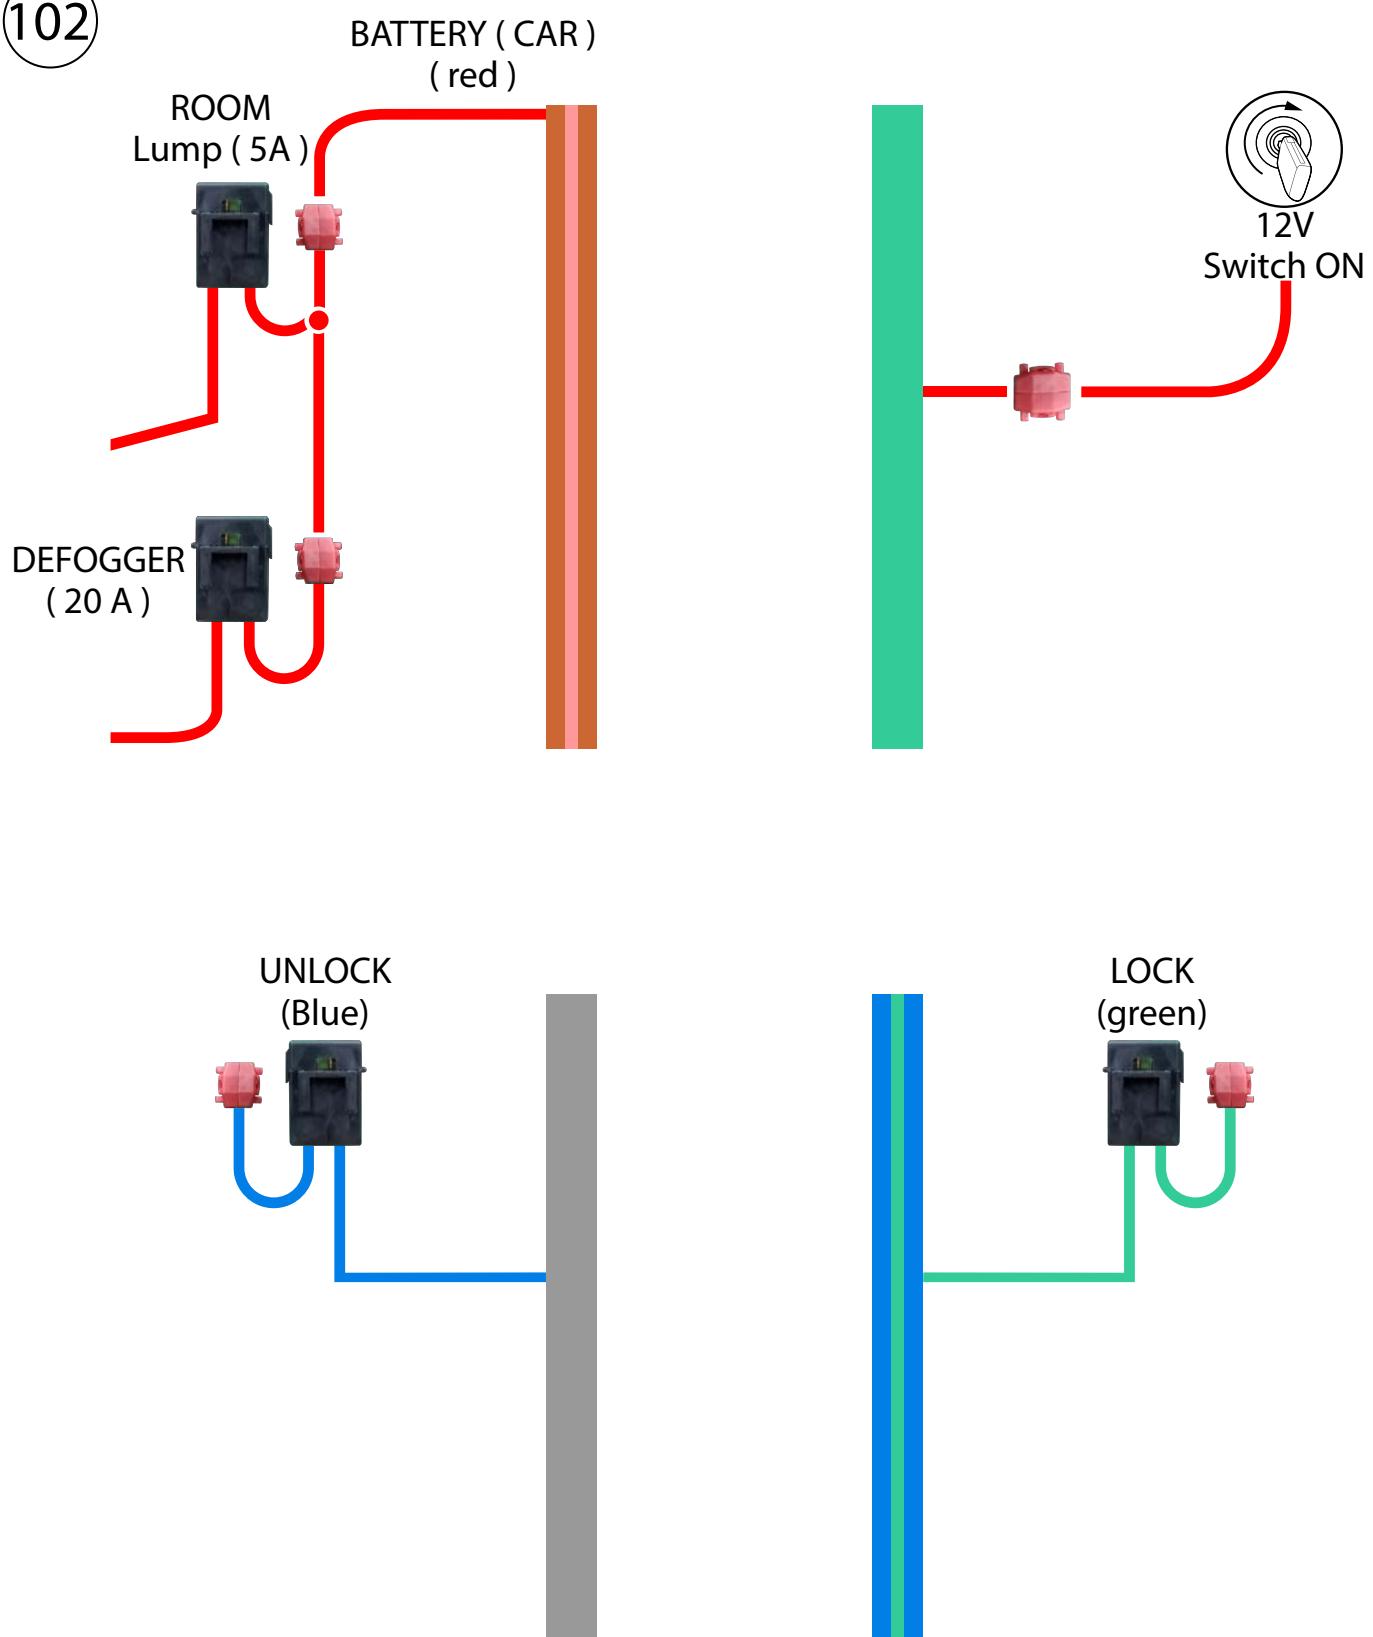


Harness Central Lock No.38

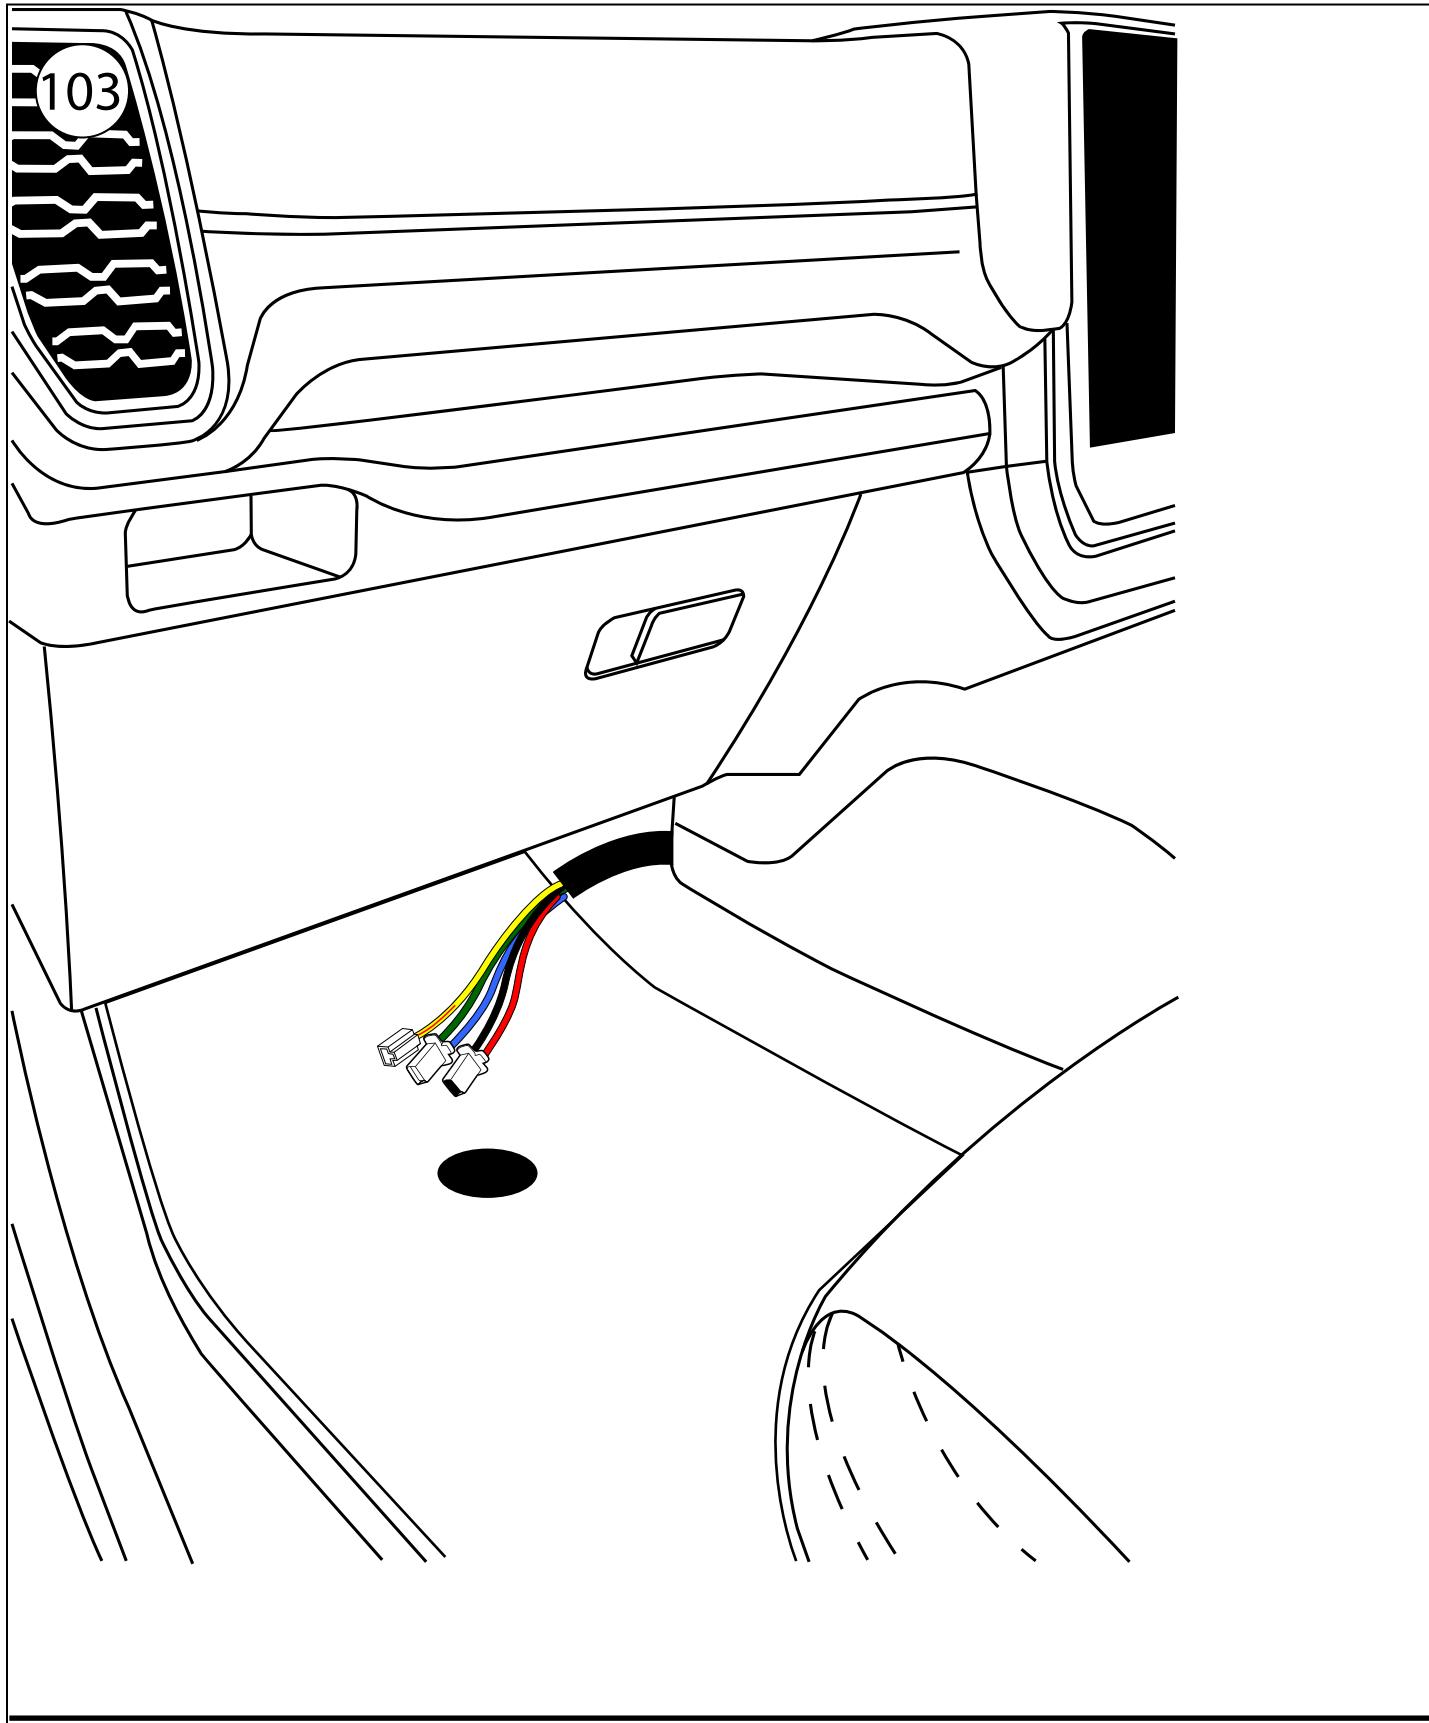

Running canopy wiring via vehicle wiring hole/pipe along under the chassis.



104

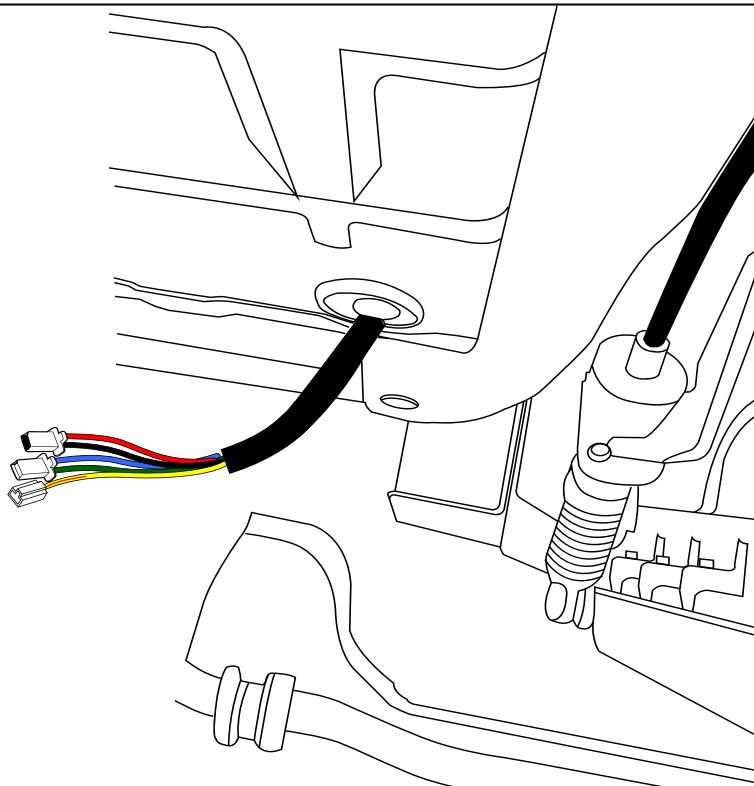

Run the wiring through the hole of the vehicle floor and seal to protect water leaking problem.

105

The Step of wiring run


Point 1 Wiring running from driver side through passenger side.


Point 2 Running canopy wiring via vehicle
wiring hole/pipe along under the chassis.

Point 3 Wiring that run under vehicle
along the chassis.


Point 4 Wiring that run via
chassis at the fender area.

Point 5 Wiring that running
up the rear light in order to
connect with the other wiring set.

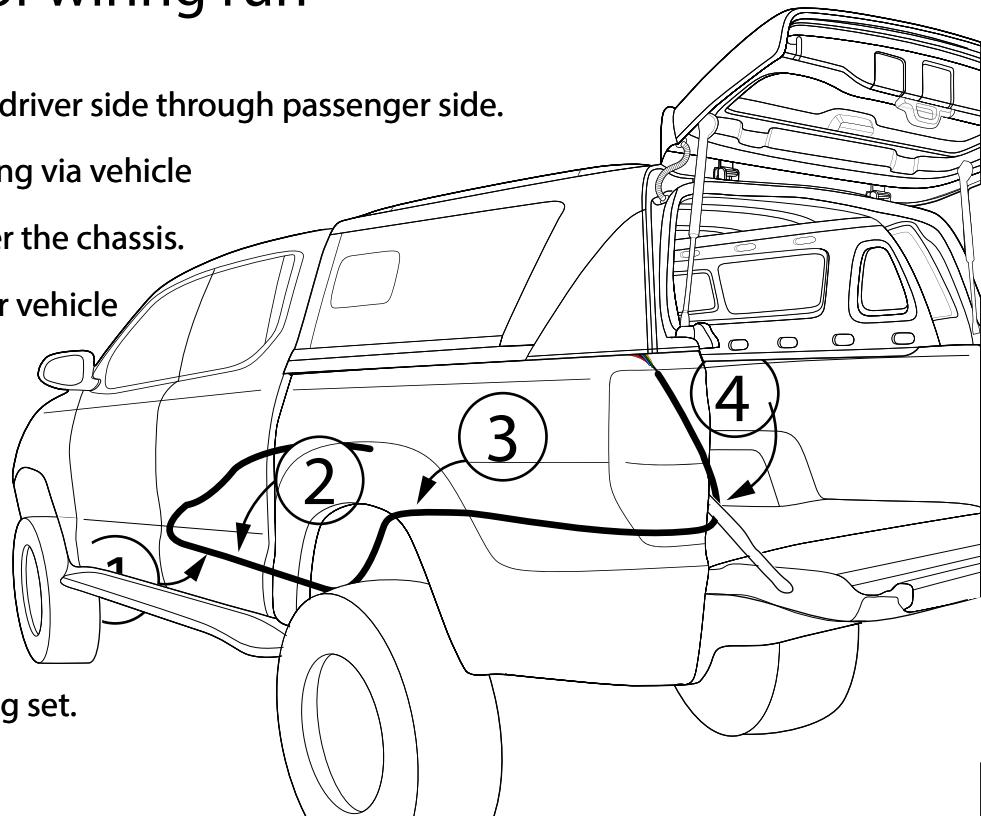


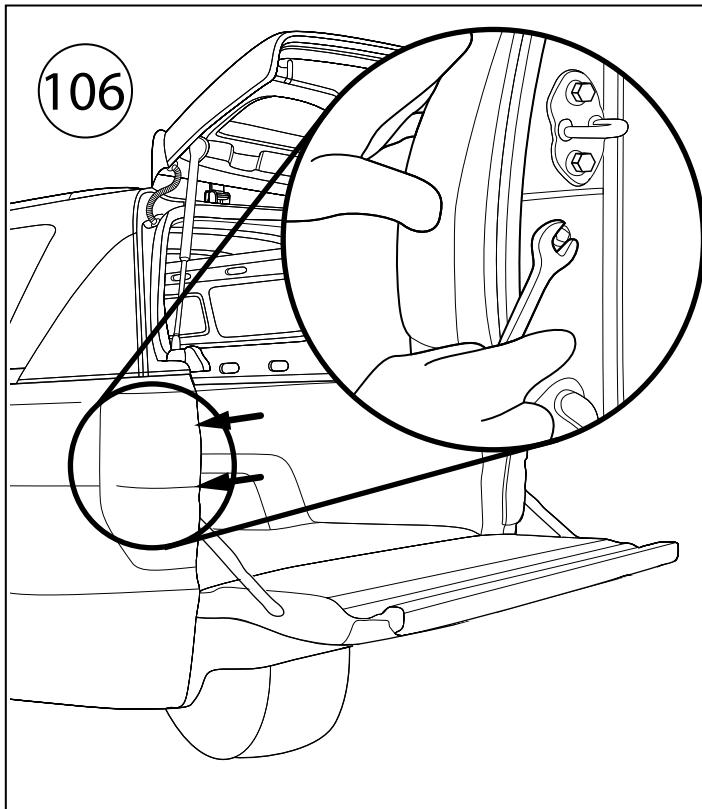

Take off the Rear Light by using wrench No.10

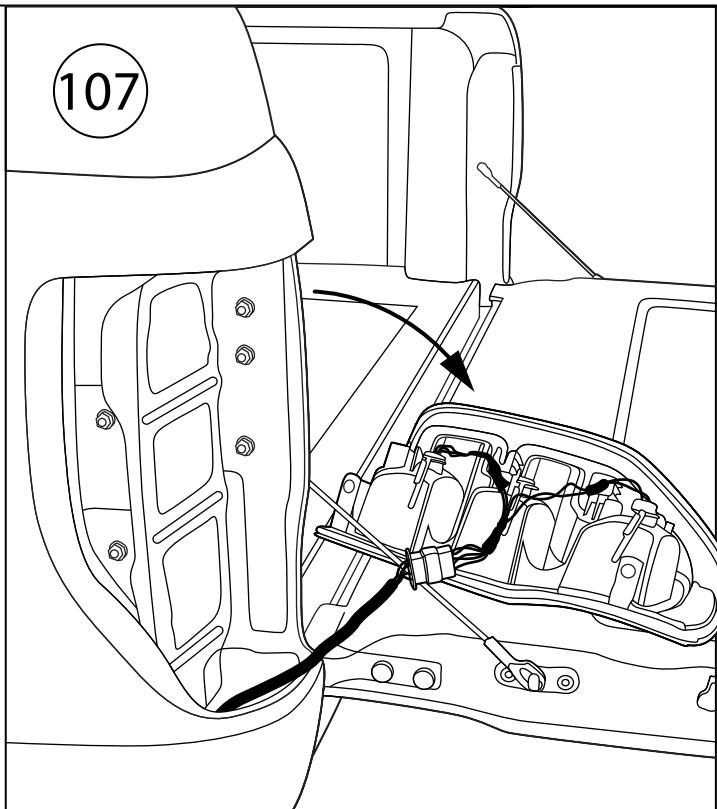

Take off the Rear Light vehicle.

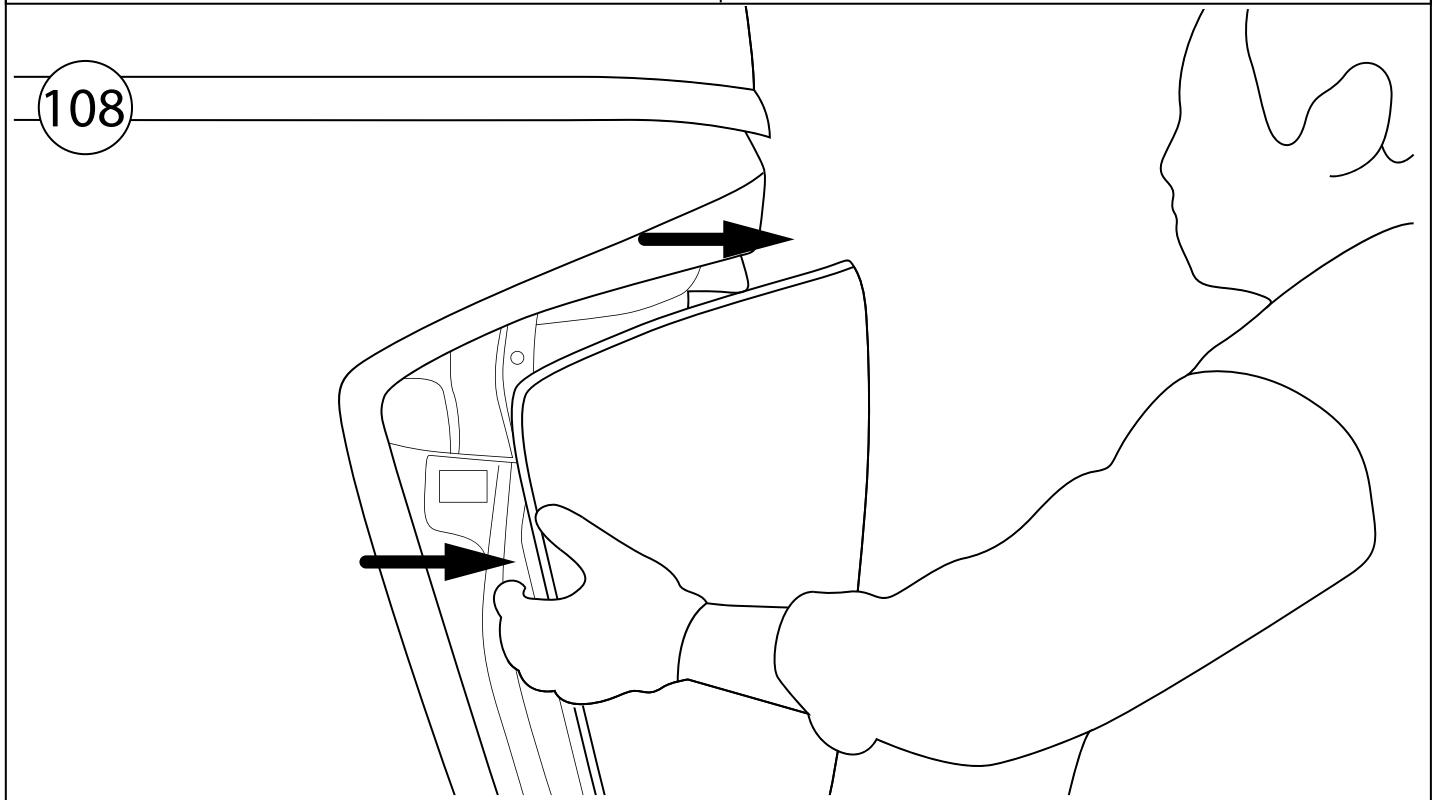


Take off the Rear Light vehicle.




109

Point 5 Wiring that running up the rear light in order to connect with the other wiring set.

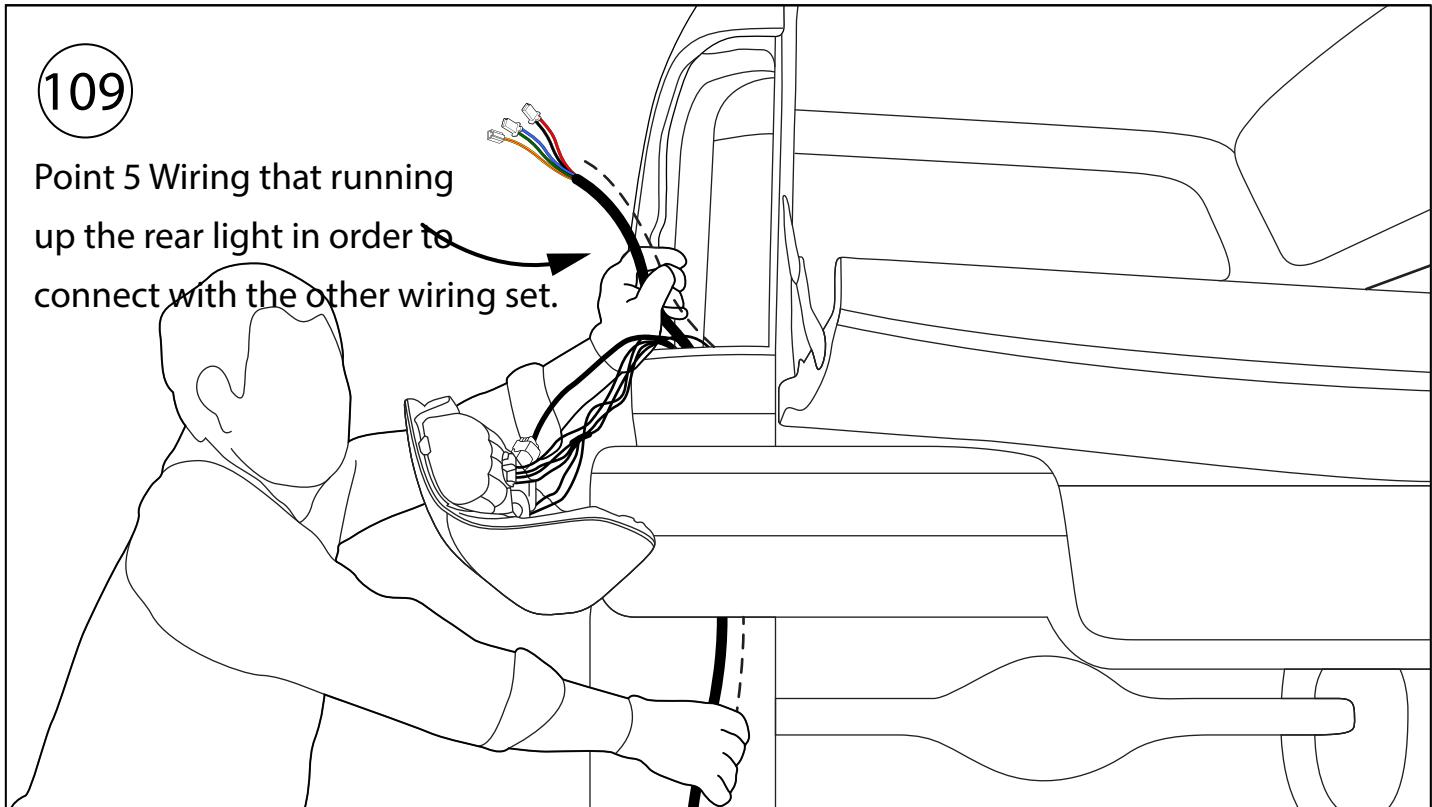

Running the Harness Central Lock No.38 up to the vehicle rear light in order to connects with the Harness Central Lock No.40.

110

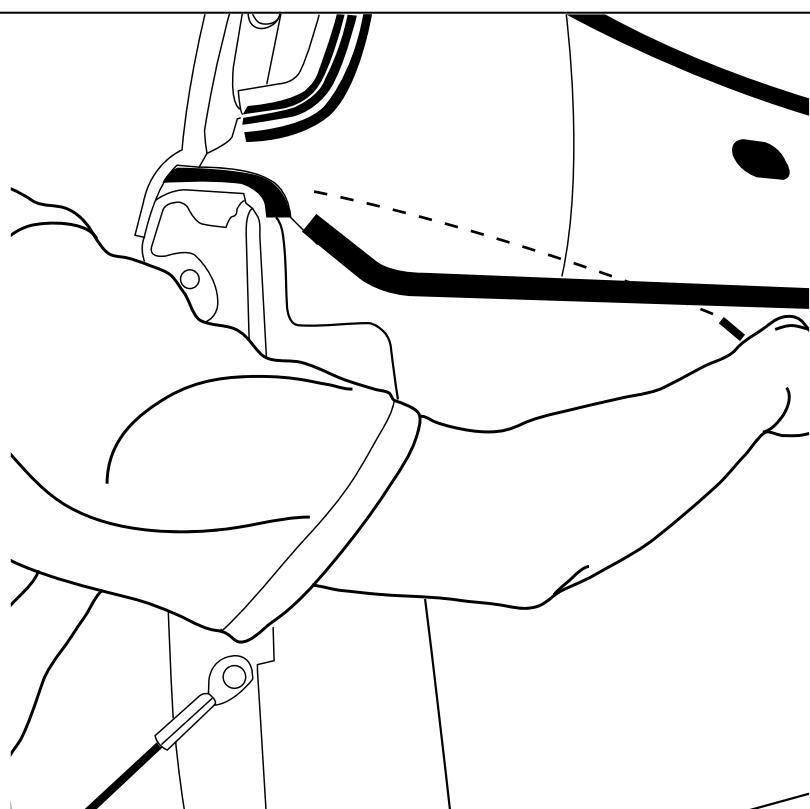


Run the rod along the vehicle edge till the Rear vehicle light.




111

Tub without Liner

Left Side

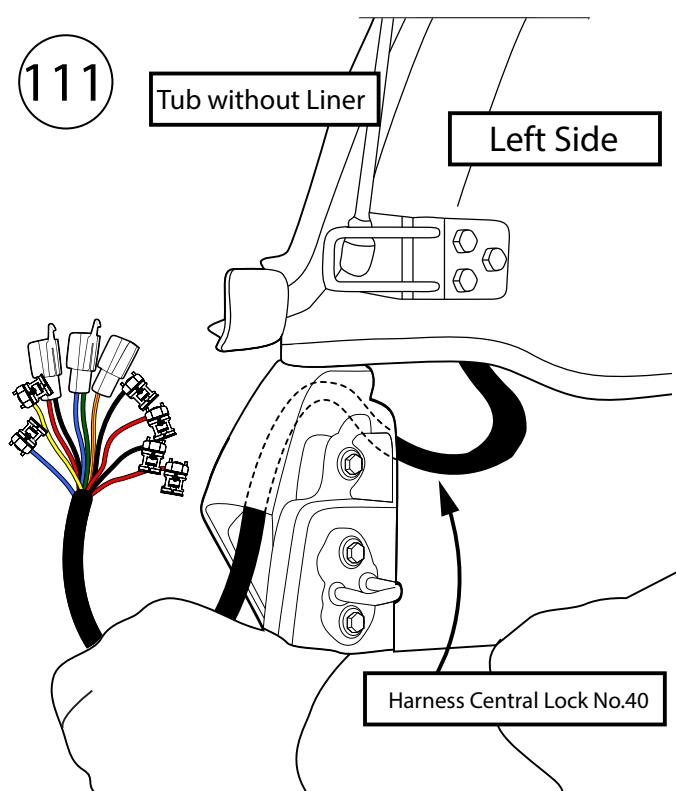


112

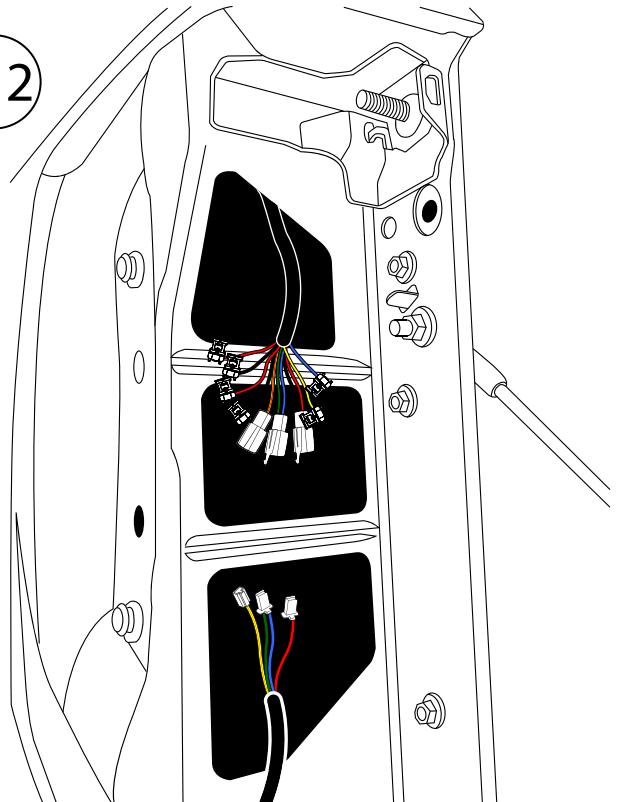


Run the Harness Central Lock No.38 along
the vehicle tub channel out of the Rear Light Socket.

113

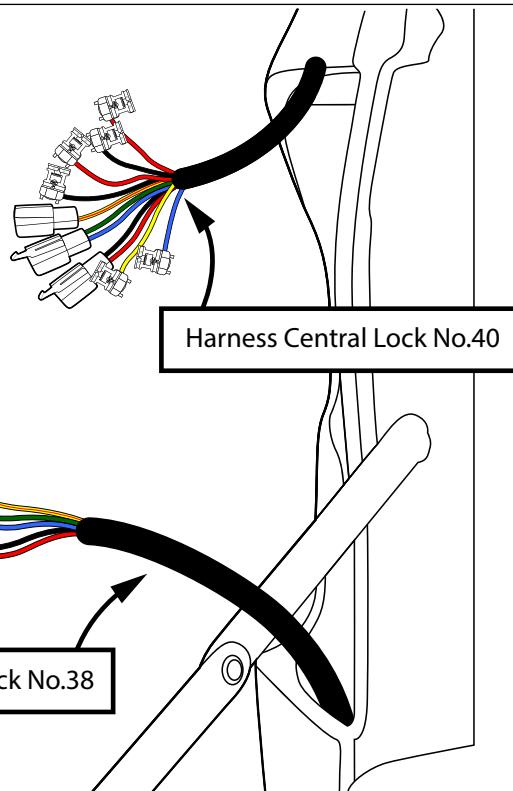



The Harness Central Lock No.40 wiring vehicle
position and the Harness Central Lock No.38 wiring set.

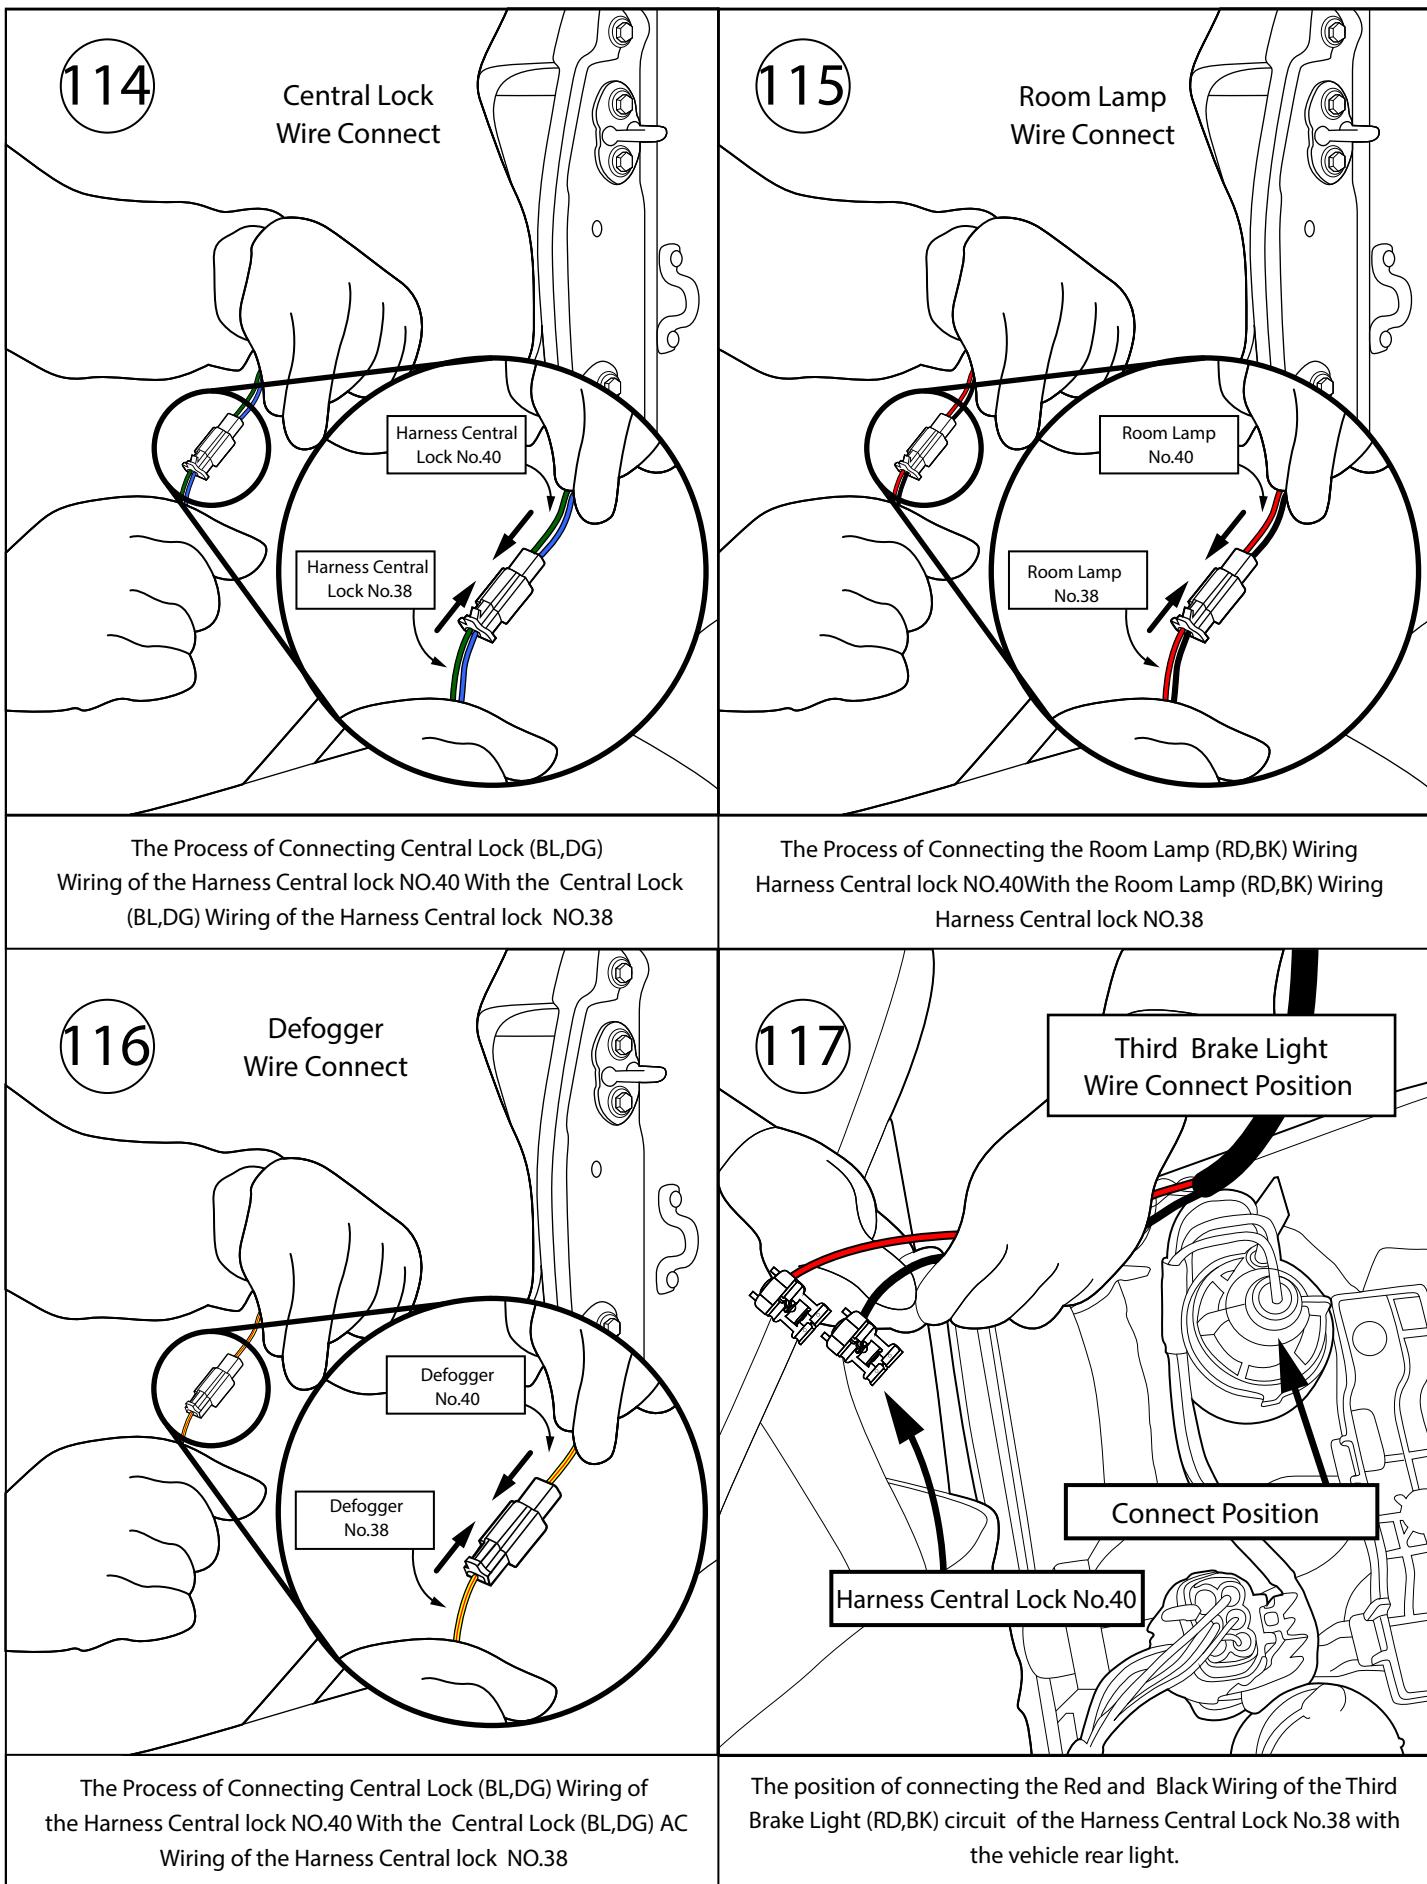



118


Harness Central Lock No.40

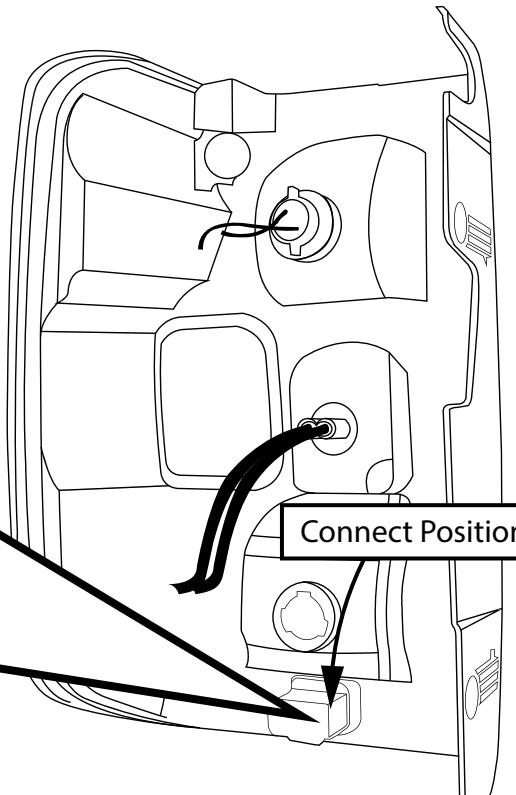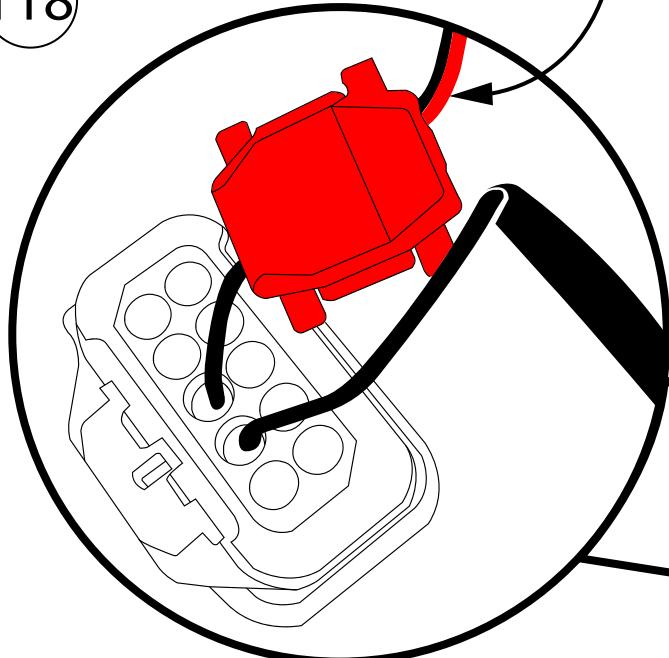

Connect the Red wiring, third Brake Light (RD) of the Harness Central Lock No.40 with the Black Brake Light Wiring on the Left Side of the Rear vehicle light.

119

WILDTRAK

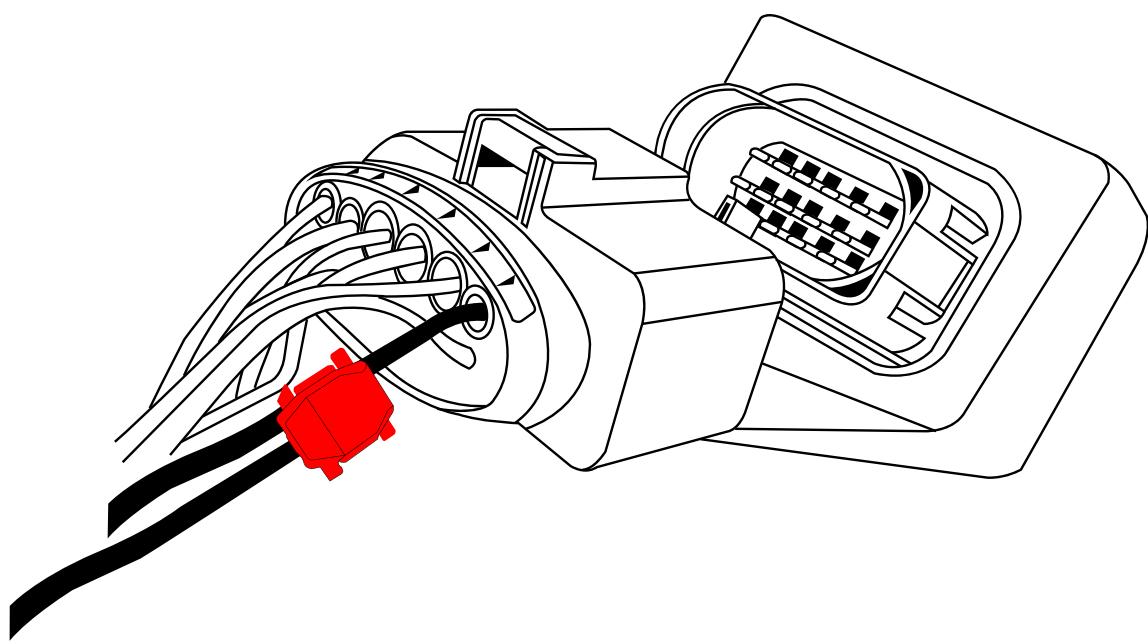


Connect Position Wiring Brake Light (Wildtrak)



120

Left Side

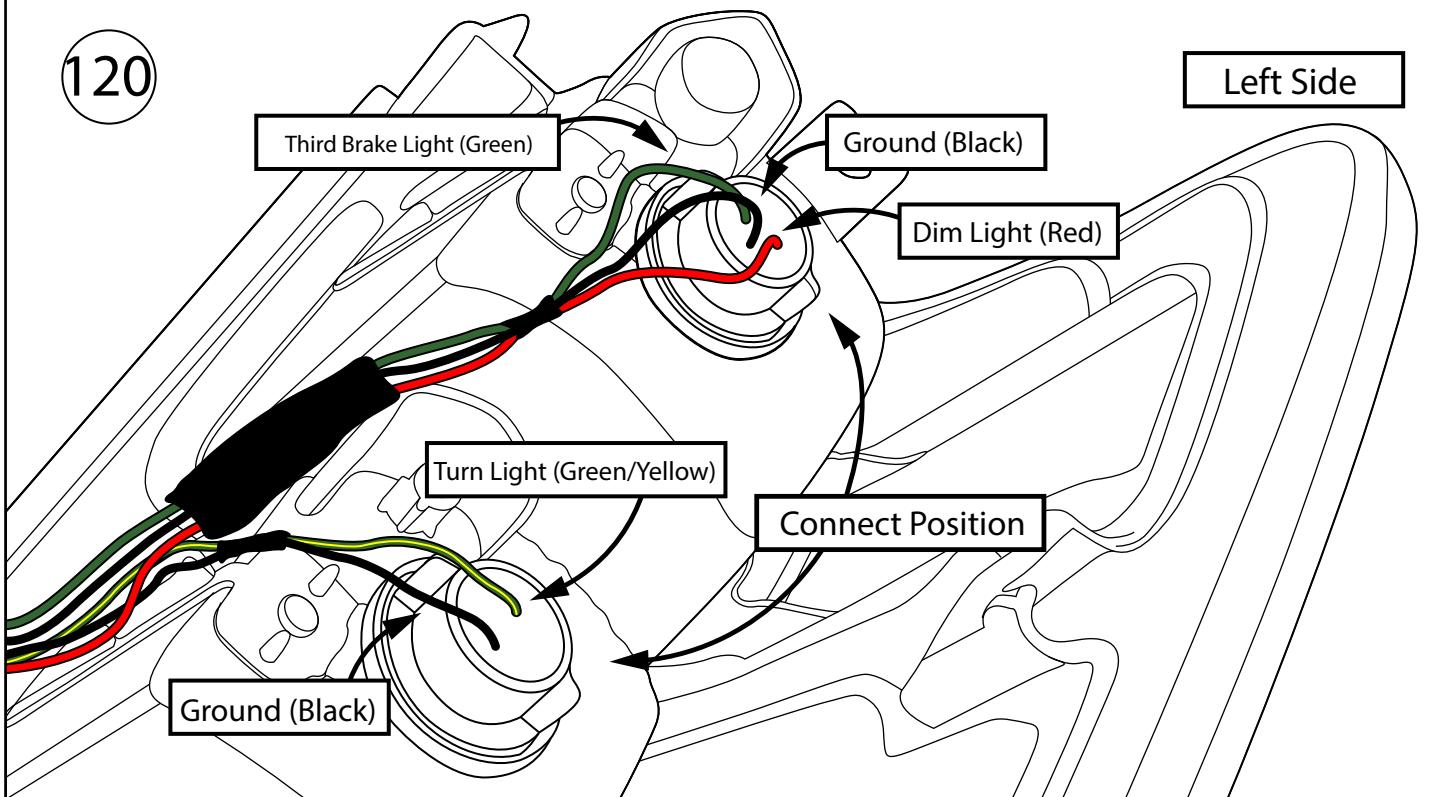

Third Brake Light , Brake Light , Dim Light , Turn Light and Ground of the vehicle wire connect position.

121

Third Brake Light
Wire Connect

Third Brake Light
(Short Wire)

Brake Light
(Long Wire)

Left Side

122

Brake Light
Wire Connect

Brake Light
(Long Wire)

Left Side

Bring the red wiring, Third Brake Light (Short wire) of the Harness Central Lock No.40 connecting with Brake Light (Long wire) of the Harness Central Lock No.40.

After finish the installation step no.50 Bring the Red Wiring, Brake wiring (Long wire) of the Harness Central Lock No.40 connecting with the wiring (Green wire) of the vehicle.



123

Dim Light
Wire Connect

Dim Light
(Harness Central Lock No.40)

Dim Light
(Car)

Left Side

124

Turn Light
Wire Connect

Turn Light
(Harness Central Lock No.40)

Turn Light
(Car)

Left Side

Bring the blue wiring, Dimlight of the Harness Central Lock No.40 connecting with Dimlight of the vehicle (red wiring).

Bring the yellow Wiring, Turn light wiring (YL) of the Harness Central Lock No.40 connecting with Turn Light wiring of the vehicle green/yellow wire (GN/YL).

125

Ground
Wire Connect

Left Side

Ground (Car)

Ground (Long Wire)

Connect Position


Ground (Short Wire)

Ground (Black)

Bring the Black Wiring, GROUND (Short wire) and GROUND (Long wire) of the Harness Central Lock No.40 connecting with the Black (BK) Ground wiring of the vehicle rear light.




126

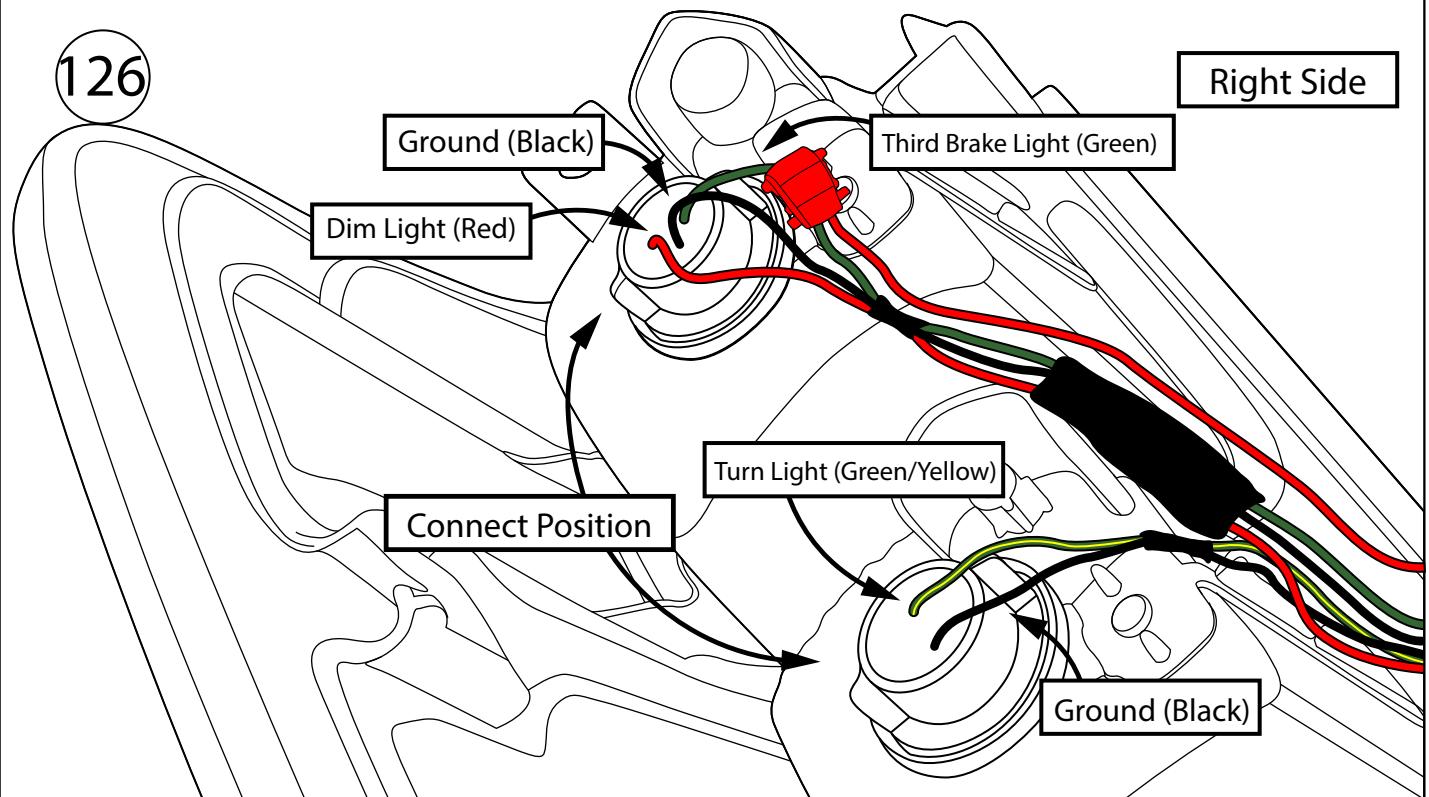


Third Brake Light , Brake Light , Dim Light , Turn Light and Ground
of the vehicle wire connect position.

127

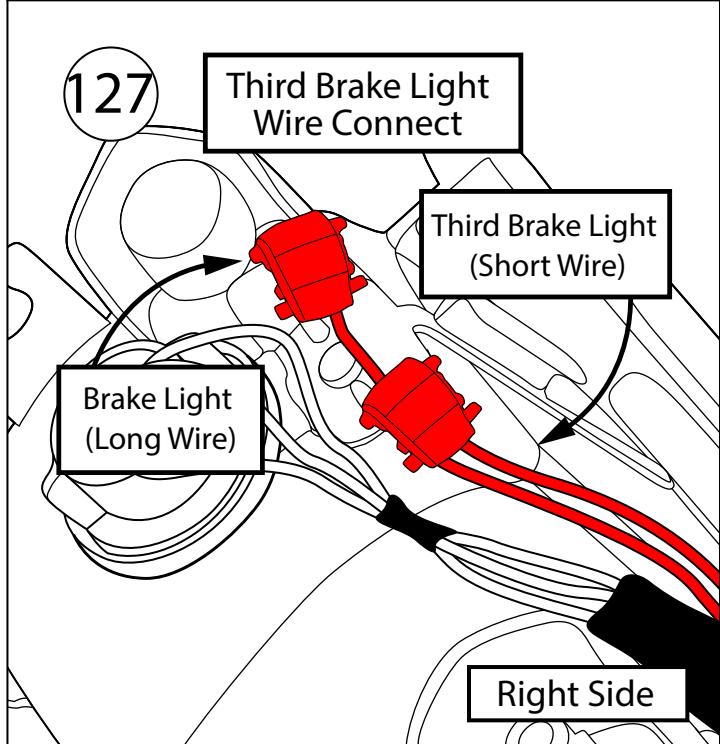

Bring the red wiring, Third Brake Light
(Short wire) of the Harness Central Lock No.40
connecting with Brake Light (Long wire) of the
Harness Central Lock No.40.

128

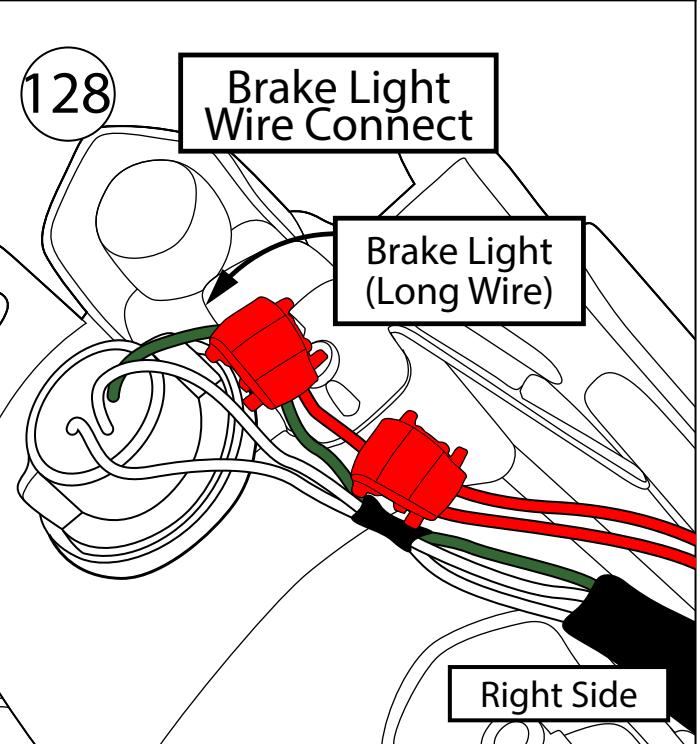

After finish the installation step no.56 Bring the
Red Wiring, Brake wiring (Long wire) of the
Harness Central Lock No.40 connecting with the
wiring (Green wire) of the vehicle.



129

Dim Light
Wire Connect

Dim Light
(Harness Central Lock No.40)

Dim Light
(Car)

Right Side

130

Turn Light
Wire Connect

Turn Light
(Car)

Turn Light
(Harness Central Lock No.40)

Right Side

Bring the blue wiring, Dimlight of the Harness Central Lock No.40 connecting with Dimlight of the vehicle (red wiring).

Bring the yellow Wiring, Turn light wiring (YL) of the Harness Central Lock No.40 connecting with Turn Light wiring of the vehicle green/yellow wire (GN/YL).

131

Ground
Wire Connect

Ground (Car)

Right Side

Ground (Long Wire)


Ground (Short Wire)

Connect Position

Bring the Black Wiring, GROUND (Short wire) and GROUND (Long wire) of the Harness Central Lock No.40 connecting with the Black (BK) Ground wiring of the vehicle rear light.




132

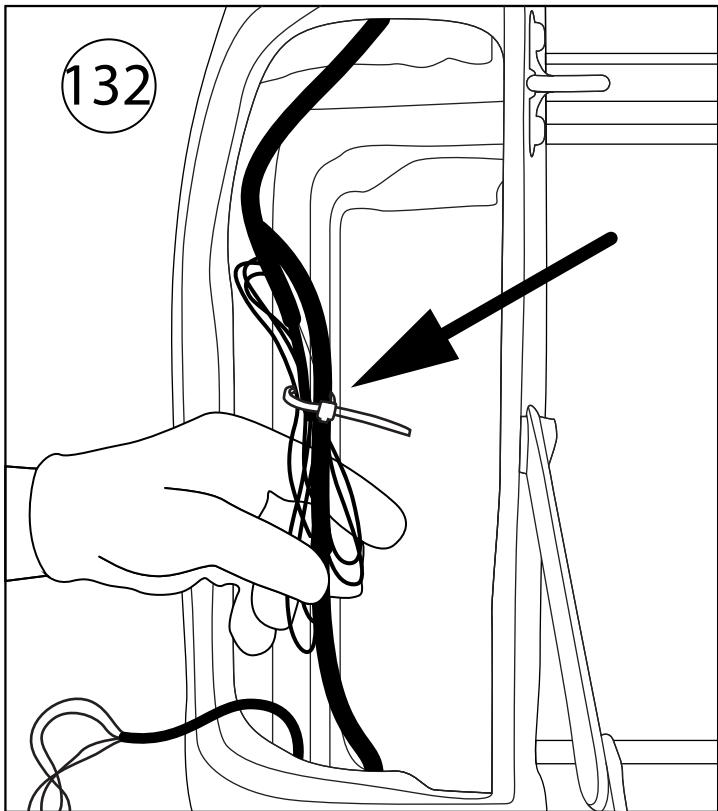


Tight up all the wiring by using the Cable Tie

133

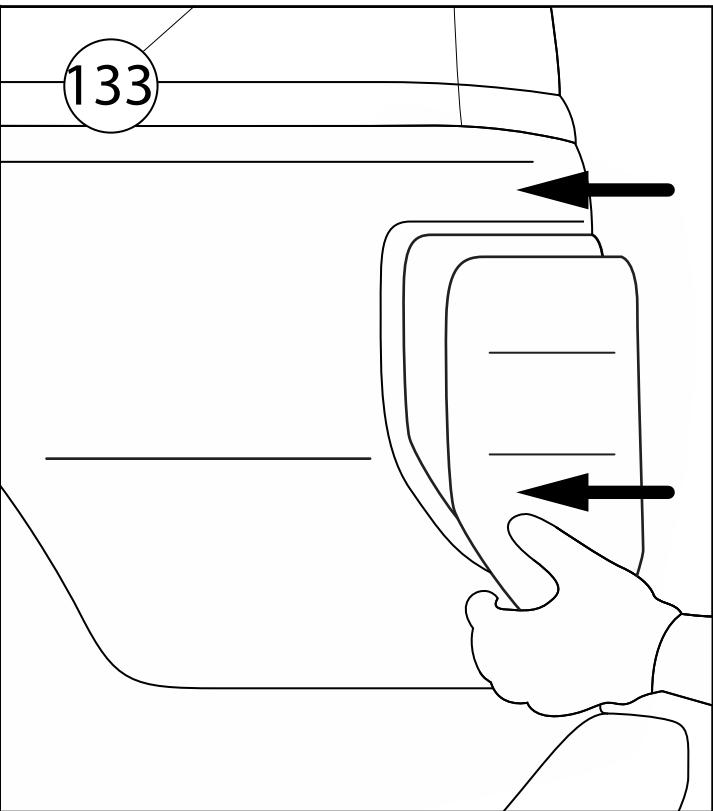


Reassemble the vehicle rear light.

134

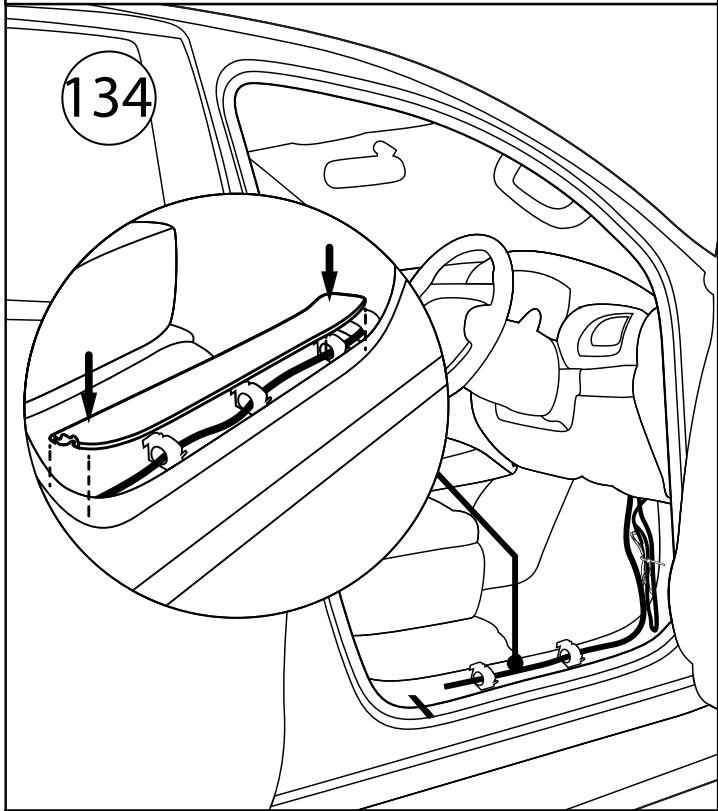



135

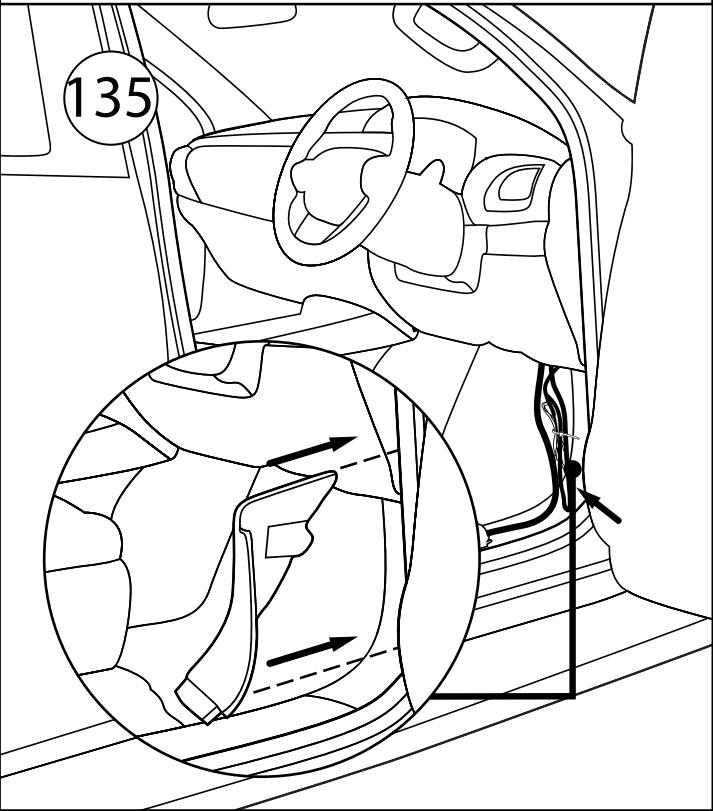

Tight up the wiring at the driver side by using the Cable Tie, then close the vehicle cover.



136

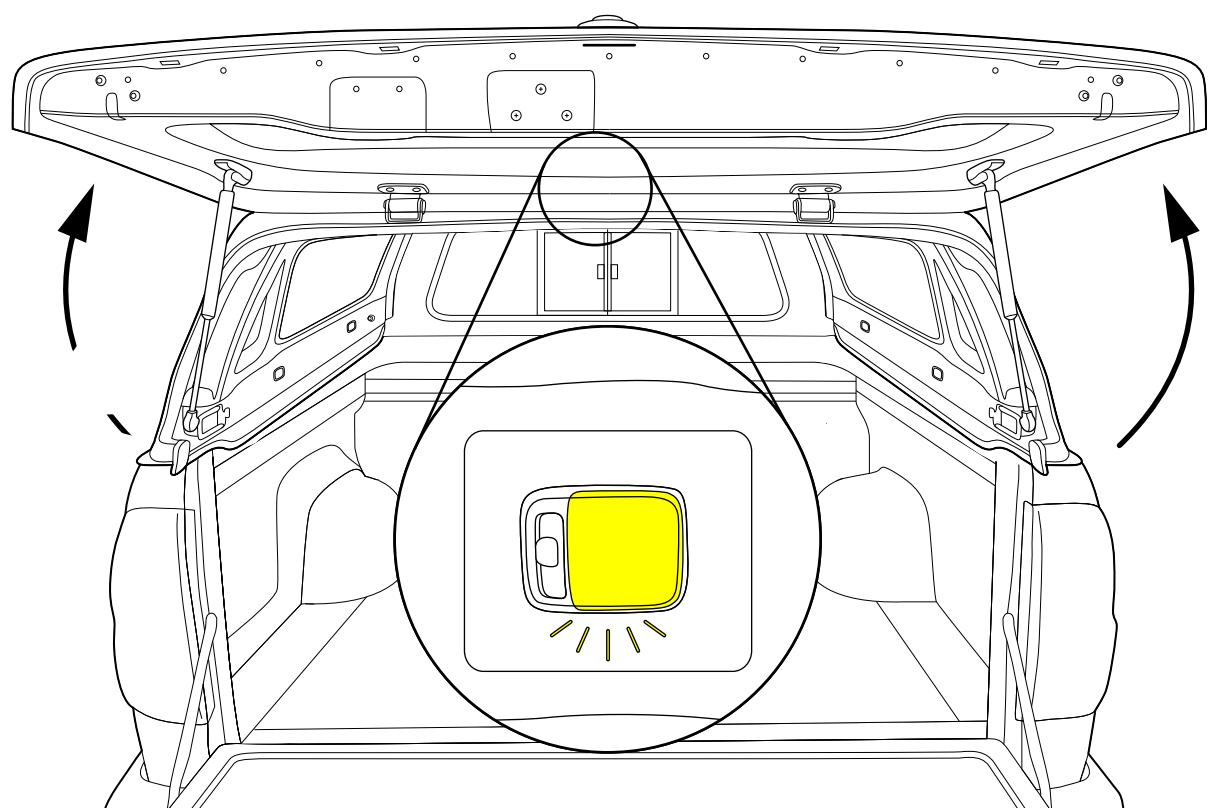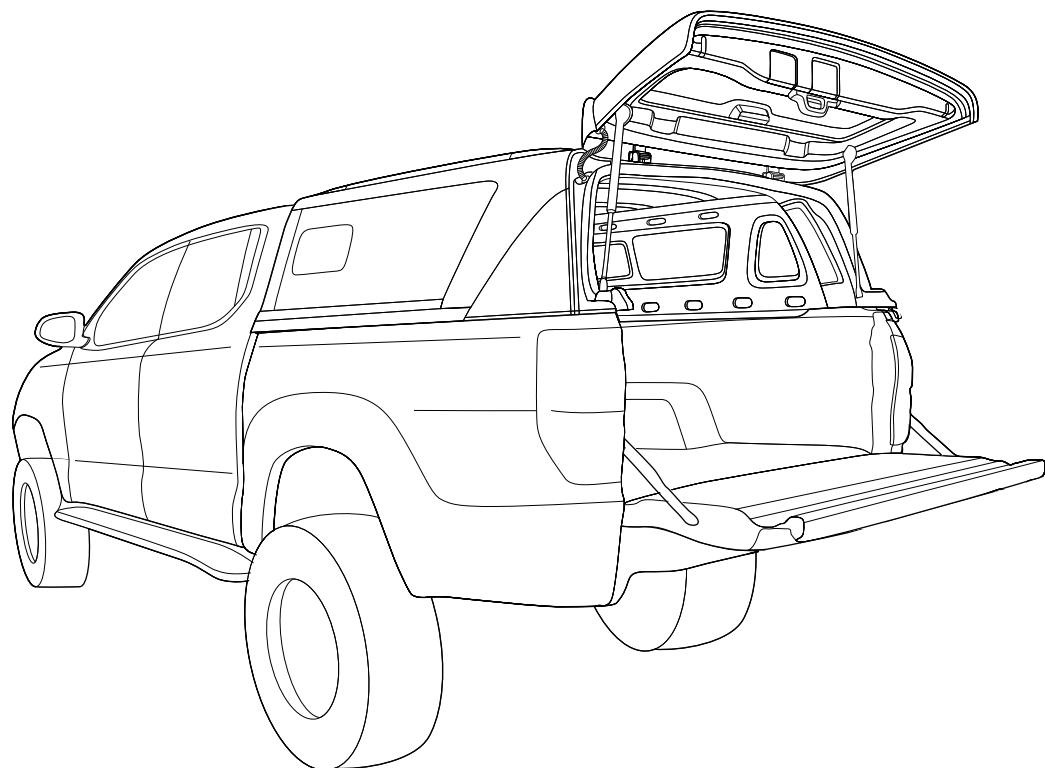

Room Lamp checking by opening the rear door then
the Room Lamp will be on.




137

Check the Central Lock / Room Lamp working.



Central Lock checking by pressing the vehicle remote key at the Lock position, Canopy will be lock and cannot open.

138

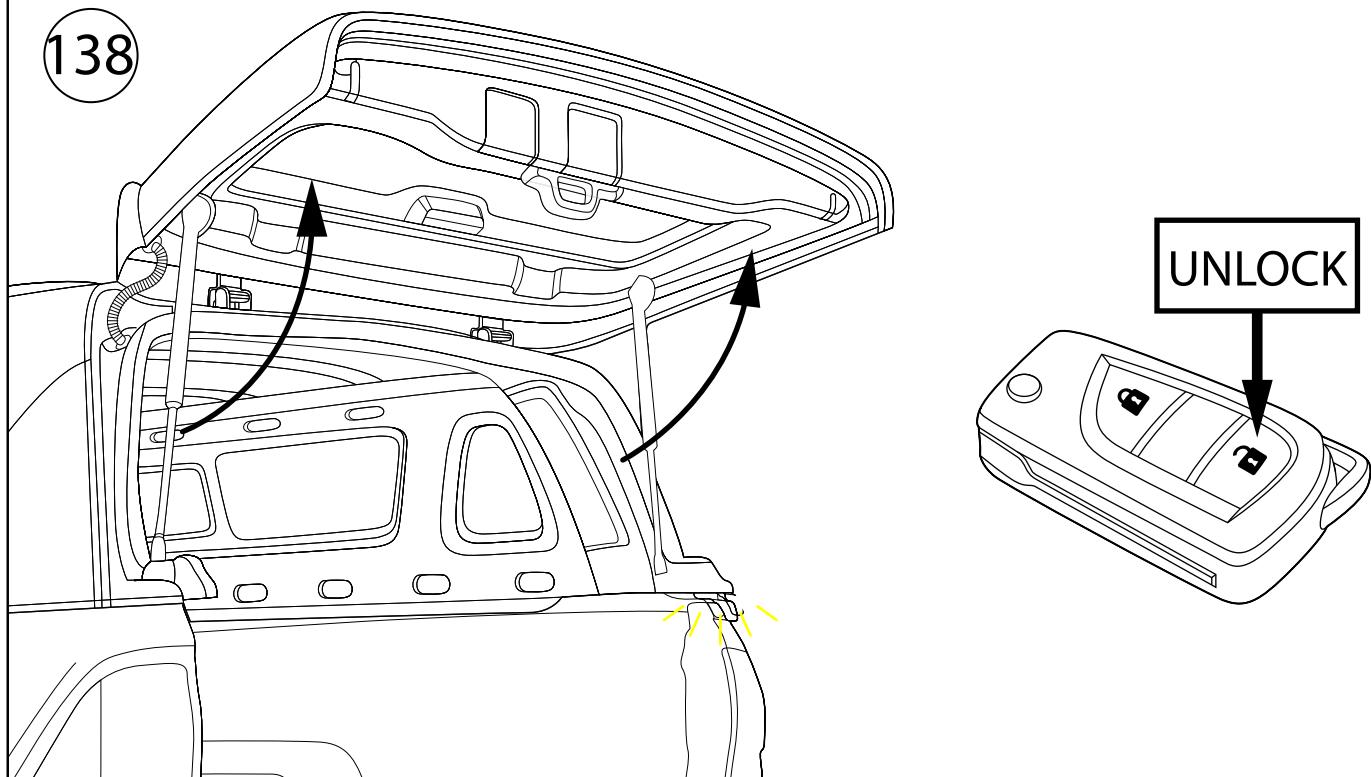

Central Lock checking by pressing the vehicle remote key at the Unlock position, Canopy will be open.




SAMMITR

**Opening Function of all
canopy model**





SAMMITR

Front Window function usages will be the same for all model, V2, V4 and TL1.

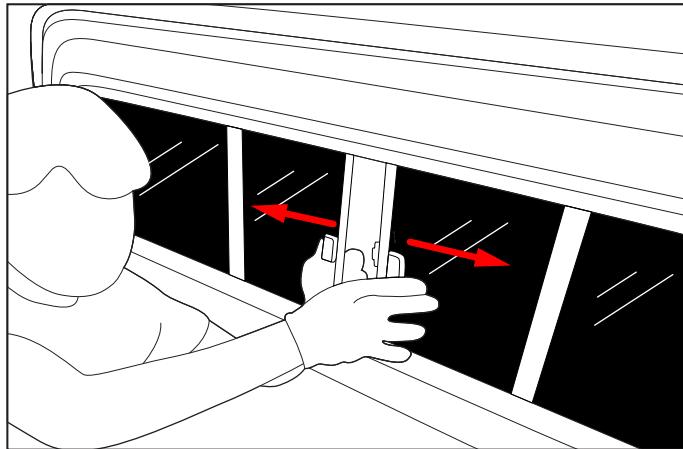


Use the key is unlock function will be the same for all model, V2, V4 and TL1.


Open the backdoor function are different.

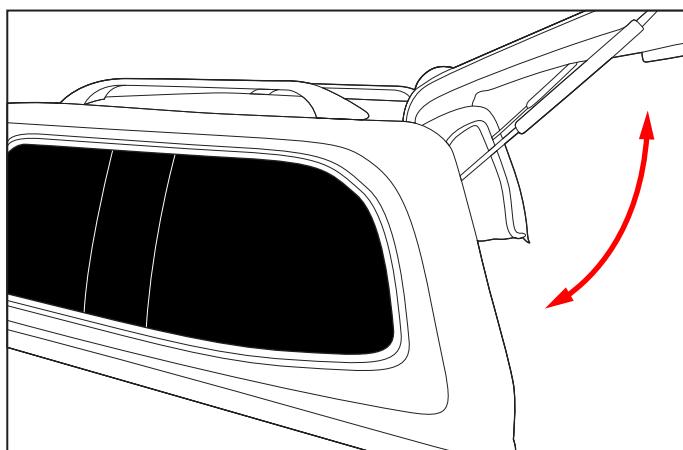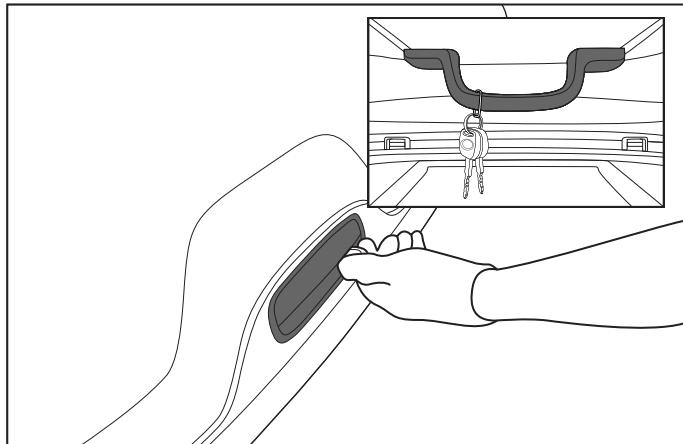


User manual

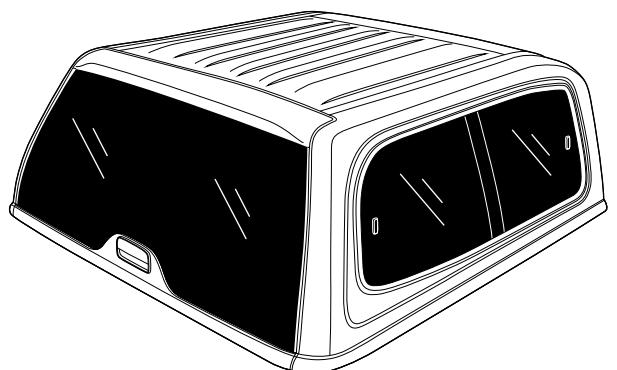

Slide Window (Left-Right)

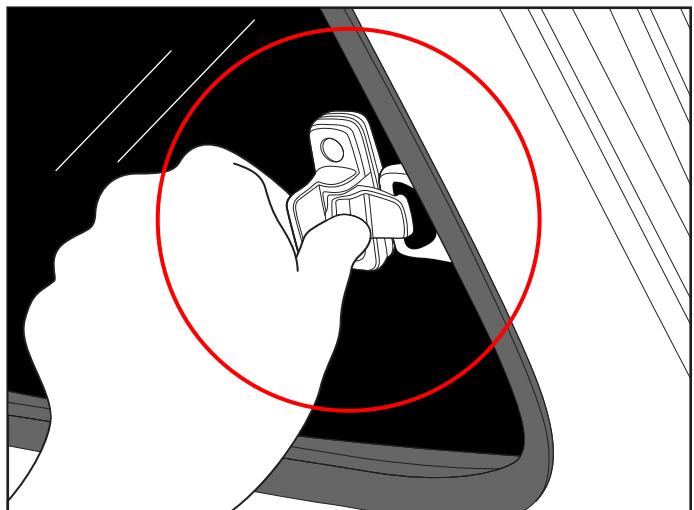


Squeeze the lock side to open.

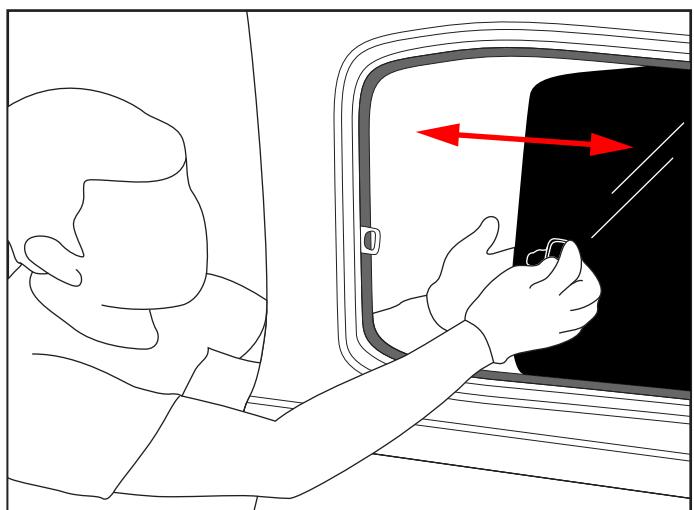



The Picture shows how to open the side window.




User manual

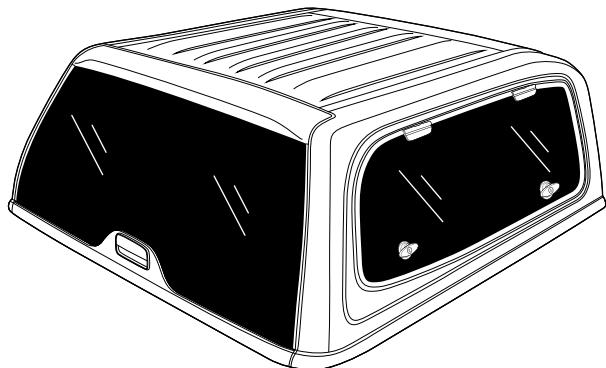

Glass Birdwing Window Left-Right
(Handle Lock)

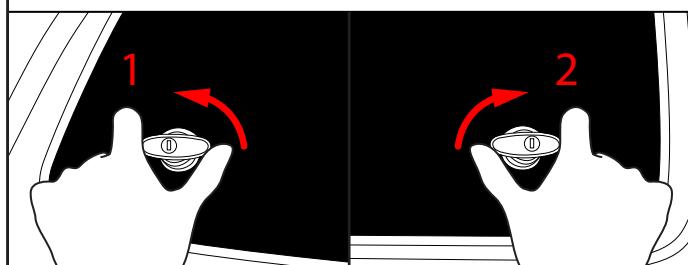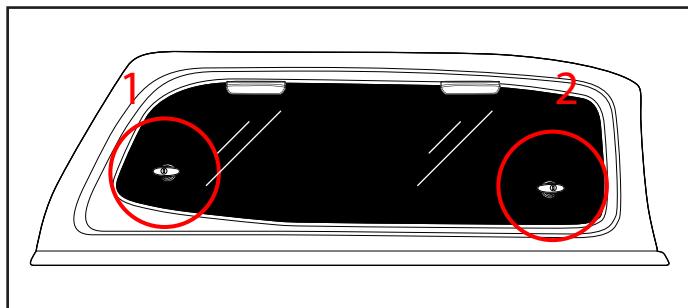


Turn around the canopy lock as shown in picture to open the side window.


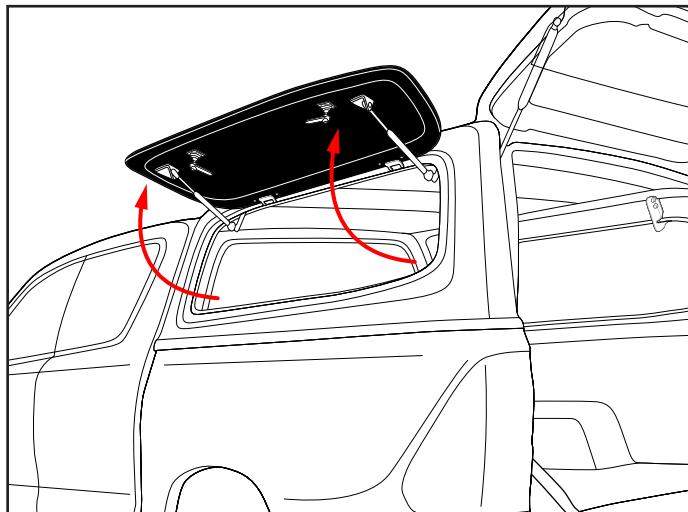


Picture shows how to open the side window.


User manual

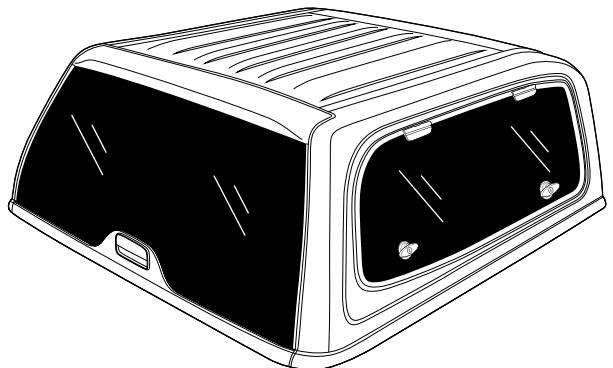

Glass Birdwing Window Left-Right
(Handle Lock)

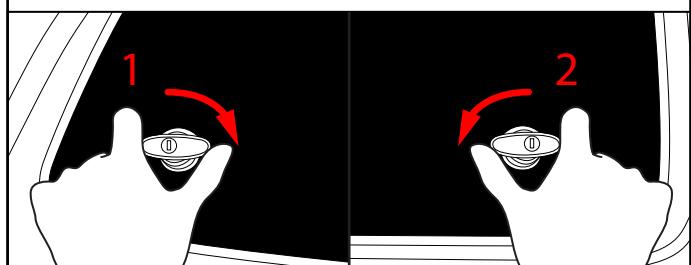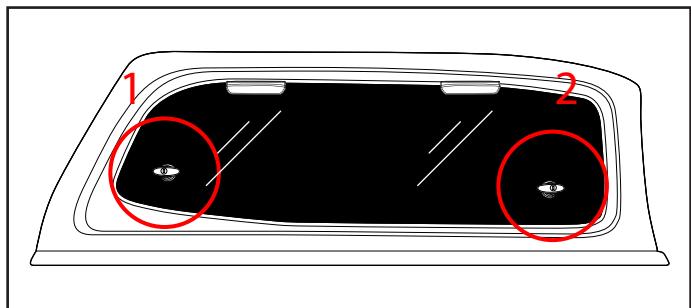


Turn around the canopy lock as shown in picture to close the side window.

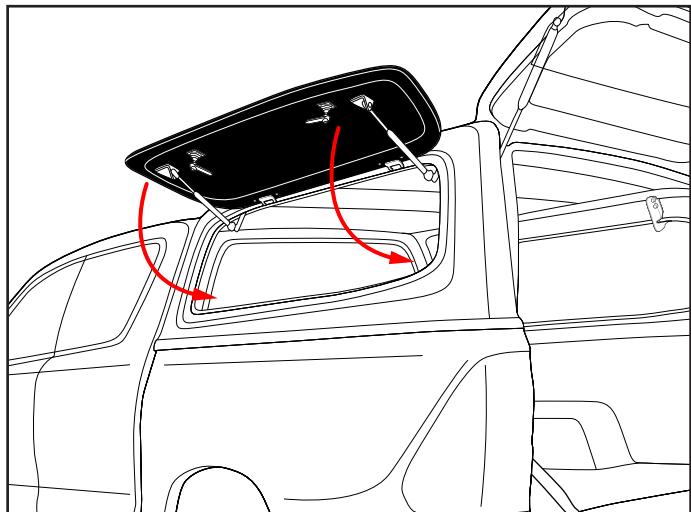


Picture shows how to close the side window.




User manual

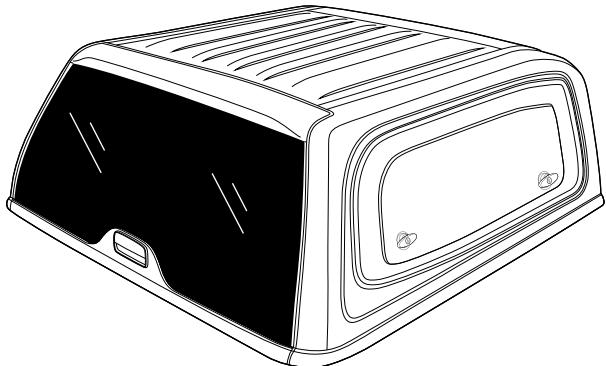

Solid Birdwing Window Left-Right
(Handle Lock)

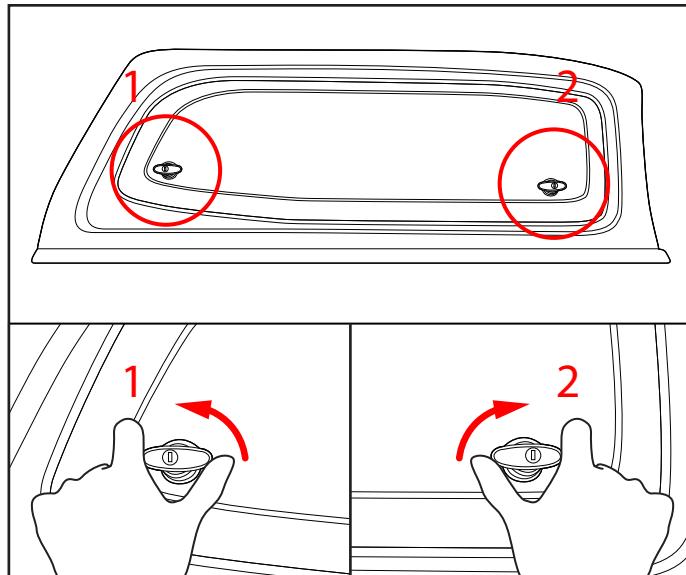


Turn around the canopy lock as shown in picture to open the side window.

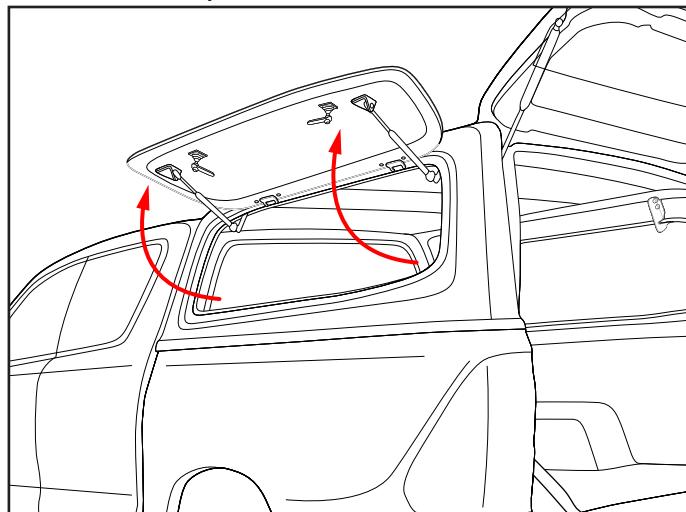


Picture shows how to open the side window.


User manual

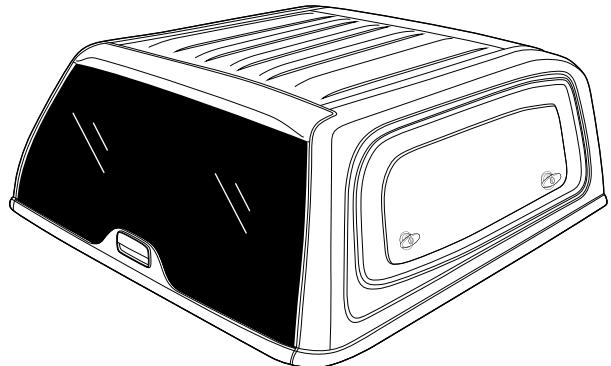

Solid Birdwing Window Left-Right
(Handle Lock)

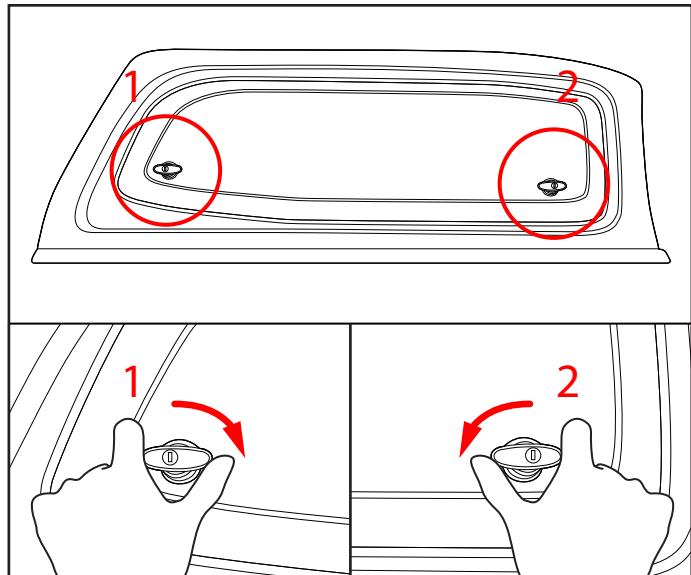

Turn around the canopy lock as shown in picture to close the side window.

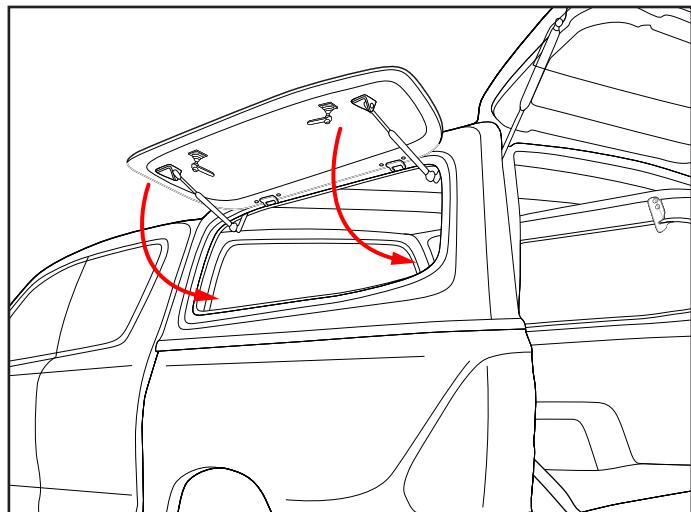


Picture shows how to close the side window.




SAMMITR

User manual

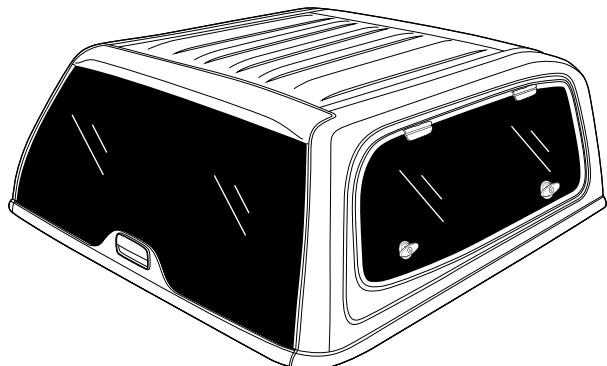

Backdoor


User manual

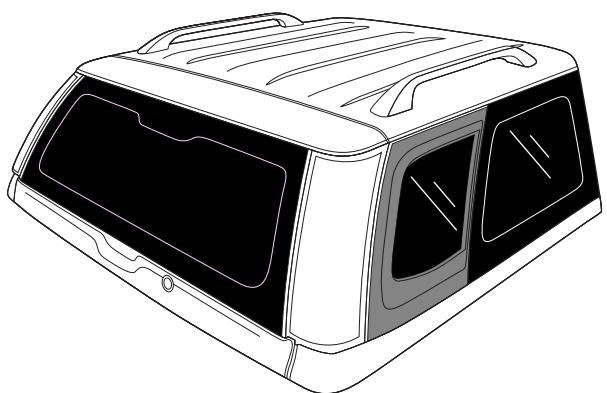


Slide Window (Left-Right)




Use the handle as shown in picture to open the backdoor.

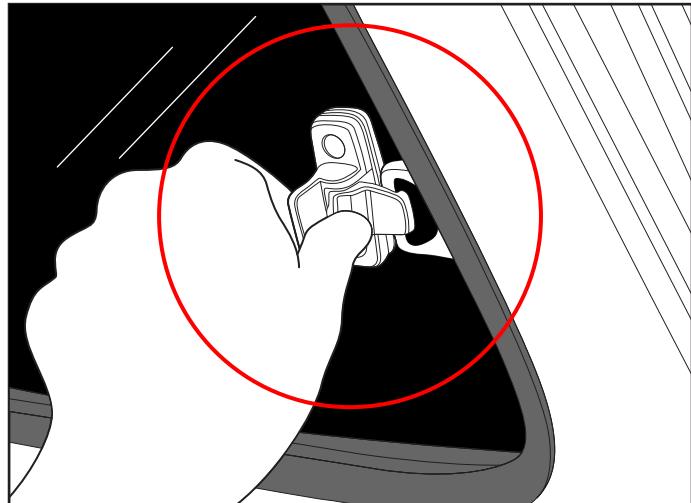

Squeeze the lock side to open.

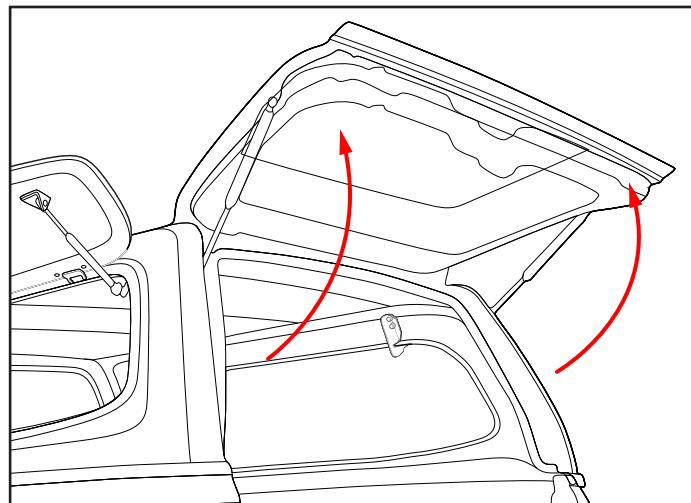


The Picture shows how to open the backdoor.

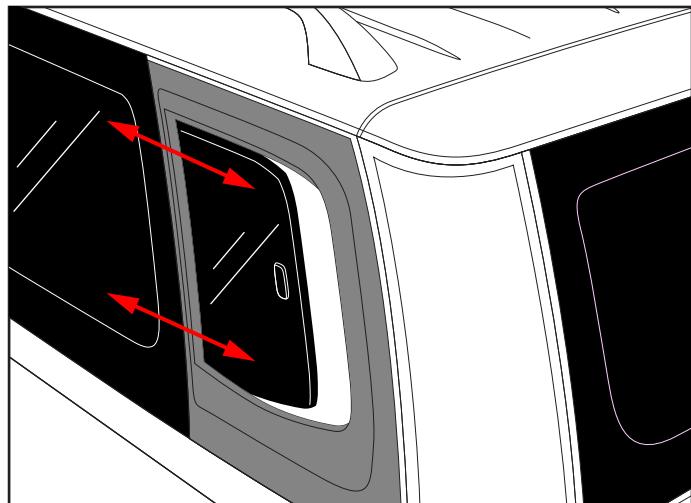


The Picture shows how to open the side




User manual

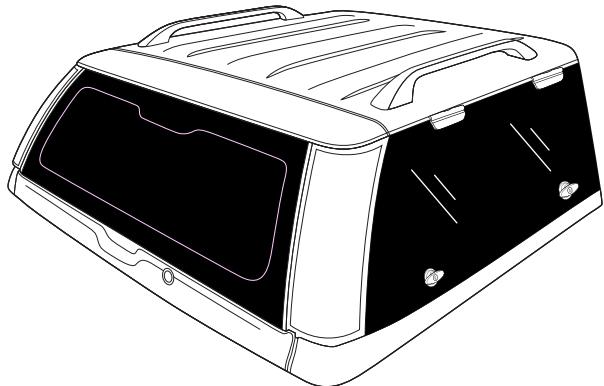

Glass Birdwing Window Left-Right
(Handle Lock)

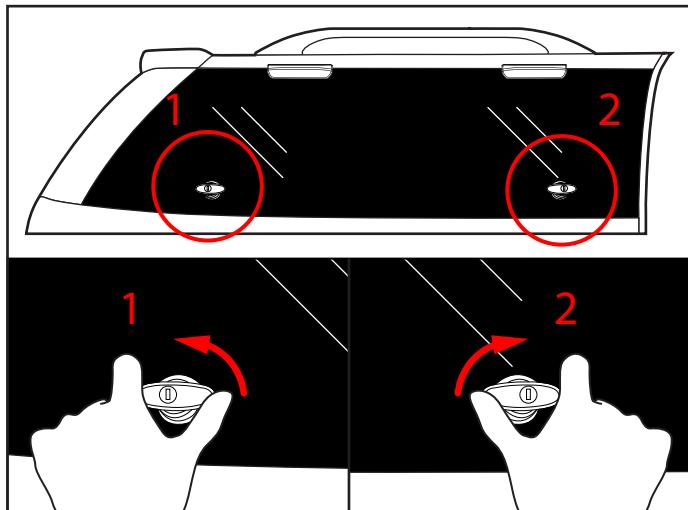


Turn around the canopy lock as shown in picture to open the side window.

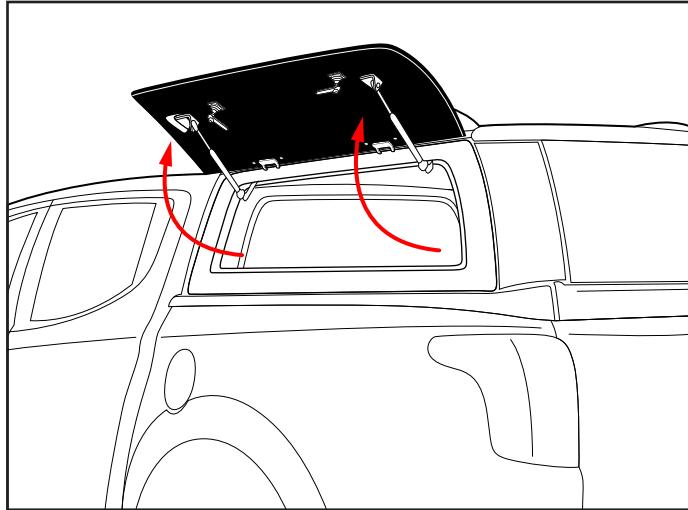


Picture shows how to open the side window.


User manual

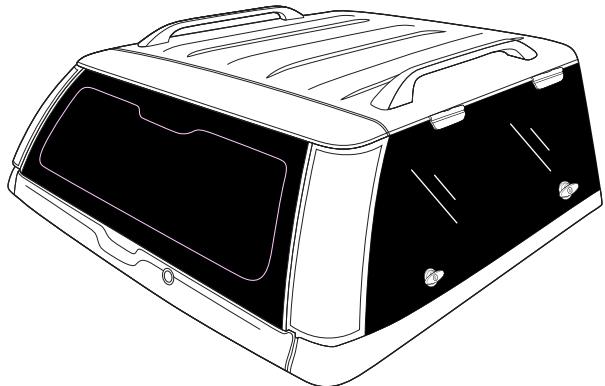

Glass Birdwing Window Left-Right
(Handle Lock)

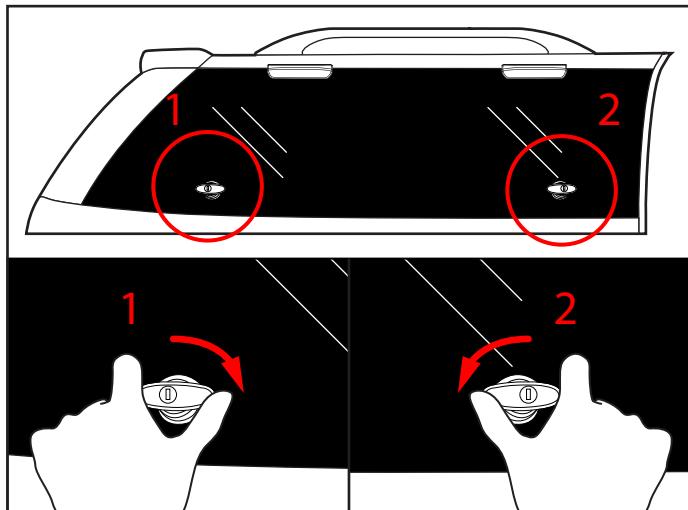


Turn around the canopy lock as shown in picture to close the side window.

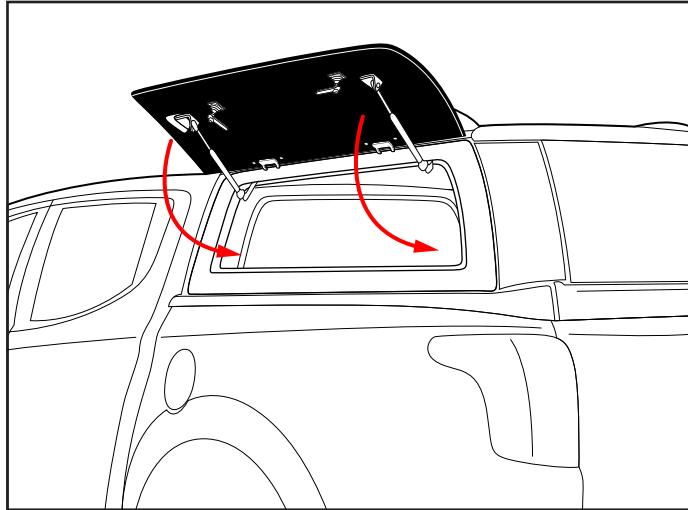

Picture shows how to close the side window.




User manual

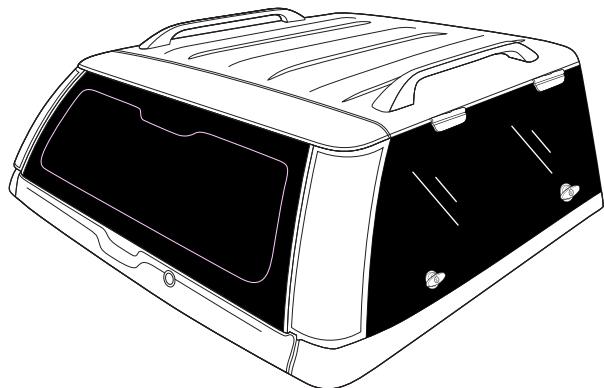


Backdoor


User manual

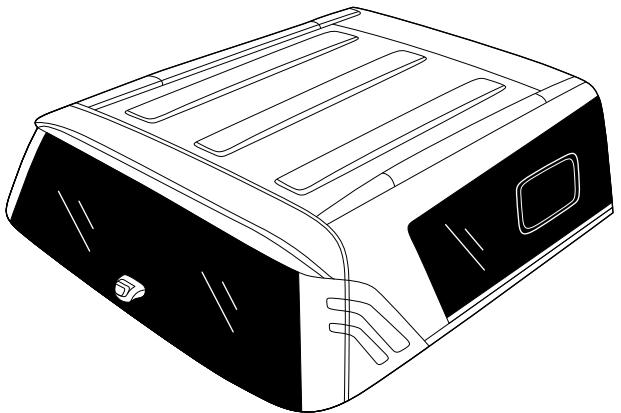


Slide Window (Left-Right)

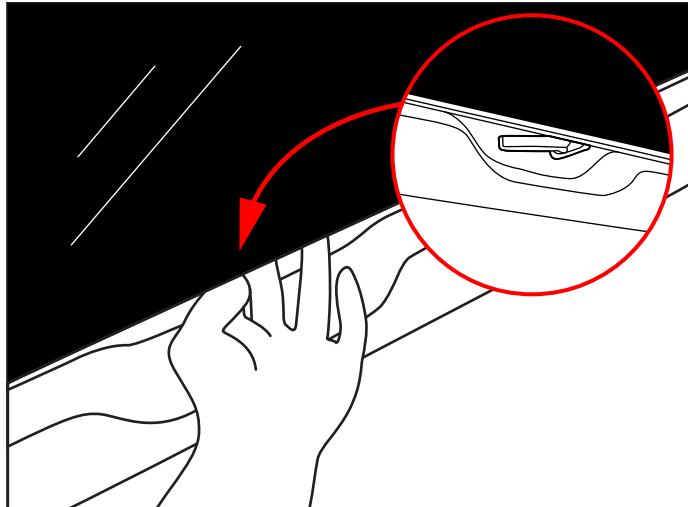


Pull the stick of handle to open the back door.

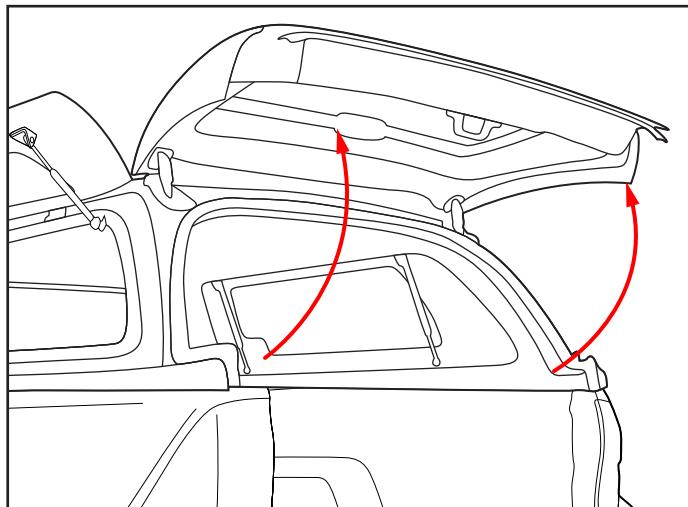

The Picture shows how to open the backdoor.

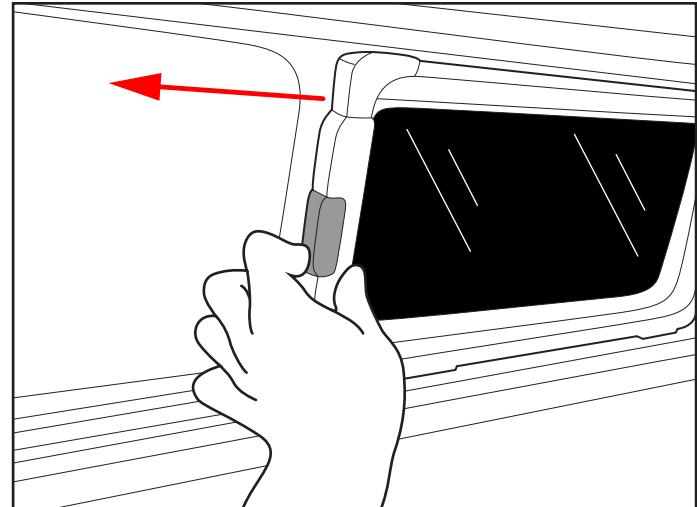


Push the button in side canopy and slide back to open.

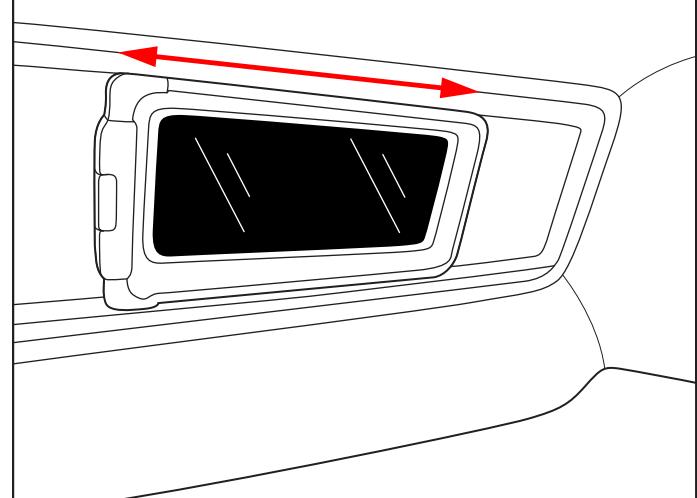


Picture shows how to open the side window from inside.




SAMMITR

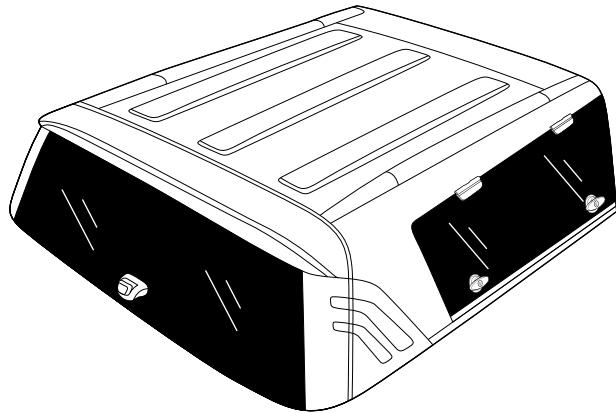


Glass Birdwing Window Left-Right
(Handle Lock)

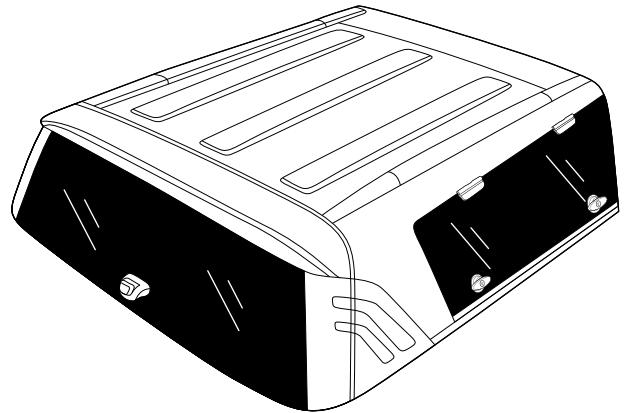


Glass Birdwing Window Left-Right
(Handle Lock)

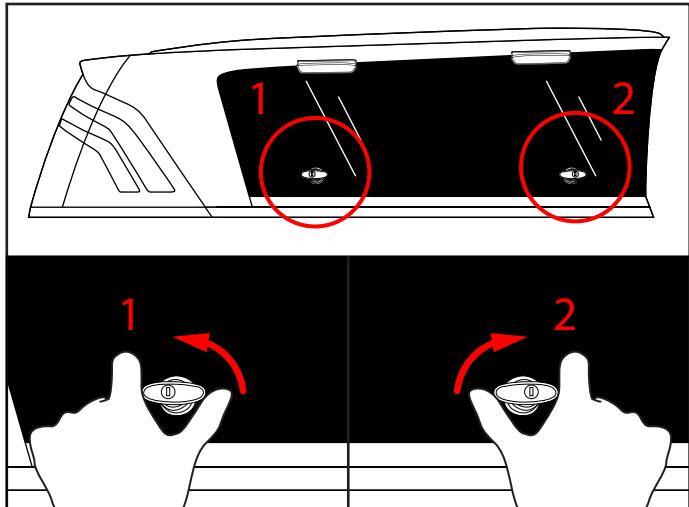


Turn around the canopy lock as shown in picture to open the side window.

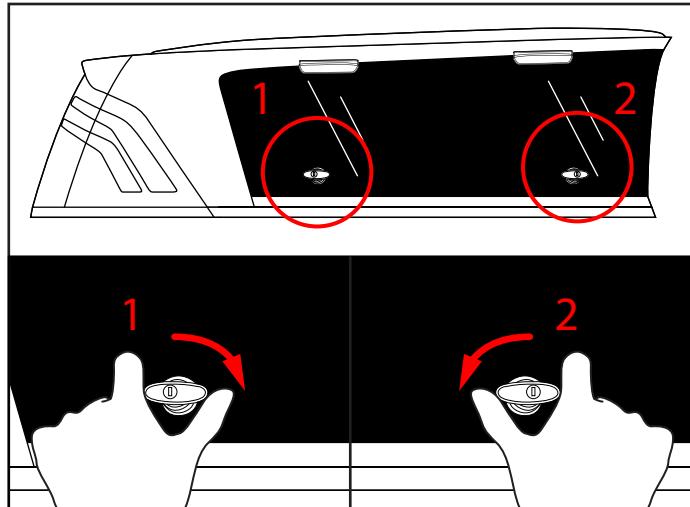

Turn around the canopy lock as shown in picture to close the side window.

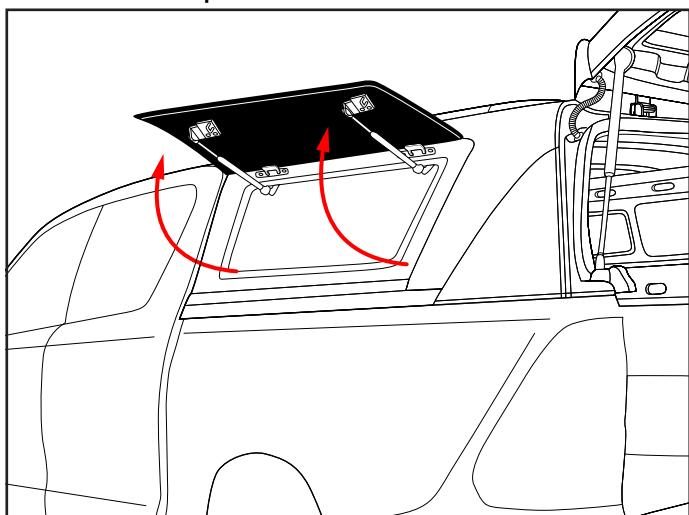


Picture shows how to open the side window.

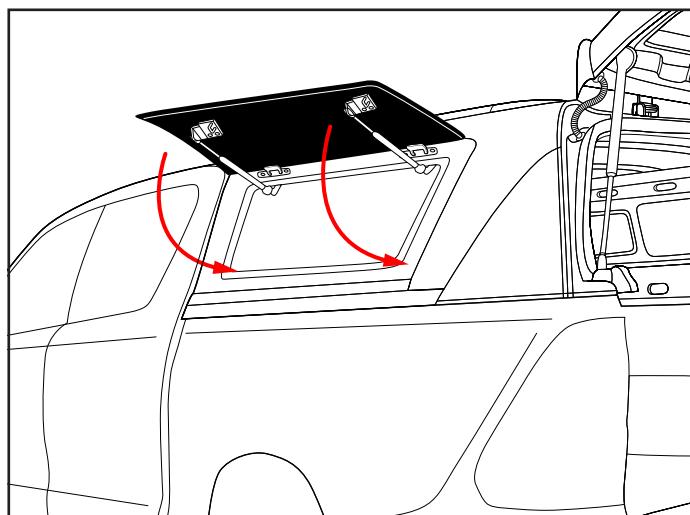


Picture shows how to close the side window.




SAMMITR

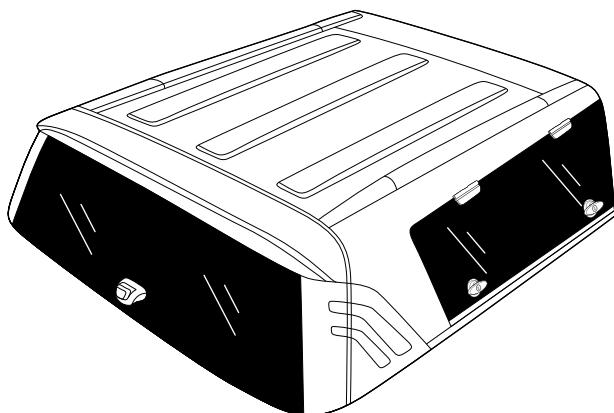

Backdoor

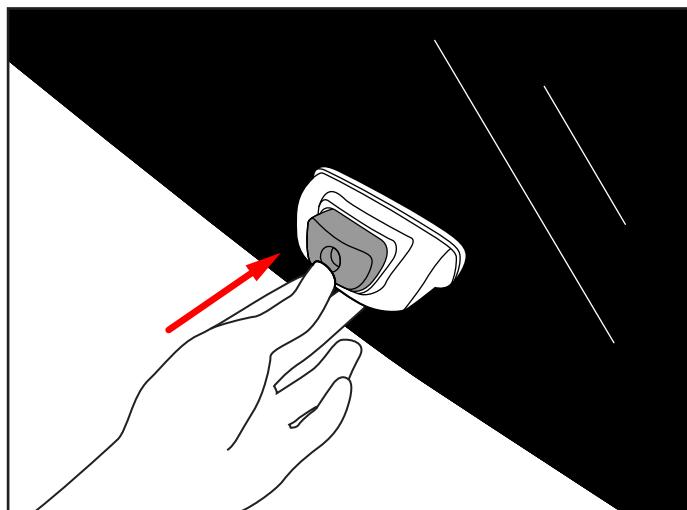

Push the button to open the back door.

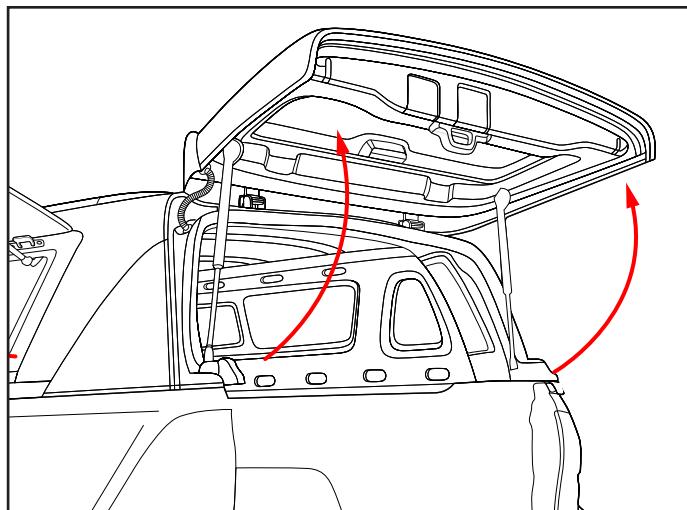

The Picture shows how to open the backdoor.